

Important Information

Thank you for choosing Freenove products!

Getting Started

First, please read the **Start Here.pdf** document in the unzipped folder you created.

If you have not yet downloaded the zip file, associated with this kit, please do so now and unzip it.

Get Support and Offer Input

Freenove provides free and responsive product and technical support, including but not limited to:

- Product quality issues
- Product use and build issues
- Questions regarding the technology employed in our products for learning and education
- Your input and opinions are always welcome
- We also encourage your ideas and suggestions for new products and product improvements

For any of the above, you may send us an email to:

support@freenove.com

Safety and Precautions

Please follow the following safety precautions when using or storing this product:

- Keep this product out of the reach of children under 6 years old.
- This product should be **used only when there is adult supervision present** as young children lack necessary judgment regarding safety and the consequences of product misuse.
- This product contains small parts and parts, which are sharp. This product contains electrically conductive parts. **Use caution with electrically conductive parts near or around power supplies, batteries and powered (live) circuits.**
- When the product is turned ON, activated or tested, some parts will move or rotate. **To avoid injuries to hands and fingers keep them away from any moving parts!**
- It is possible that an improperly connected or shorted circuit may cause overheating. **Should this happen, immediately disconnect the power supply or remove the batteries and do not touch anything until it cools down!** When everything is safe and cool, review the product tutorial to identify the cause.
- Only operate the product in accordance with the instructions and guidelines of this tutorial, otherwise parts may be damaged or you could be injured.
- Store the product in a cool dry place and avoid exposing the product to direct sunlight.
- After use, always turn the power OFF and remove or unplug the batteries before storing.

About Freenove

Freenove provides open source electronic products and services worldwide.

Freenove is committed to assist customers in their education of robotics, programming and electronic circuits so that they may transform their creative ideas into prototypes and new and innovative products. To this end, our services include but are not limited to:

- Educational and Entertaining Project Kits for Robots, Smart Cars and Drones
- Educational Kits to Learn Robotic Software Systems for Arduino, Raspberry Pi and micro: bit
- Electronic Component Assortments, Electronic Modules and Specialized Tools
- **Product Development and Customization Services**

You can find more about Freenove and get our latest news and updates through our website:

<http://www.freenove.com>

sale@freenove.com

Copyright

All the files, materials and instructional guides provided are released under [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](https://creativecommons.org/licenses/by-nc-sa/3.0/). A copy of this license can be found in the folder containing the Tutorial and software files associated with this product.



This means you can use these resource in your own derived works, in part or completely but **NOT for the intent or purpose of commercial use.**

Freenove brand and logo are copyright of Freenove Creative Technology Co., Ltd. and cannot be used without written permission.



Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Contents

Important Information.....	1
Contents.....	1
Preface.....	5
ESP32-S3 WROOM.....	6
Extension board of the ESP32-S3 WROOM.....	9
CH343 (Importance).....	10
Programming Software.....	22
Basic Configuration of Thonny.....	28
Burning Micropython Firmware (Important).....	29
Testing codes (Important).....	35
Thonny Common Operation.....	43
Notes for GPIO.....	50
Chapter 1 LED (Important).....	53
Project 1.1 Blink.....	53
Project 1.2 Blink.....	63
Chapter 2 Button & LED.....	71
Project 2.1 Button & LED.....	71
Project 2.2 MINI table lamp.....	77
Chapter 3 LED Bar.....	82
Project 3.1 Flowing Light.....	82
Chapter 4 Analog & PWM.....	88
Project 4.1 Breathing LED.....	88
Project 4.2 Meteor Flowing Light.....	95
Chapter 5 RGB LED.....	101
Project 5.1 Random Color Light.....	101
Project 5.2 Gradient Color Light.....	107
Chapter 6 LEDPixel.....	110
Project 6.1 LEDPixel.....	110
Project 6.2 Rainbow Light.....	116
Chapter 7 Buzzer.....	119
Project 7.1 Doorbell.....	119

Project 7.2 Alertor	125
Chapter 8 Serial Communication.....	127
Project 8.1 Serial Print	127
Project 8.2 Serial Read and Write	131
Chapter 9 AD Converter	132
Project 9.1 Read the Voltage of Potentiometer	132
Chapter 10 Potentiometer & LED	139
Project 10.1 Soft Light	139
Project 10.2 Soft Colorful Light	143
Project 10.3 Soft Rainbow Light	147
Chapter 11 Photoresistor & LED	151
Project 11.1 NightLamp	151
Chapter 12 Thermistor	156
Project 12.1 Thermometer	156
Chapter 13 Joystick	162
Project 13.1 Joystick	162
Chapter 14 74HC595 & LED Bar Graph	167
Project 14.1 Flowing Water Light	167
Chapter 15 74HC595 & 7-Segment Display	173
Project 15.1 7-Segment Display	173
Project 15.2 4-Digit 7-Segment Display	179
Chapter 16 74HC595 & LED Matrix	184
Project 16.1 LED Matrix	184
Chapter 17 Relay & Motor	192
Project 17.1 Relay & Motor	192
Chapter 17.2 Motor & Driver	198
Project 17.2 Control Motor with Potentiometer	198
Chapter 18 Servo	206
Project 18.1 Servo Sweep	206
Project 18.2 Servo Knop	212
Chapter 19 Stepper Motor	216

Project 19.1 Stepper Motor	216
Chapter 20 LCD1602.....	224
Project 20.1 LCD1602.....	224
Chapter 21 Ultrasonic Ranging	231
Project 21.1 Ultrasonic Ranging.....	231
Project 21.2 Ultrasonic Ranging.....	237
Chapter 22 Matrix Keypad	240
Project 22.1 Matrix Keypad	240
Project 22.2 Keypad Door	246
Chapter 23 Infrared Remote	251
Project 23.1 Infrared Remote Control	251
Project 23.2 Control LED through Infrared Remote.....	257
Chapter 24 Hygrothermograph DHT11	262
Project 24.1 Hygrothermograph.....	262
Project 24.2 Hygrothermograph.....	267
Chapter 25 Infrared Motion Sensor	272
Project 25.1 Infrared Motion Detector with LED Indicator	272
Chapter 26 Attitude Sensor MPU6050	277
Project 26.1 Read a MPU6050 Sensor Module	277
Chapter 27 Bluetooth	283
Project 27.1 Bluetooth Low Energy Data Passthrough	283
Project 27.2 Bluetooth Control LED	295
Chapter 28 WiFi Working Modes	302
Project 28.1 Station mode.....	302
Project 28.2 AP mode.....	307
Project 28.3 AP+Station mode.....	311
Chapter 29 TCP/IP	315
Project 29.1 As Client.....	315
Project 29.2 As Server	327
Chapter 30 Camera Web Server	332
Project 30.1 Camera Web Server.....	332
Chapter 31 Soldering Circuit Board	344

Project 31.1 Soldering a Buzzer	344
Project 31.2 Soldering a Flowing Water Light.....	348
What's next?	352
End of the Tutorial.....	352

Preface

ESP32-S3 is a micro control unit with integrated Wi-Fi launched by Espressif, which features strong properties and integrates rich peripherals. It can be designed and studied as an ordinary Single Chip Microcontroller (SCM) chip, or connected to the Internet and used as an Internet of Things device.

ESP32-S3 can be developed using the Arduino platform, which will definitely make it easier for people who have learned Arduino to master. Moreover, the code of ESP32-S3 is completely open-source, so beginners can quickly learn how to develop and design IOT smart household products including smart curtains, fans, lamps and clocks.


Generally, ESP32-S3 projects consist of code and circuits. Don't worry even if you've never learned code and circuits, because we will gradually introduce the basic knowledge of C programming language and electronic circuits, from easy to difficult. Our products contain all the electronic components and modules needed to complete these projects. It's especially suitable for beginners.

We divide each project into four parts, namely Component List, Component Knowledge, Circuit and Code. Component List helps you to prepare material for the experiment more quickly. Component Knowledge allows you to quickly understand new electronic modules or components, while Circuit helps you understand the operating principle of the circuit. And Code allows you to easily master the use of ESP32 and accessory kit. After finishing all the projects in this tutorial, you can also use these components and modules to make products such as smart household, smart cars and robots to transform your creative ideas into prototypes and new and innovative products.

In addition, if you have any difficulties or questions with this tutorial or toolkit, feel free to ask for our quick and free technical support through support@freenove.com

ESP32-S3 WROOM


ESP32-S3-WROOM-1 has launched a total of two antenna packages, PCB on-board antenna and IPEX antenna respectively. The PCB on-board antenna is an integrated antenna in the chip module itself, so it is convenient to carry and design. The IPEX antenna is a metal antenna derived from the integrated antenna of the chip module itself, which is used to enhance the signal of the module.

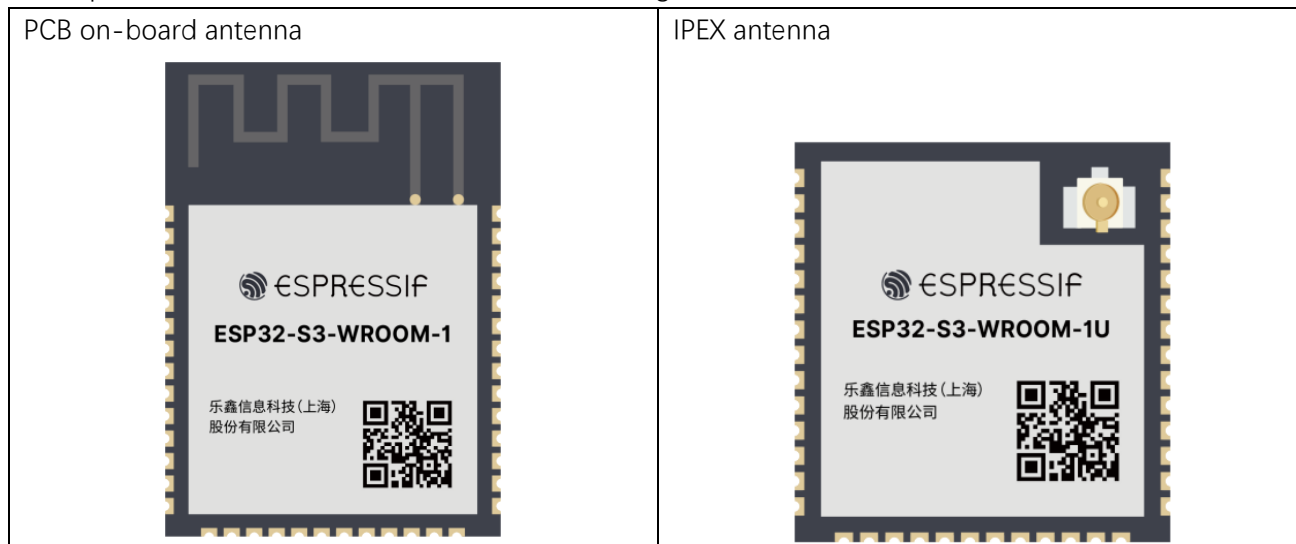


In this tutorial, the ESP32-S3 WROOM is designed based on the PCB on-board antenna-packaged ESP32-S3-WROOM-1 module.

Currently, we have two development board options available: the N8R8(**8MB Flash + 8MB PSRAM**) version with a black PCB and the N16R8(**16MB Flash + 8MB PSRAM**) version with a red PCB. The only difference between these two boards lies in their built-in Flash storage capacity, while all other features, functionalities, and peripheral circuits remain identical.

(Note: The N16R8 version is currently sold as a single-board kit only.)

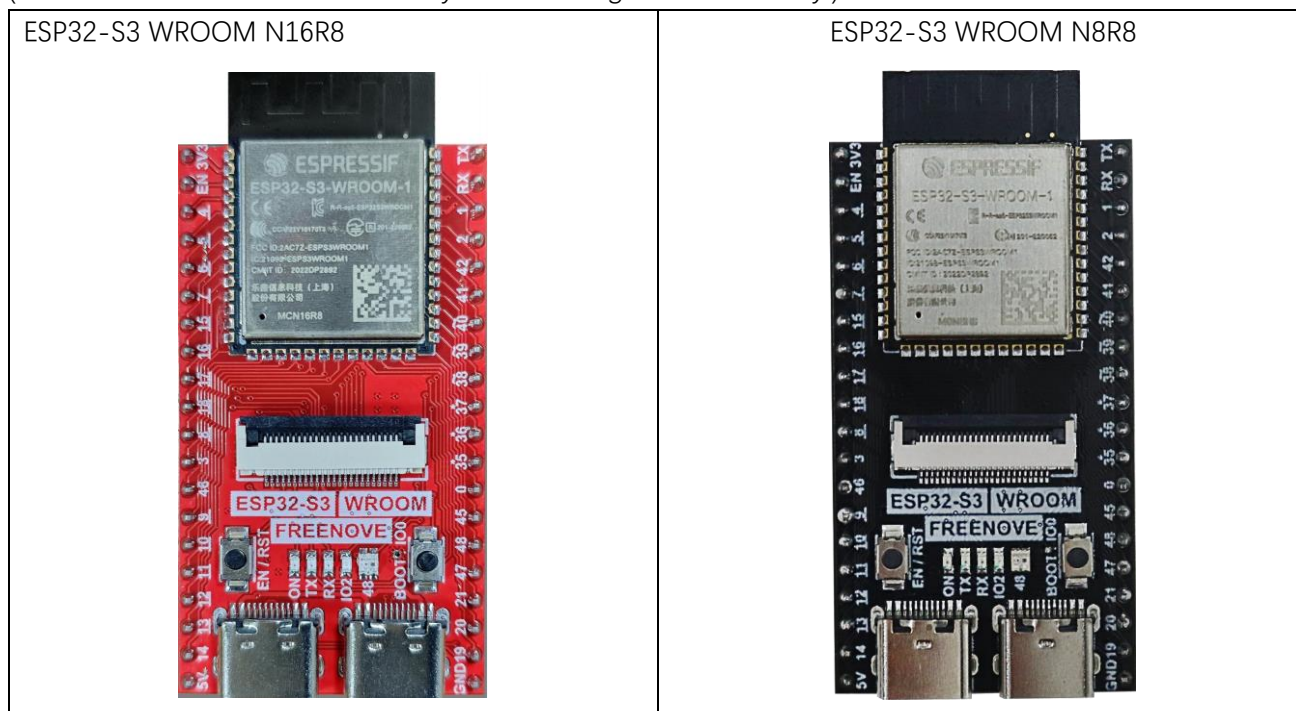

The hardware interfaces of ESP32-S3 WROOM are distributed as follows:

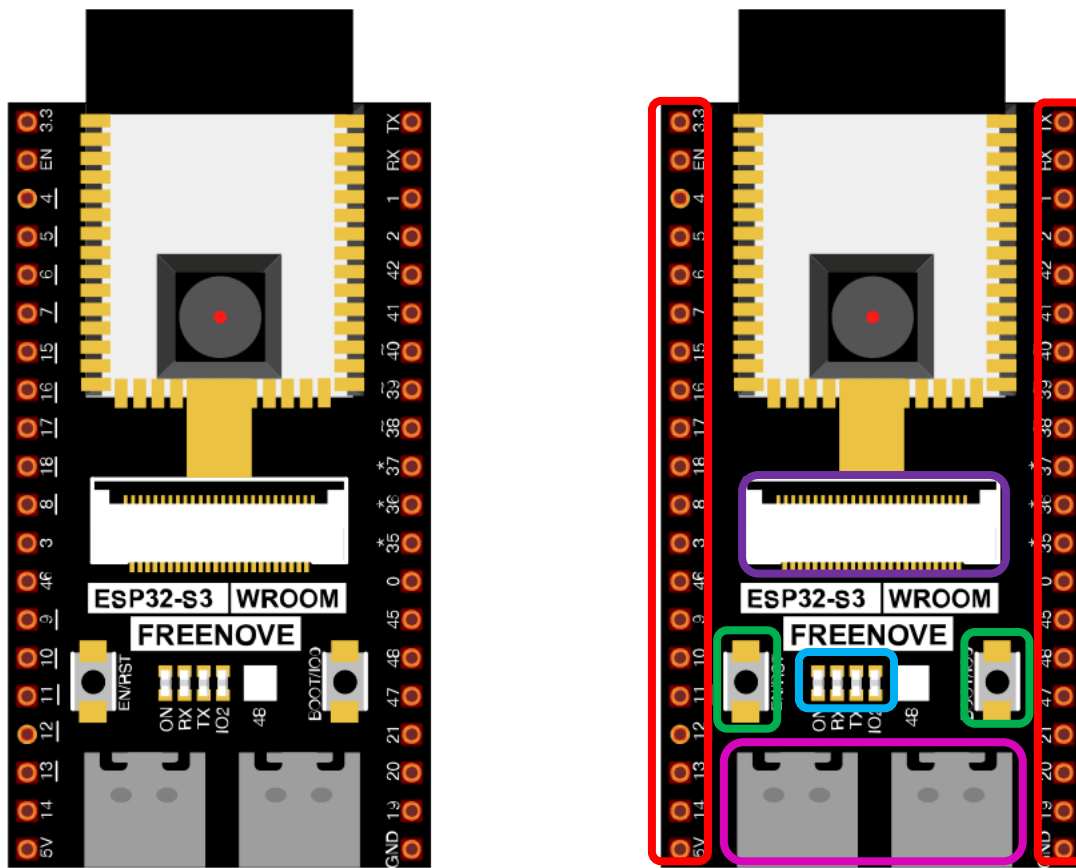

Compare the left and right images. We've boxed off the resources on the ESP32-S3 WROOM in different colors to facilitate your understanding of the ESP32-S3 WROOM.


Box color	Corresponding resources introduction
	GPIO pin
	LED indicator
	Camera interface
	Reset button, Boot mode selection button
	USB port

For more information, please visit: https://www.espressif.com.cn/sites/default/files/documentation/esp32-s3-wroom-1_wroom-1u_datasheet_en.pdf.

Extension board of the ESP32-S3 WROOM

And we also design an extension board, so that you can use the ESP32-S3 more easily in accordance with the circuit diagram provided. The followings are their photos.

The hardware interfaces of ESP32-S3 WROOM are distributed as follows:

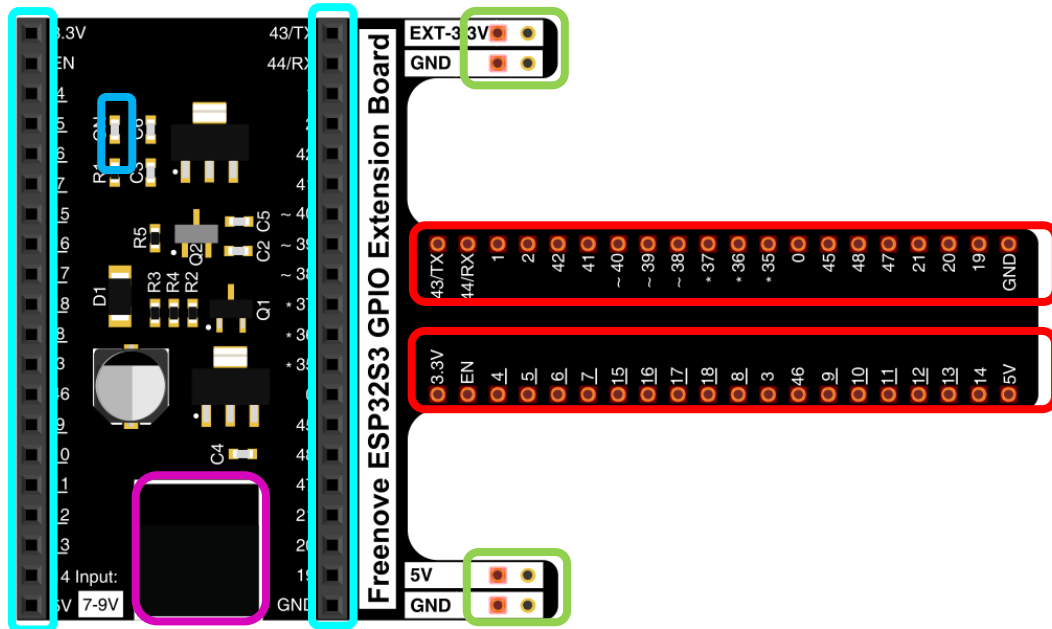

We've boxed off the resources on the ESP32-S3 WROOM in different colors to facilitate your understanding of the ESP32-S3 WROOM.

Box color	Corresponding resources introduction
	GPIO pin
	LED indicator
	GPIO interface of development board
	power supplied by the extension board
	External power supply

In ESP32S3, GPIO is an interface to control peripheral circuit.

In the following projects, we only use USB cable to power ESP32-S3 WROOM by default.

In the whole tutorial, we don't use T extension to power ESP32-S3 WROOM. So 5V and 3.3V (including EXT 3.3V) on the extension board are provided by ESP32-S3 WROOM.

We can also use DC jack of extension board to power ESP32-S3 WROOM. In this way, 5v and EXT 3.3v on extension board are provided by external power resource.


CH343 (Importance)

ESP32-S3 WROOM uses CH343 to download codes. So before using it, we need to install CH343 driver in our computers.


Windows

Check whether CH343 has been installed


1. Connect your computer and ESP32-S3 WROOM with a USB cable.

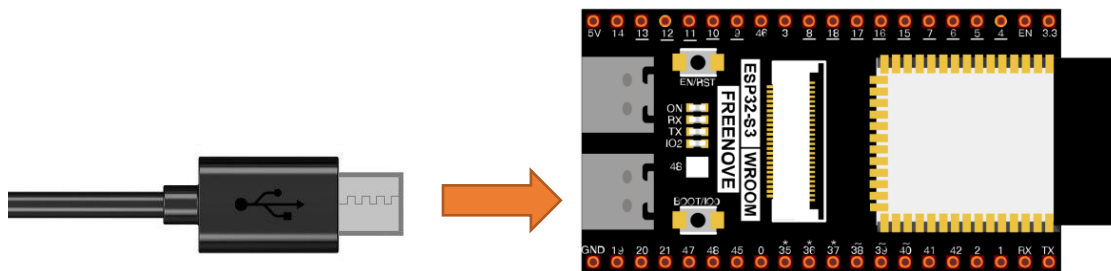

2. Turn to the main interface of your computer, select "This PC" and right-click to select "Manage".

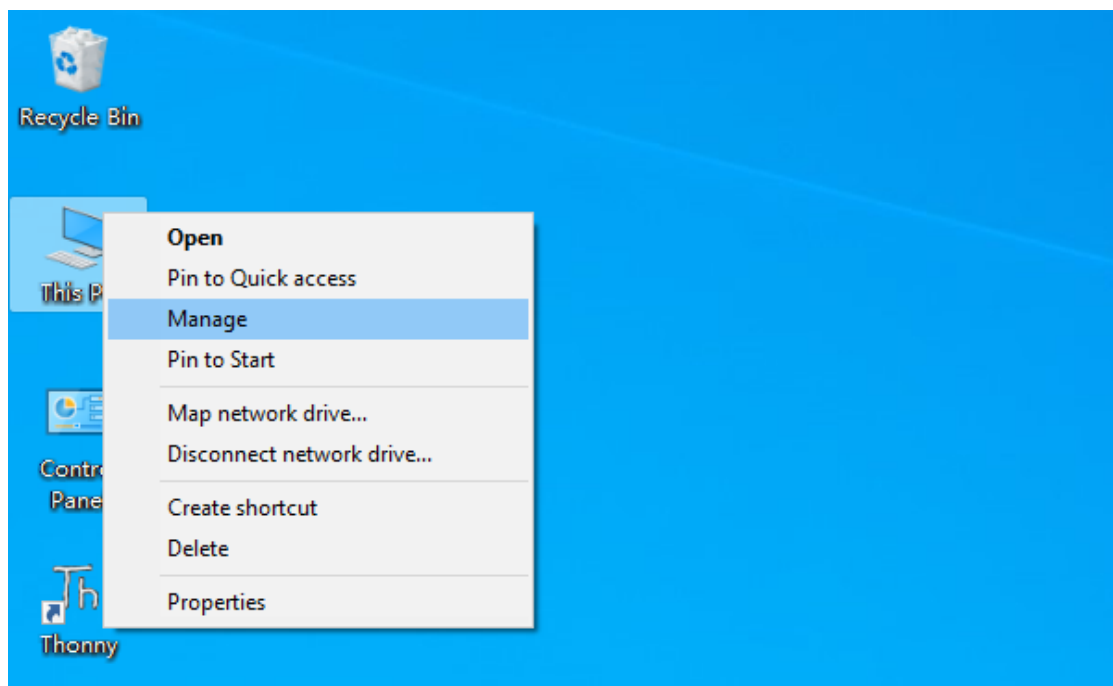

- Click “Device Manager”. If your computer has installed CH343, you can see “USB-Enhanced-SERIAL CH343 (COMx)”. And you can click [here](#) to move to the next step.

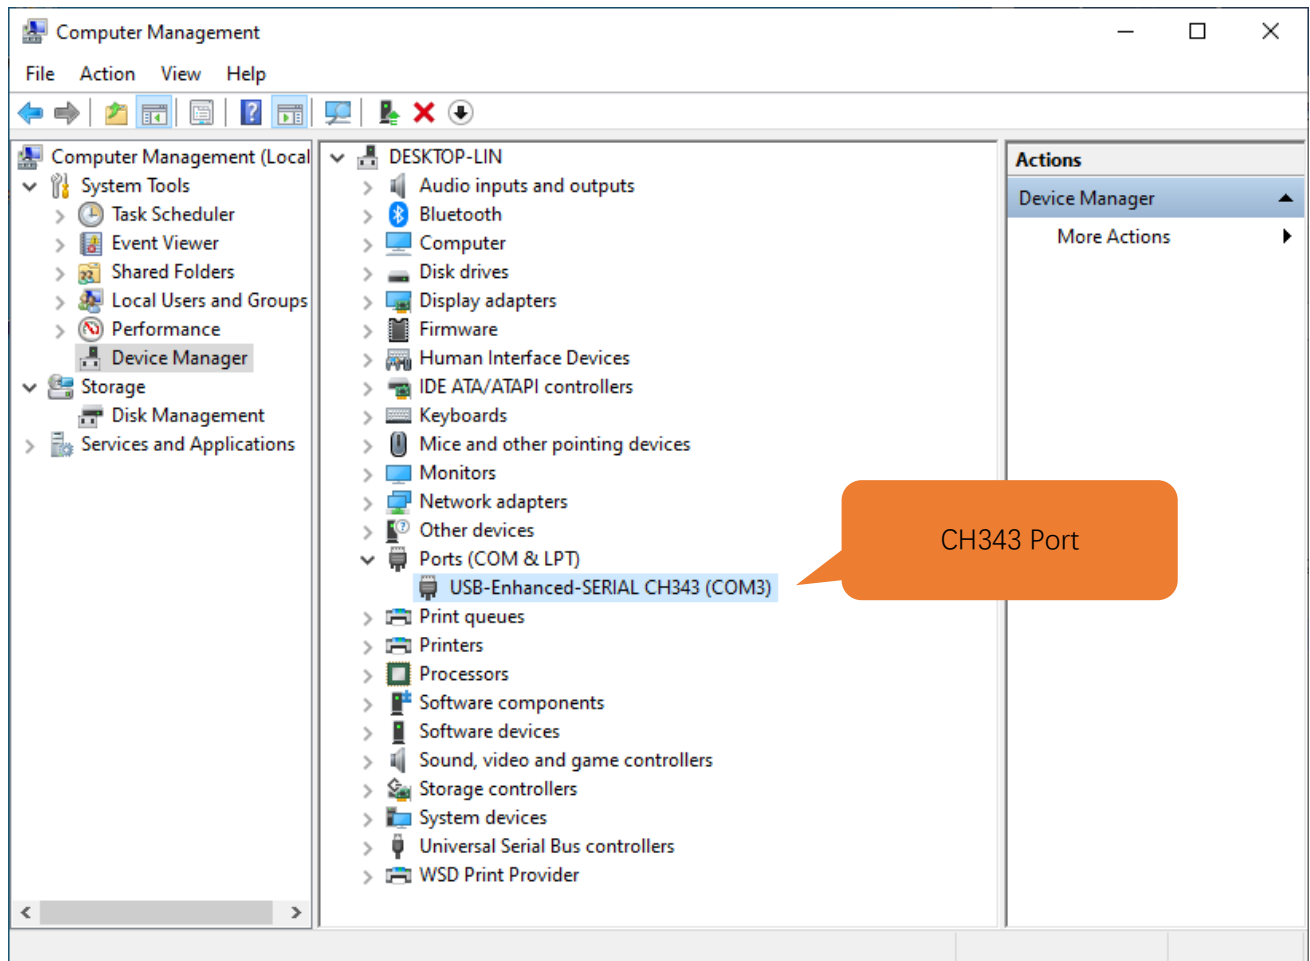

Installing CH343

- First, download CH343 driver, click <http://www.wch-ic.com/search?t=all&q=ch343> to download the appropriate one based on your operating system.

keyword ch343

Downloads(8)


file category	file content	version	upload time
DataSheet			
CH343DS1.PDF	CH343 datasheet, USB to single serial port, supports up to 6M baud rate, serial port signals support 5V/3.3V/2.5V/1.8V, built-in crystal oscillator. CH343 supports built-in CDC driver in operating system or multi-functional high-speed VCP manufacture driver.	1.5	2021-11-18
Driver&Tools			
CH343SER.ZIP	For CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to high-speed serial port VCP vendor driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.61	2022-05-13
CH343CDC.ZIP	For CH342/CH343/CH344/CH347/CH910X/CH9143/CH9340, USB to CDC serial port driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.4	2022-05-13
CH343SER.EXE	For CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to high-speed serial port VCP vendor driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.61	2022-05-13
CH34XSER_MAC.ZI...	For CH340/CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to serial port VCP vendor driver of macOS	1.7	2022-05-13
CH343CDC.EXE	For CH342/CH343/CH344/CH347/CH910X/CH9143/CH9340, USB to CDC serial port driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.4	2022-05-13
Application			
CH34xSerCfg.ZIP	USB configuration tool of Windows for CH340/CH342/CH343/CH344/CH347/CH348/CH9101/CH9102/CH9103. Via this tool, the chip's Vendor ID, product ID, maximum current value, BCD version	1.2	2022-05-24

If you would not like to download the installation package, you can open


“[Freenove_Ultimate_Starter_Kit_for_ESP32_S3/CH343](#)”, we have prepared the installation package.

 Linux	10/17/2022 1:30 PM	File folder
 MAC	10/17/2022 1:30 PM	File folder
 Windows	10/17/2022 1:30 PM	File folder


2. Open the folder “Freenove_Ultimate_Starter_Kit_for_ESP32_S3/CH343/Windows/”

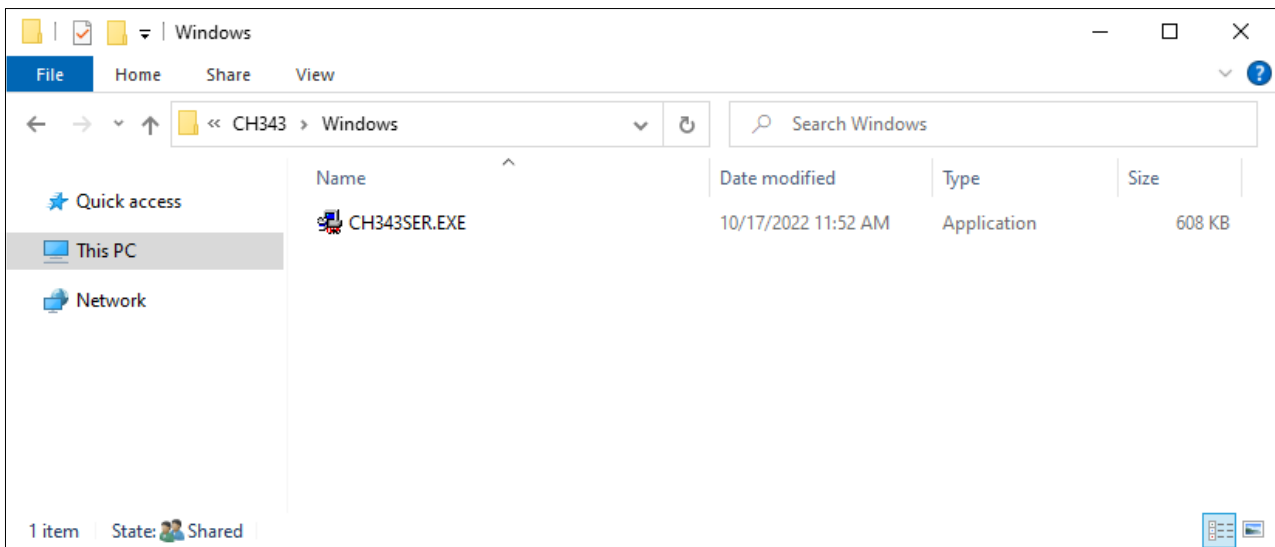


3. Double click “CH343SER.EXE”.

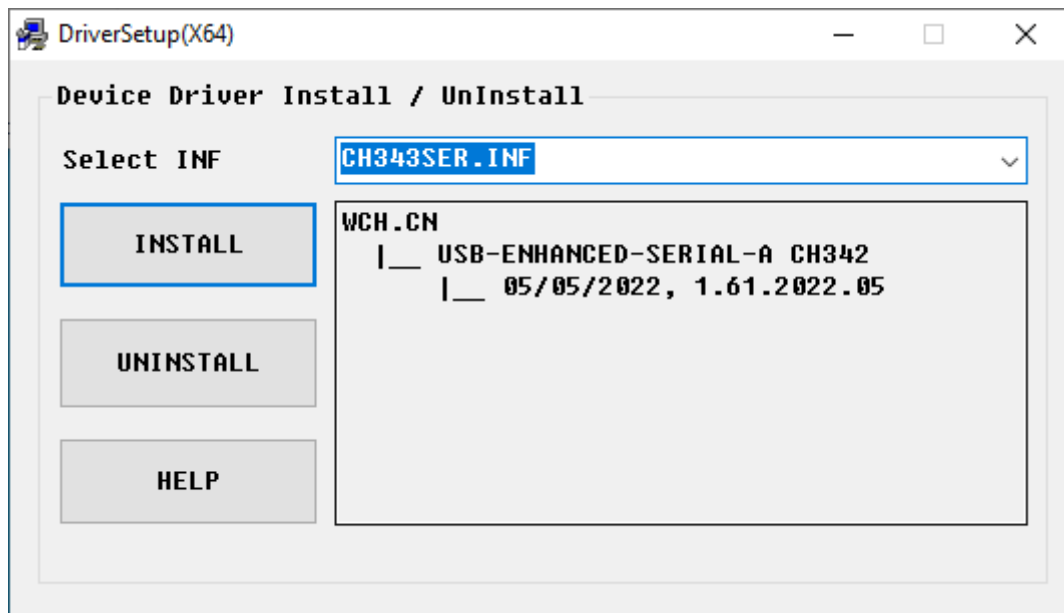


4. Click "INSTALL" and wait for the installation to complete.

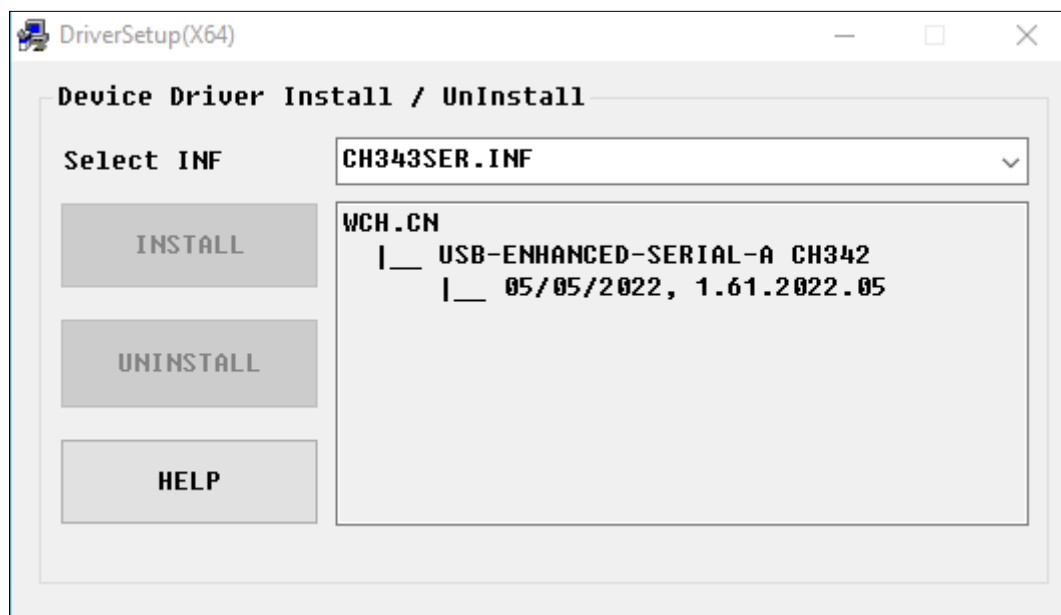

5. Install successfully. Close all interfaces.

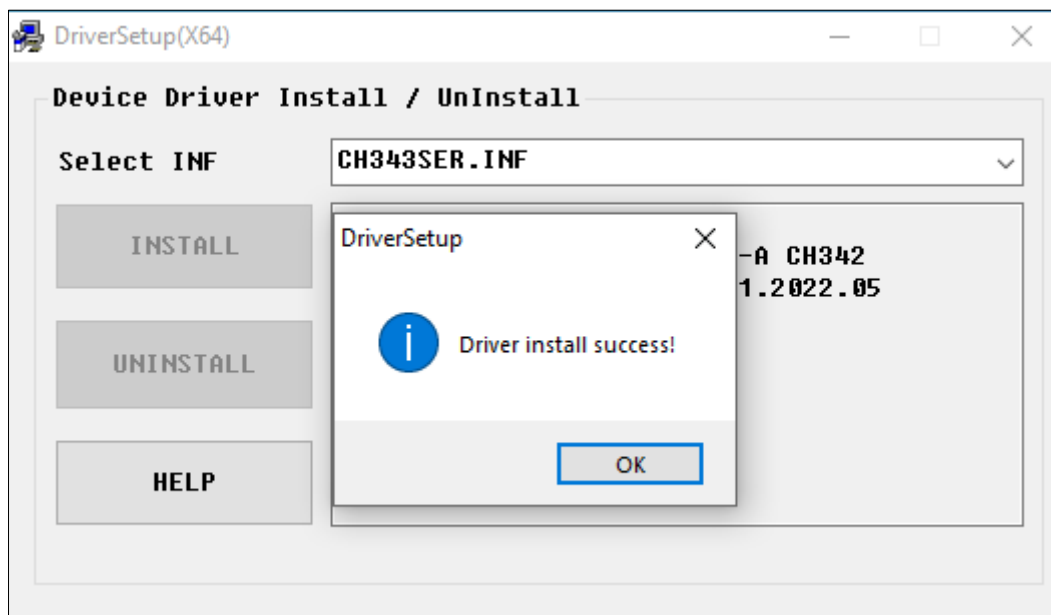

6. When ESP32-S3 WROOM is connected to computer, select “This PC”, right-click to select “Manage” and click “Device Manager” in the newly pop-up dialog box, and you can see the following interface.

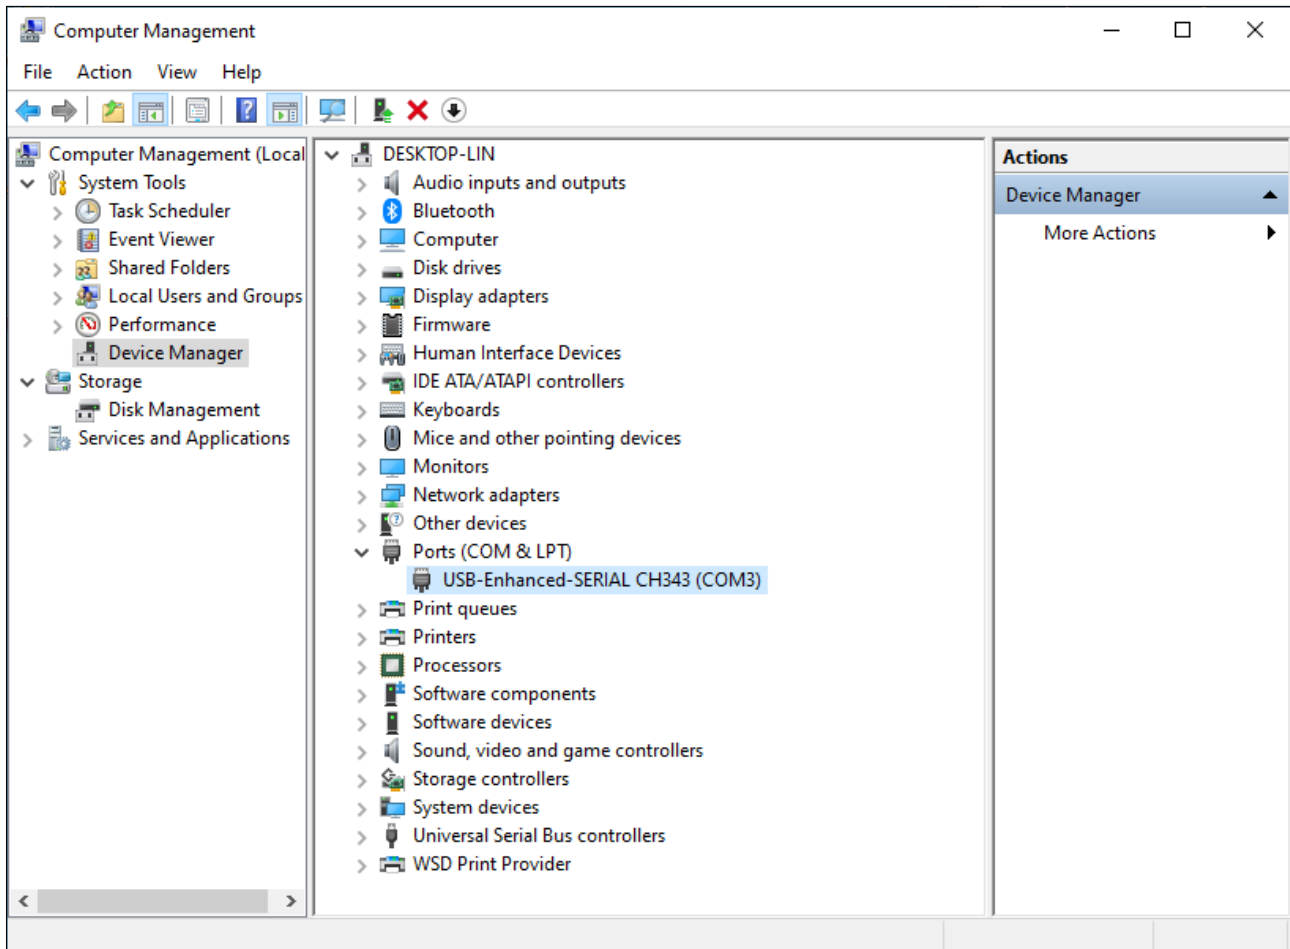

7. So far, CH343 has been installed successfully. Close all dialog boxes.

MAC


First, download CH343 driver, click <http://www.wch-ic.com/search?t=all&q=ch343> to download the appropriate one based on your operating system.

keyword ch343				
Downloads(8)				
file category	file content	version	upload time	
DataSheet				
CH343DS1.PDF	CH343 datasheet, USB to single serial port, supports up to 6M baud rate, serial port signals support 5V/3.3V/2.5V/1.8V, built-in crystal oscillator. CH343 supports built-in CDC driver in operating system or multi-functional high-speed VCP manufacture driver.	1.5	2021-11-18	
Driver&Tools				
CH343SER.ZIP	For CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to high-speed serial port VCP vendor driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.61	2022-05-13	
CH343CDC.ZIP	For CH342/CH343/CH344/CH347/CH910X/CH9143/CH9340, USB to CDC serial port driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.4	2022-05-13	
CH343SER.EXE	For CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to high-speed serial port VCP vendor driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.61	2022-05-13	
CH34XSER_MAC.ZI...	For CH342/CH343/CH344/CH347/CH9101/CH9102/CH9103/CH9143, USB to serial port driver of macOS	1.7	2022-05-13	
CH343CDC.EXE	For CH342/CH343/CH344/CH347/CH910X/CH9143/CH9340, USB to CDC serial port driver, supports Windows 11/10/8.1/8/7/VISTA/XP/2000	1.4	2022-05-13	
Application				
CH34xSerCfg.ZIP	USB configuration tool of Windows for CH340/CH342/CH343/CH344/CH347/CH348/CH9101/CH9102/CH9103. Via this tool, the chip's Vendor ID, product ID, maximum current value, BCD version	1.2	2022-05-24	


If you would not like to download the installation package, you can open

“**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/CH343**”, we have prepared the installation package.


Second, open the folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/CH343/MAC/**”

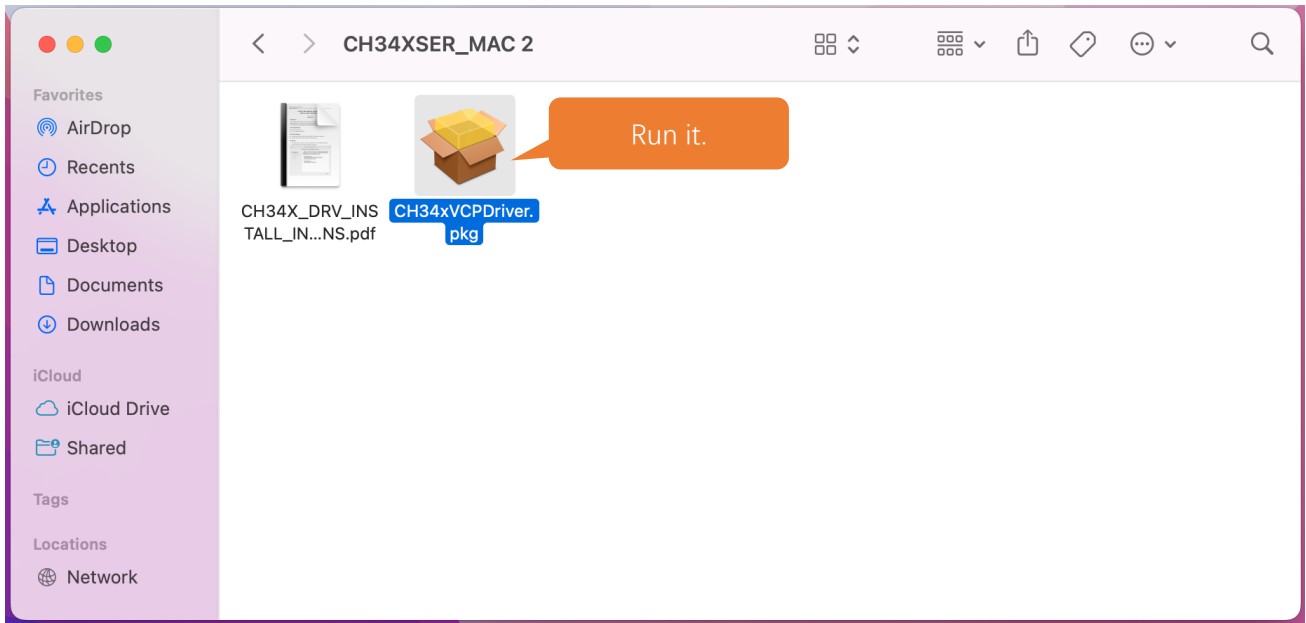


Third, click Continue.

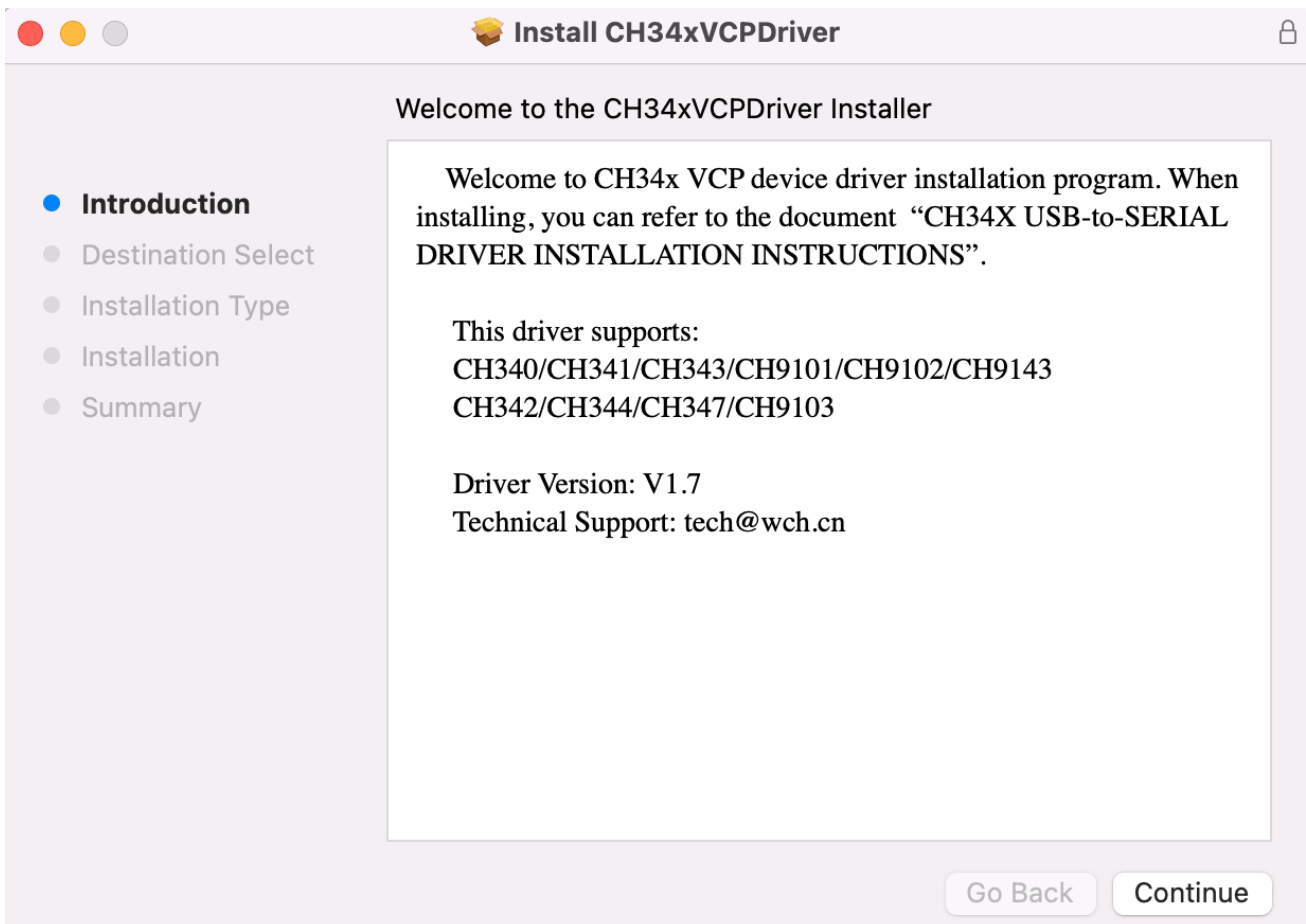


Fourth, click Install.

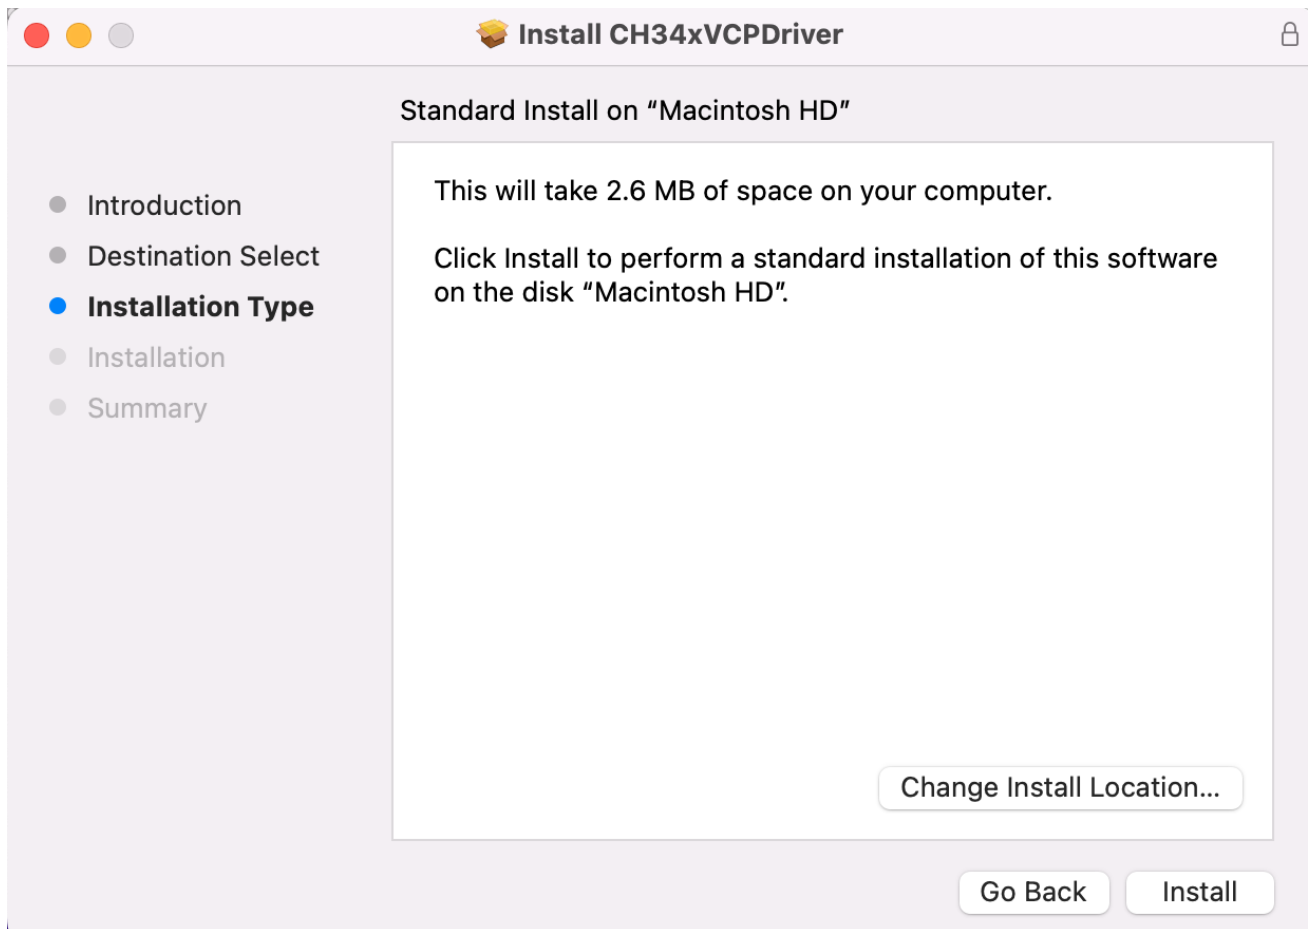


Then, waiting Finsh.

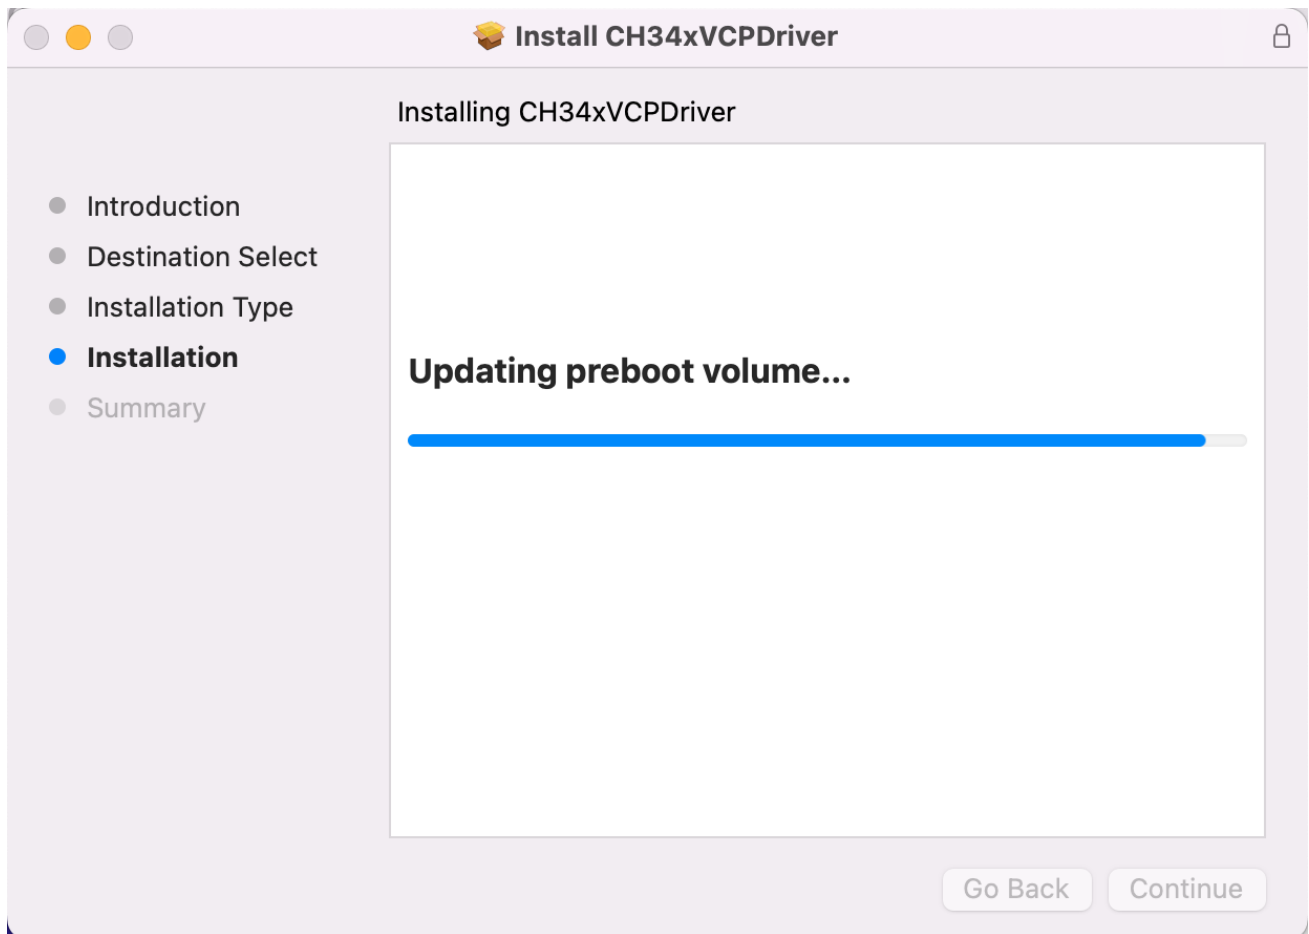

Finally, restart your PC.

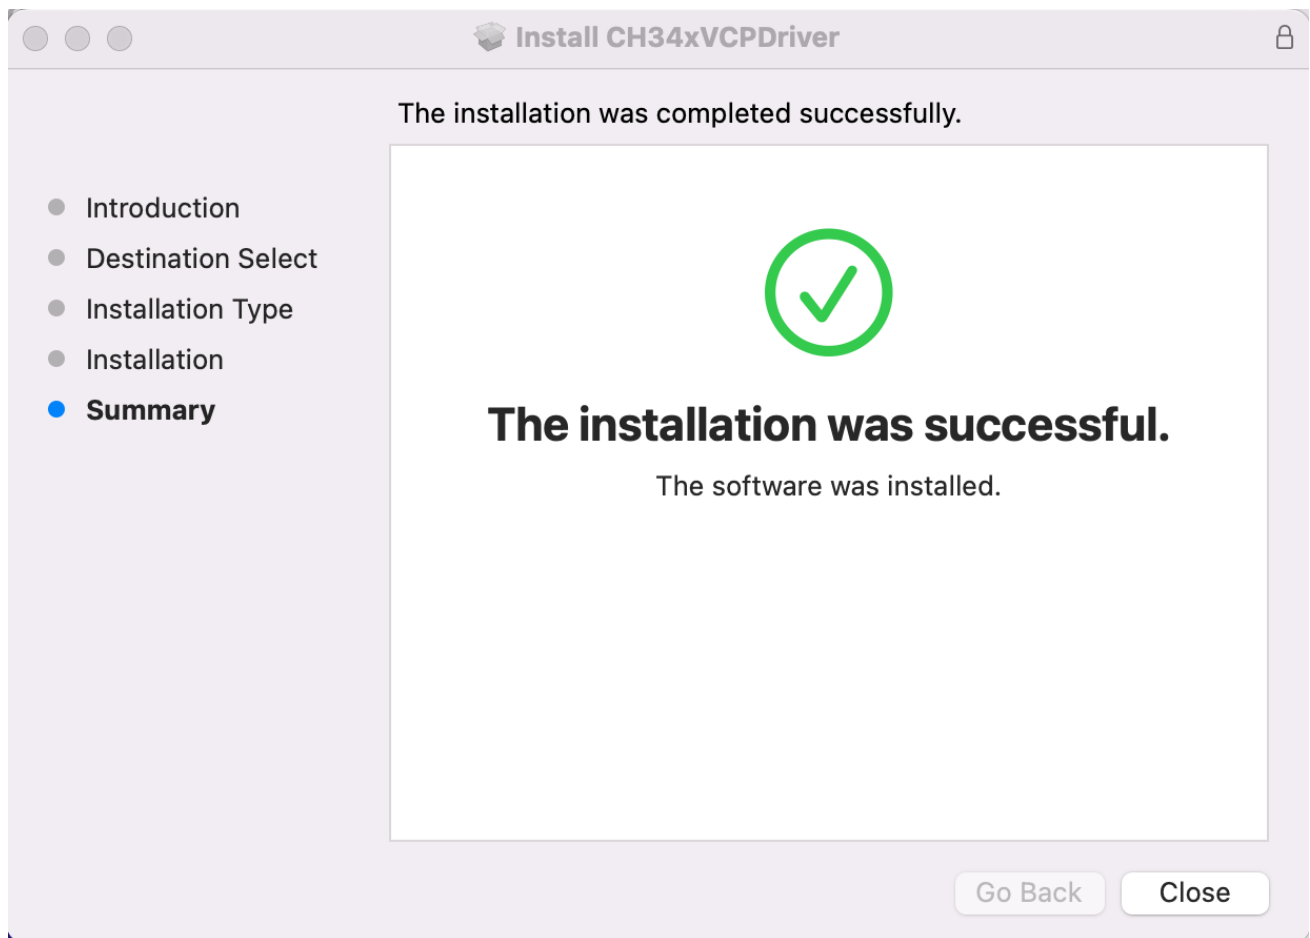

If you still haven't installed the CH340 by following the steps above, you can view readme.pdf to install it.

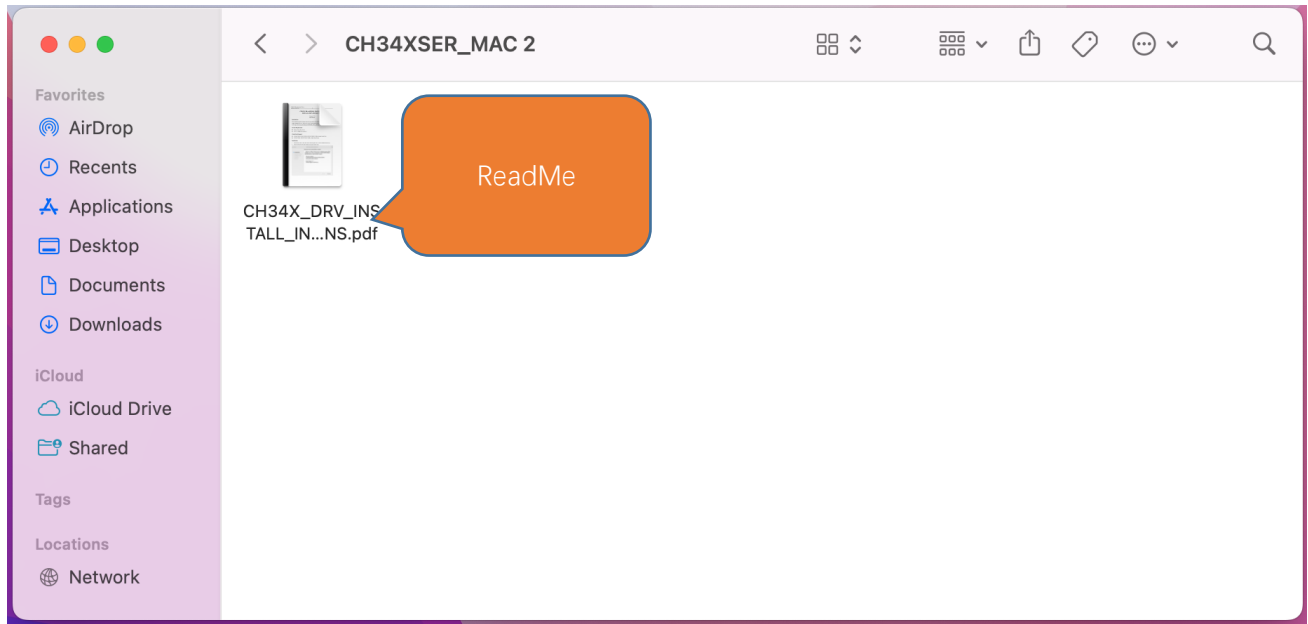

Programming Software

Thonny is a free, open-source software platform with compact size, simple interface, simple operation and rich functions, making it a Python IDE for beginners. In this tutorial, we use this IDE to develop ESP32-S3 during the whole process.

Thonny supports various operating system, including Windows、Mac OS、Linux.

Downloading Thonny


Official website of Thonny: <https://thonny.org>

Open-source code repositories of Thonny: <https://github.com/thonny/thonny>

Follow the instruction of official website to install Thonny or click the links below to download and install. (Select the appropriate one based on your operating system.)


Operating System	Download links/methods
Windows	https://github.com/thonny/thonny/releases/download/v4.1.7/thonny-4.1.7.exe
Mac OS	https://github.com/thonny/thonny/releases/download/v4.1.7/thonny-4.1.7.pkg
Linux	Official downloads for Linux Installer (installs private Python 3.10 on x86_64, uses existing python3 elsewhere) bash <(wget -O - https://thonny.org/installer-for-linux) Re-using an existing Python installation (for advanced users) pip3 install thonny 3rd party distributions (may have older version) Flatpak flatpak install org.thonny.Thonny Debian, Raspbian, Ubuntu, Mint and others sudo apt install thonny Fedora sudo dnf install thonny

You can also open "**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Software**", we have prepared it in advance.


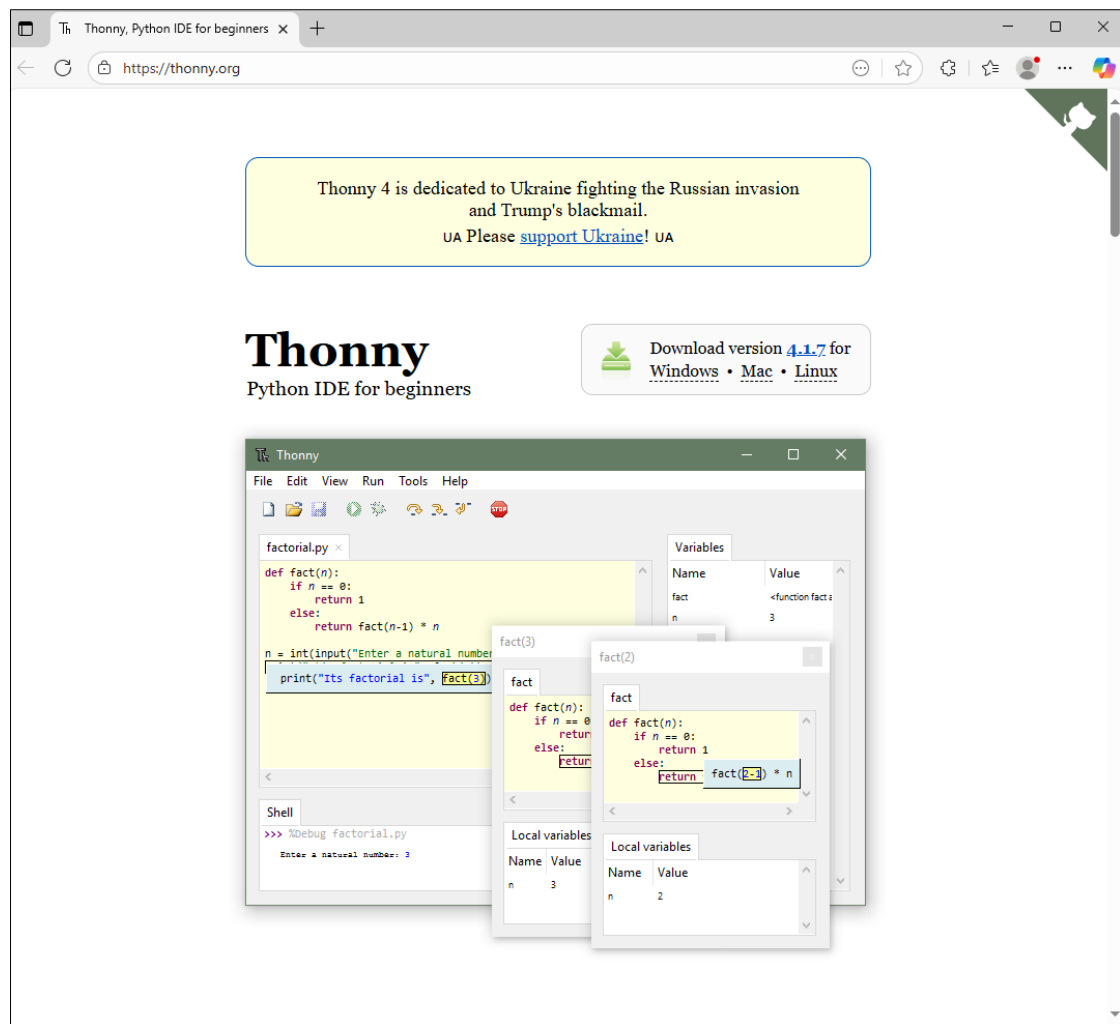


Installing on Windows

The icon of Thonny after downloading is as below. Double click "thonny-4.0.1.exe".

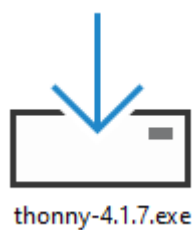


If you're not familiar with computer software installation, you can simply keep clicking "Next" until the installation completes.

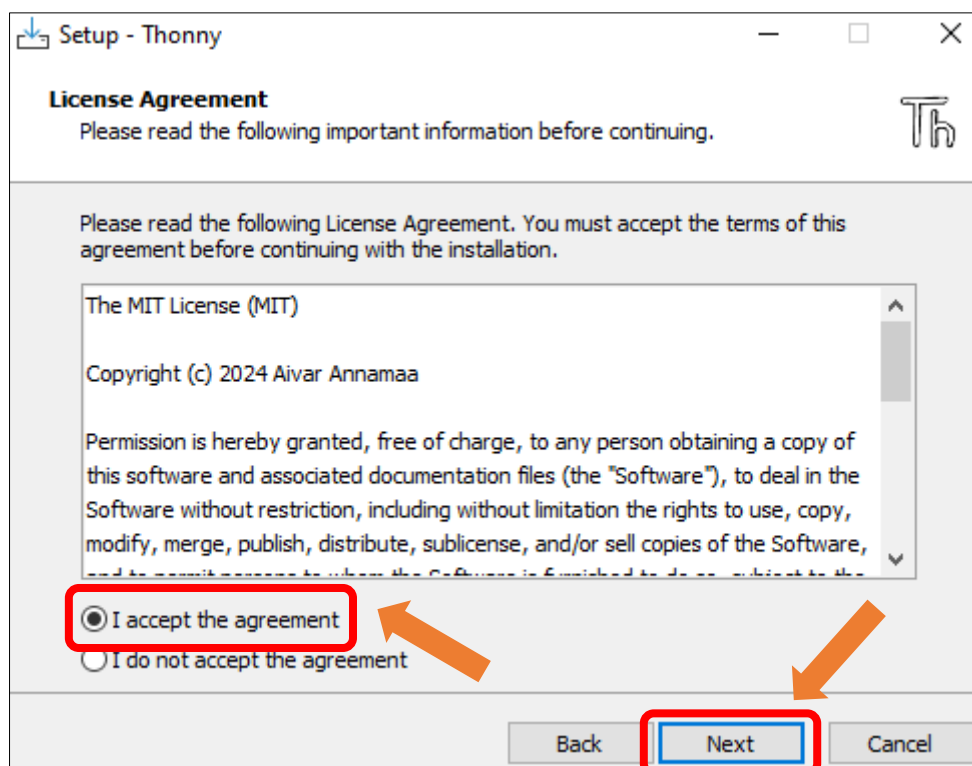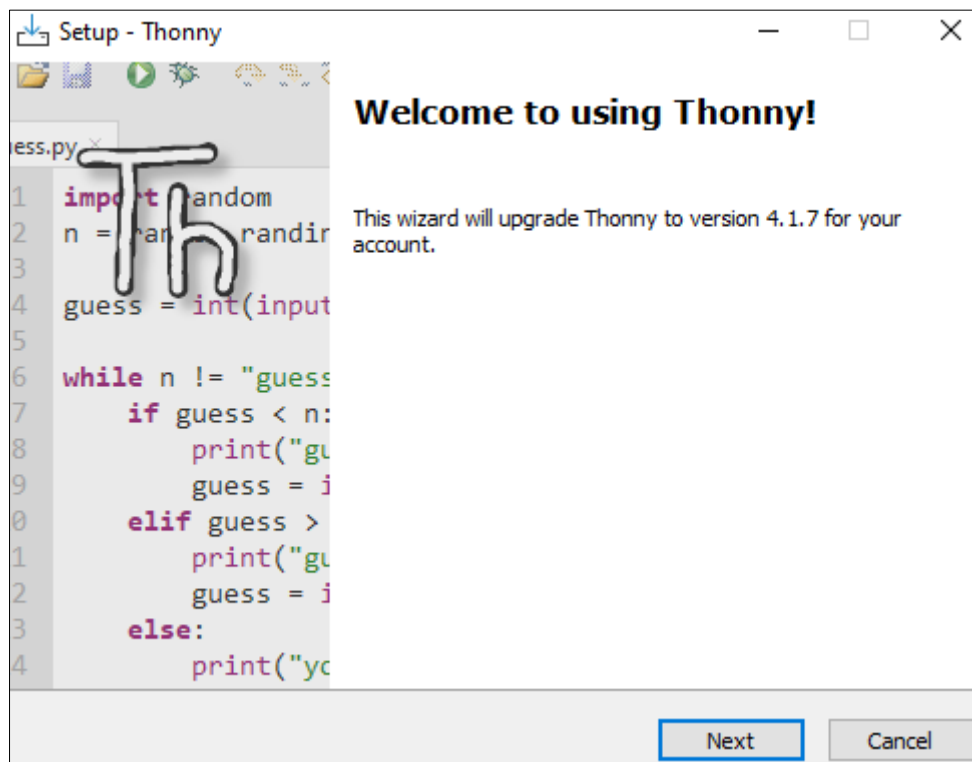


If you want to change Thonny's installation path, you can click "Browse" to modify it. After selecting installation path, click "OK".


If you do not want to change it, just click "Next".

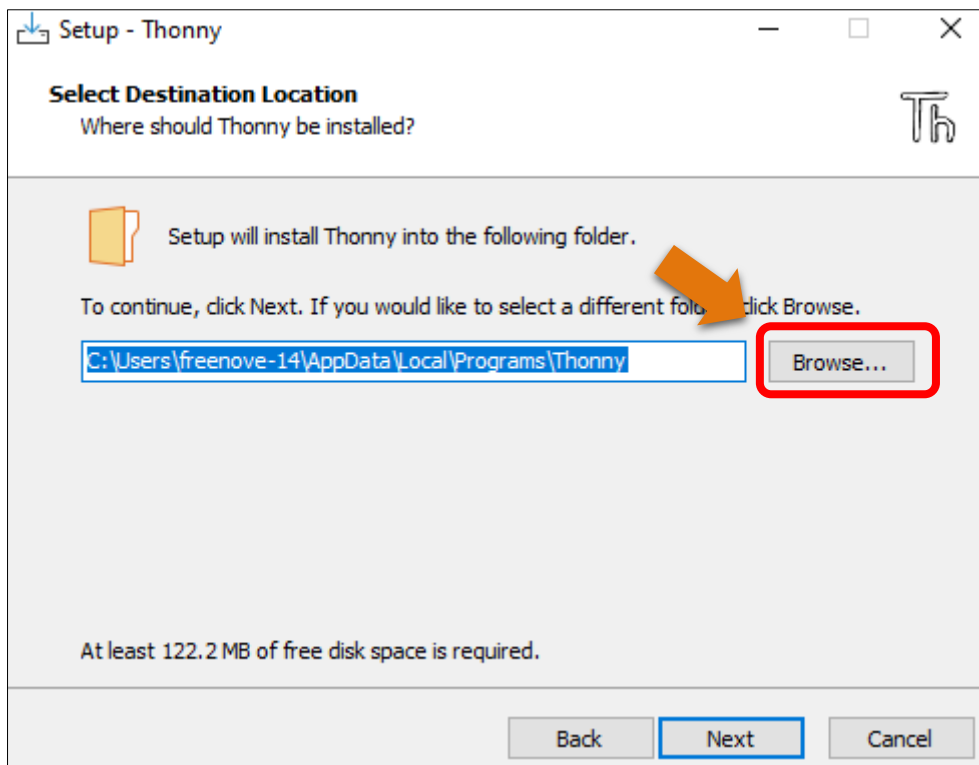


Check "Create desktop icon" and then it will generate a shortcut on your desktop to facilitate you to open Thonny later.

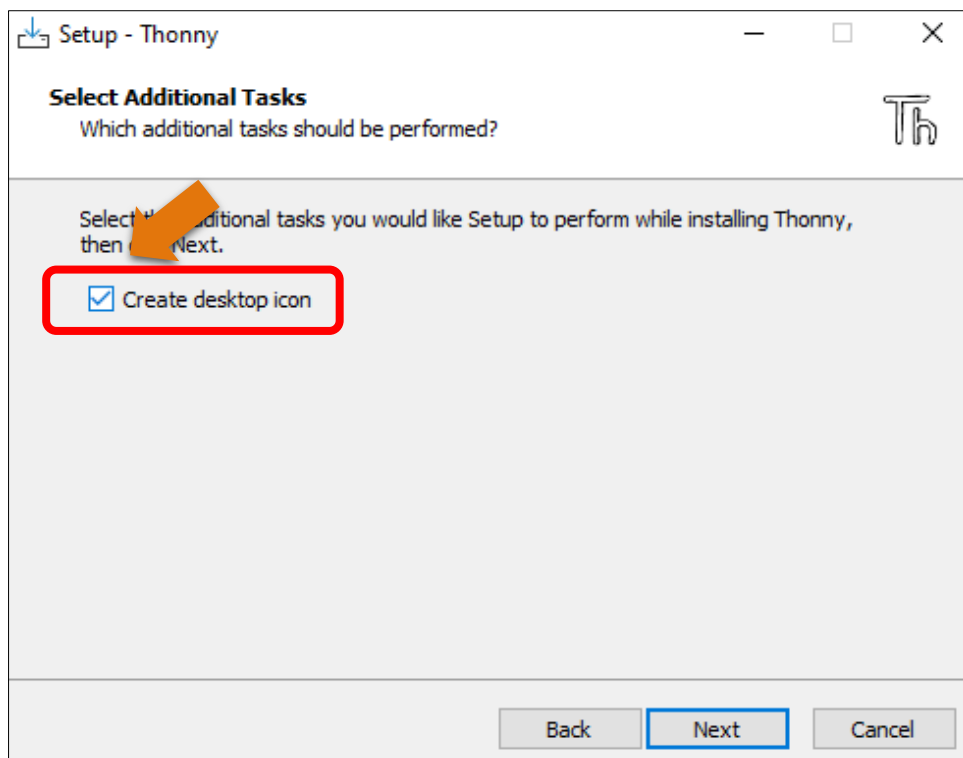


Click "install" to install the software.

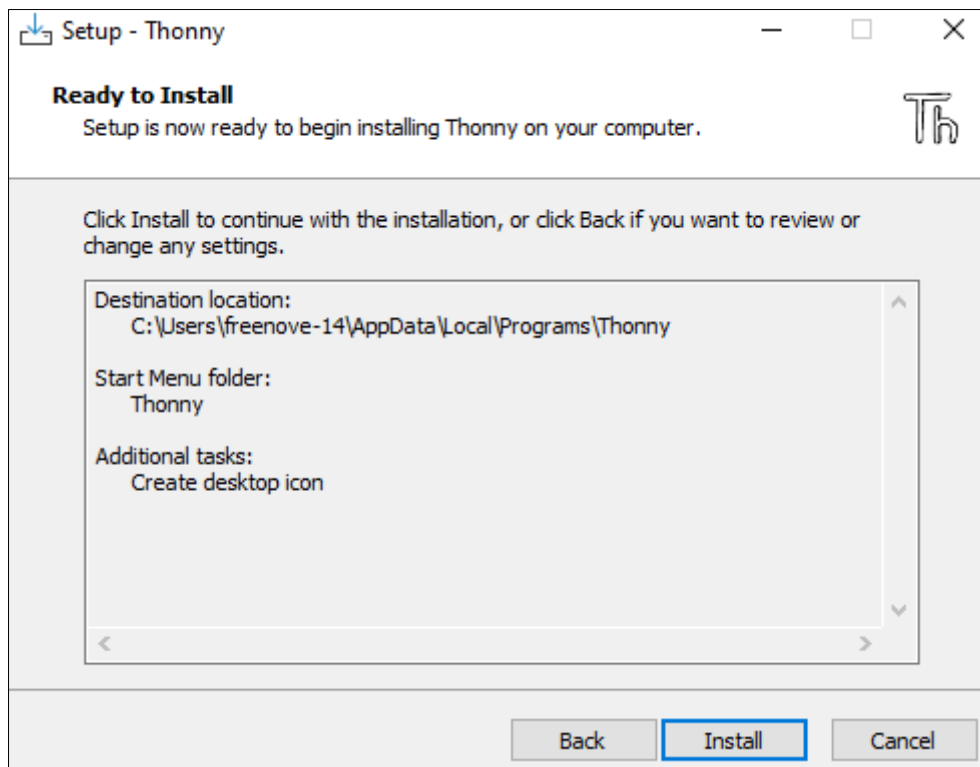

During the installation process, you only need to wait for the installation to complete, and you must not click "Cancel", otherwise Thonny will fail to be installed.

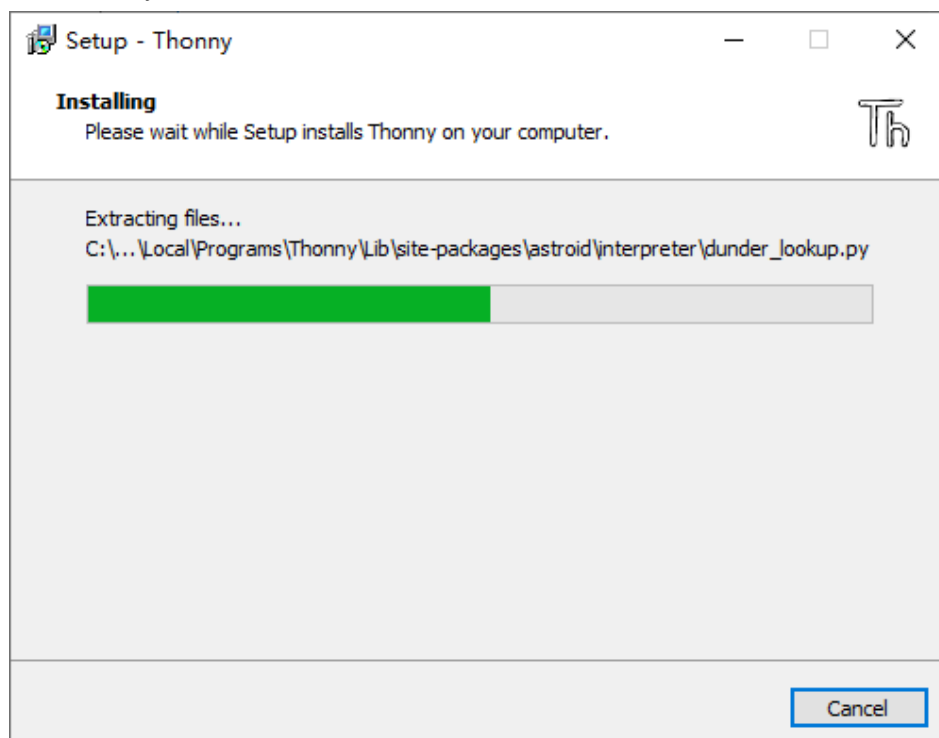

Once you see the interface as below, Thonny has been installed successfully.

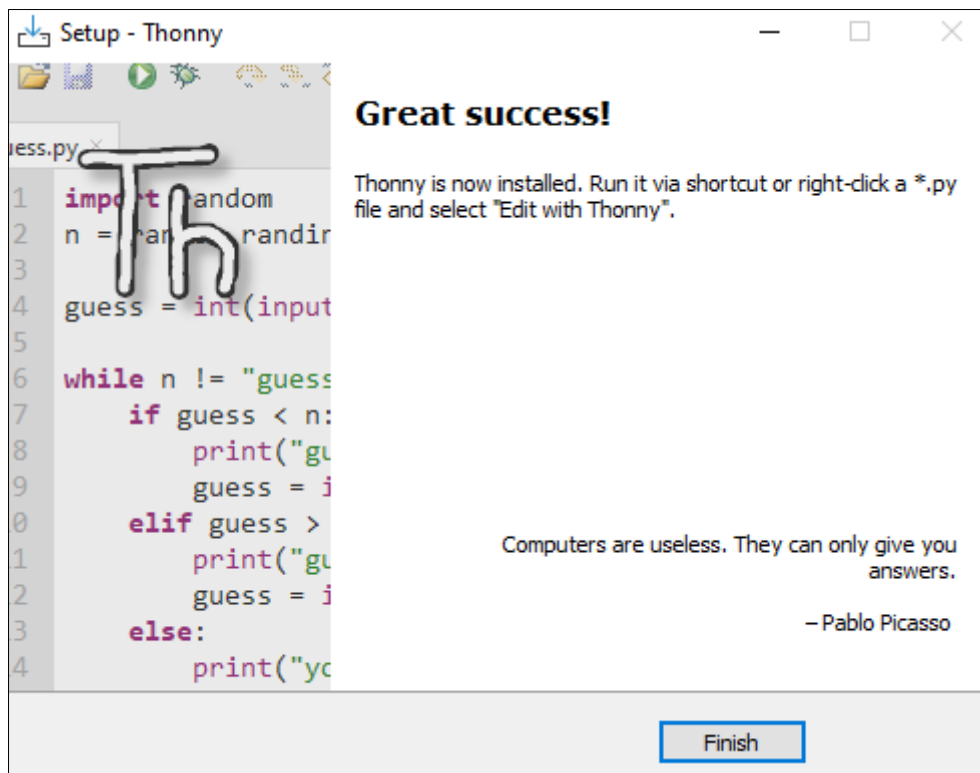


If you've check "Create desktop icon" during the installation process, you can see the below icon on your desktop..





Basic Configuration of Thonny

Click the desktop icon of Thonny and you can see the interface of it as follows:

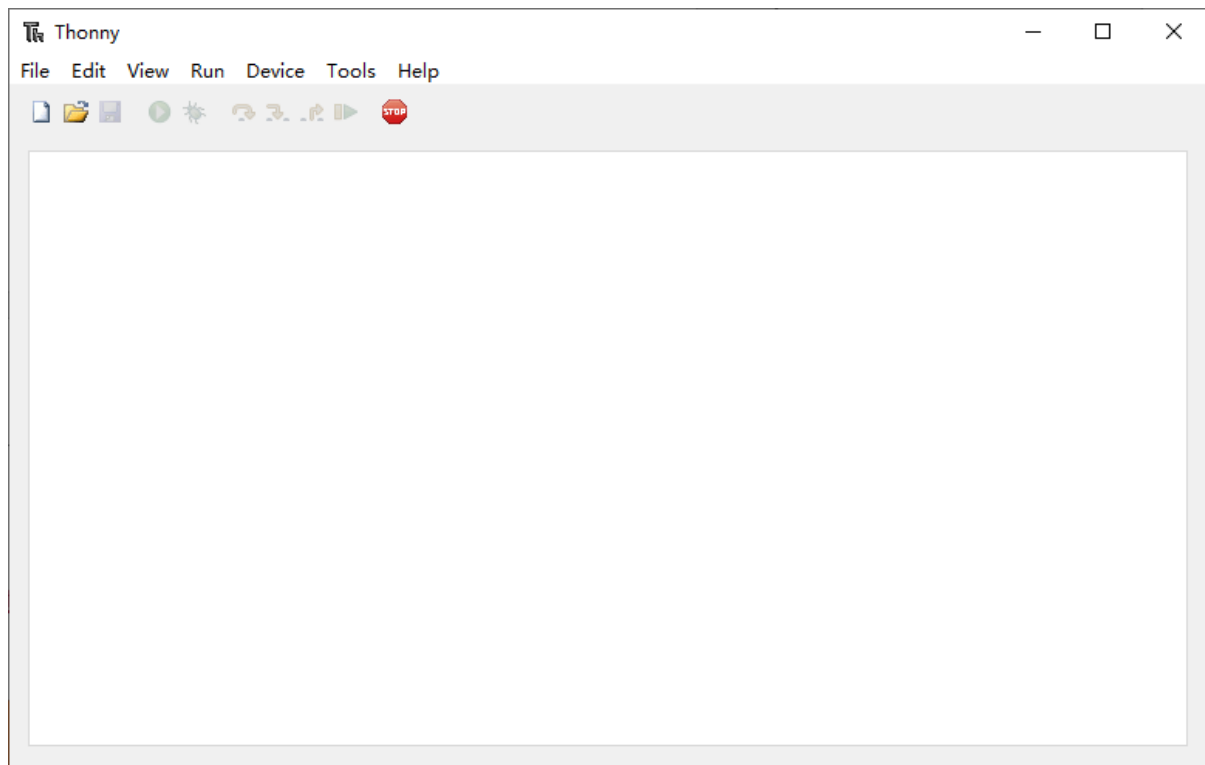

Select "View" → "Files" and "Shell".

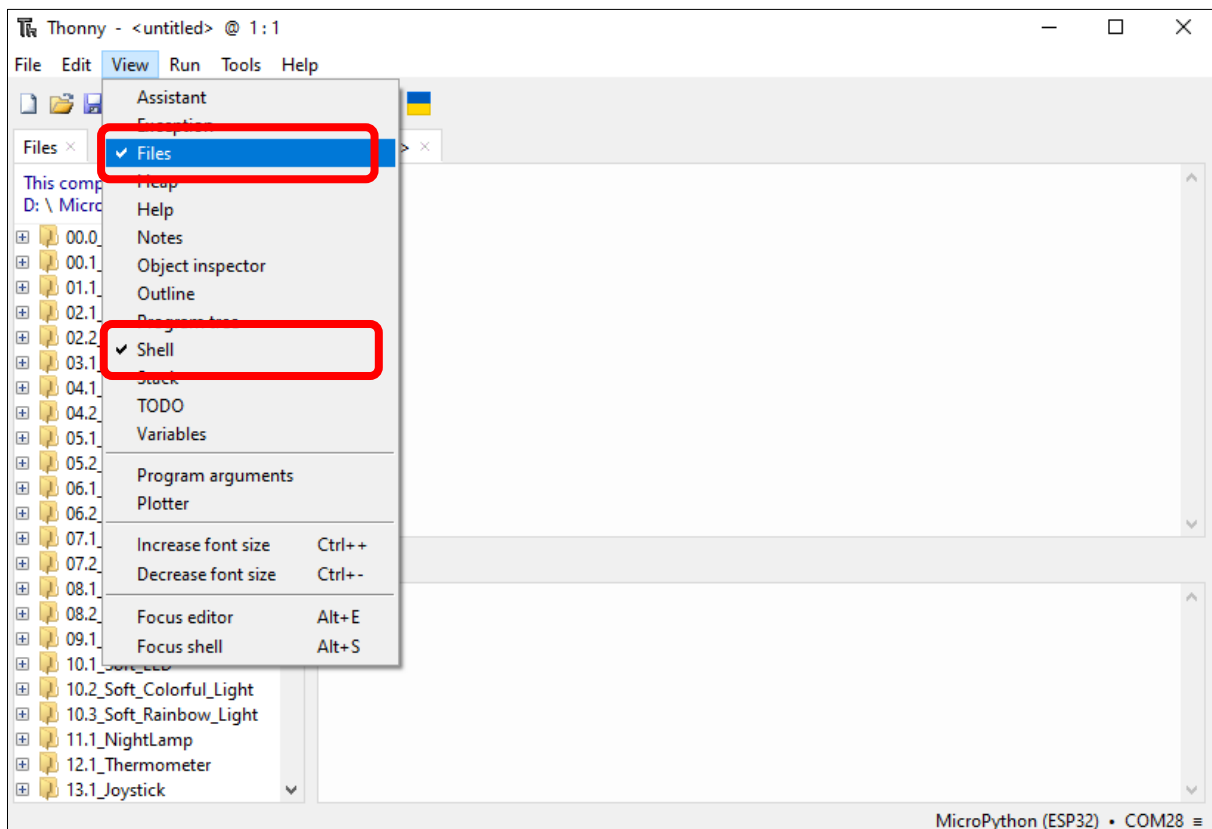

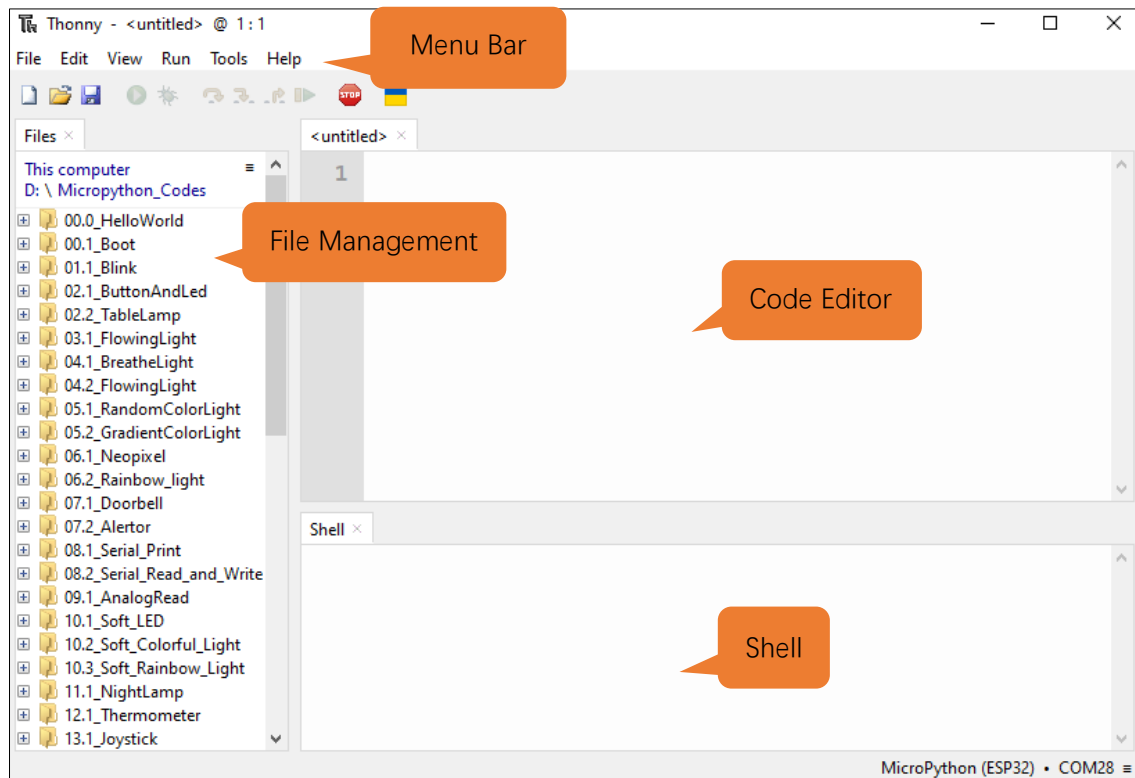

Burning Micropython Firmware (Important)

To run Python programs on ESP32S3, we need to burn a firmware to ESP32-S3 first.

Downloading Micropython Firmware

Official website of microPython: <http://micropython.org/>

Webpage listing firmware of microPython for ESP32S3:

https://micropython.org/download/ESP32_GENERIC_S3/

Firmware	
Releases	
v1.26.0 (2025-08-09)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes] (latest)
v1.25.0 (2025-04-15)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.24.1 (2024-11-29)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.24.0 (2024-10-25)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.23.0 (2024-06-02)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.22.2 (2024-02-22)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.22.1 (2024-01-05)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.22.0 (2023-12-27)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.21.0 (2023-10-05)	.uf2 / [.app-bin] / [.bin] / [.elf] / [.map] / [Release notes]
v1.20.0 (2023-04-26)	.uf2 / [.bin] / [.elf] / [.map] / [Release notes]
v1.19.1 (2022-06-18)	.uf2 / [.bin] / [.elf] / [.map] / [Release notes]
v1.18 (2022-01-17)	.bin / [.elf] / [.map] / [Release notes]


Any concerns? ✉ support@freenove.com

Firmware used in this tutorial is **ESP32_GENERIC_S3-20250809-v1.26.0.bin**

This file is also provided in our data folder "**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Firmware**".

Install python3

Before burning the firmware to ESP32S3, we need to ensure that Python 3 has been installed on the computer. If you have not already installed it, please install it first. Python Official download address is: <https://www.python.org/downloads/>

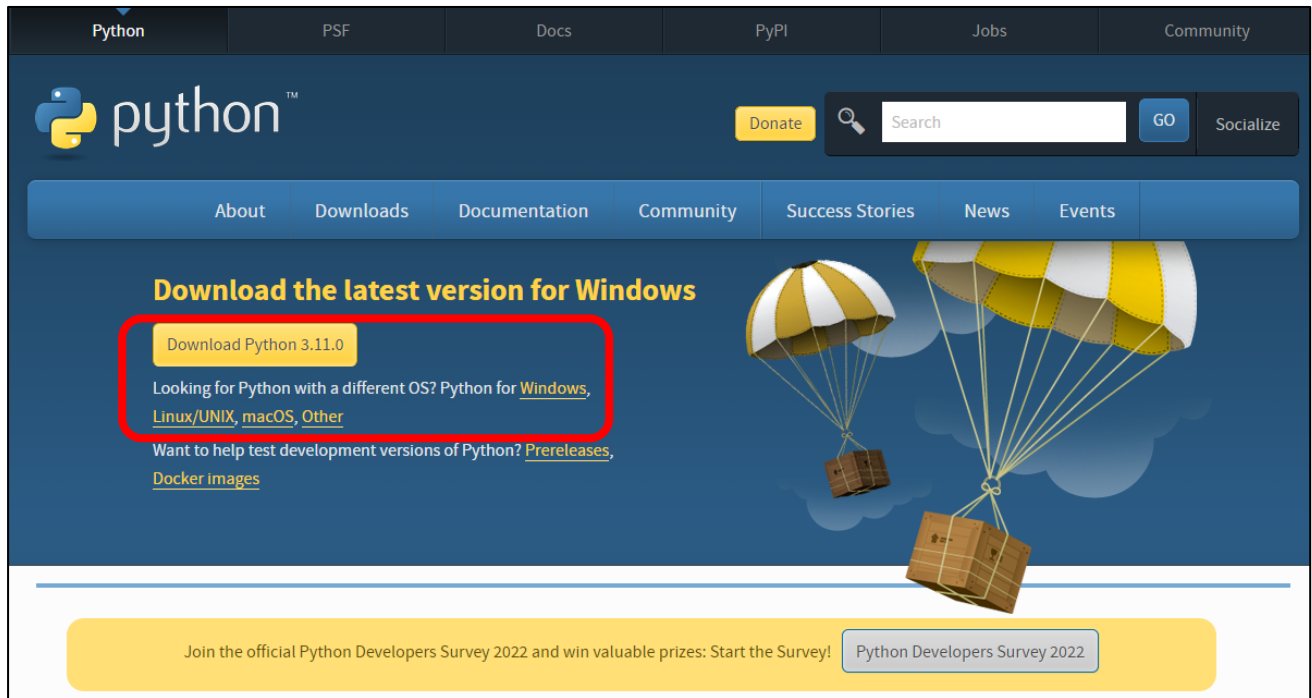


Please follow the official instructions to download and install.

Burning a Micropython Firmware


Window

Connect your computer and ESP32-S3 with a USB cable.

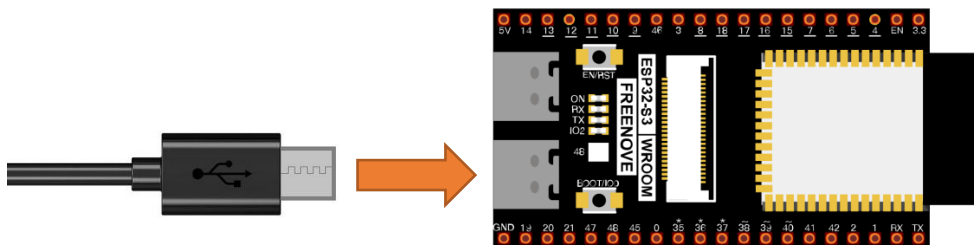


Open **Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Firmware**


Enter cmd on path bar then press Enter.

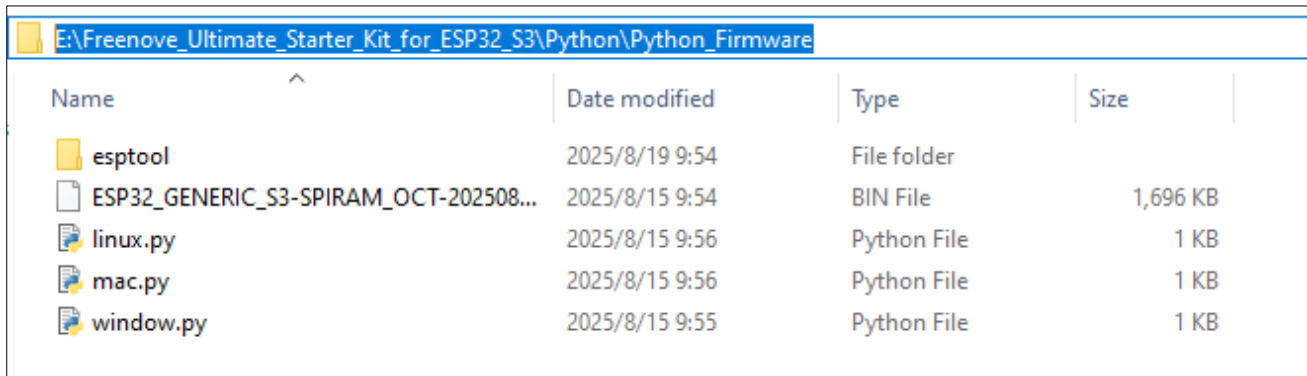

Name	Date modified	Type	Size
esptool	2025/8/19 9:54	File folder	
ESP32_GENERIC_S3-SPIRAM_OCT-202508...	2025/8/15 9:54	BIN File	1,696 KB
linux.py	2025/8/15 9:56	Python File	1 KB
mac.py	2025/8/15 9:56	Python File	1 KB
window.py	2025/8/15 9:55	Python File	1 KB

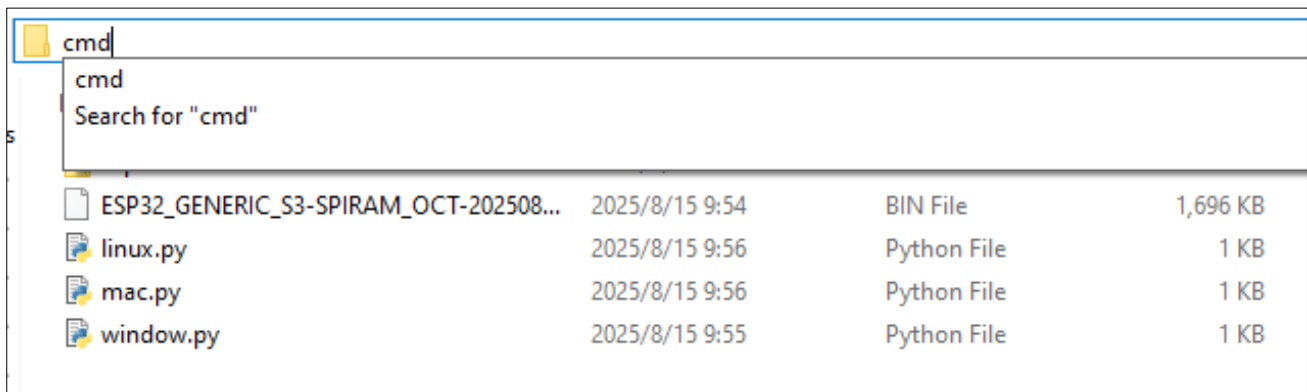

Name	Date modified	Type	Size
ESP32_GENERIC_S3-SPIRAM_OCT-202508...	2025/8/15 9:54	BIN File	1,696 KB
linux.py	2025/8/15 9:56	Python File	1 KB
mac.py	2025/8/15 9:56	Python File	1 KB
window.py	2025/8/15 9:55	Python File	1 KB

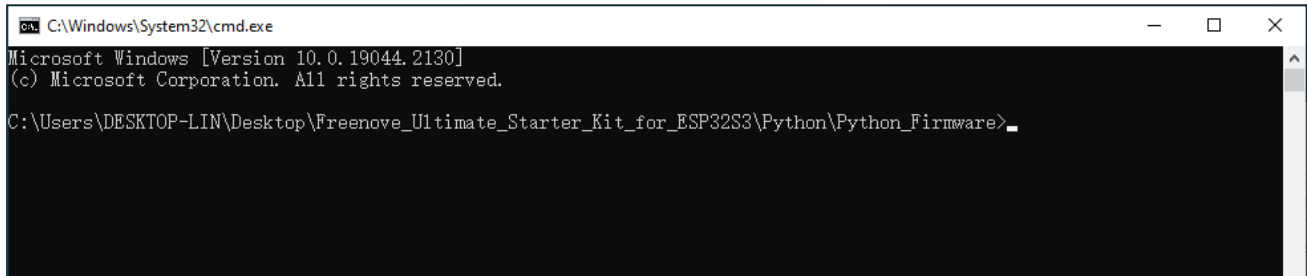

```
C:\Windows\System32\cmd.exe
Microsoft Windows [Version 10.0.19044.2130]
(c) Microsoft Corporation. All rights reserved.

C:\Users\DESKTOP-LIN\Desktop\Freenove_Ultimate_Starter_Kit_for_ESP32S3\Python\Python_Firmware>
```


Here my python3 version is 3.8.1.



```
C:\Windows\System32\cmd.exe
Microsoft Windows [Version 10.0.19044.2130]
(c) Microsoft Corporation. All rights reserved.


C:\Users\DESKTOP-LIN\Desktop\Freenove_Ultimate_Starter_Kit_for_ESP32S3\Python\Python_Firmware>python --version
Python 3.8.1
```

Enter “python window.py”. Micropython firmware will be automatically burned to ESP32S3.

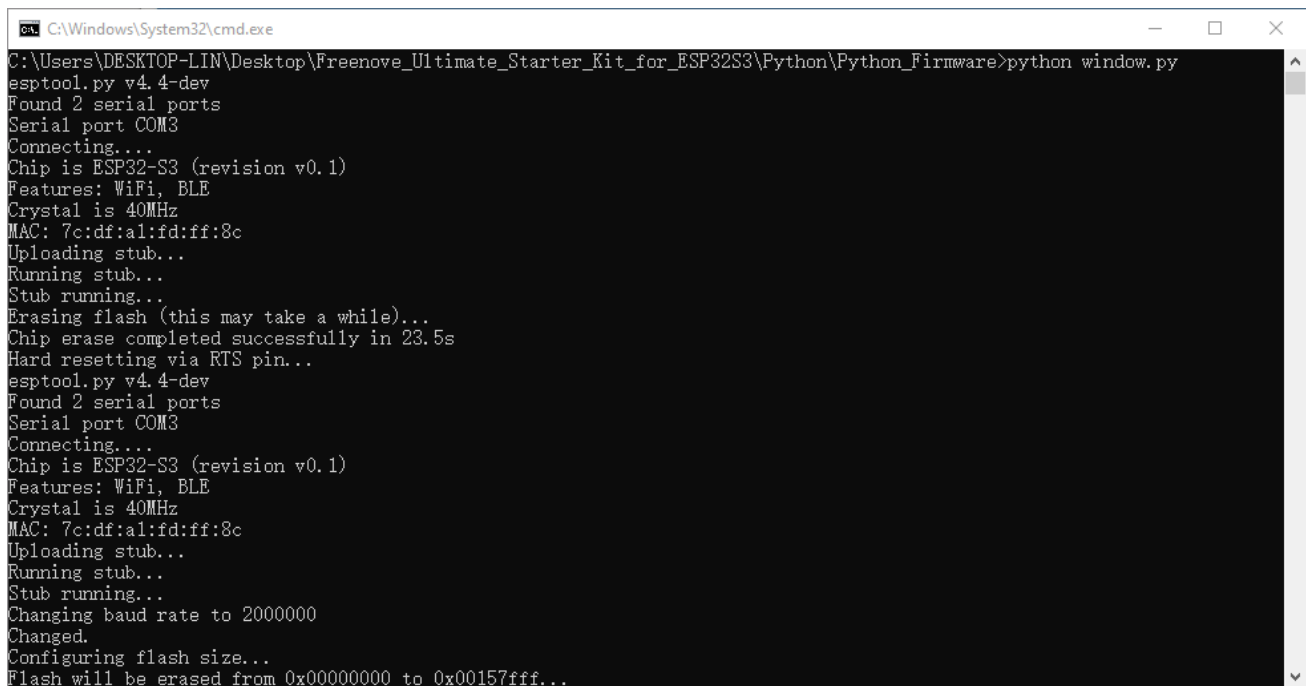

```
C:\Windows\System32\cmd.exe
C:\Users\DESKTOP-LIN\Desktop\Freenove_Ultimate_Starter_Kit_for_ESP32S3\Python\Python_Firmware>python window.py
esptool.py v4.4-dev
Found 2 serial ports
Serial port COM3
Connecting....
Chip is ESP32-S3 (revision v0.1)
Features: WiFi, BLE
Crystal is 40MHz
MAC: 7c:df:a1:fd:ff:8c
Uploading stub...
Running stub...
Stub running...
Erasing flash (this may take a while)...
Chip erase completed successfully in 23.5s
Hard resetting via RTS pin...
esptool.py v4.4-dev
Found 2 serial ports
Serial port COM3
Connecting....
Chip is ESP32-S3 (revision v0.1)
Features: WiFi, BLE
Crystal is 40MHz
MAC: 7c:df:a1:fd:ff:8c
Uploading stub...
Running stub...
Stub running...
Changing baud rate to 2000000
Changed.
Configuring flash size...
Flash will be erased from 0x00000000 to 0x00157fff...
```


As shown in the figure below after completion.

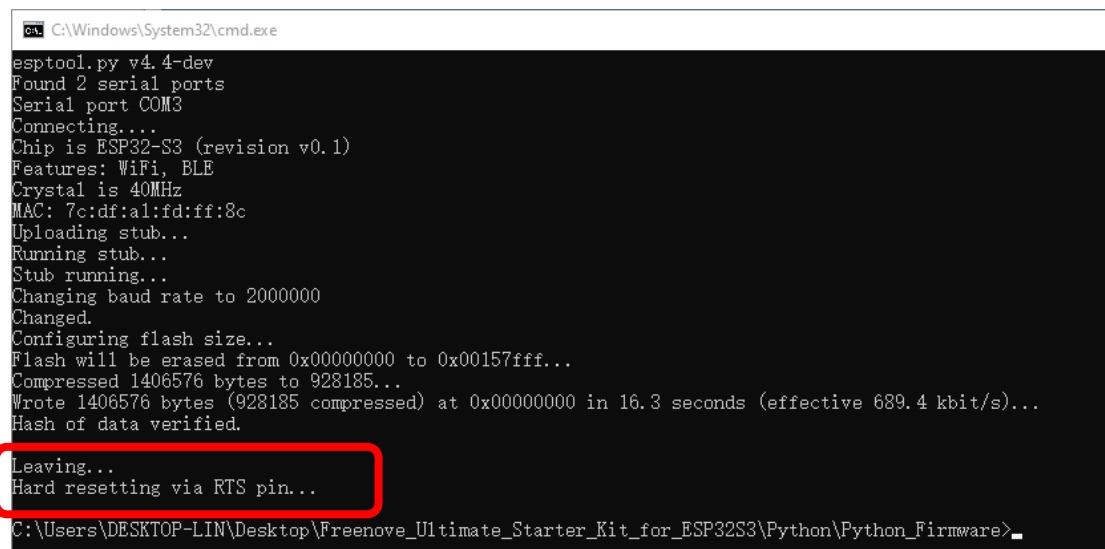

```
C:\Windows\System32\cmd.exe
esptool.py v4.4-dev
Found 2 serial ports
Serial port COM3
Connecting....
Chip is ESP32-S3 (revision v0.1)
Features: WiFi, BLE
Crystal is 40MHz
MAC: 7c:df:a1:fd:ff:8c
Uploading stub...
Running stub...
Stub running...
Changing baud rate to 2000000
Changed.
Configuring flash size...
Flash will be erased from 0x00000000 to 0x00157fff...
Compressed 1406576 bytes to 928185...
Wrote 1406576 bytes (928185 compressed) at 0x00000000 in 16.3 seconds (effective 689.4 kbit/s)...
Hash of data verified.
Leaving...
Hard resetting via RTS pin...
C:\Users\DESKTOP-LIN\Desktop\Freenove_Ultimate_Starter_Kit_for_ESP32S3\Python\Python_Firmware>
```

Mac


Open **Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Firmware**. Right-click and select **New Terminal at Folder**.

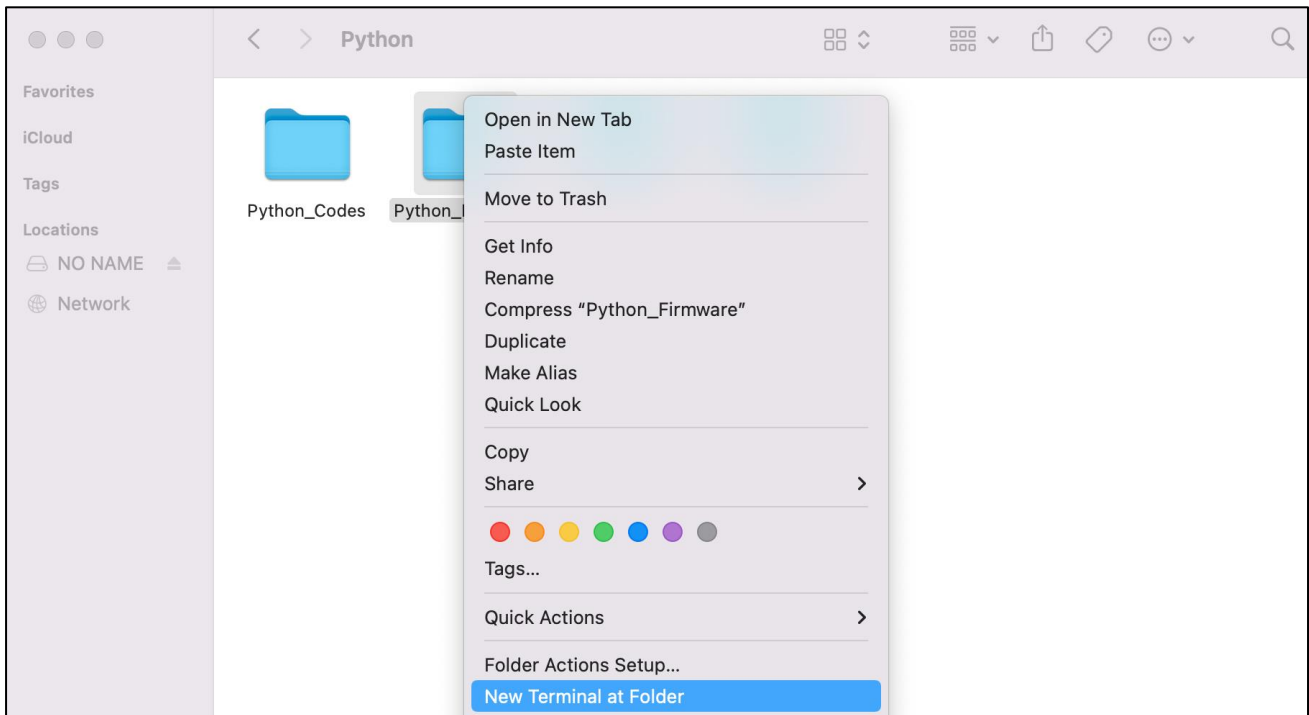

Here, my python3 version is 3.10.4


```
Python_Firmware — -zsh — 80x24
Last login: Thu Nov  3 17:15:41 on ttys000
[freenove@3c22fb61fadc Python_Firmware % python --version
zsh: command not found: python
[freenove@3c22fb61fadc Python_Firmware % python3 --version
Python 3.10.4
freenove@3c22fb61fadc Python_Firmware %
```

Enter "python3 mac.py" in the terminal, press Enter, and wait for the code to automatically burn the microython firmware into ESP32S3.

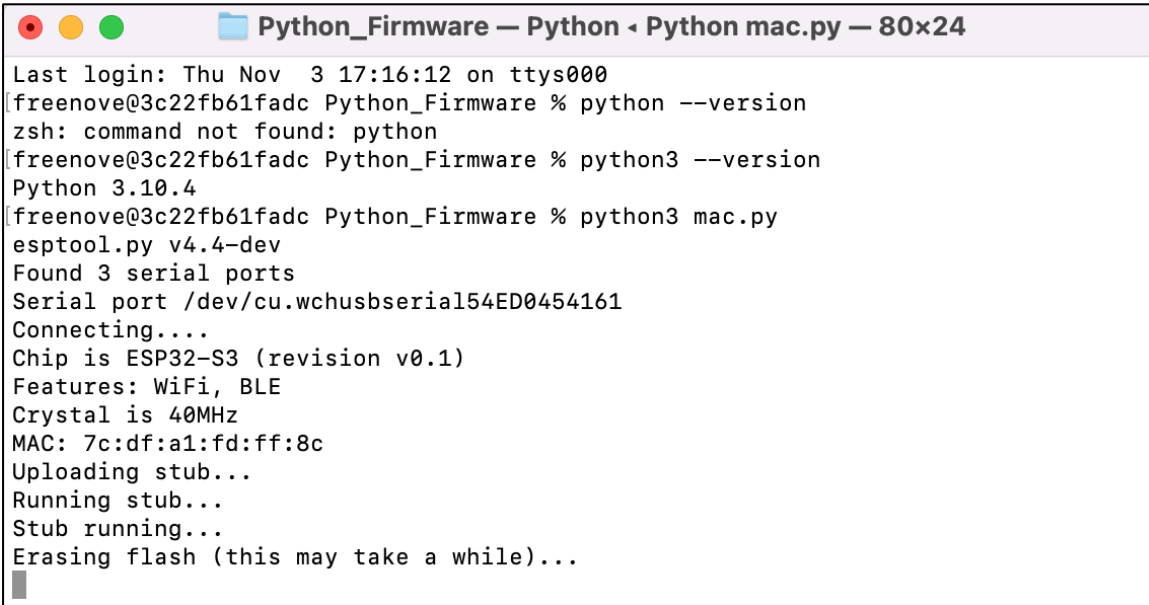

```
Python_Firmware — Python < Python mac.py — 80x24
Last login: Thu Nov  3 17:16:12 on ttys000
[freenove@3c22fb61fadc Python_Firmware % python --version
zsh: command not found: python
[freenove@3c22fb61fadc Python_Firmware % python3 --version
Python 3.10.4
[freenove@3c22fb61fadc Python_Firmware % python3 mac.py
esptool.py v4.4-dev
Found 3 serial ports
Serial port /dev/cu.wchusbserial154ED0454161
Connecting....
Chip is ESP32-S3 (revision v0.1)
Features: WiFi, BLE
Crystal is 40MHz
MAC: 7c:df:a1:fd:ff:8c
Uploading stub...
Running stub...
Stub running...
Erasing flash (this may take a while)...
█
```

After completion, it is shown below.

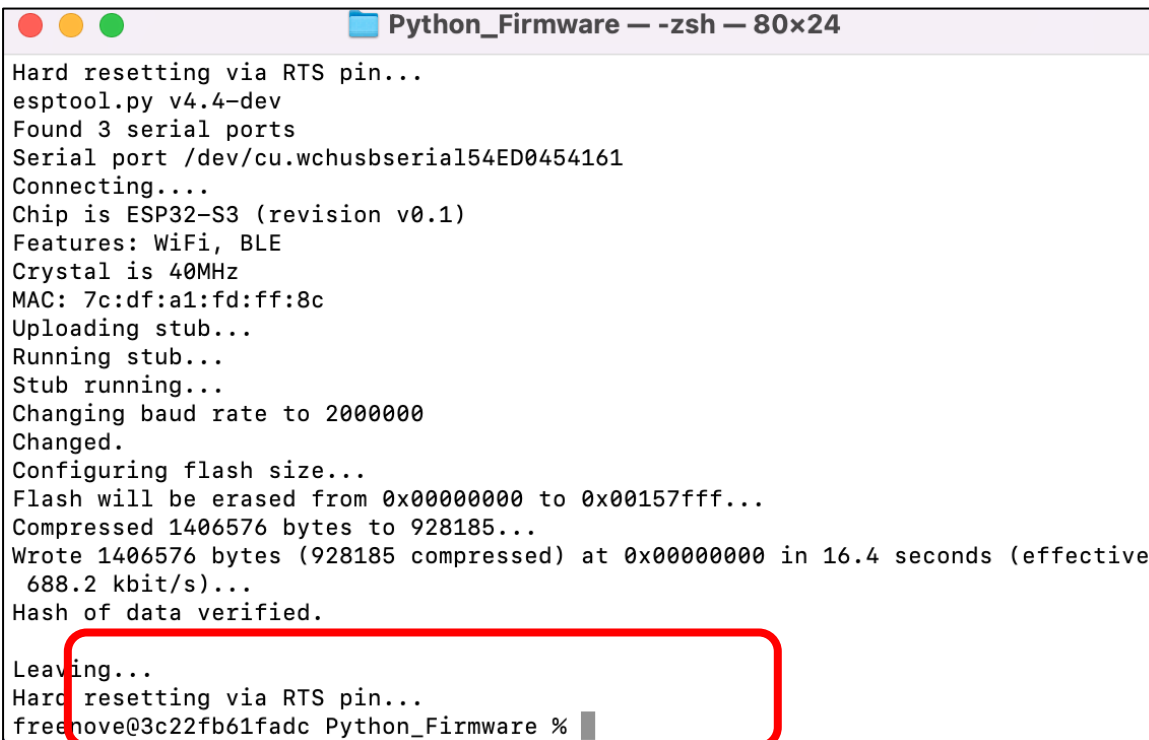


```
Python_Firmware — -zsh — 80x24
Hard resetting via RTS pin...
esptool.py v4.4-dev
Found 3 serial ports
Serial port /dev/cu.wchusbserial154ED0454161
Connecting....
Chip is ESP32-S3 (revision v0.1)
Features: WiFi, BLE
Crystal is 40MHz
MAC: 7c:df:a1:fd:ff:8c
Uploading stub...
Running stub...
Stub running...
Changing baud rate to 2000000
Changed.
Configuring flash size...
Flash will be erased from 0x00000000 to 0x00157fff...
Compressed 1406576 bytes to 928185...
Wrote 1406576 bytes (928185 compressed) at 0x00000000 in 16.4 seconds (effective
688.2 kbit/s)...
Hash of data verified.
Leaving...
Hard resetting via RTS pin...
freenove@3c22fb61fadc Python_Firmware % █
```

Note: The operation of the Linux system is similar to that of the Mac system. Please refer to the Mac system.


Testing codes (Important)

Testing Shell Command


Make sure that the ESP 32S3 has burned the firmware and is connected to the computer through the data cable. Run Thonny. Click Run and select Configure interpreter.

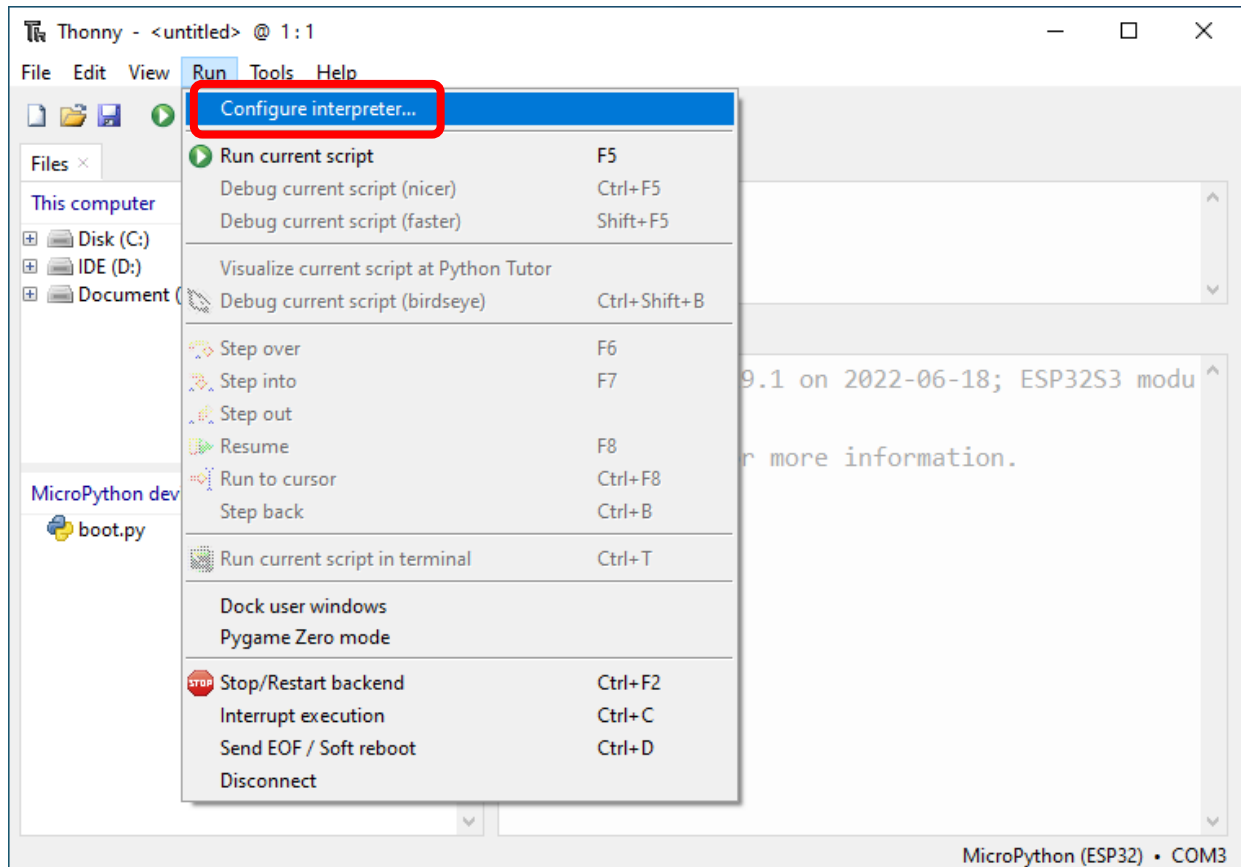


Please configure according to the following figure. Note that the port numbers of USB Enhanced SERIAL may be different for different systems. Please select according to the actual situation. After configuration, click OK.

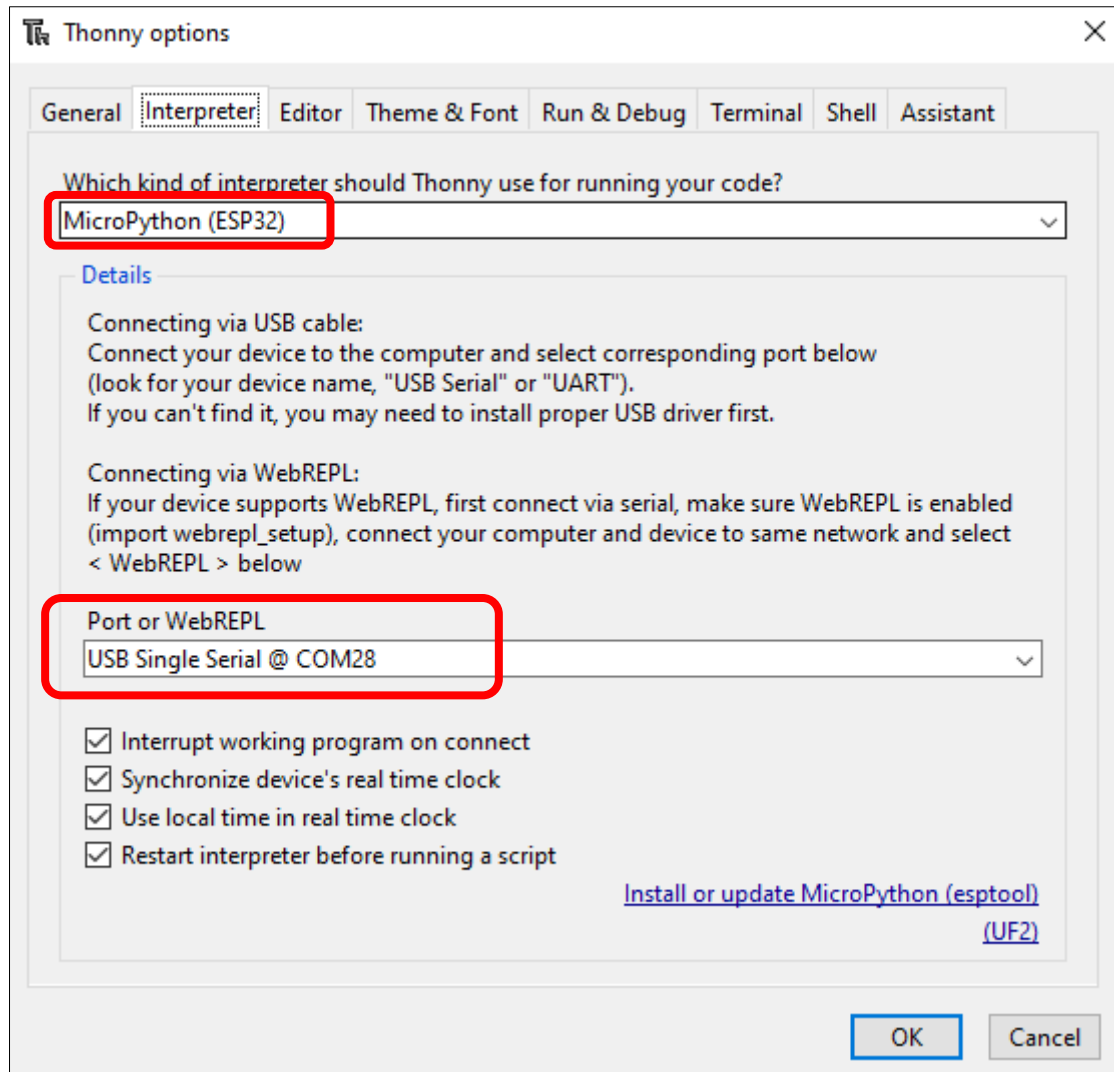

After configuration, every time you open Thonny, it will communicate with ESP32S3. The interface is shown below.

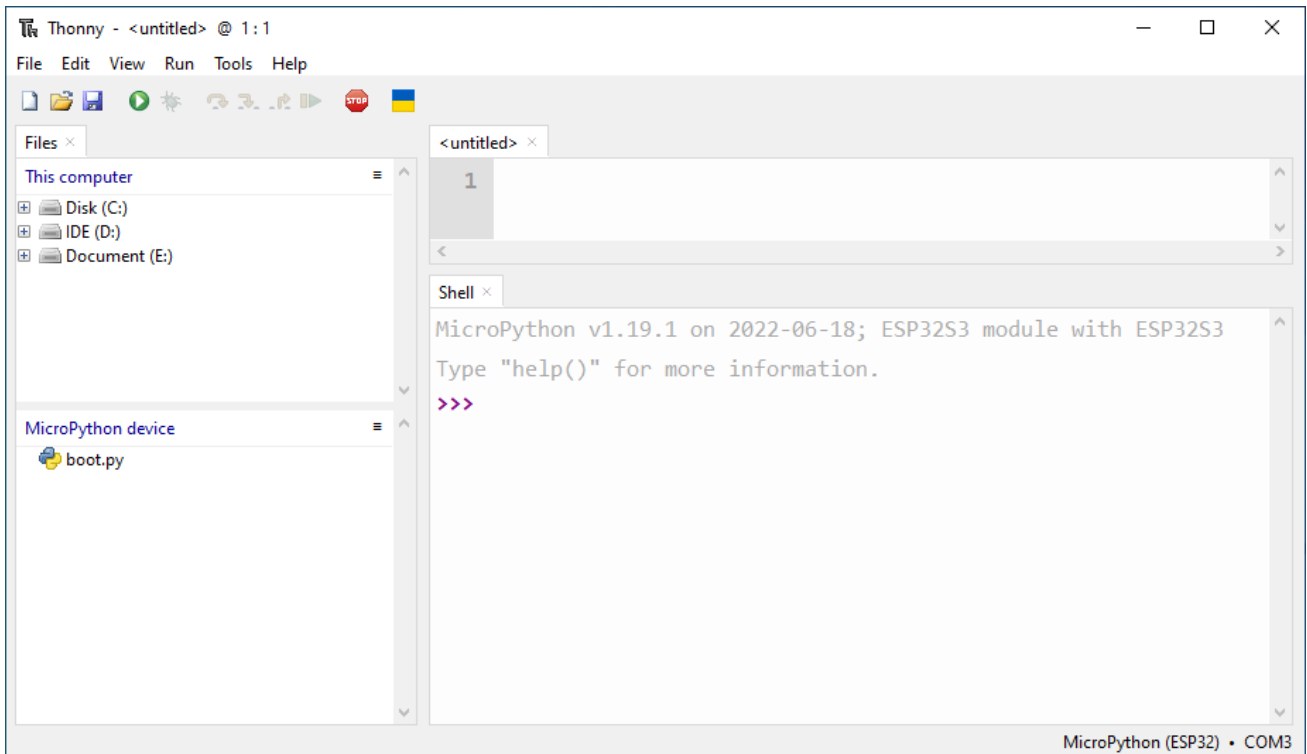


Enter "print('hello world')" in "Shell" and press Enter.

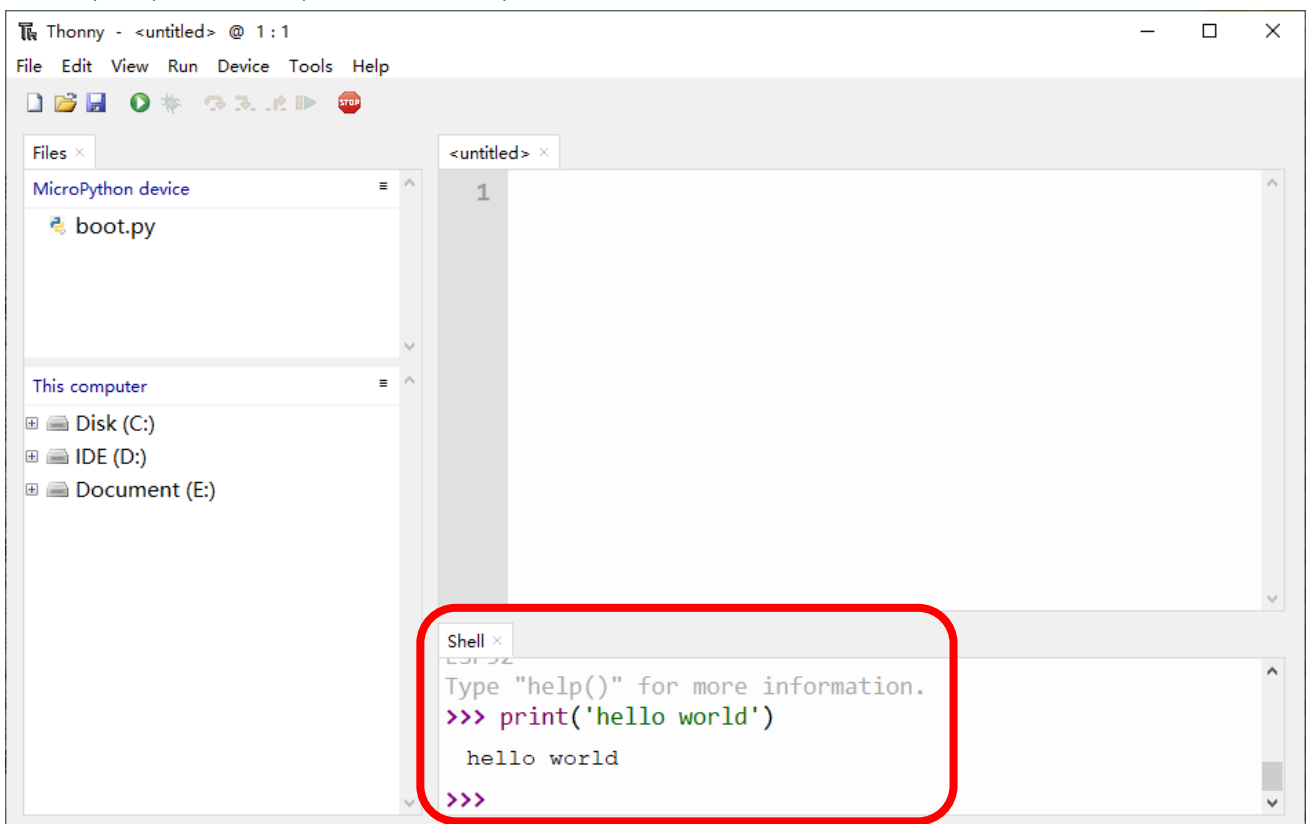


Running Online

ESP32-S3 needs to be connected to a computer when it is run online. Users can use Thonny to write and debug programs.


1. Open Thonny and click “Open…”.

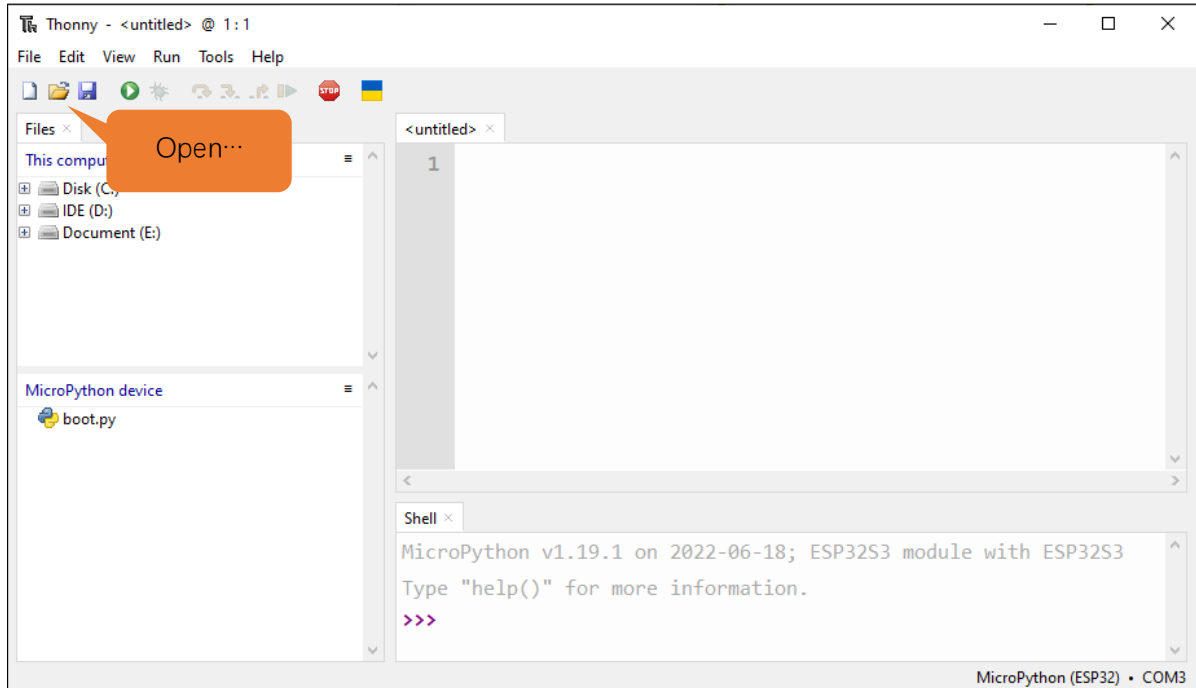


2. On the newly pop-up window, click “This computer”.

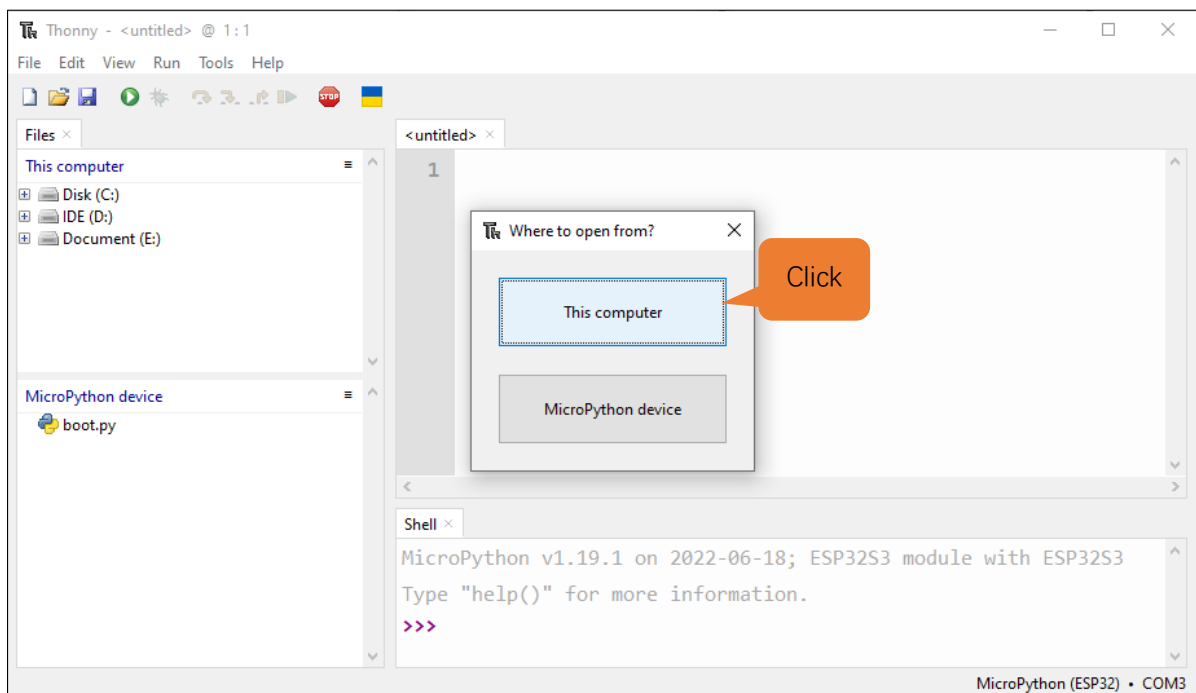

In the new dialog box, select “HelloWorld.py” in “Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes/00.0_HelloWorld” folder.

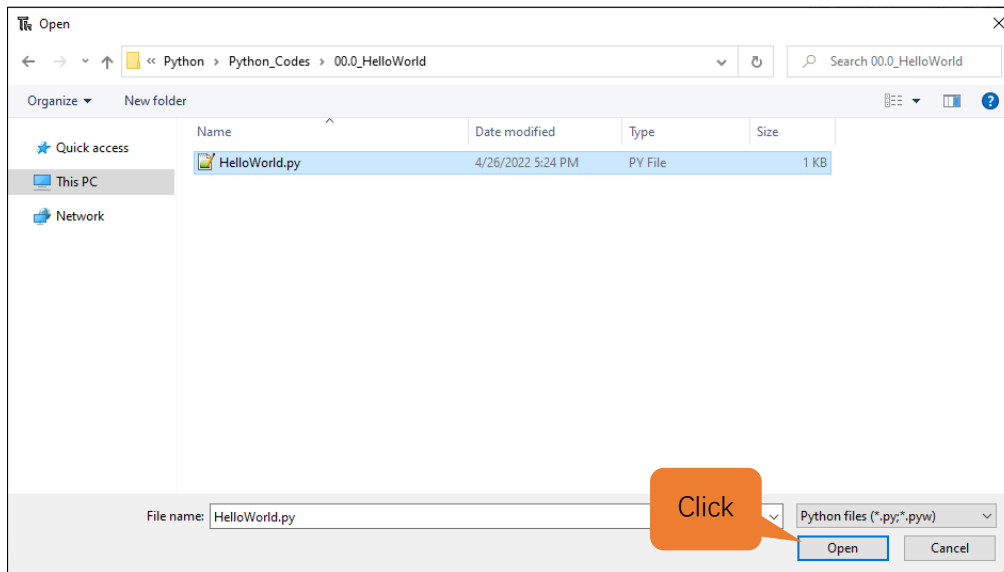

Click “Run current script” to execute the program and “Hello World” will be printed in “Shell”.

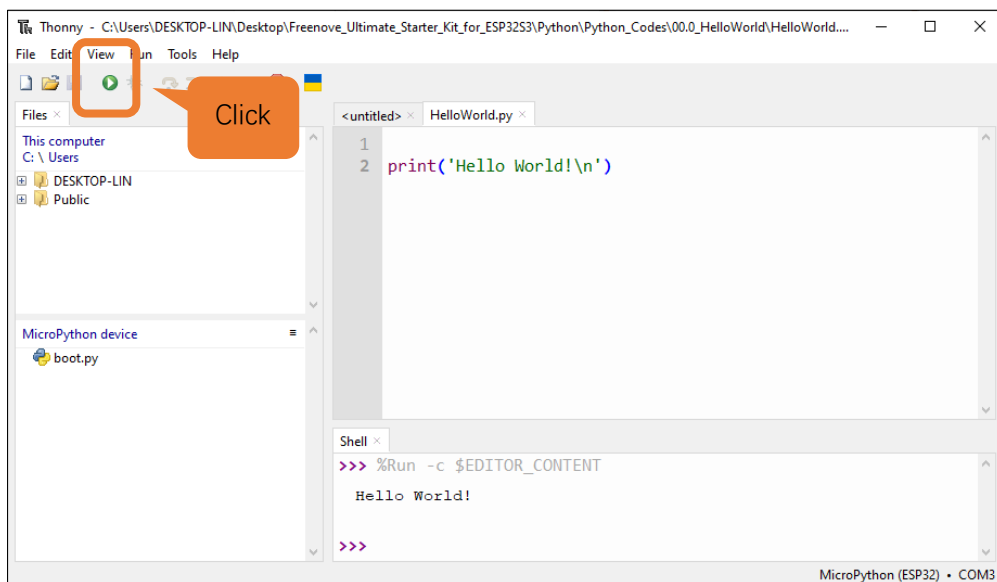


Note: When running online, if you press the reset key of ESP32S3, user's code will not be executed again. If you wish to run the code automatically after resetting the code, please refer to the following [Running Offline](#).


Running Offline (Importance)

After ESP32-S3 is reset, it runs the file `boot.py` in root directory first and then runs file `main.py`, and finally, it enters “Shell”. Therefore, to make ESP32-S3 execute user’s programs after resetting, we need to add a guiding program in `boot.py` to execute user’s code.


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”. Open “Thonny”。

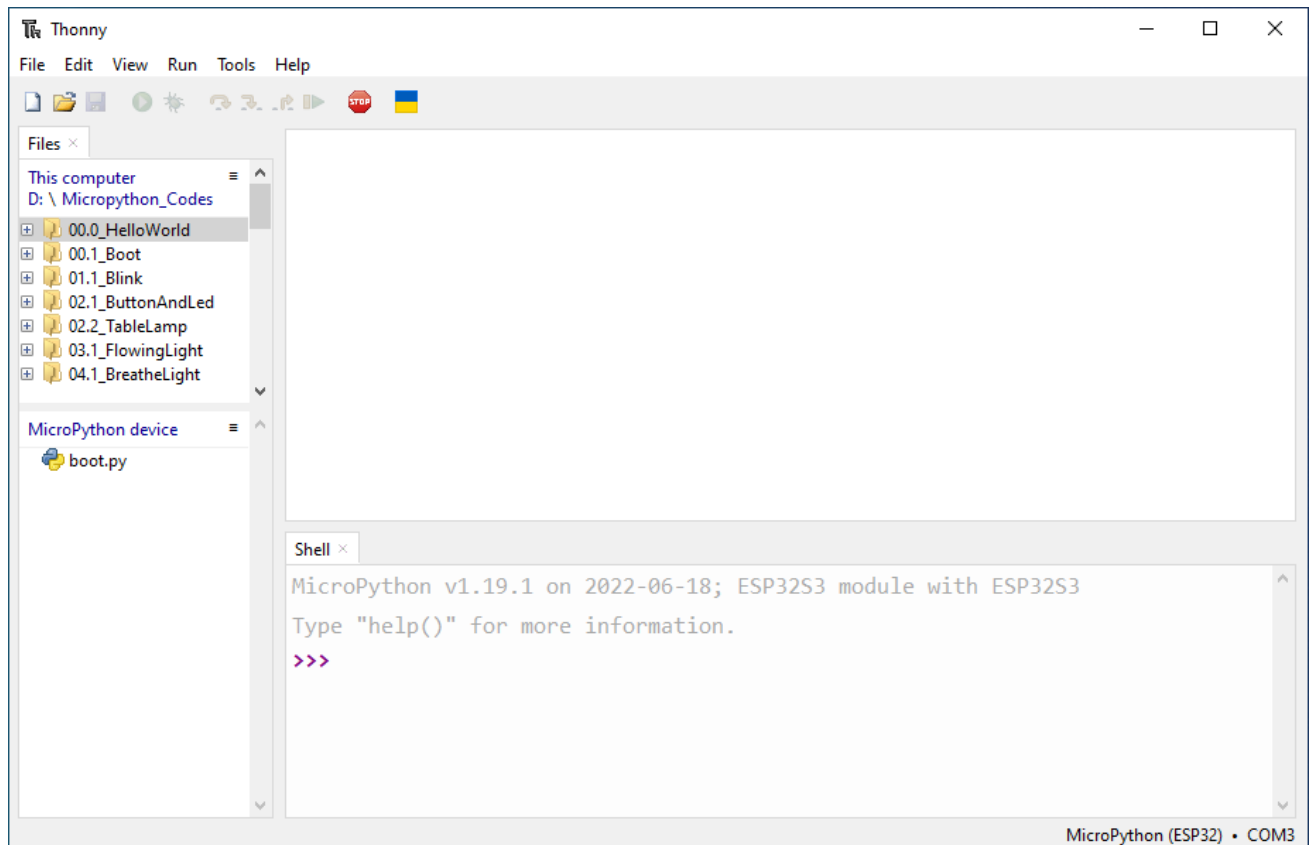


Expand “00.1_Boot” in the “Micropython_Codes” in the directory of disk(D), and double-click `boot.py`, which is provided by us to enable programs in “MicroPython device” to run offline.

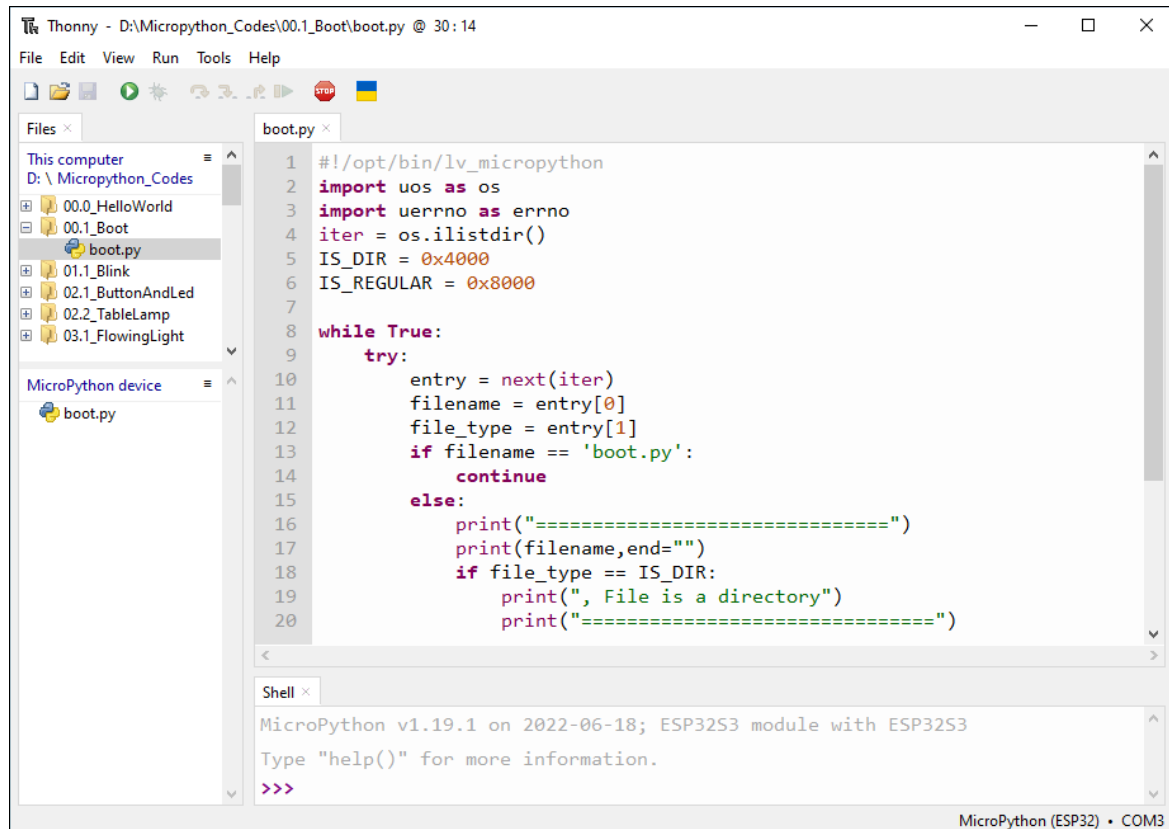


If you want your written programs to run offline, you need to upload boot.py we provided and all your codes to "MicroPython device" and press ESP32S3's reset key. Here we use programs 00.0 and 00.1 as examples. Select "boot.py", right-click to select "Upload to /".

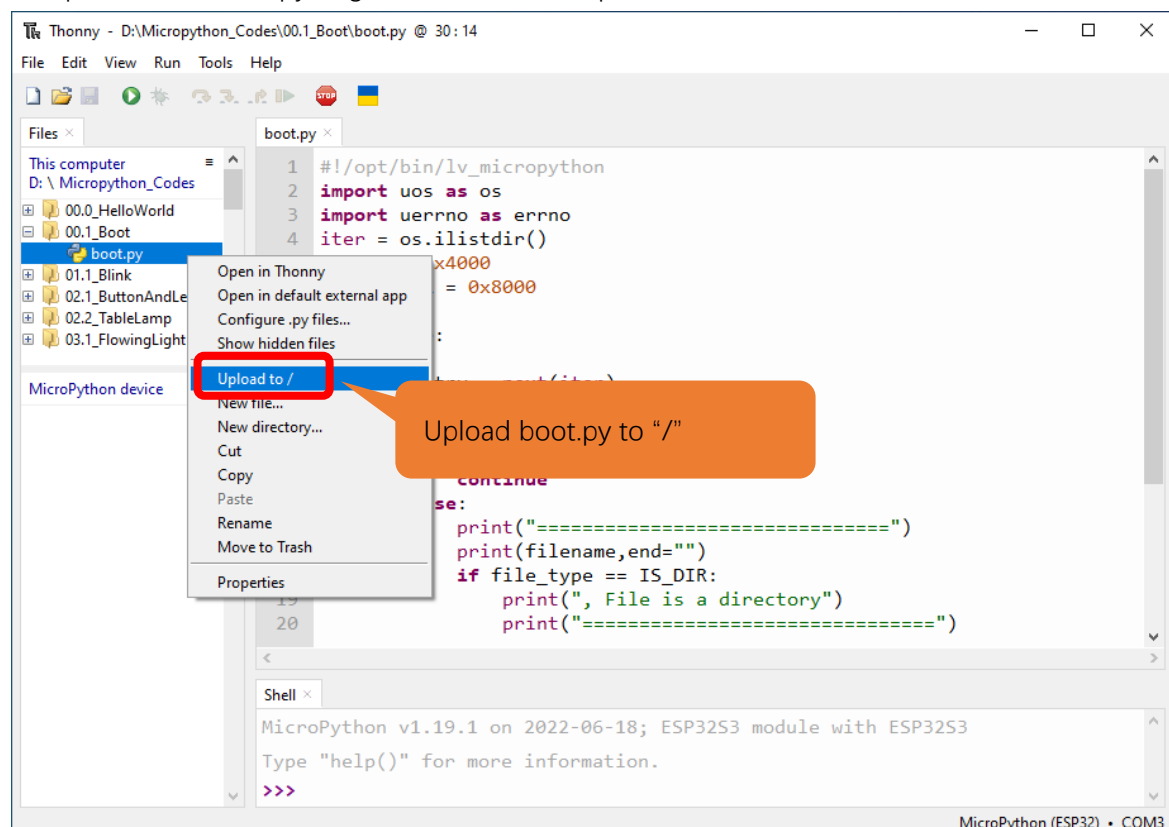

Similarly, upload “HelloWorld.py” to “MicroPython device”.

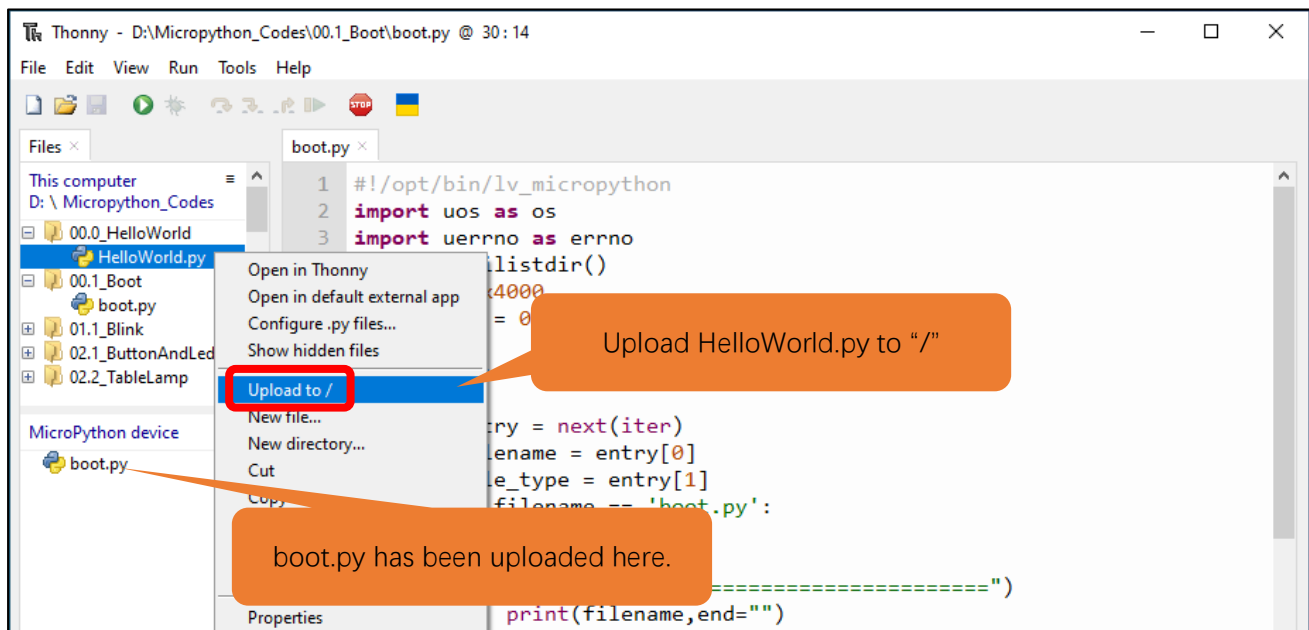


Press the reset key and in the box of the illustration below, you can see the code is executed.

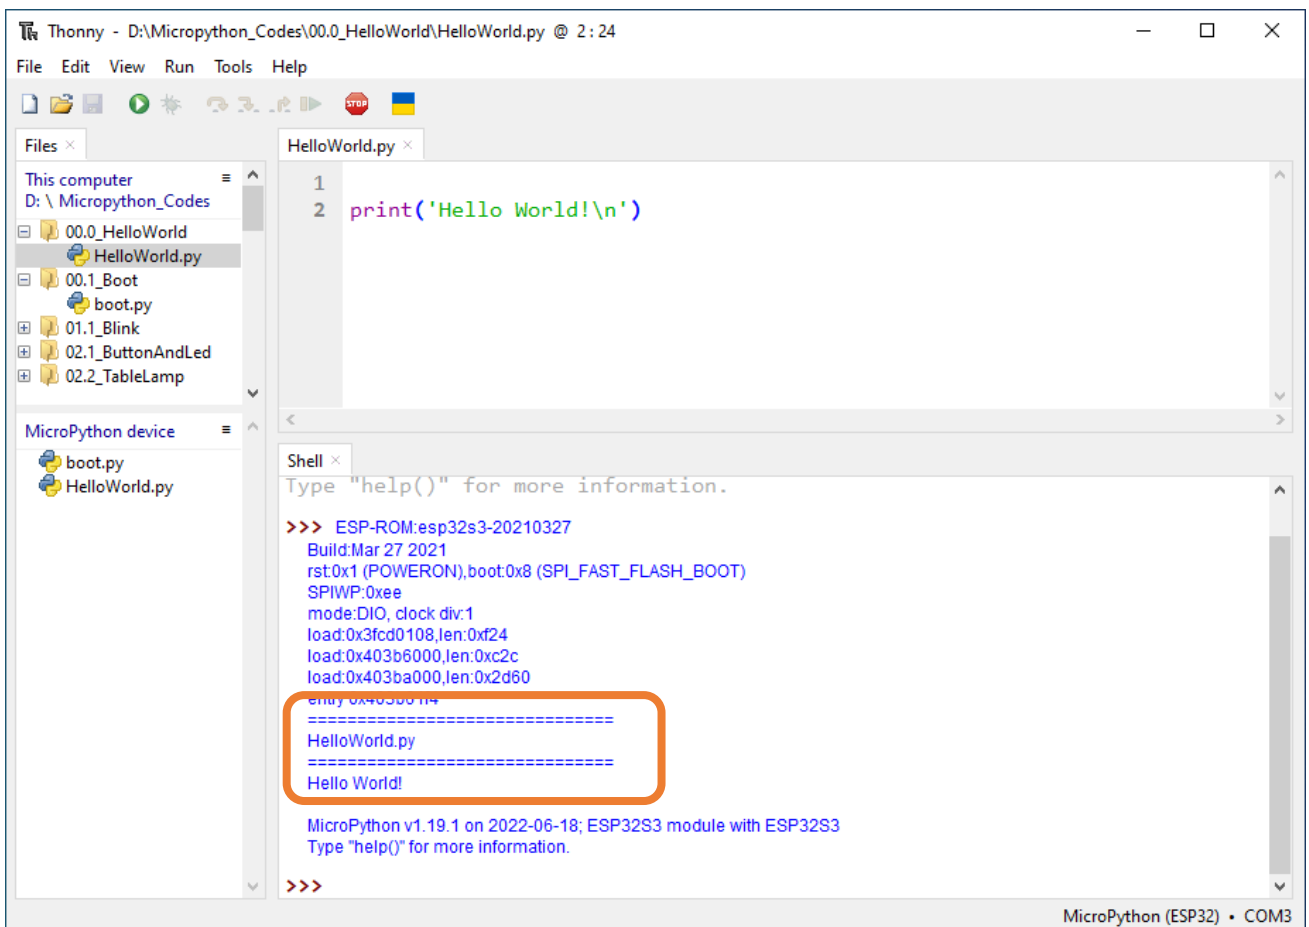


Thonny Common Operation

Uploading Code to ESP32S3

Each time when ESP32-S3 restarts, if there is a “boot.py” in the root directory, it will execute this code first.

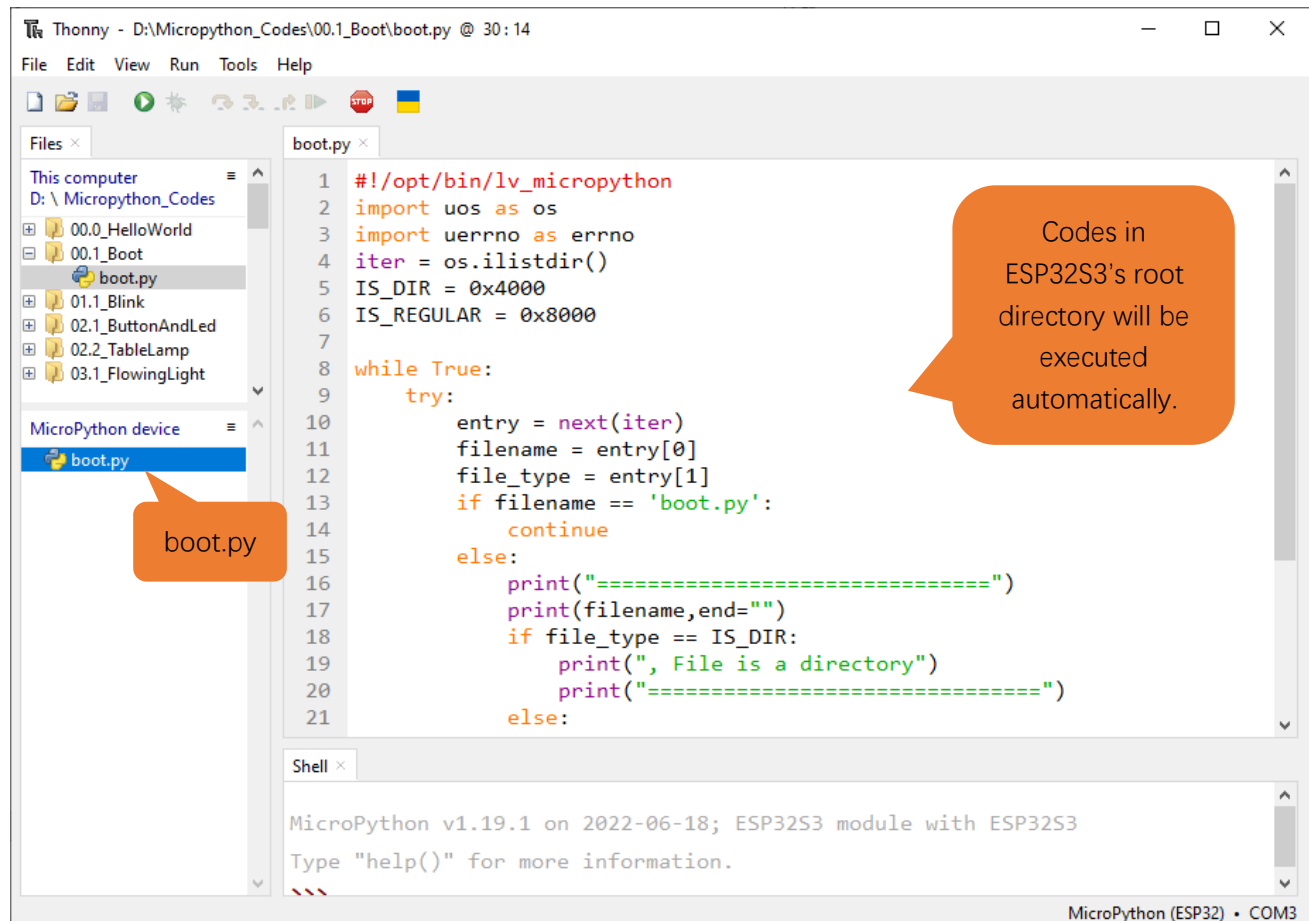


Select “Blink.py” in “01.1_Blink”, right-click your mouse and select “Upload to /” to upload code to ESP32S3's root directory.

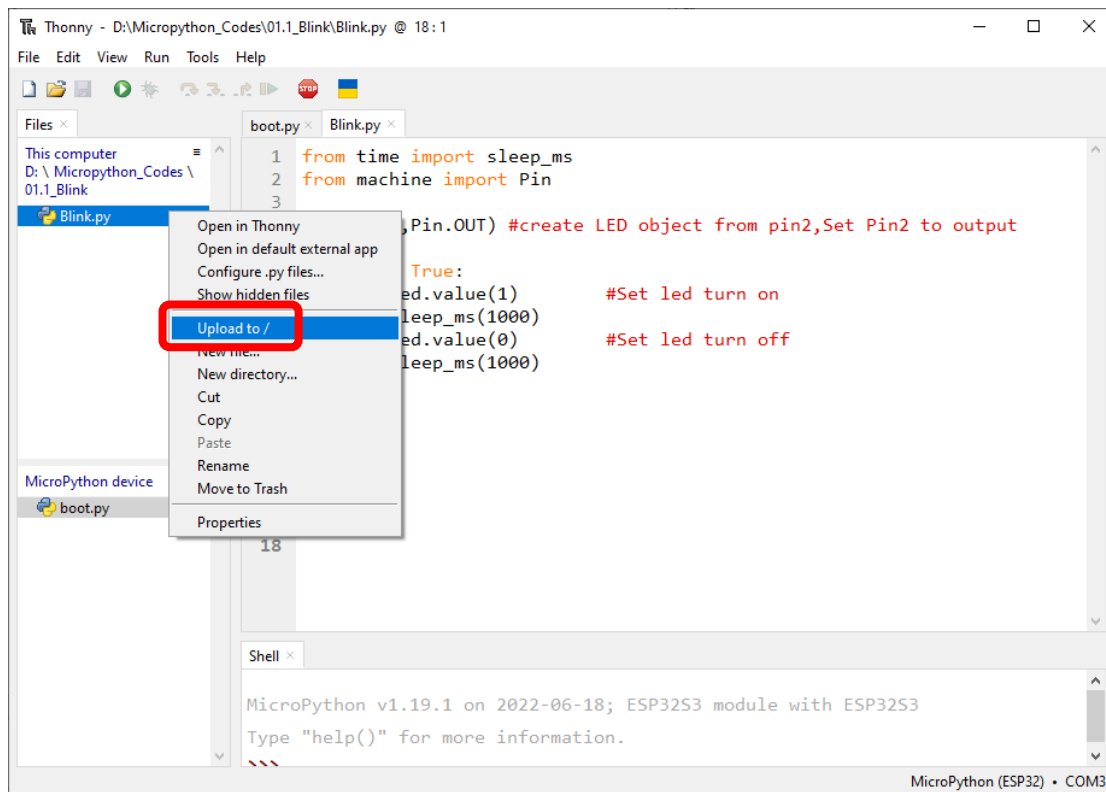


Downloading Code to Computer

Select "boot.py" in "MicroPython device", right-click to select "Download to ..." to download the code to your computer.

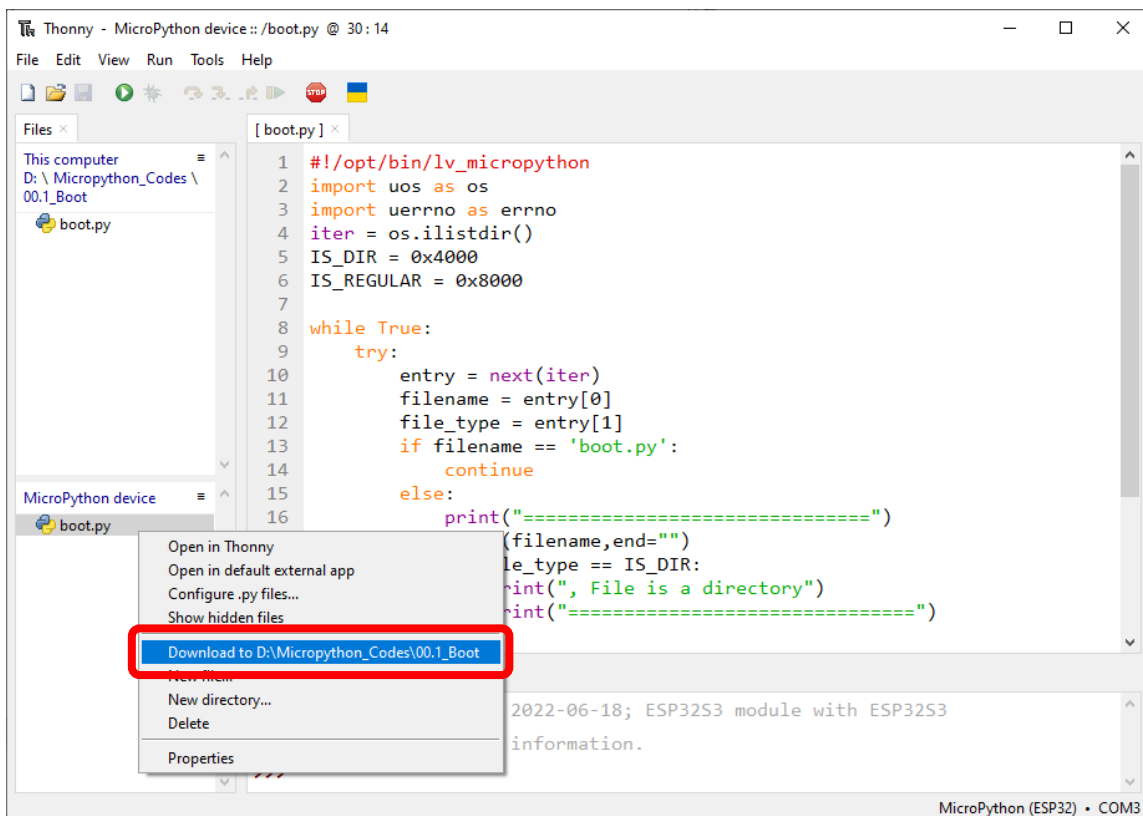


Deleting Files from ESP32S3's Root Directory

Select “boot.py” in “MicroPython device”, right-click it and select “Delete” to delete “boot.py” from ESP32S3's root directory.

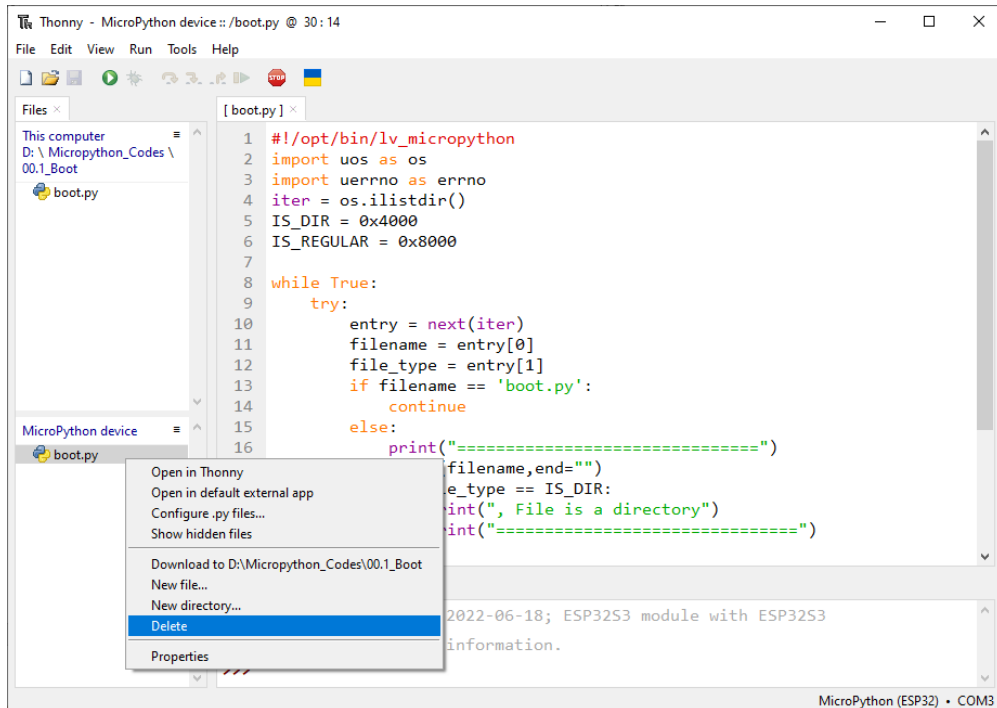


Deleting Files from your Computer Directory

Select “boot.py” in “00.1_Boot”, right-click it and select “Move to Recycle Bin” to delete it from “00.1_Boot”.

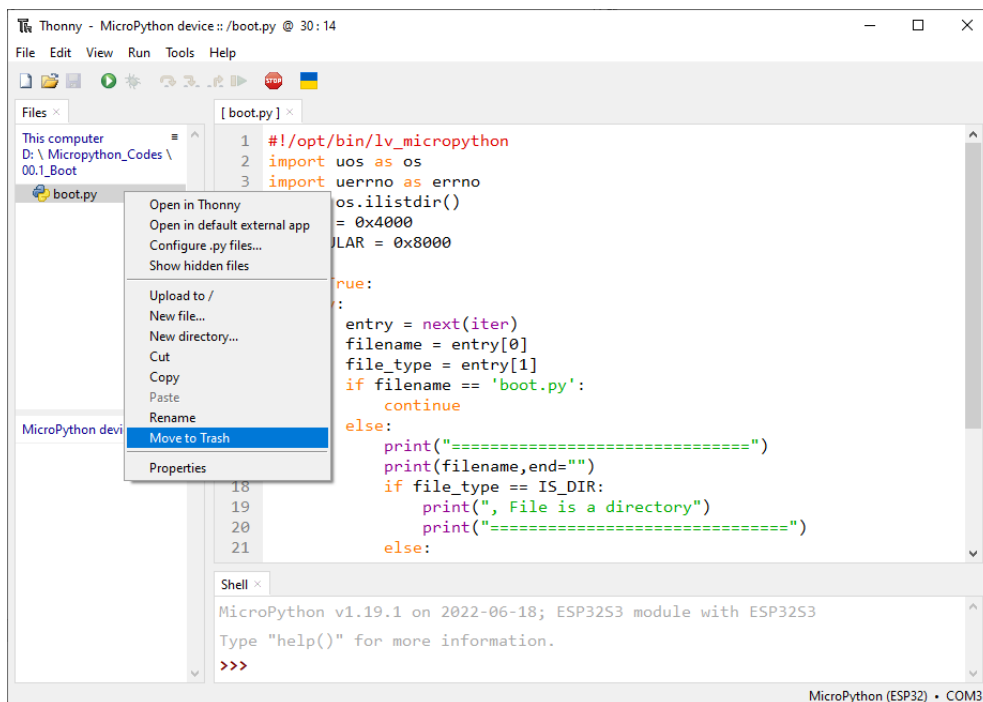


Creating and Saving the code


Click “File”→“New” to create and write codes.

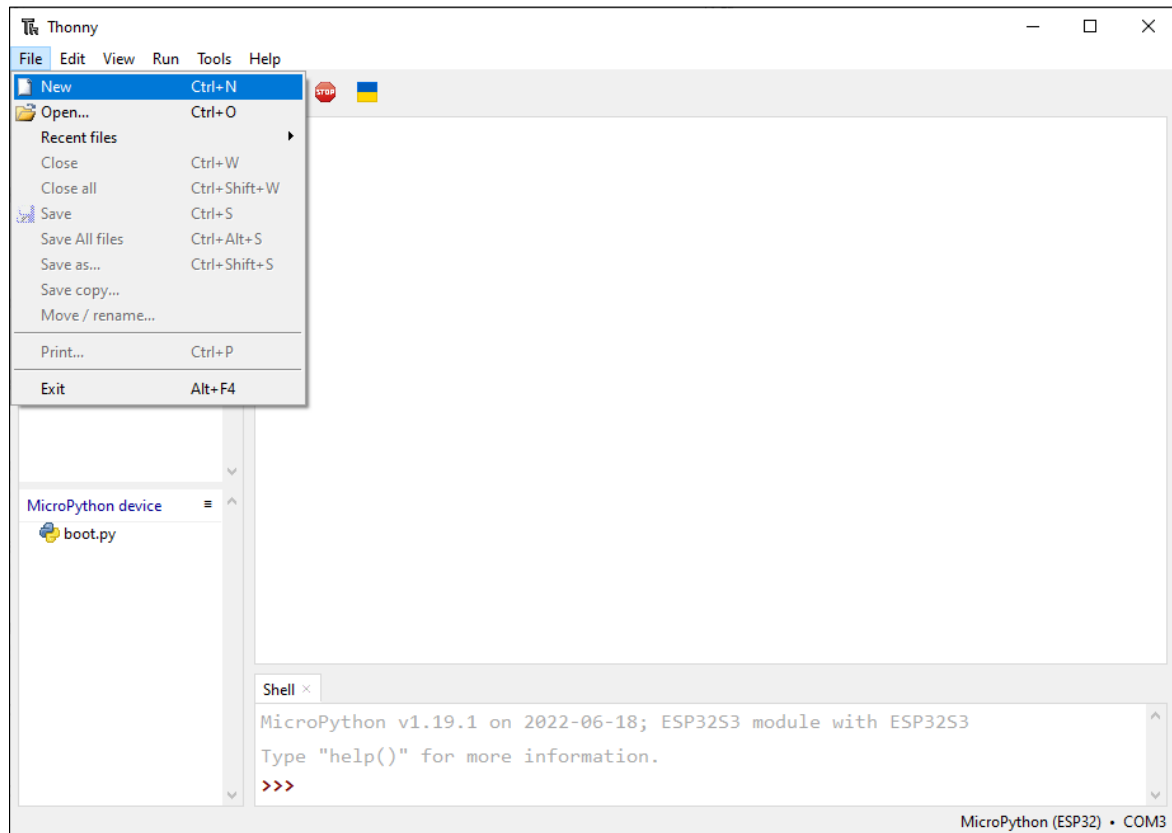


Enter codes in the newly opened file. Here we use codes of “01.1_Blink.py” as an example.

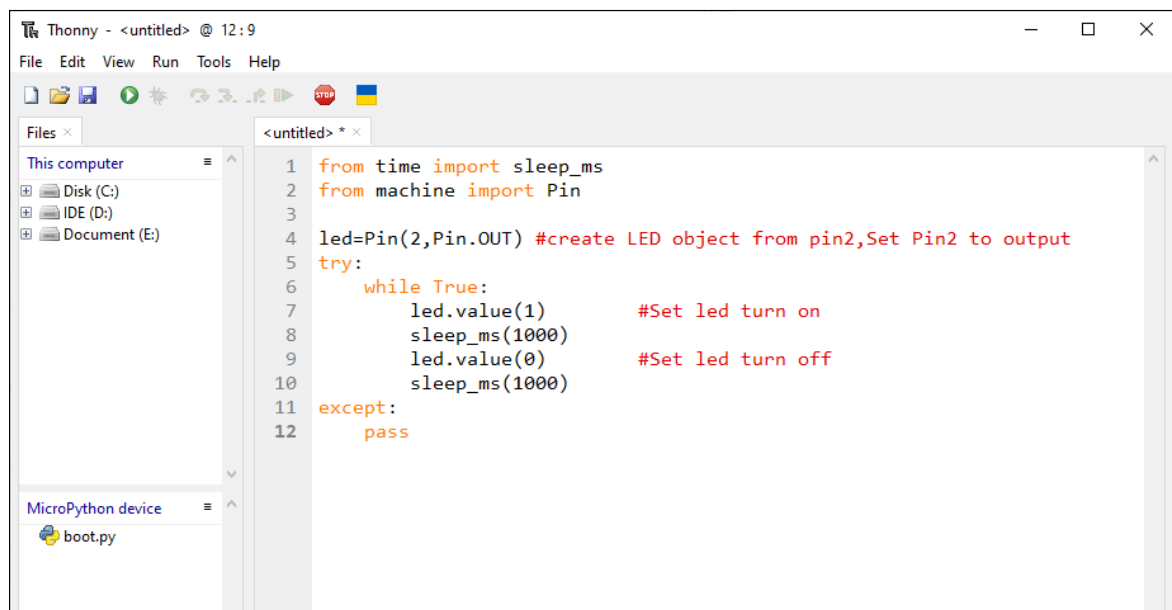


Click “Save” on the menu bar. You can save the codes either to your computer or to ESP32S3.

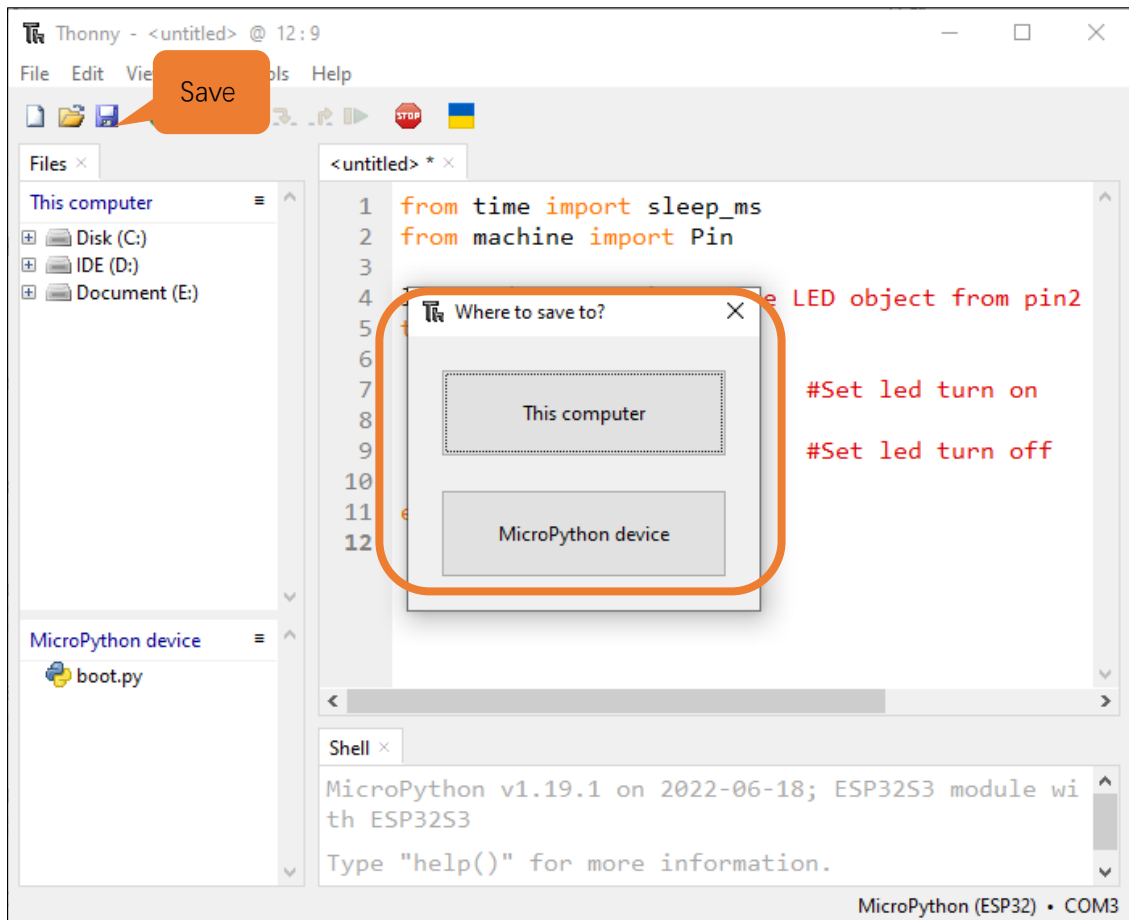


Select “MicroPython device”, enter “main.py” in the newly pop-up window and click “OK”.

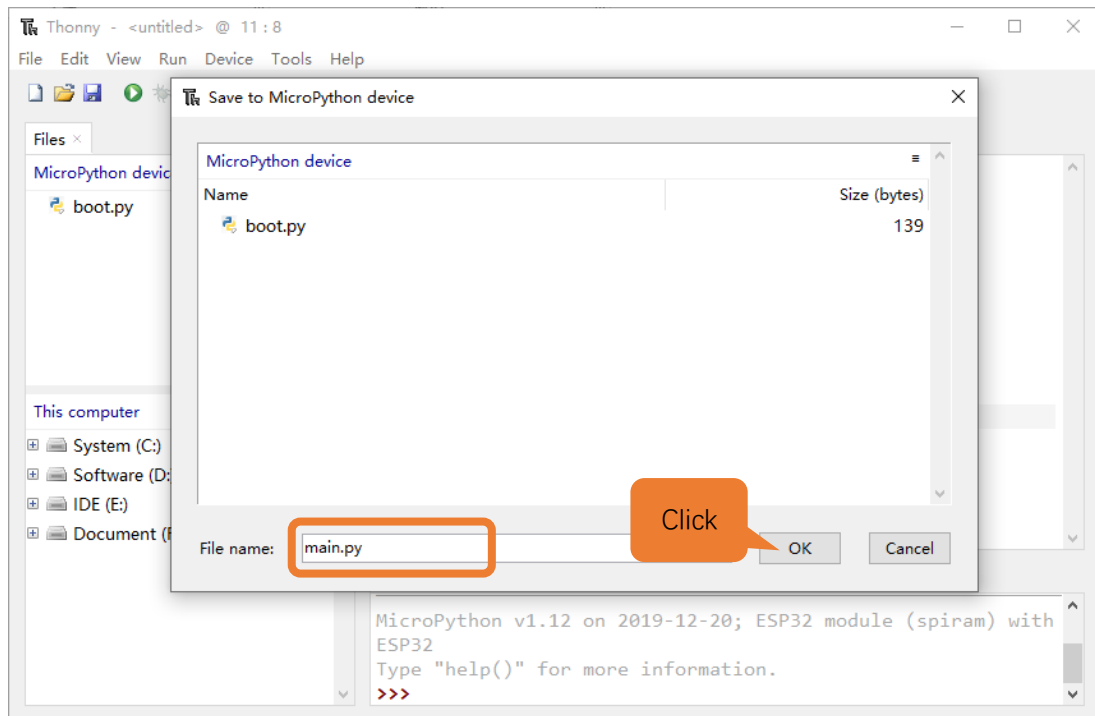


You can see that codes have been uploaded to ESP32S3.

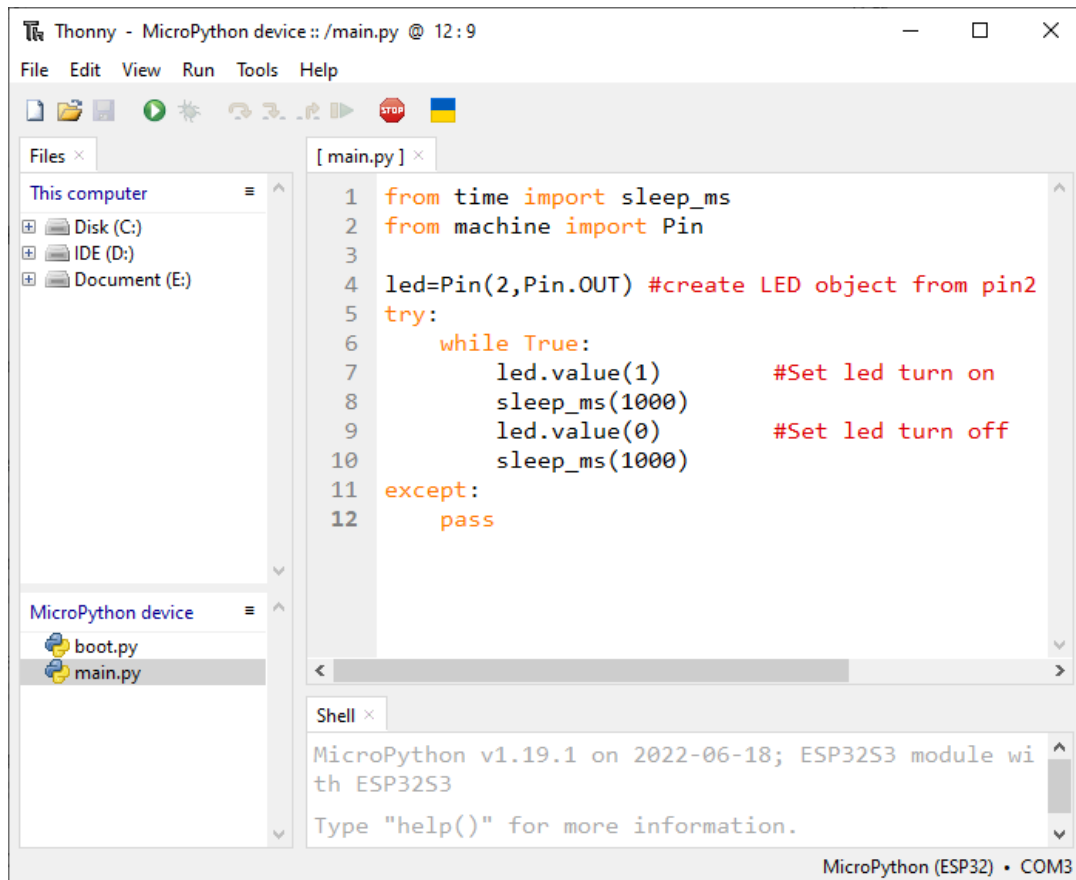

Disconnect and reconnect USB cable, and you can see that LED is ON for one second and then OFF for one second, which repeats in an endless loop.

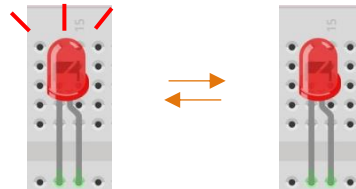

If you want to exit the offline operation mode, you can press Ctrl+C at the same time in the shell to let the ESP32-S3 exit the offline operation mode.

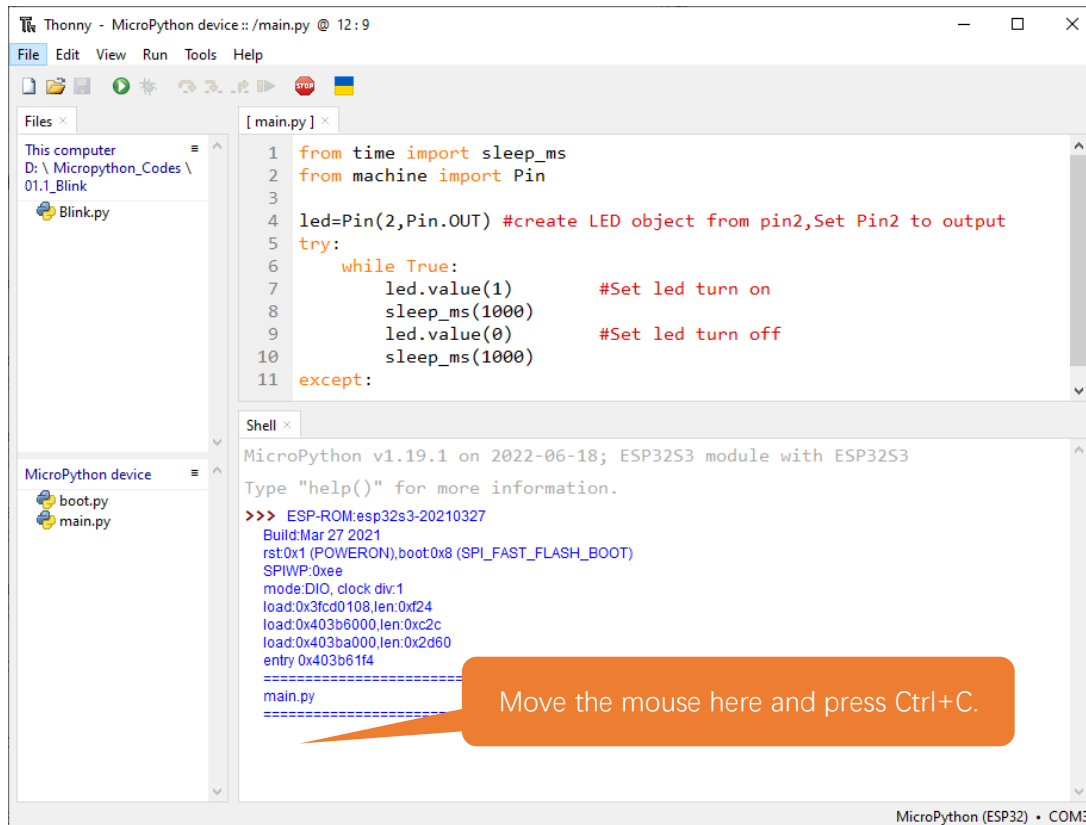

The screenshot shows the Thonny IDE interface. The top menu bar includes File, Edit, View, Run, Tools, and Help. The left sidebar shows the file explorer with 'This computer' and 'MicroPython device' sections. The main editor window displays a Python script named 'main.py' with the following code:

```
1 from time import sleep_ms
2 from machine import Pin
3
4 led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
5 try:
6     while True:
7         led.value(1)         #Set led turn on
8         sleep_ms(1000)
9         led.value(0)         #Set led turn off
10        sleep_ms(1000)
11 except:
```

The bottom shell window shows the MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3. It displays the boot process and the prompt to press Ctrl+C to exit. An orange callout bubble points to the shell window with the text: "Move the mouse here and press Ctrl+C."

If there is no response after pressing, it is recommended to press again until exiting.

Notes for GPIO

Strapping Pin

There are four Strapping pins for ESP32S3: GPIO0、GPIO45、GPIO46、GPIO3。

With the release of the chip's system reset (power-on reset, RTC watchdog reset, undervoltage reset), the strapping pins sample the level and store it in the latch as "0" or "1" , and keep it until the chip is powered off or turned off.

Each Strapping pin is connecting to internal pull-up/pull-down. Connecting to high-impedance external circuit or without an external connection, a strapping pin's default value of input level will be determined by internal weak pull-up/pull-down. To change the value of the Strapping, users can apply an external pull-down/pull-up resistor, or use the GPIO of the host MCU to control the level of the strapping pin when the ESP32-S3's power on reset is released.

When releasing the reset, the strapping pin has the same function as a normal pin.

The followings are default configurations of these four strapping pins at power-on and their functions under the corresponding configuration.

VDD_SPI Voltage			
Pin	Default	3.3 V	1.8 V
GPIO45	Pull-down	0	1
Bootling Mode ¹			
Pin	Default	SPI Boot	Download Boot
GPIO0	Pull-up	1	0
GPIO46	Pull-down	Don't care	0
Enabling/Disabling ROM Messages Print During Bootling ²			
Pin	Default	Enabled	Disabled
GPIO46	Pull-down	See the 2nd note	See the 2nd note
JTAG Signal Selection			
Pin	Default	EFUSE_DIS_USB_JTAG = 0, EFUSE_DIS_PAD_JTAG = 0, EFUSE_STRAP_JTAG_SEL=1	
GPIO3	N/A	0: JTAG signal from on-chip JTAG pins 1: JTAG signal from USB Serial/JTAG controller	

Note:

1. The strapping combination of GPIO46 = 1 and GPIO0 = 0 is invalid and will trigger unexpected behavior.
2. By default, the ROM boot messages are printed over UART0 (U0TXD pin) and USB Serial/JTAG controller together. The ROM code printing can be disabled through configuration register and eFuse. For detailed information, please refer to Chapter [Chip Boot Control](#) in *ESP32-S3 Technical Reference Manual*.

If you have any difficulties or questions with this tutorial or toolkit, feel free to ask for our quick and free technical support through support@freenove.com at any time.

or check: https://www.espressif.com/sites/default/files/documentation/esp32-s3-wroom-1_wroom-1u_datasheet_en.pdf

PSRAM Pin

The modules on the ESP32-S3 WROOM board use the ESP32-S3R8 chip with 8MB external Flash. When using OPI PSRAM, please note that GPIO35-GPIO37 on the ESP32-S3 WROOM board cannot be used for other purposes. When OPI PSRAM is not used, GPIO35-GPIO37 on the board can be used as a common GPIO.

ESP32-S3R8 / ESP32-S3R8V	In-package PSRAM (8 MB, Octal SPI)
SPICLK	CLK
SPICS1	CE#
SPID	DQ0
SPIQ	DQ1
SPIWP	DQ2
SPIHD	DQ3
GPIO33	DQ4
GPIO34	DQ5
GPIO35	DQ6
GPIO36	DQ7
GPIO37	DQS/DM

SDcard Pin


An SD card slot is integrated on the back of the ESP32-S3 WROOM board. We can use GPIO38-GPIO40 of ESP32-S3 WROOM to drive the SD card.

USB Pin

In Micropython, GPIO19 and GPIO20 are used for the USB function of ESP32S3, so they cannot be used as other functions!

Cam Pin

When using the camera of our ESP32-S3 WROOM, please check the pins of it. Pins with underlined numbers are used by the camera function, if you want to use other functions besides it, please avoid using them.

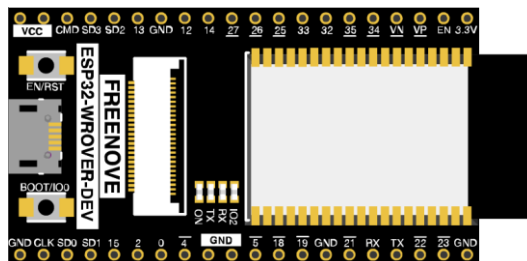

CAM_Pin	GPIO_pin
SIOD	GPIO4
SIOC	GPIO5
CSI_VYSNC	GPIO6
CSI_HREF	GPIO7
CSI_Y9	GPIO16
XCLK	GPIO15
CSI_Y8	GPIO17
CSI_Y7	GPIO18
CSI_PCLK	GPIO13
CSI_Y6	GPIO12
CSI_Y2	GPIO11
CSI_Y5	GPIO10
CSI_Y3	GPIO9
CSI_Y4	GPIO8

If you have any questions about the information of GPIO, you can click [here](#) to go back to ESP32-S3 WROOM to view specific information about GPIO.

or check: https://www.espressif.com/sites/default/files/documentation/esp32-s3_datasheet_en.pdf.



Chapter 1 LED (Important)

This chapter is the Start Point in the journey to build and explore ESP32-S3 WROOM electronic projects. We will start with simple “Blink” project.

Project 1.1 Blink


In this project, we will use ESP32-S3 WROOM to control blinking a common LED.

Component List

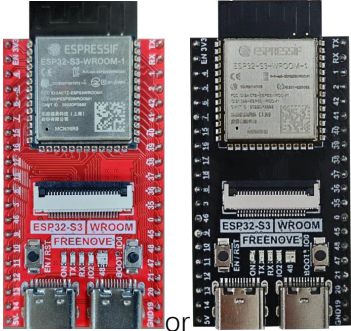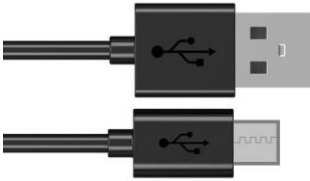ESP32-S3(N16R8)/ESP32-S3(N8R8) 	USB cable x1 
--	---

Power

ESP32-S3 WROOM needs 5v power supply. In this tutorial, we need connect ESP32-S3 WROOM to computer via USB cable to power it and program it. We can also use other 5v power source to power it.

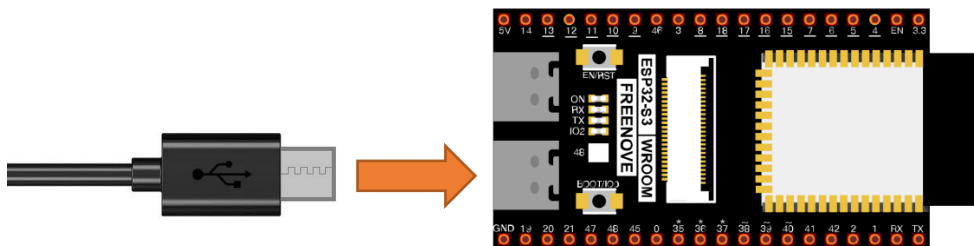

In the following projects, we only use USB cable to power ESP32-S3 WROOM by default.

In the whole tutorial, we don't use T extension to power ESP32-S3 WROOM. So 5V and 3.3V (includeing EXT 3.3V) on the extension board are provided by ESP32-S3 WROOM.


We can also use DC jack of extension board to power ESP32-S3 WROOM. In this way, 5v and EXT 3.3v on extension board are provided by external power resource.

Code


Codes used in this tutorial are saved in “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**”. You can move the codes to any location. For example, we save the codes in Disk(D) with the path of “**D:/Micropython_Codes**”.

01.1_Blink


Open “Thonny”, click “This computer”→“D:”→“Micropython_Codes”.

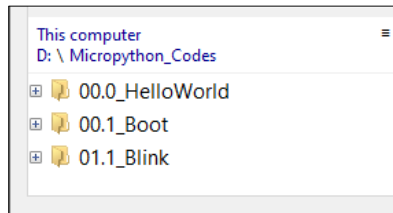


Expand folder “01.1_Blink” and double click “Blink.py” to open it. As shown in the illustration below.

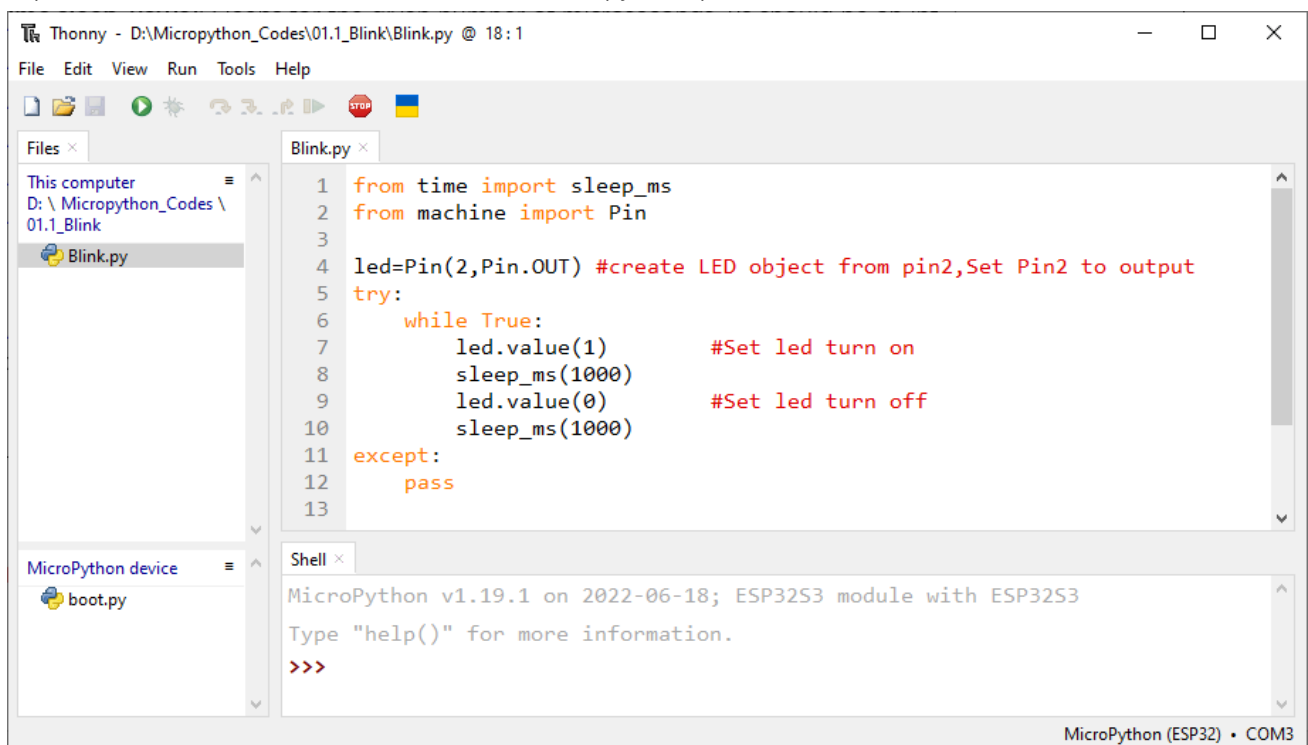

Make sure ESP32-S3 has been connected with the computer with ESP32-S3 correctly. Click “Stop/Restart backend” or press the reset button, and then wait to see what interface will show up.

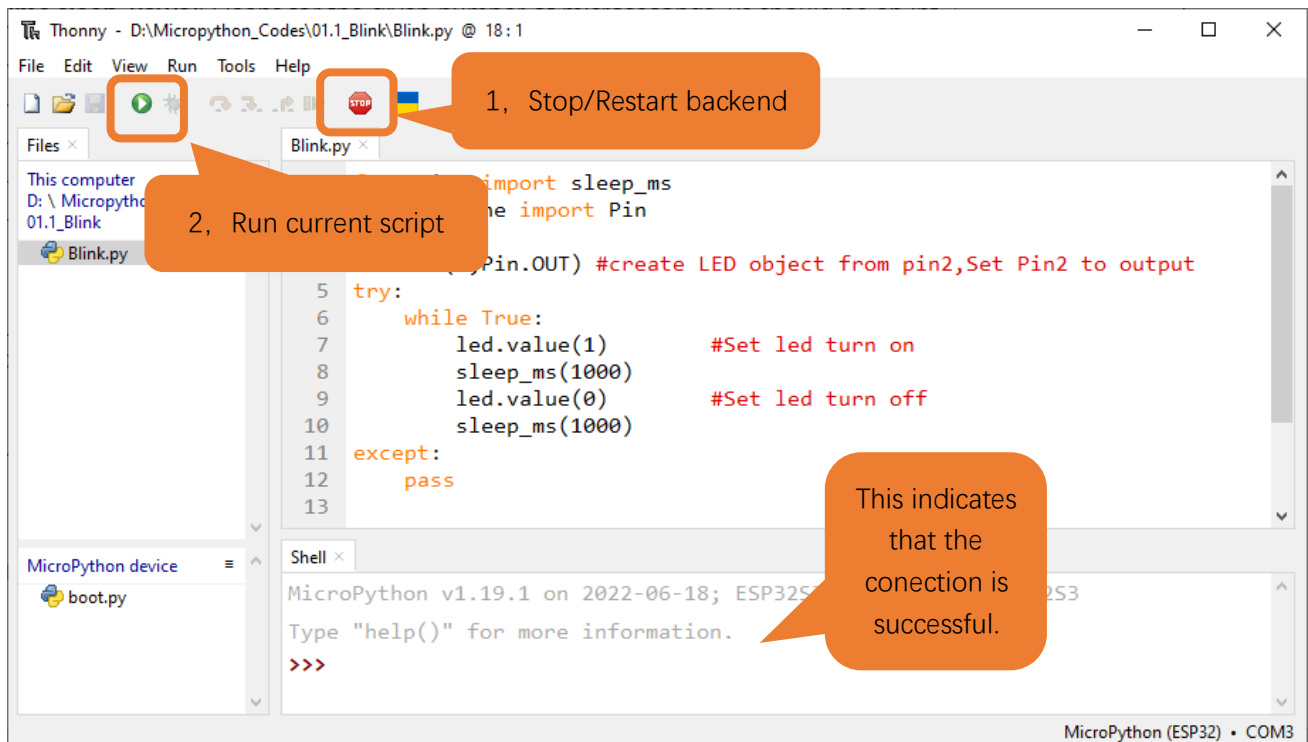


Click "Run current script" shown in the box above, the code starts to be executed and the LED in the circuit starts to blink.

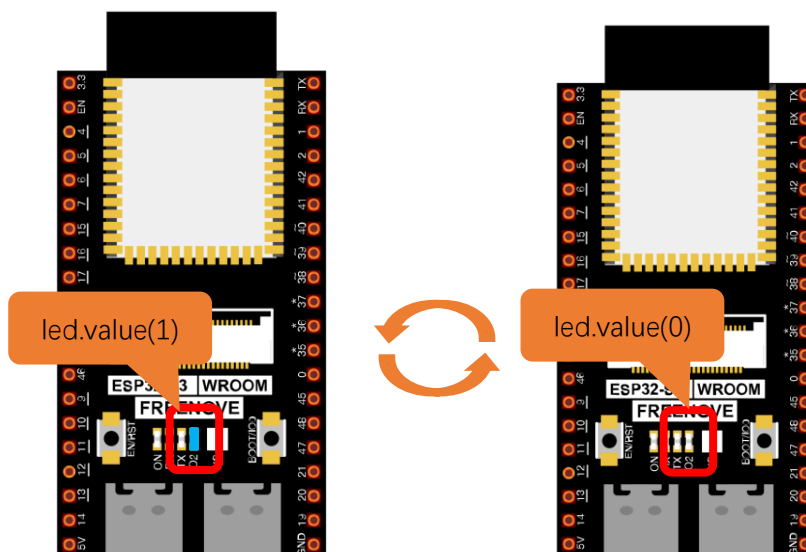


Note:

This is the code [running online](#). If you disconnect USB cable and repower ESP32-S3 or press its reset key, LED stops blinking and the following messages will be displayed in Thonny.

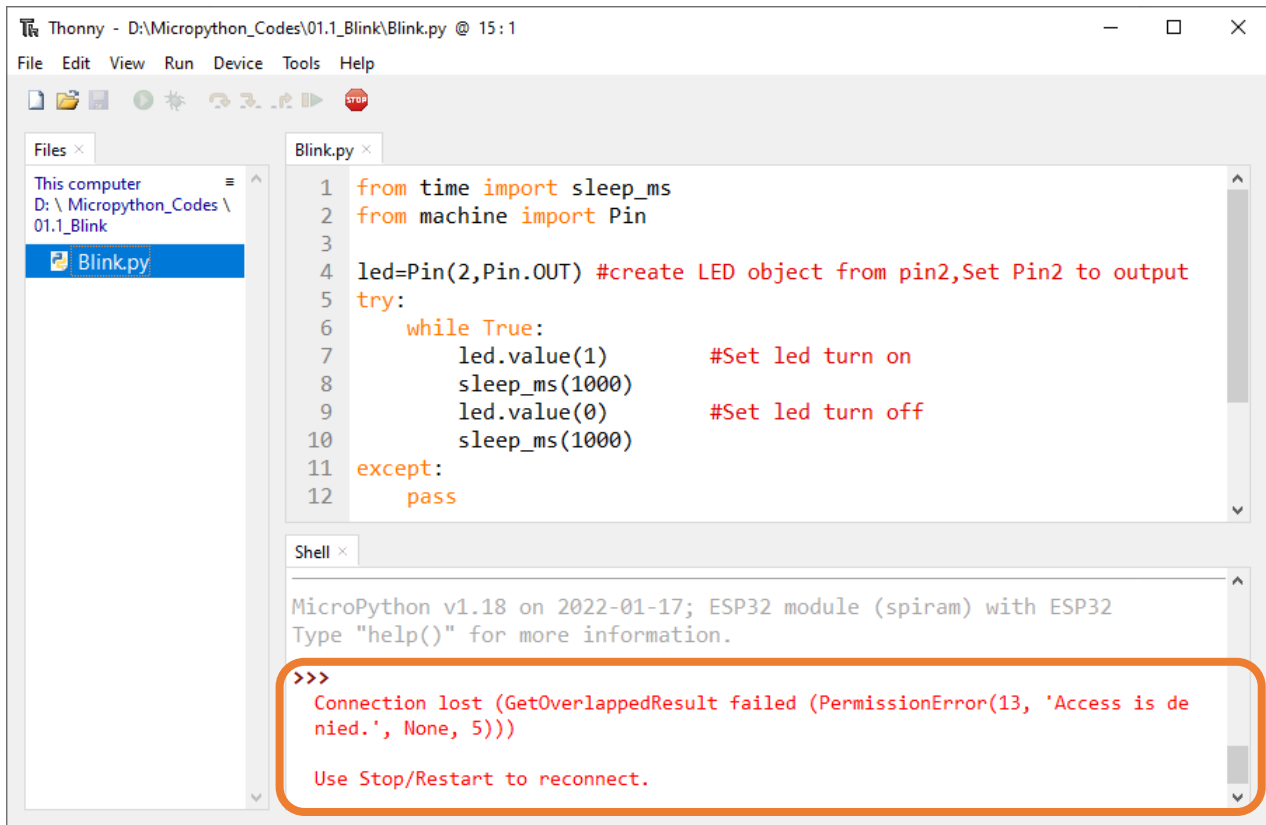


Uploading code to ESP32S3


As shown in the following illustration, right-click the file Blink.py and select “Upload to /” to upload code to ESP32S3.

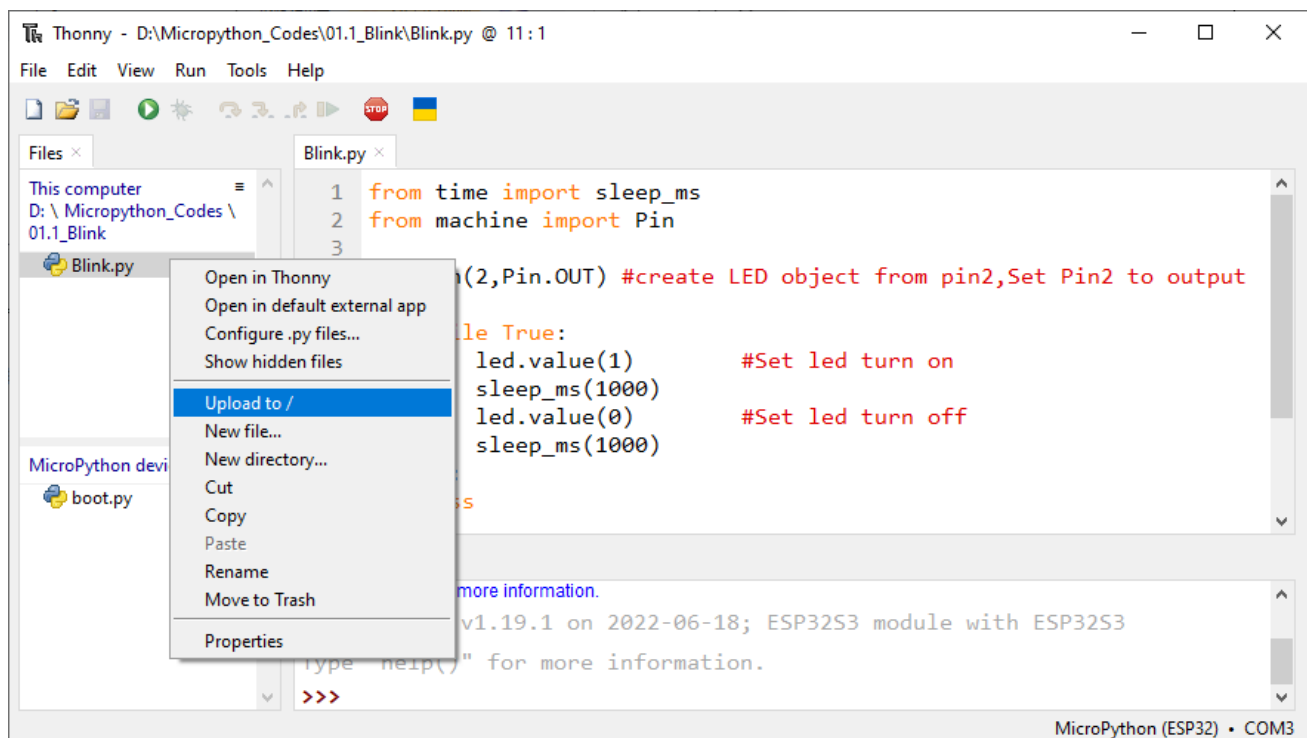

Upload boot.py in the same way.

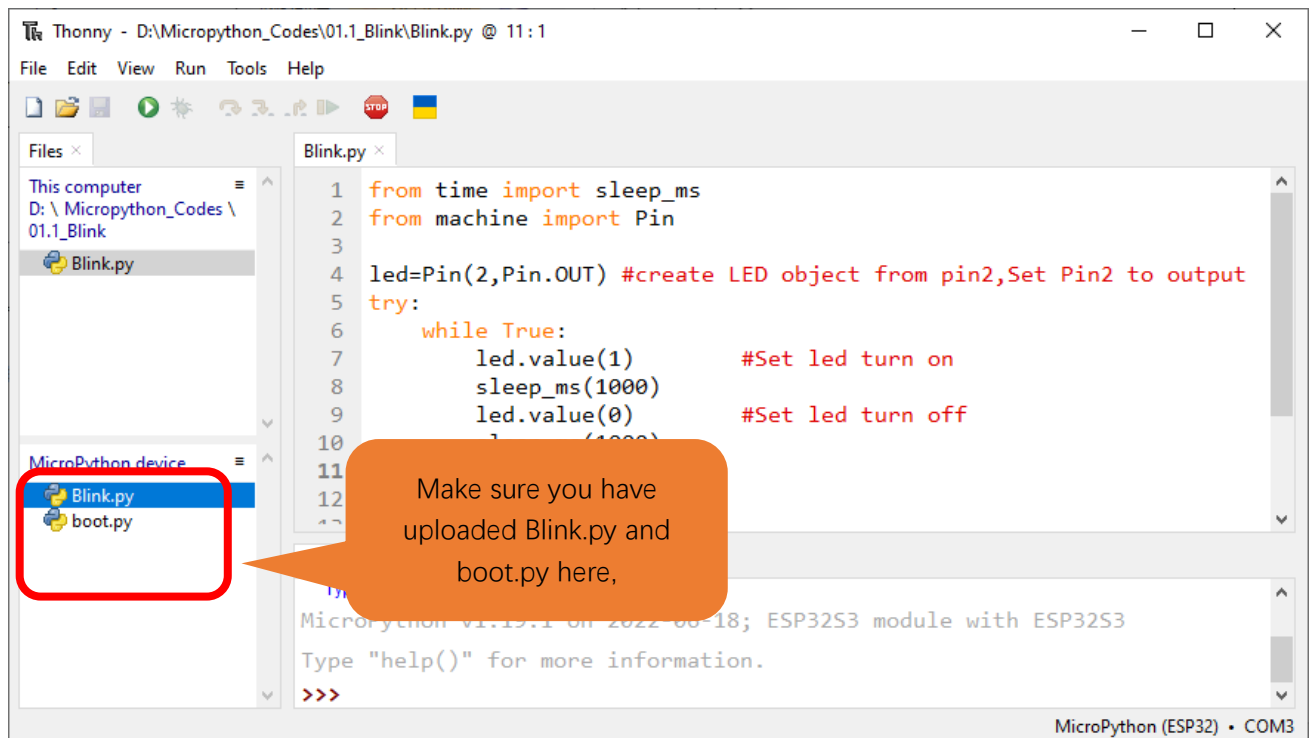

Press the reset key of ESP32-S3 and you can see LED is ON for one second and then OFF for one second, which repeats in an endless loop.

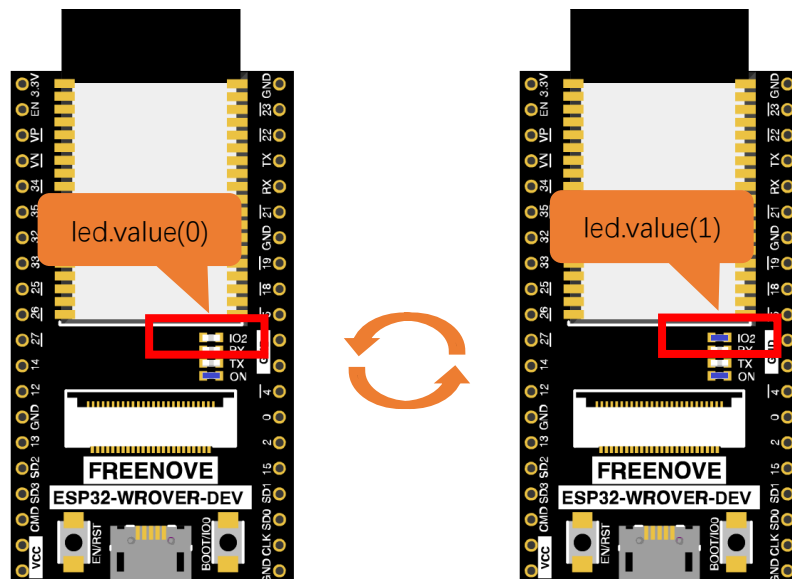

If you want to exit the offline operation mode, you can press Ctrl+C at the same time in the shell to let the ESP32-S3 exit the offline operation mode.

Thonny - MicroPython device: /main.py @ 12:9

File Edit View Run Tools Help

Files x [main.py] x

```

1 from time import sleep_ms
2 from machine import Pin
3
4 led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
5 try:
6     while True:
7         led.value(1)         #Set led turn on
8         sleep_ms(1000)
9         led.value(0)         #Set led turn off
10        sleep_ms(1000)
11 except:

```

Shell x

MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3

Type "help()" for more information.

```

>>> ESP-ROM:esp32s3-20210327
Build:Mar 27 2021
rst:0x1 (POWERON),boot:0x8 (SPI_FAST_FLASH_BOOT)
SPIWP:0xee
mode:DIO, clock div:1
load:0x3fcd0108,len:0xf24
load:0x403b6000,len:0xc2c
load:0x403ba000,len:0x2d60
entry 0x403b6114
=====
main.py
=====

```

Move the mouse here and press Ctrl+C

MicroPython (ESP32) • COM3

If there is no response after pressing, it is recommended to press again until exiting.

If you have any concerns, please contact us via: support@freenove.com


The following is the program code:

```

1  from time import sleep_ms
2  from machine import Pin
3
4  led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
5  try:
6      while True:
7          led.value(1) #Set led turn on
8          sleep_ms(1000)
9          led.value(0) #Set led turn off
10         sleep_ms(1000)
11 except:
12     pass

```

Each time a new file is opened, the program will be executed from top to bottom. When encountering a loop construction, it will execute the loop statement according to the loop condition.

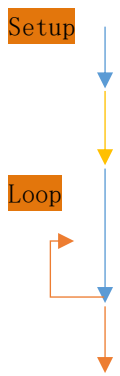

```

1  from time import sleep_ms
2  from machine import Pin
3
4  led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
5  try:
6      while True:
7          ...
8          ...
9          ...
10         ...
11 except:
12     pass

```

Print() function is used to print data to Terminal. It can be executed in Terminal directly or be written in a Python file and executed by running the file.

```
print("Hello world!")
```

Each time when using the functions of ESP32S3, you need to import modules corresponding to those functions: Import sleep_ms module of time module and Pin module of machine module.

```

1  from time import sleep_ms
2  from machine import Pin

```

Configure GPIO2 of ESP32-S3 to output mode and assign it to an object named "led".

```
4  led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
```

It means that from now on, LED represents GPIO2 that is in output mode.

Set the value of LED to 1 and GPIO2 will output high level.

```
7  led.value(1) #Set led turn on
```

Set the value of LED to 0 and GPIO2 will output low level.

```
9  led.value(0) #Set led turn on
```

Execute codes in a while loop.

```

6      while True:
...          ...

```

Put statements that may cause an error in “try” block and the executing statements when an error occurs in “except” block. In general, when the program executes statements, it will execute those in “try” block. However, when an error occurs to ESP32-S3 due to some interference or other reasons, it will execute statements in “except” block.

“Pass” is an empty statement. When it is executed, nothing happens. It is useful as a placeholder to make the structure of a program look better.

```
5  try:
...
11 except:
12     pass
```

The single-line comment of Micropython starts with a “#” and continues to the end of the line. Comments help us to understand code. When programs are running, Thonny will ignore comments.

```
9  #Set led turn on
```

MicroPython uses indentations to distinguish different blocks of code instead of braces. The number of indentations is changeable, but it must be consistent throughout one block. If the indentation of the same code block is inconsistent, it will cause errors when the program runs.

```
6  while True:
7      led.value(1) #Set led turn on
8      sleep_ms(1000)
9      led.value(0) #Set led turn off
10     sleep_ms(1000)
```

How to import python files

Whether to import the built-in python module or to import that written by users, the command “import” is needed.

If you import the module directly you should indicate the module to which the function or attribute belongs when using the function or attribute (constant, variable) in the module. The format should be: <module name>.<function or attribute>, otherwise an error will occur.

```
import random

num = random.randint(1, 100)
print(num)
```

If you only want to import a certain function or attribute in the module, use the from...import statement. The format is as follows

```
from random import randint
num = randint(1, 100)
print(num)
```

When using “from...import” statement to import function, to avoid conflicts and for easy understanding, you can use “as” statement to rename the imported function, as follows

```
from random import randint as rand
num = rand(1, 100)
print(num)
```

Reference

Class machine

Before each use of the **machine** module, please add the statement "**import machine**" to the top of python file.

machine.freq(freq_val): When freq_val is not specified, it is to return to the current CPU frequency; Otherwise, it is to set the current CPU frequency.

freq_val: 80000000(80MHz)、160000000(160MHz)、240000000(240MHz)

machine.reset(): A reset function. When it is called, the program will be reset.

machine.unique_id(): Obtains MAC address of the device.

machine.idle(): Turns off any temporarily unused functions on the chip and its clock, which is useful to reduce power consumption at any time during short or long periods.

machine.disable_irq(): Disables interrupt requests and return the previous IRQ state. The disable_irq () function and enable_irq () function need to be used together; Otherwise the machine will crash and restart.

machine.enable_irq(state): To re-enable interrupt requests. The parameter **state** should be the value that was returned from the most recent call to the disable_irq() function

machine.time_pulse_us(pin, pulse_level, timeout_us=1000000):

Tests the duration of the external pulse level on the given pin and returns the duration of the external pulse level in microseconds. When pulse level = 1, it tests the high level duration; When pulse level = 0, it tests the low level duration.

If the setting level is not consistent with the current pulse level, it will wait until they are consistent, and then start timing. If the set level is consistent with the current pulse level, it will start timing immediately.

When the pin level is opposite to the set level, it will wait for timeout and return "-2". When the pin level and the set level is the same, it will also wait timeout but return "-1". **timeout_us** is the duration of timeout.

Class Pin(id[, mode, pull, value])

Before each use of the **Pin** module, please add the statement “**from machine import Pin**” to the top of python file.

id: Arbitrary pin number

mode: Mode of pins

Pin.IN: Input Mode

Pin.OUT: Output Mode

Pin.OPEN_DRAIN: Open-drain Mode

Pull: Whether to enable the internal pull up and down mode

None: No pull up or pull down resistors

Pin.PULL_UP: Pull-up Mode, outputting high level by default

Pin.PULL_DOWN: Pull-down Mode, outputting low level by default

Value: State of the pin level, 0/1

Pin.init(mode, pull): Initialize pins

Pin.value([value]): Obtain or set state of the pin level, return 0 or 1 according to the logic level of pins. Without parameter, it reads input level. With parameter given, it is to set output level.

value: It can be either True/False or 1/0.

Pin.irq(trigger, handler): Configures an interrupt handler to be called when the pin level meets a condition.
trigger:

Pin.IRQ_FALLING: interrupt on falling edge

Pin.IRQ_RISING: interrupt on rising edge

3: interrupt on both edges

Handler: callback function

Class time

Before each use of the **time** module, please add the statement “**import time**” to the top of python file

time.sleep(sec): Sleeps for the given number of seconds

sec: This argument should be either an int or a float.

time.sleep_ms(ms): Sleeps for the given number of milliseconds, ms should be an int.

time.sleep_us(us): Sleeps for the given number of microseconds, us should be an int.

time.time(): Obtains the timestamp of CPU, with second as its unit.

time.ticks_ms(): Returns the incrementing millisecond counter value, which recounts after some values.

time.ticks_us(): Returns microsecond

time.ticks_cpu(): Similar to ticks_ms() and ticks_us(), but it is more accurate(return clock of CPU).

time.ticks_add(ticks, delta): Gets the timestamp after the offset.

ticks: ticks_ms()、ticks_us()、ticks_cpu()

delta: Delta can be an arbitrary integer number or numeric expression

time.ticks_diff(old_t, new_t): Calculates the interval between two timestamps, such as ticks_ms(), ticks_us() or ticks_cpu().




old_t: Starting time

new_t: Ending time

Project 1.2 Blink

In this project, we will use ESP32-S3 WROOM to control blinking a common LED.

Component List

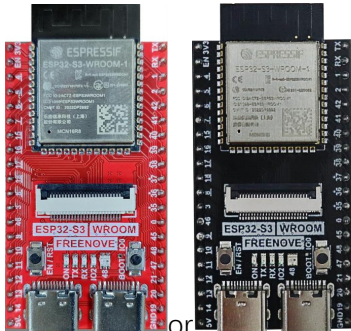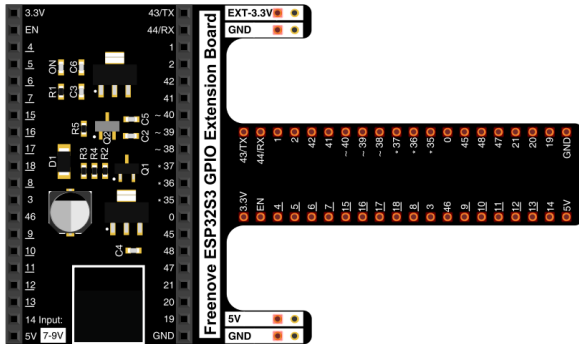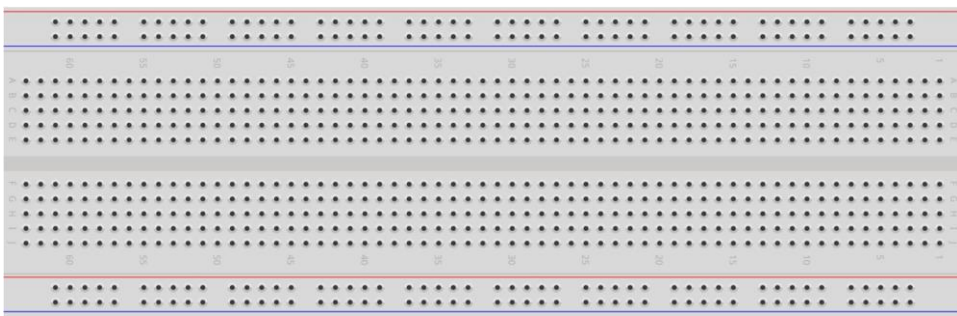ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1	
			
Breadboard x1			
			
LED x1	Resistor 220Ω x1	Jumper M/M x2	
			

Component knowledge


LED

A LED is a type of diode. All diodes only work if current is flowing in the correct direction and have two poles. A LED will only work (light up) if the longer pin (+) of LED is connected to the positive output from a power source and the shorter pin is connected to the negative (-). Negative output is also referred to as Ground (GND). This type of component is known as “diodes” (think One-Way Street).

All common 2 lead diodes are the same in this respect. Diodes work only if the voltage of its positive electrode

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

is higher than its negative electrode and there is a narrow range of operating voltage for most all common diodes of 1.9 and 3.4V. If you use much more than 3.3V the LED will be damaged and burn out.

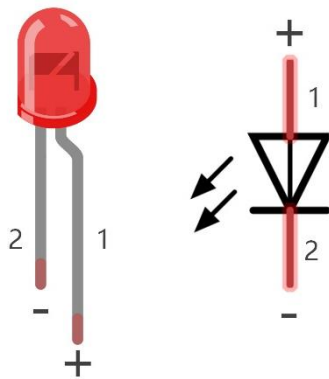


LED	Voltage	Maximum current	Recommended current
Red	1.9-2.2V	20mA	10mA
Green	2.9-3.4V	10mA	5mA
Blue	2.9-3.4V	10mA	5mA
Volt ampere characteristics conform to diode			

Note: LEDs cannot be directly connected to a power supply, which usually ends in a damaged component. A resistor with a specified resistance value must be connected in series to the LED you plan to use.

Resistor

Resistors use Ohms (Ω) as the unit of measurement of their resistance (R). $1\text{M}\Omega=1000\text{k}\Omega$, $1\text{k}\Omega=1000\Omega$.


A resistor is a passive electrical component that limits or regulates the flow of current in an electronic circuit. On the left, we see a physical representation of a resistor, and the right is the symbol used to represent the presence of a resistor in a circuit diagram or schematic.

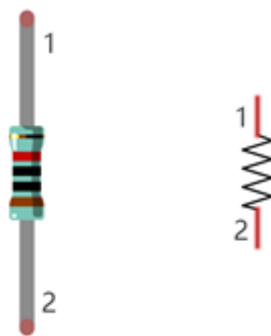

The bands of color on a resistor is a shorthand code used to identify its resistance value. For more details of resistor color codes, please refer to the appendix of this tutorial.

With a fixed voltage, there will be less current output with greater resistance added to the circuit. The relationship between Current, Voltage and Resistance can be expressed by this formula: $I=V/R$ known as Ohm's Law where I = Current, V = Voltage and R = Resistance. Knowing the values of any two of these allows you to solve the value of the third.

 In the following diagram, the current through R1 is: $I=U/R=5\text{V}/10\text{k}\Omega=0.0005\text{A}=0.5\text{mA}$.




WARNING: Never connect the two poles of a power supply with anything of low resistance value (i.e. a metal object or bare wire) this is a Short and results in high current that may damage the power supply and electronic components.

Note: Unlike LEDs and diodes, resistors have no poles and are non-polar (it does not matter which direction you insert them into a circuit, it will work the same)


Breadboard

Here we have a small breadboard as an example of how the rows of holes (sockets) are electrically attached. The left picture shows the way to connect pins. The right picture shows the practical internal structure.

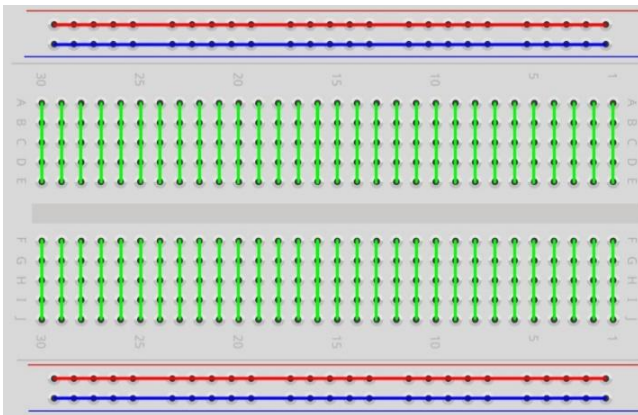

Power

ESP32-S3 WROOM needs 5v power supply. In this tutorial, we need connect ESP32-S3 WROOM to computer via USB cable to power it and program it. We can also use other 5v power source to power it.

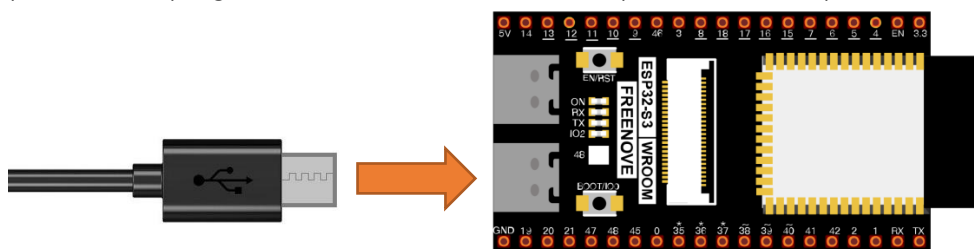

In the following projects, we only use USB cable to power ESP32-S3 WROOM by default.

In the whole tutorial, we don't use T extension to power ESP32-S3 WROOM. So 5V and 3.3V (including EXT 3.3V) on the extension board are provided by ESP32-S3 WROOM.


We can also use DC jack of extension board to power ESP32-S3 WROOM. In this way, 5v and EXT 3.3v on extension board are provided by external power resource.

Circuit


First, disconnect all power from the ESP32-S3 WROOM. Then build the circuit according to the circuit and hardware diagrams. After the circuit is built and verified correct, connect the PC to ESP32-S3 WROOM.

CAUTION: Avoid any possible short circuits (especially connecting 5V or GND, 3.3V and GND)! WARNING: A short circuit can cause high current in your circuit, generate excessive component heat and cause permanent damage to your hardware!

Schematic diagram

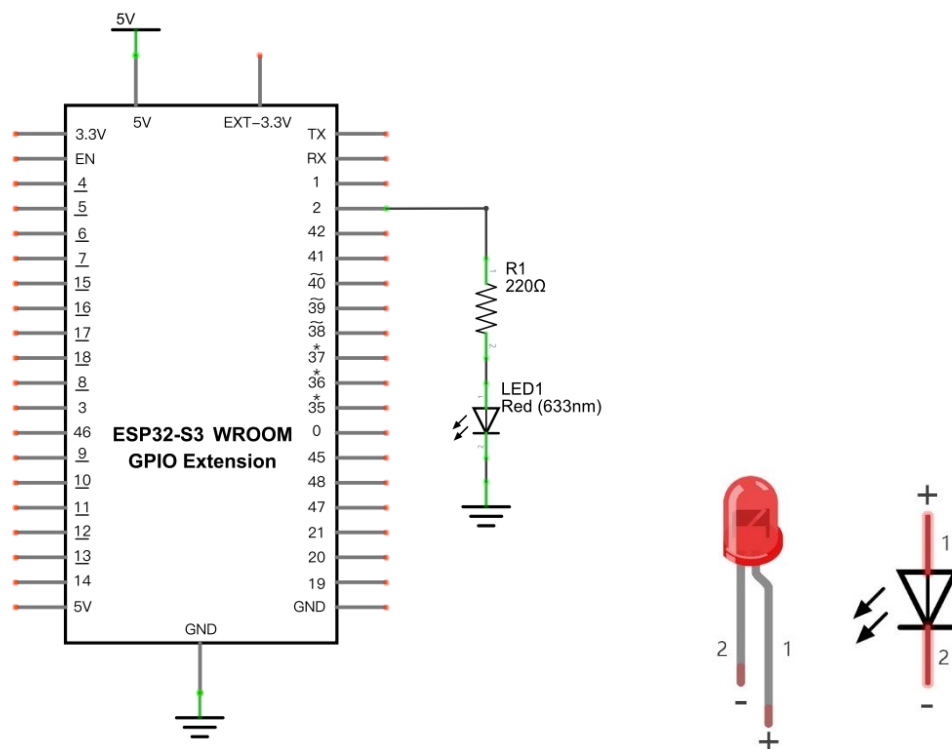

Hardware connection. If you need any support, please contact us via: support@freenove.com

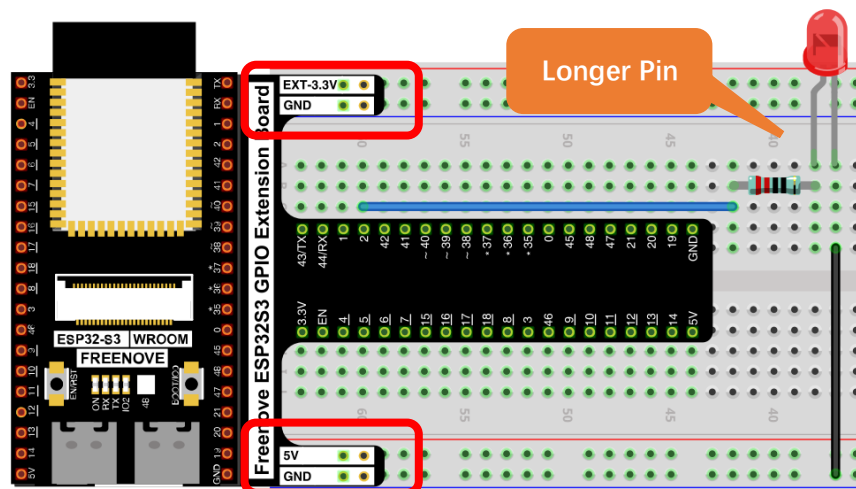

Don't rotate ESP32-S3 WROOM 180° for connection.


Any concerns? support@freenove.com

Code


Codes used in this tutorial are saved in “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**”. You can move the codes to any location. For example, we save the codes in Disk(D) with the path of “**D:/Micropython_Codes**”.

01.1_Blink


Open “Thonny”, click “This computer”→“D:”→“Micropython_Codes”.

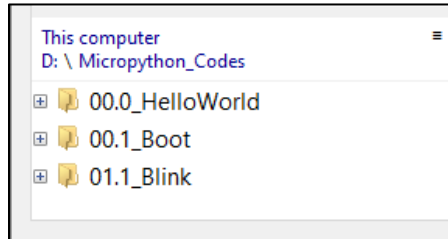


Expand folder “01.1_Blink” and double click “Blink.py” to open it. As shown in the illustration below.

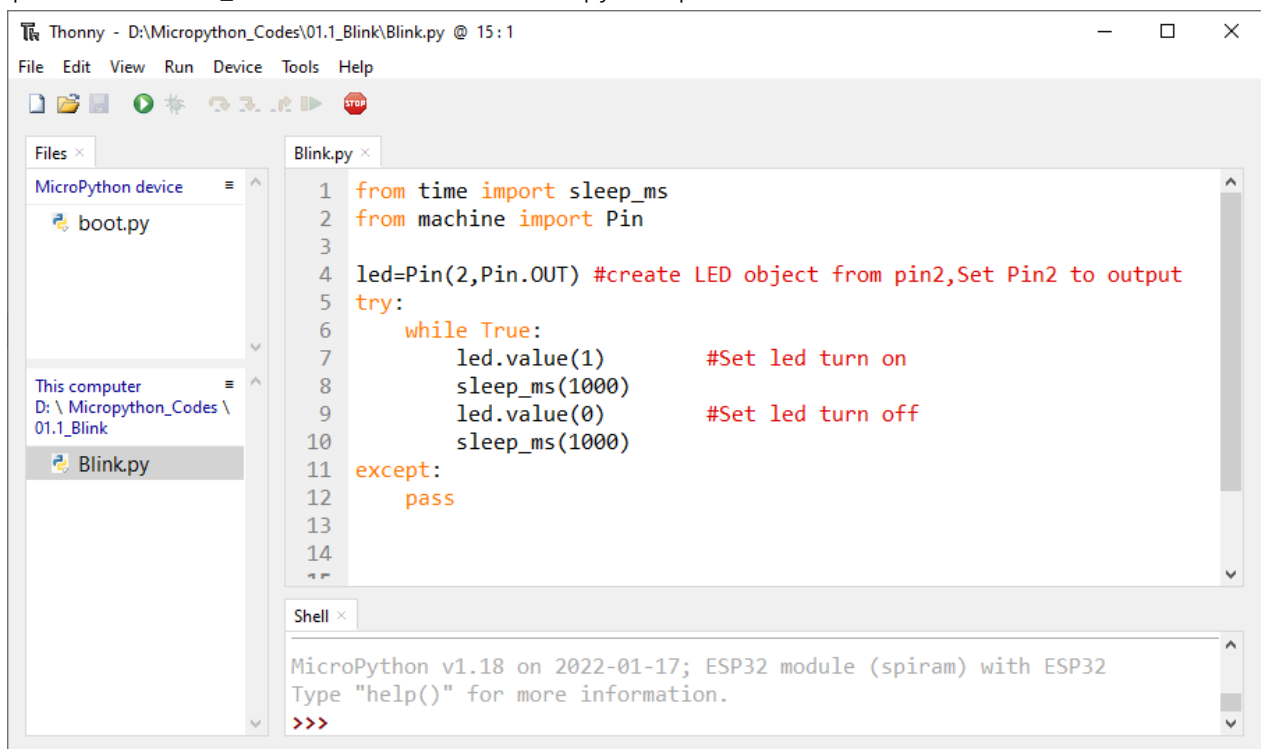

Make sure ESP32-S3 has been connected with the computer with ESP32-S3 correctly. Click “Stop/Restart backend” or press the reset button, and then wait to see what interface will show up.

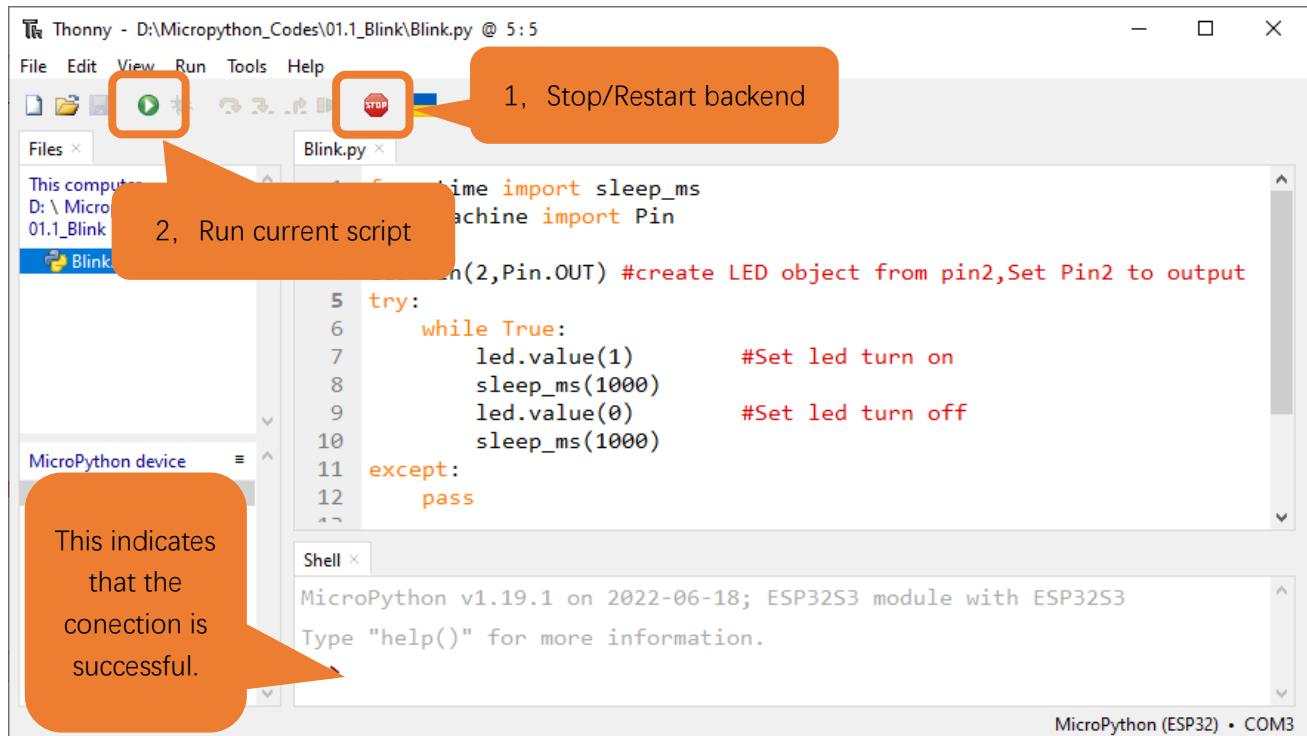


Click “Run current script” shown in the box above, the code starts to be executed and the LED in the circuit starts to blink.

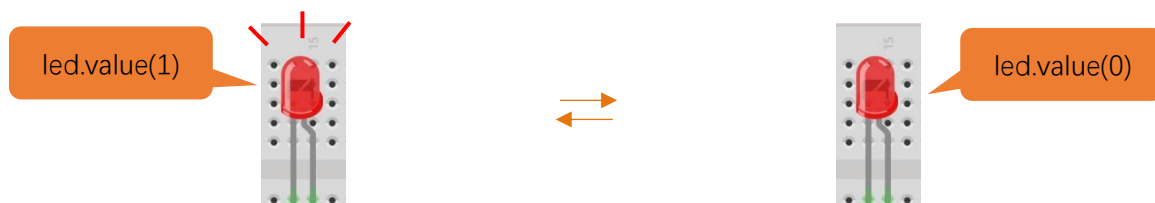


Note:

This is the code [running online](#). If you disconnect USB cable and repower ESP32-S3 or press its reset key, LED stops blinking and the following messages will be displayed in Thonny.

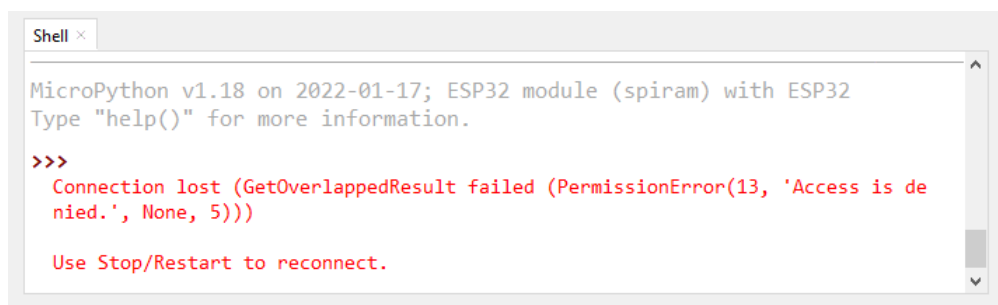


Uploading code to ESP32S3

As shown in the following illustration, right-click the file `Blink.py` and select “Upload to /” to upload code to ESP32S3.

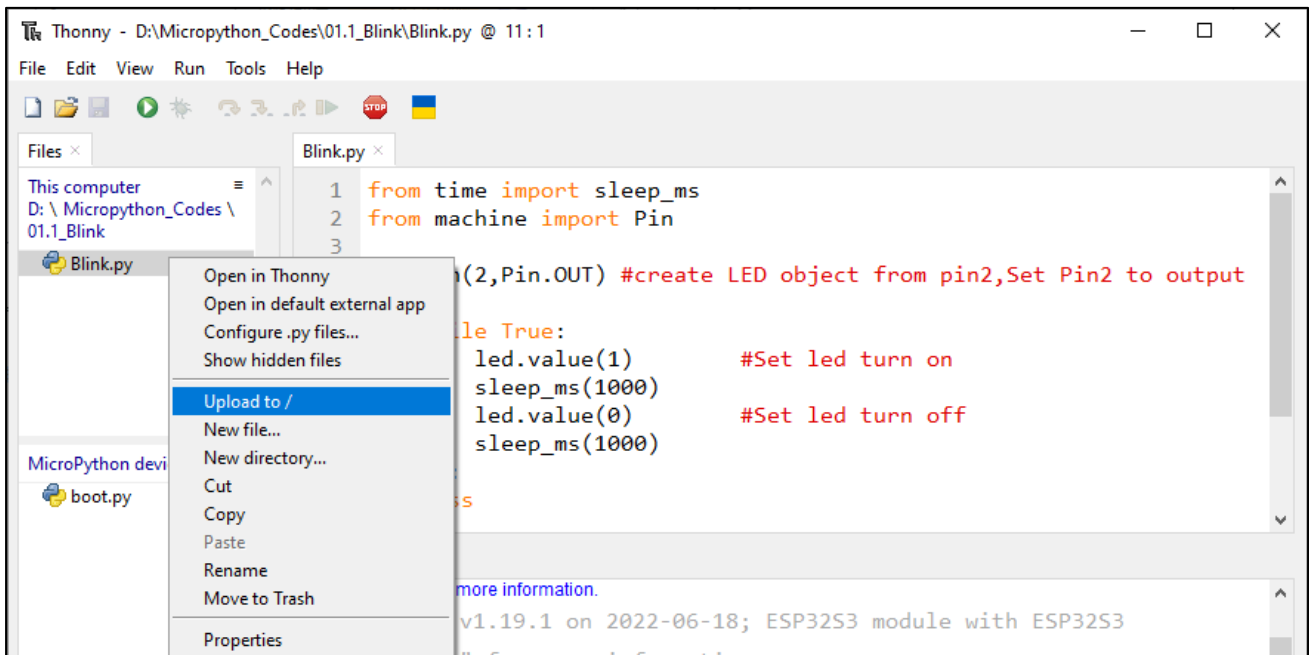


Upload boot.py in the same way.

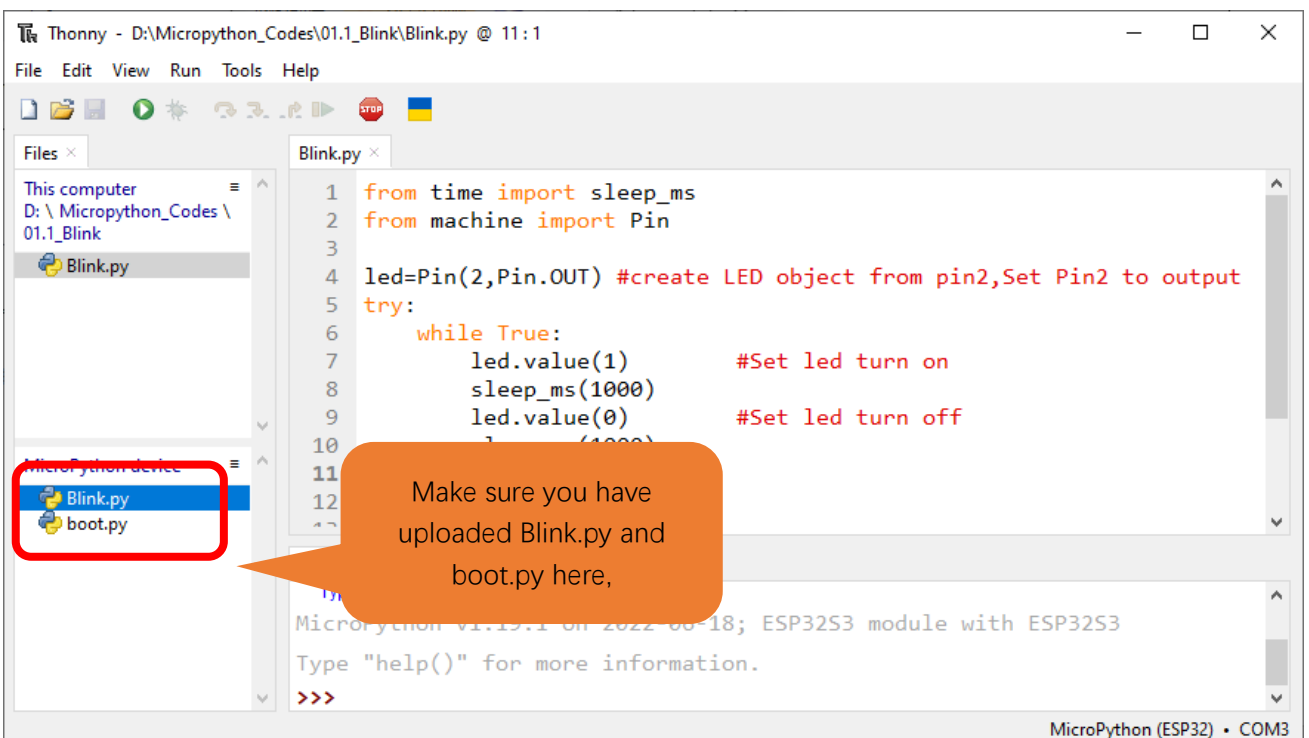


Press the reset key of ESP32-S3 and you can see LED is ON for one second and then OFF for one second, which repeats in an endless loop.

Press the reset key of ESP32-S3 and you can see LED is ON for one second and then OFF for one second, which repeats in an endless loop.

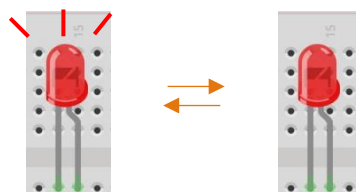

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

If you want to exit the offline operation mode, you can press Ctrl+C at the same time in the shell to let the ESP32-S3 exit the offline operation mode.

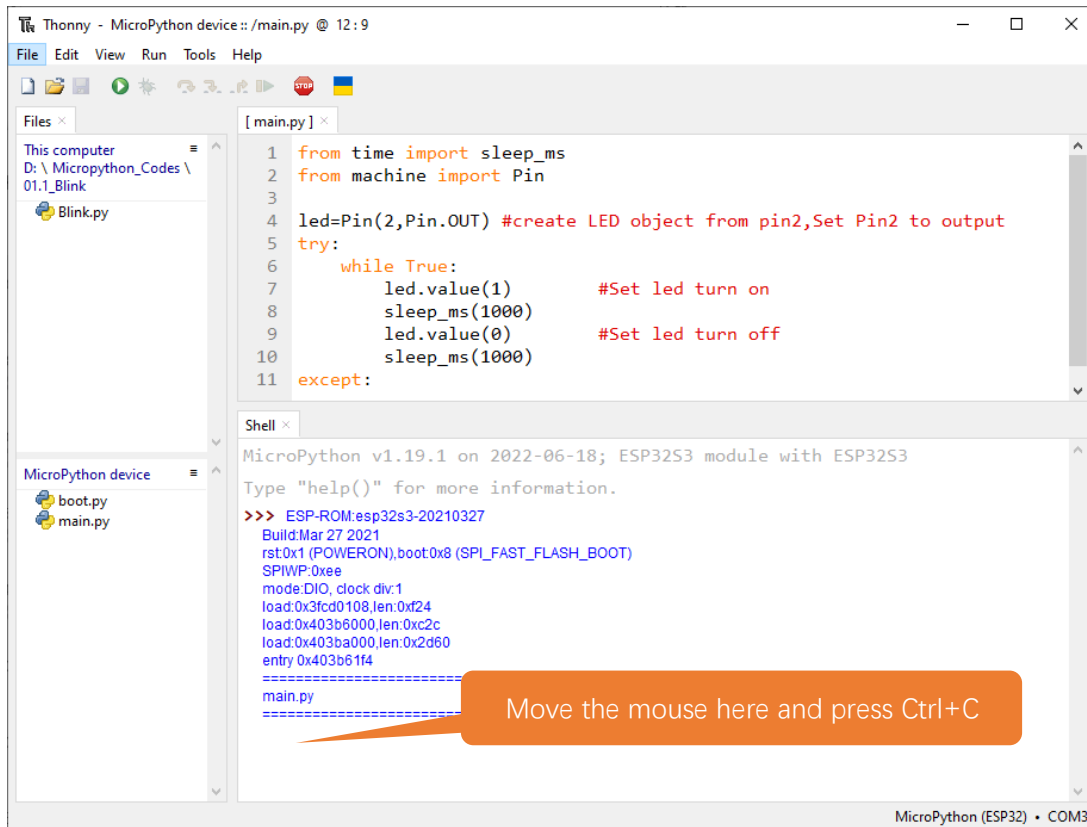

The screenshot shows the Thonny IDE interface. The top menu bar includes File, Edit, View, Run, Tools, and Help. The left sidebar shows the file explorer with 'This computer' and 'MicroPython device' sections. The main editor displays a Python script named 'main.py' with the following code:

```
1 from time import sleep_ms
2 from machine import Pin
3
4 led=Pin(2,Pin.OUT) #create LED object from pin2,Set Pin2 to output
5 try:
6     while True:
7         led.value(1)         #Set led turn on
8         sleep_ms(1000)
9         led.value(0)         #Set led turn off
10        sleep_ms(1000)
11 except:
```


The bottom shell window shows the MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3. It displays the boot logs and the prompt 'Type "help()" for more information.' followed by the command 'ESP-ROM:esp32s3-20210327' and its output. An orange callout bubble points to the shell window with the text 'Move the mouse here and press Ctrl+C'.

If there is no response after pressing, it is recommended to press again until exiting.

If you have any concerns, please contact us via: support@freenove.com

Chapter 2 Button & LED

Usually, there are three essential parts in a complete automatic control device: INPUT, OUTPUT, and CONTROL. In last section, the LED module was the output part and ESP32-S3 was the control part. In practical applications, we not only make LEDs flash, but also make a device sense the surrounding environment, receive instructions and then take the appropriate action such as LEDs light up, make a buzzer turn ON and so on.



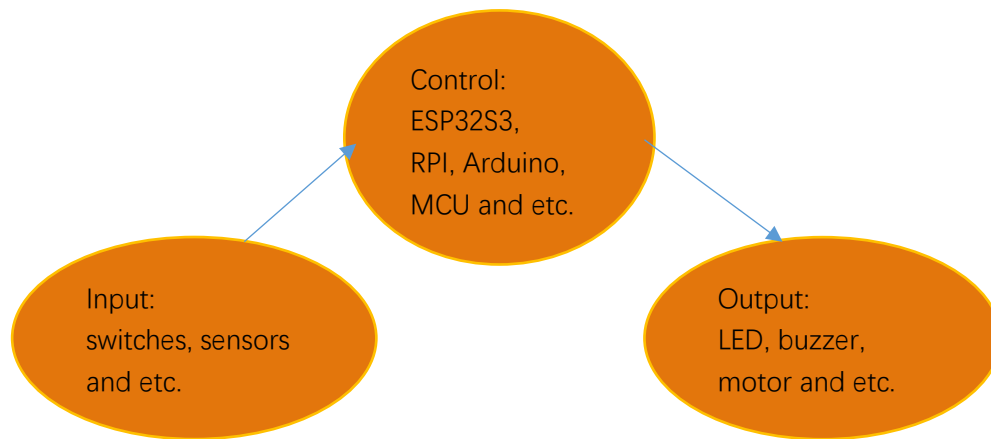


Next, we will build a simple control system to control a LED through a push button switch.

Project 2.1 Button & LED

In the project, we will control the LED state through a Push Button Switch. When the button is pressed, our LED will turn ON, and when it is released, the LED will turn OFF.


Component List

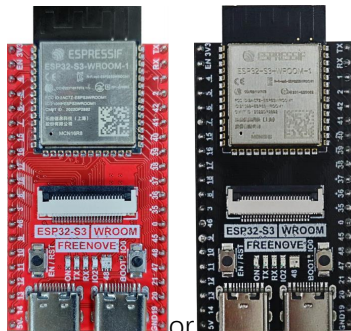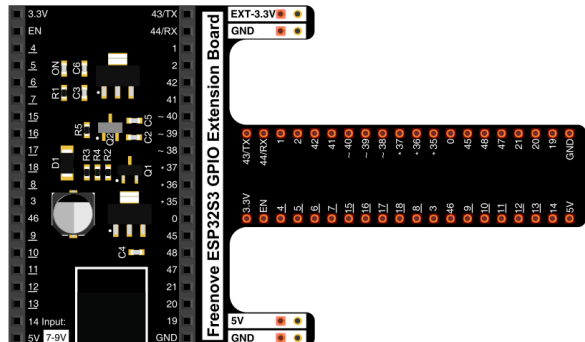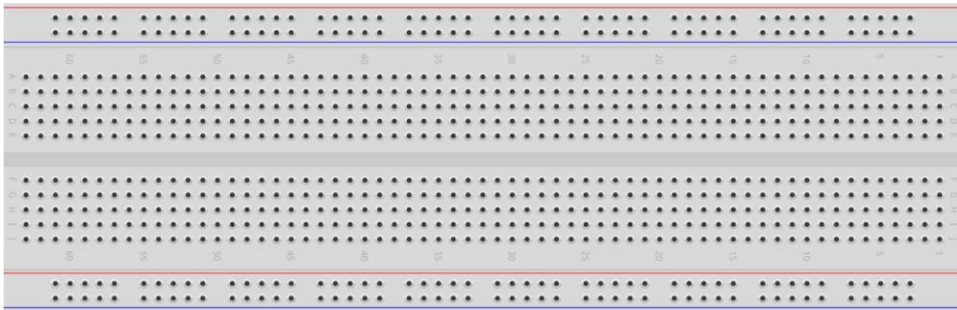ESP32-S3(N16R8)/ESP32-S3(N8R8)  OR		GPIO Extension Board x1 		
Breadboard x1 				
Jumper M/M x4 	LED x1 	Resistor 220Ω x1 	Resistor 10kΩ x2 	Push button x1 

Component knowledge

Push button


This type of push button switch has 4 pins (2 Pole Switch). Two pins on the left are connected, and both left and right sides are the same per the illustration:

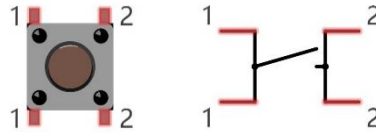


When the button on the switch is pressed, the circuit is completed (your project is powered ON).

Circuit

Schematic diagram

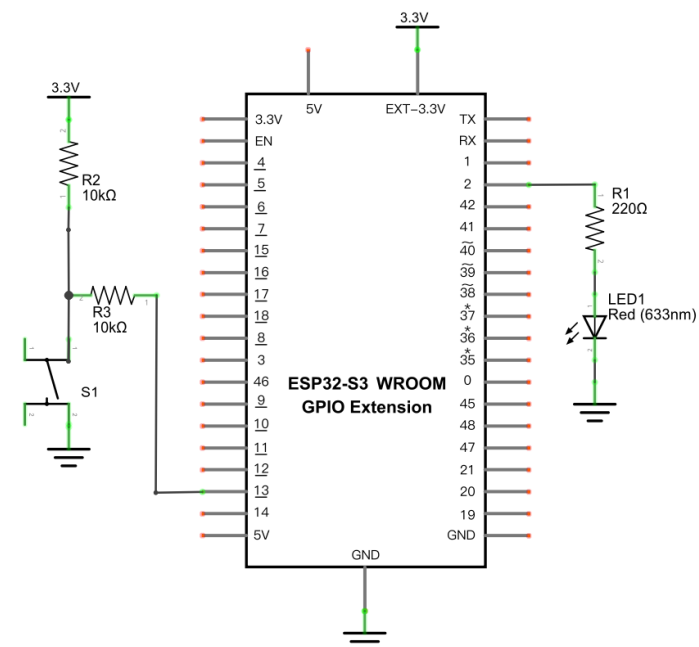

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

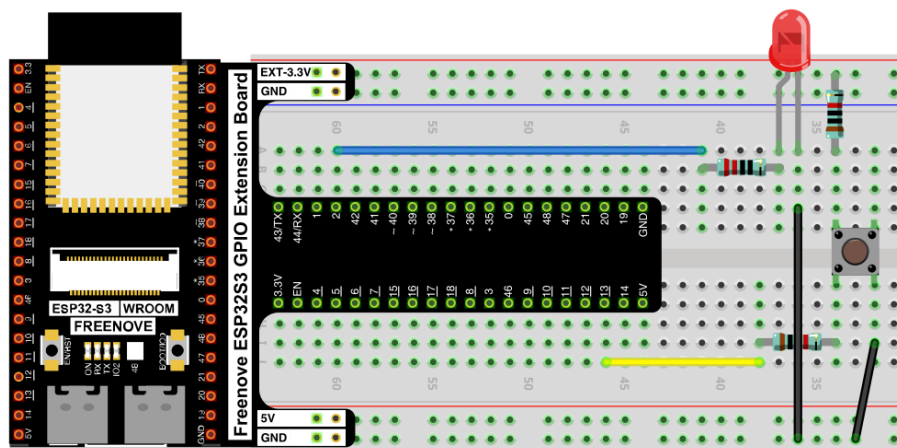

Any concerns? support@freenove.com


Code

This project is designed to learn to control an LED with a push button switch. First, we need to read the state of the switch and then decide whether the LED is turned on or not based on it.


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “02.1_ButtonAndLed” and double click “ButtonAndLed.py”.

02.1_ButtonAndLed

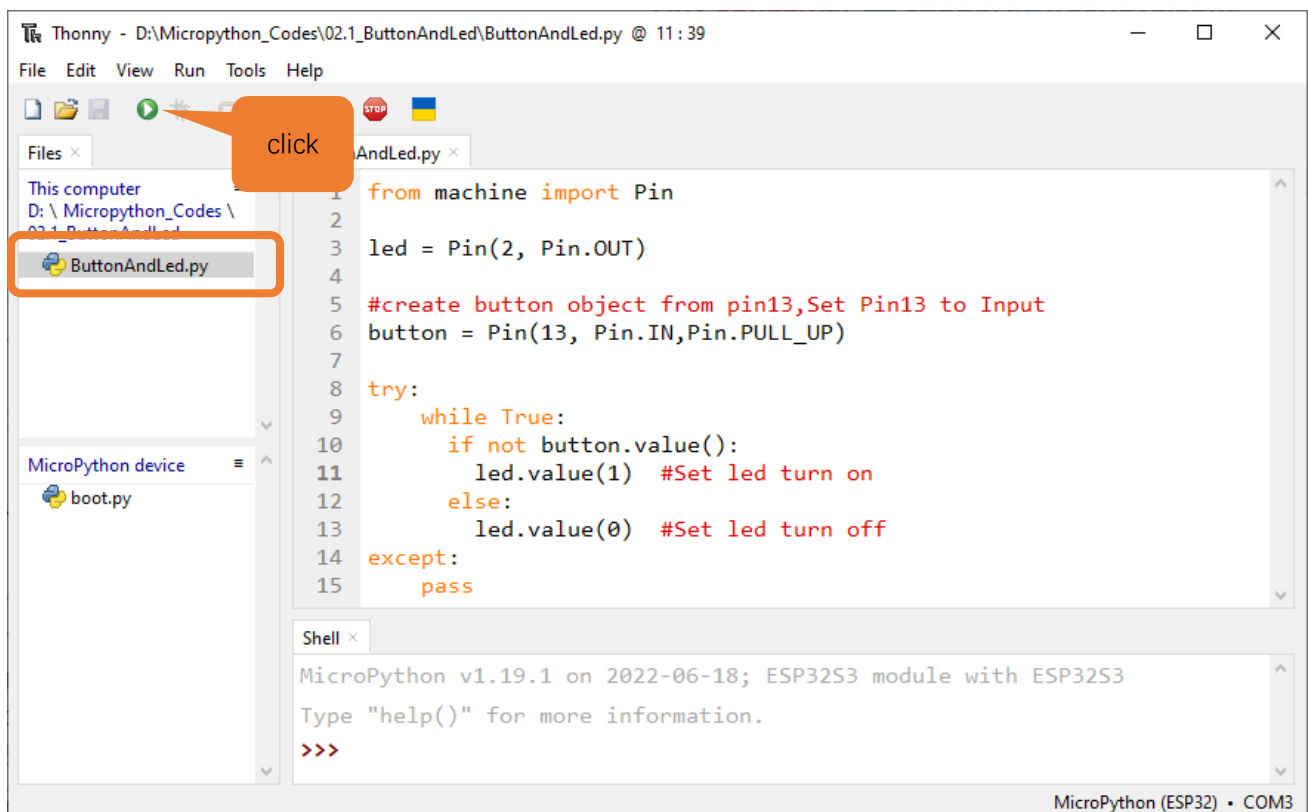


Click “Run current script” shown in the box of the above illustration, press the push button switch, LED turns ON; release the switch, LED turns OFF.

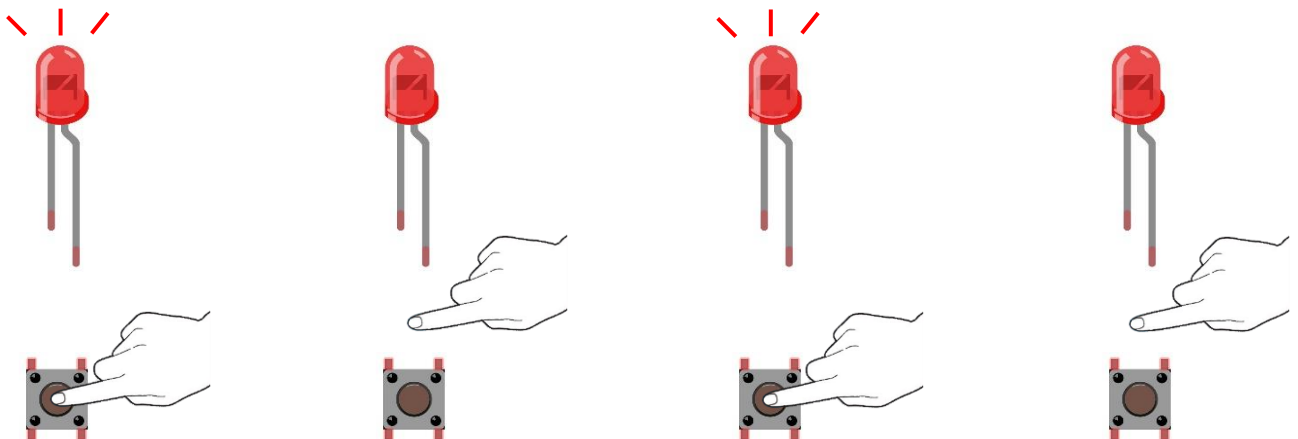


Upload Code to ESP32S3

As shown in the following illustration, right-click file 02.1_ButtonAndLed and select "Upload to /" to upload code to ESP32S3.

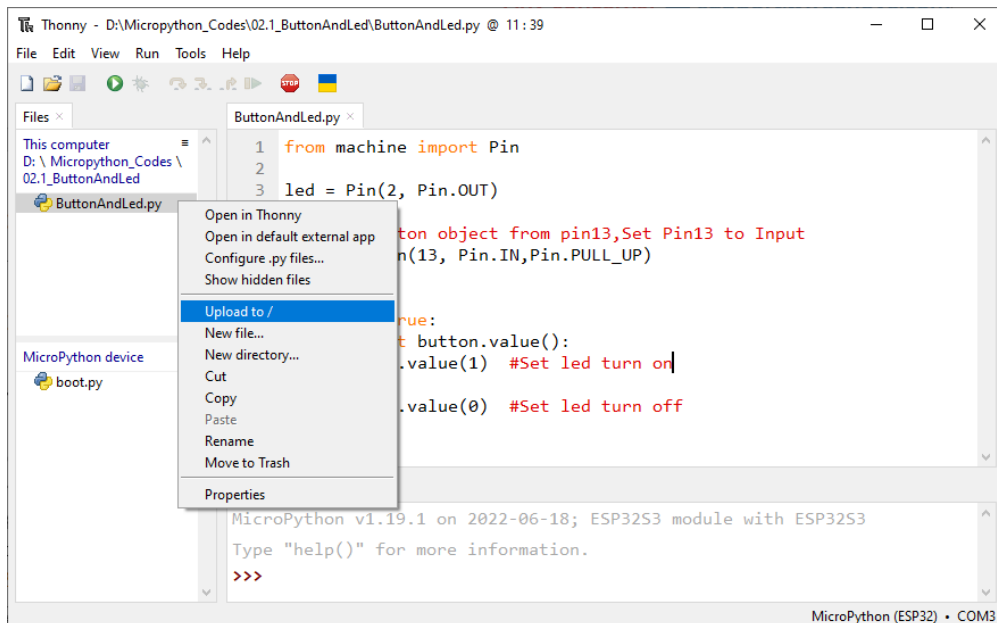

Upload boot.py in the same way.

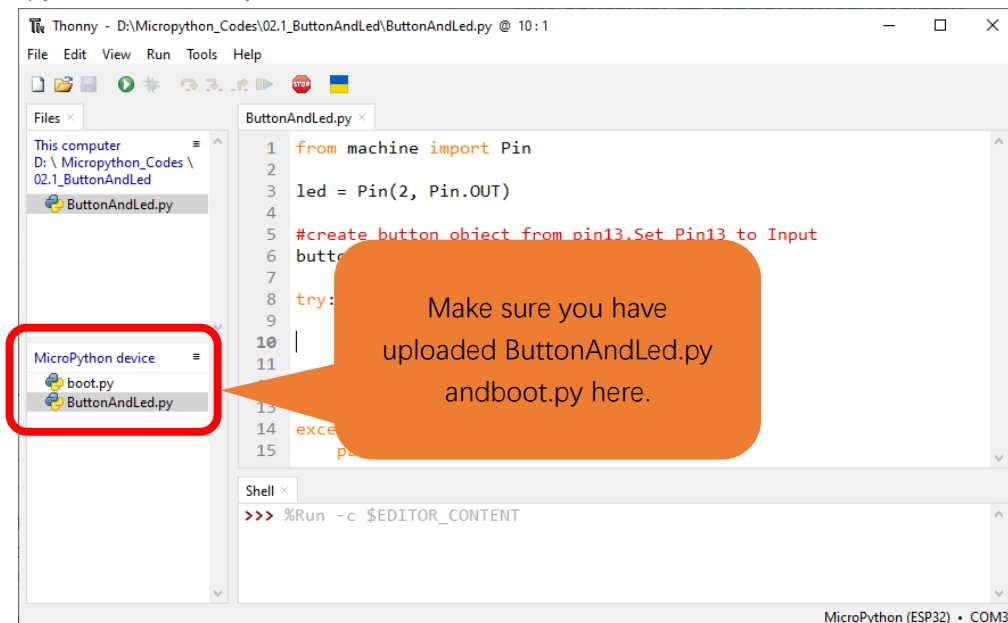

The following is the program code:

```

1  from machine import Pin
2
3  led = Pin(2, Pin.OUT)
4
5  #create button object from pin13, Set Pin13 to Input
6  button = Pin(13, Pin.IN, Pin.PULL_UP)
7
8  try:
9      while True:
10         if not button.value():
11             led.value(1) #Set led turn on
12         else:
13             led.value(0) #Set led turn off
14 except:
15     pass

```

In this project, we use the Pin module of the machine, so before initializing the Pin, we need to import this module first.

```

1  from machine import Pin

```

In the circuit connection, LED and Button are connected with GPIO2 and GPIO13 respectively, so define led and button as 2 and 13 respectively.

```

3  led = Pin(2, Pin.OUT)
4
5  #create button object from pin13, Set Pin13 to Input
6  button = Pin(13, Pin.IN, Pin.PULL_UP)

```

Read the pin state of button with value() function. Press the button switch, the function returns low level and the result of "if" is true, and then LED will be turned ON; Otherwise, LED is turned OFF.

```

9      while True:
10         if not button.value():
11             led.value(1) #Set led turn on
12         else:
13             led.value(0) #Set led turn off

```

If statement is used to execute the next statement when a certain condition is proved to be true (or non0). It is often used together with "else" statement, which judges other statements except the if statement. If you need to judge if the result of a condition is 0, you can use if not statement.

```

10     if not button.value():
11         ...
12     else:
13         ...

```


Project 2.2 MINI table lamp

We will also use a push button switch, LED and ESP32-S3 to make a MINI table lamp but this will function differently: Press the button, the LED will turn ON, and pressing the button again, the LED turns OFF. The ON switch action is no longer momentary (like a door bell) but remains ON without needing to continually press on the Button Switch.

First, let us learn something about the push button switch.

Debounce for Push Button

The moment when a push button switch is pressed, it will not change from one state to another state immediately. Due to tiny mechanical vibrations, there will be a short period of continuous buffeting before it completely reaches another state too fast for humans to detect but not for computer microcontrollers. The same is true when the push button switch is released. This unwanted phenomenon is known as “bounce”.

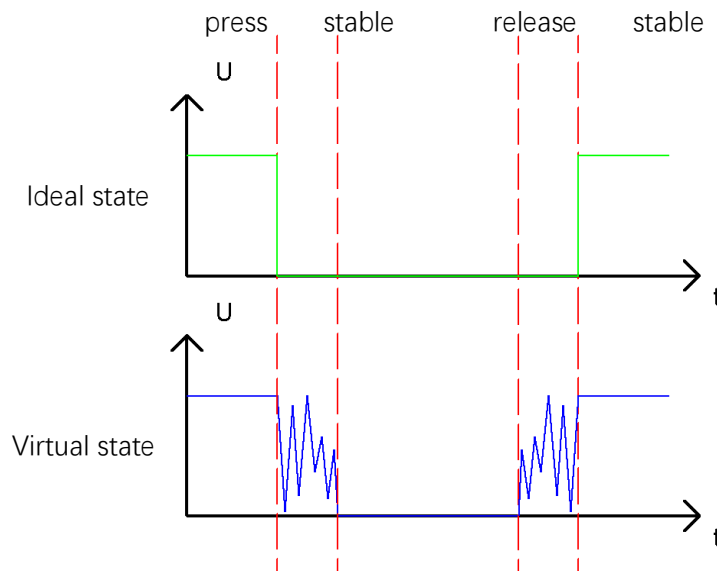

Therefore, if we can directly detect the state of the push button switch, there are multiple pressing and releasing actions in one pressing cycle. This buffeting will mislead the high-speed operation of the microcontroller to cause many false decisions. Therefore, we need to eliminate the impact of buffeting. Our solution: to judge the state of the button multiple times. Only when the button state is stable (consistent) over a period of time, can it indicate that the button is actually in the ON state (being pressed).


This project needs the same components and circuits as we used in the previous section.

Code


02.2_Tablelamp

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “02.2_TableLamp” and double click “TableLamp.py”.

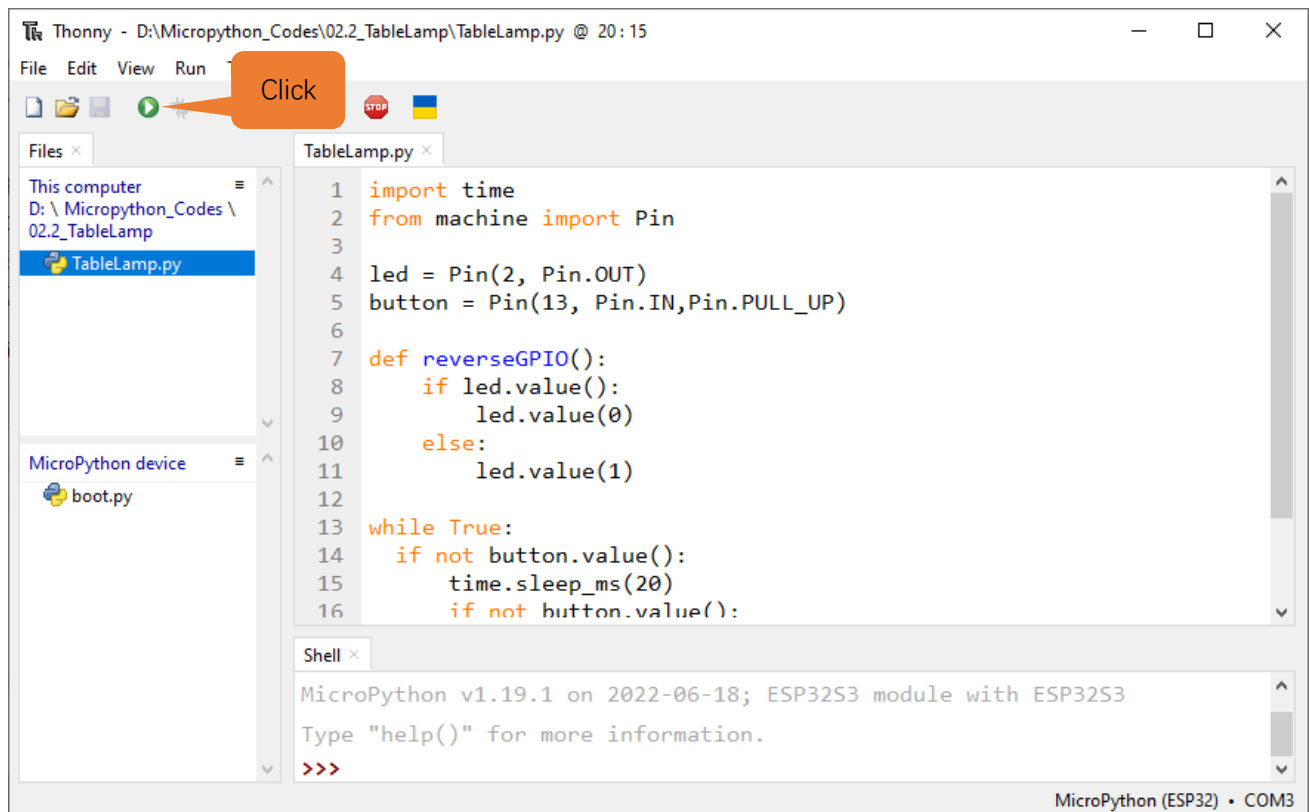

Click “Run current script” shown in the box of the above illustration, press the push button switch, LED turns ON; press it again, LED turns OFF.

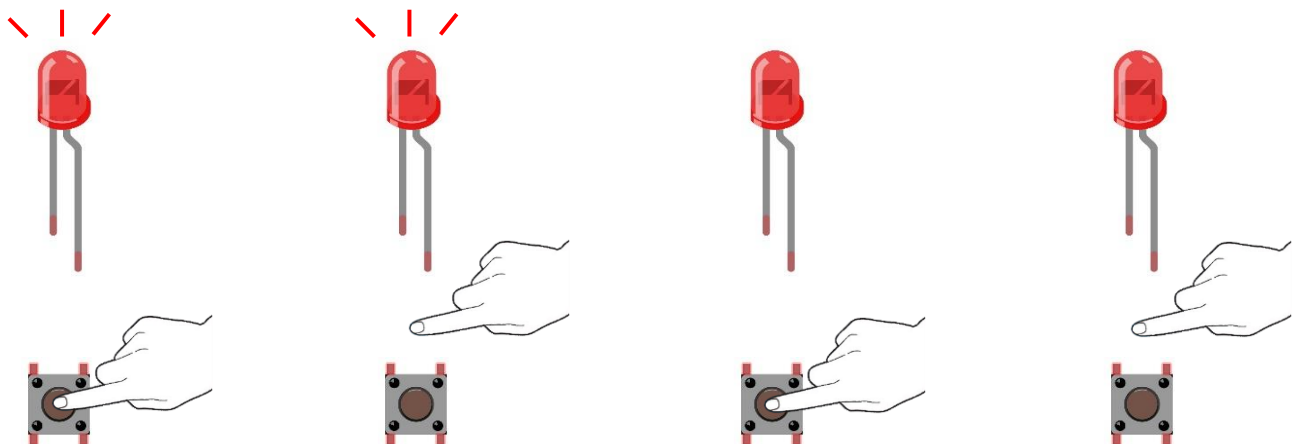


If you have any concerns, please contact us via: support@freenove.com


Any concerns? ✉ support@freenove.com

Upload code to ESP32S3


As shown in the following illustration, right-click file 02.2_TableLamp and select “Upload to /” to upload code to ESP32S3.

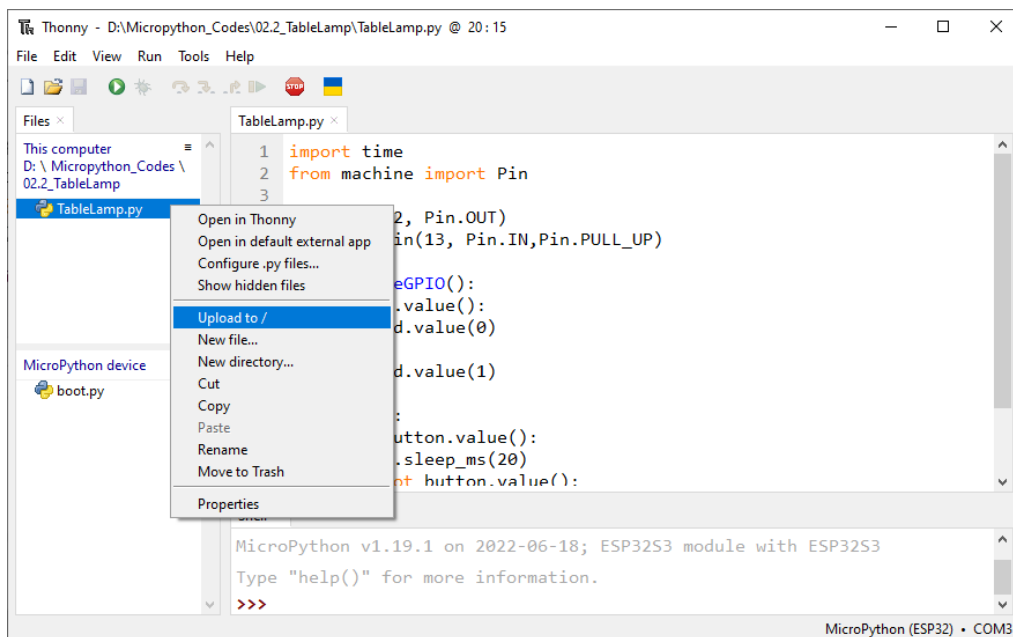

Upload boot.py in the same way.

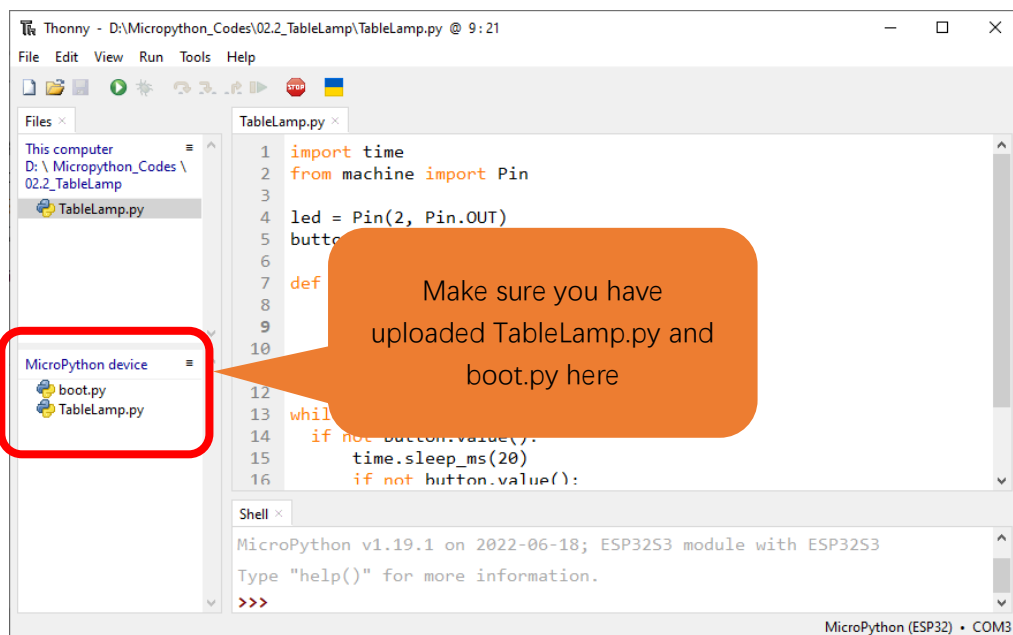

Press ESP32S3's reset key, and then push the button switch, LED turns ON; Push the button again, LED turns OFF.

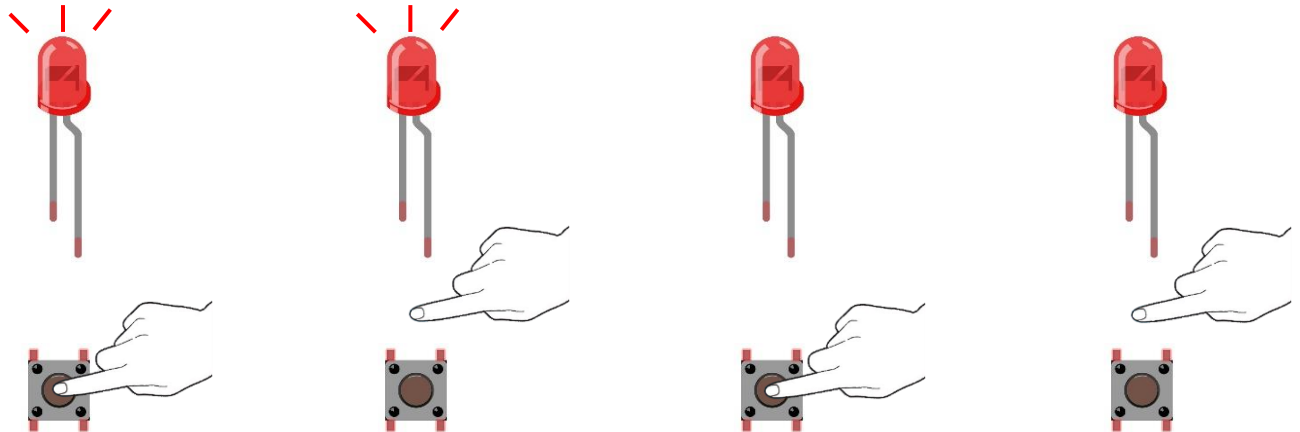

The following is the program code:

```

1  import time
2  from machine import Pin
3
4  led = Pin(2, Pin.OUT)
5  button = Pin(13, Pin.IN, Pin.PULL_UP)
6
7  def reverseGPIO():
8      if led.value():
9          led.value(0)
10     else:
11         led.value(1)
12
13  while True:
14      if not button.value():
15          time.sleep_ms(20)
16          if not button.value():
17              reverseGPIO()
18              while not button.value():
19                  time.sleep_ms(20)

```

When the button is detected to be pressed, delay 20ms to avoid the effect of bounce, and then check whether the button has been pressed again. If so, the conditional statement will be executed, otherwise it will not be executed.

```

13  while True:
14      if not button.value():
15          time.sleep_ms(20)
16          if not button.value():
17              reverseGPIO()
18              while not button.value():
19                  time.sleep_ms(20)

```

Customize a function and name it `reverseGPIO()`, which reverses the output level of the LED.

```
7 def reverseGPIO():
8     if led.value():
9         led.value(0)
10    else:
11        led.value(1)
```




Chapter 3 LED Bar

We have learned how to control a LED blinking, next we will learn how to control a number of LEDs.

Project 3.1 Flowing Light

In this project, we use a number of LEDs to make a flowing light.

Component List

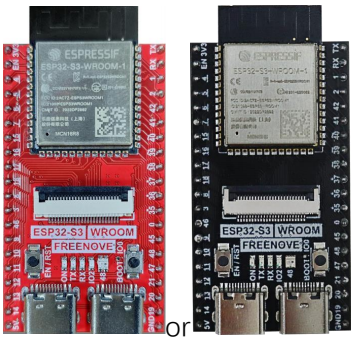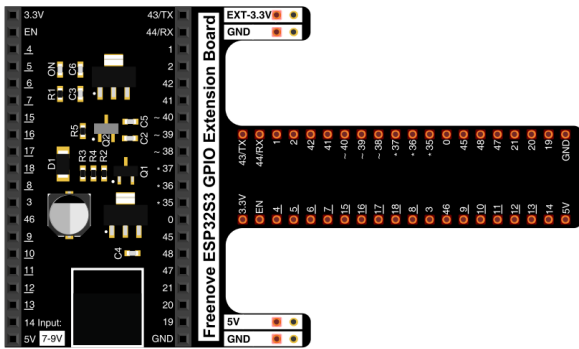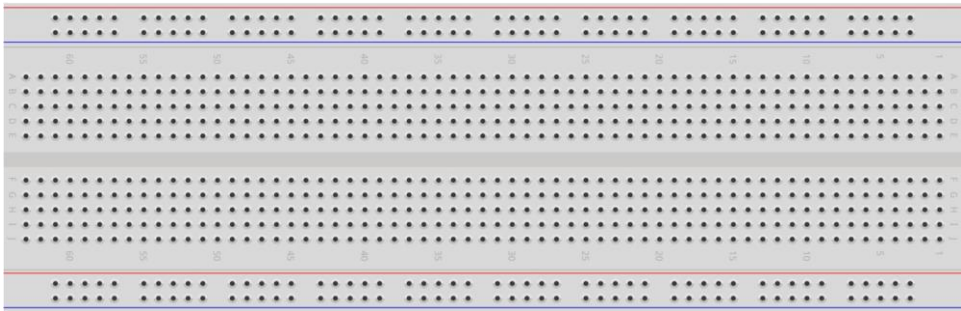
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
Jumper M/M x10 	LED bar graph x1 	Resistor 220Ω x10 

Component knowledge

Let's learn about the basic features of these components to use and understand them better.

LED bar

A LED bar graph has 10 LEDs integrated into one compact component. The two rows of pins at its bottom are paired to identify each LED like the single LED used earlier.

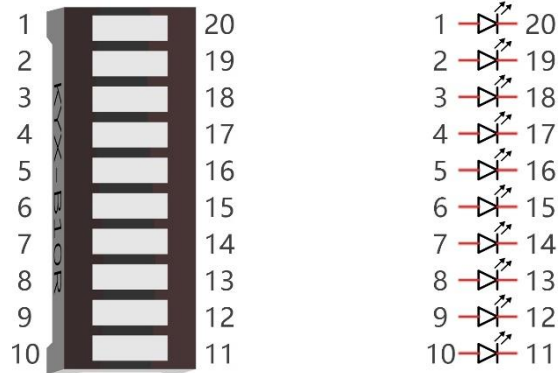


Code

This project is designed to make a flowing water lamp. Which are these actions: First turn LED #1 ON, then turn it OFF. Then turn LED #2 ON, and then turn it OFF... and repeat the same to all 10 LEDs until the last LED is turns OFF. This process is repeated to achieve the “movements” of flowing water.

03.1_FlowingLight

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “03.1_FlowingLight” and double click “FlowingLight.py”.

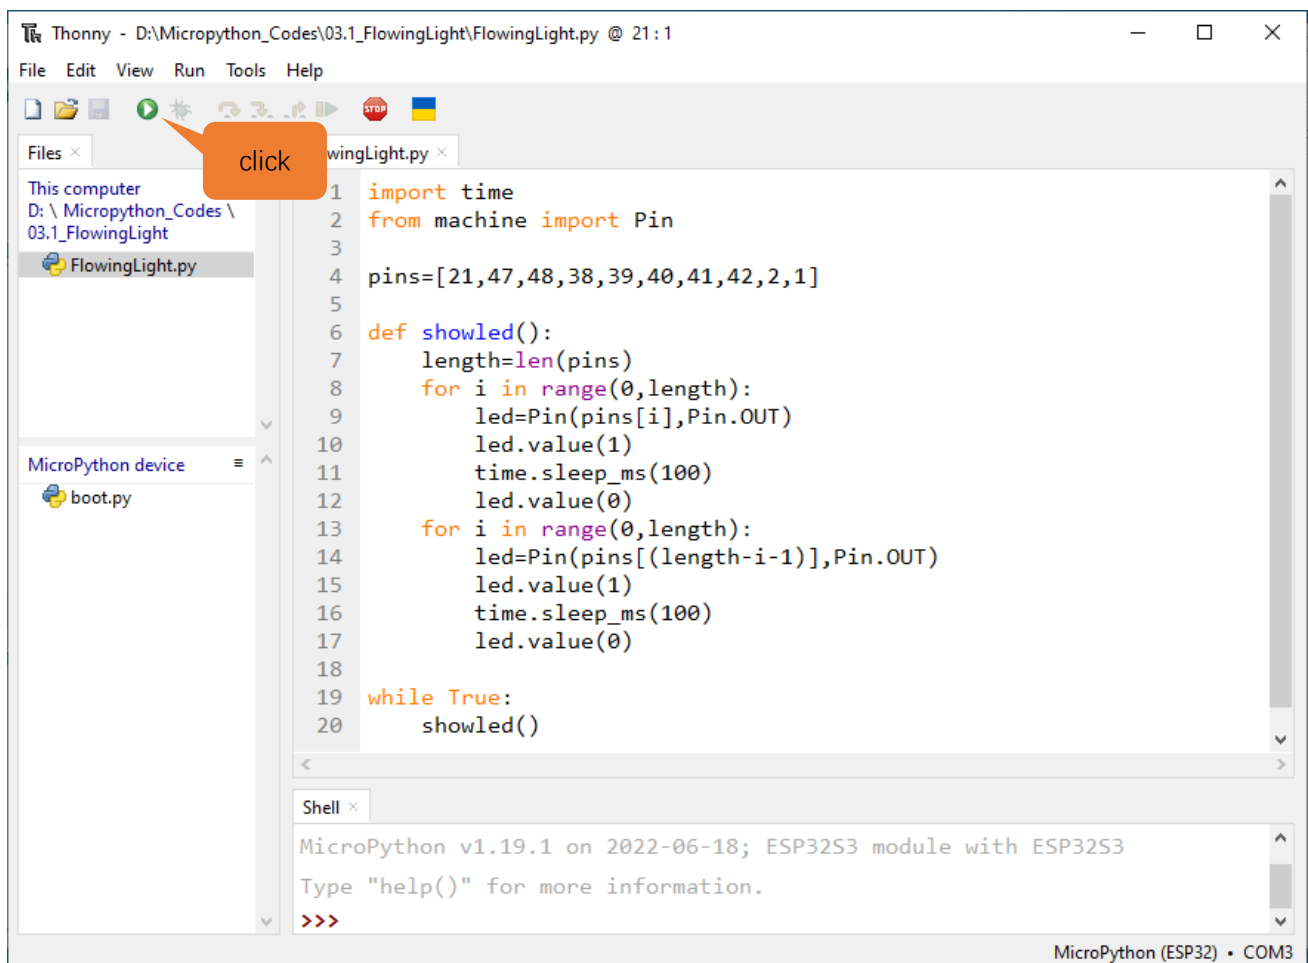

Click “Run current script” shown in the box above, LED Bar Graph will light up from left to right and then back from right to left.



If you have any concerns, please contact us via: support@freenove.com

Any concerns? ✉ support@freenove.com

The following is the program code:

```

1  import time
2  from machine import Pin
3
4  pins=[21, 47, 48, 38, 39, 40, 41, 42, 2, 1]
5
6  def showled():
7      length=len(pins)
8      for i in range(0, length):
9          led=Pin(pins[i], Pin.OUT)
10         led.value(1)
11         time.sleep_ms(100)
12         led.value(0)
13     for i in range(0, length):
14         led=Pin(pins[(length-i-1)], Pin.OUT)
15         led.value(1)
16         time.sleep_ms(100)
17         led.value(0)
18
19 while True:
20     showled()

```

Use an array to define 10 GPIO ports connected to LED Bar Graph for easier operation.

```

4  pins=[21, 47, 48, 38, 39, 40, 41, 42, 2, 1]

```

Use len() function to obtain the amount of elements in the list and use a for loop to configure pins as output mode.

```

7      length=len(pins)
8      for i in range(0, length):
9          led=Pin(pins[i], Pin.OUT)

```

Use two for loops to turn on LEDs separately from left to right and then back from right to left.

```

8      for i in range(0, length):
9          led=Pin(pins[i], Pin.OUT)
10         led.value(1)
11         time.sleep_ms(100)
12         led.value(0)
13     for i in range(0, length):
14         led=Pin(pins[(length-i-1)], Pin.OUT)
15         led.value(1)
16         time.sleep_ms(100)
17         led.value(0)

```

Reference

for i in range(start,end,num: int=1)

For loop is used to execute a program endlessly and iterate in the order of items (a list or a string) in the sequence

start: The initial value, the for loop starts with it

end: The ending value, the for loop end with it

num: Num is automatically added each time to the data. The default value is 1

Chapter 4 Analog & PWM




In previous study, we have known that one button has two states: pressed and released, and LED has light-on/off state, then how to enter a middle state? How to output an intermediate state to let LED "semi bright"? That's what we're going to learn.

First, let's learn how to control the brightness of a LED.

Project 4.1 Breathing LED

Breathing light, that is, LED is turned from off to on gradually, and gradually from on to off, just like "breathing". So, how to control the brightness of a LED? We will use PWM to achieve this target.


Component List

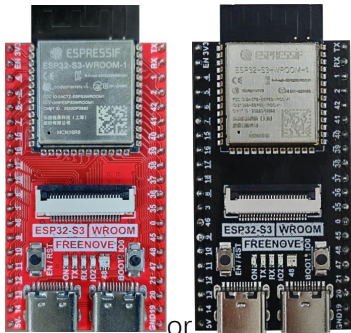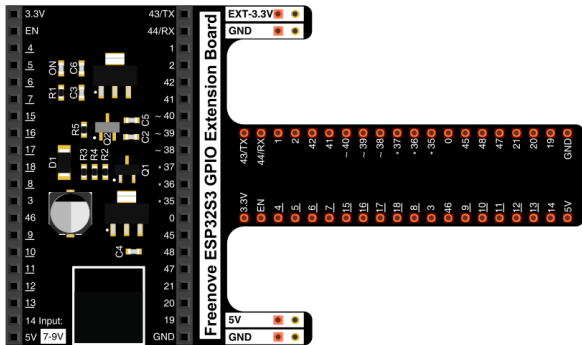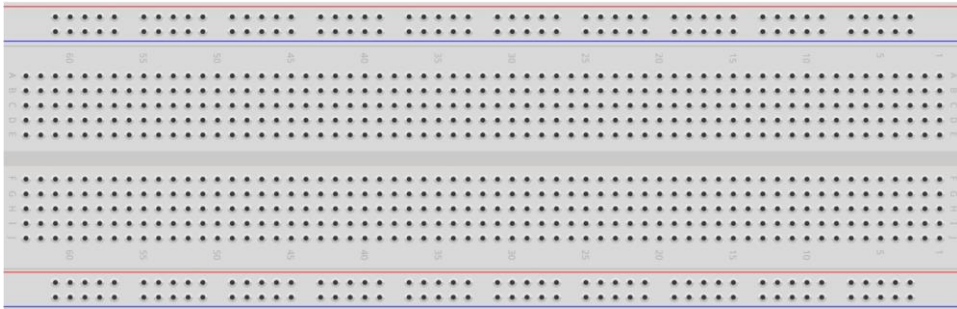ESP32-S3(N16R8)/ESP32-S3(N8R8)  or	GPIO Extension Board x1 	
Breadboard x1 		
LED x1 	Resistor 220Ω x1 	Jumper M/M x2 

Related knowledge

Analog & Digital

An analog signal is a continuous signal in both time and value. On the contrary, a digital signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an analog signal would be how the temperature throughout the day is continuously changing and could not suddenly change instantaneously from 0°C to 10°C. However, digital signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.

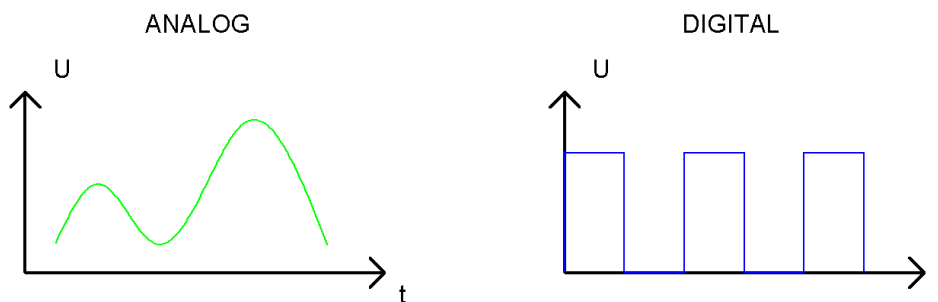


In practical application, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1), it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.

PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Common processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals)

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called "pulse width", and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.

The longer the outputs of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

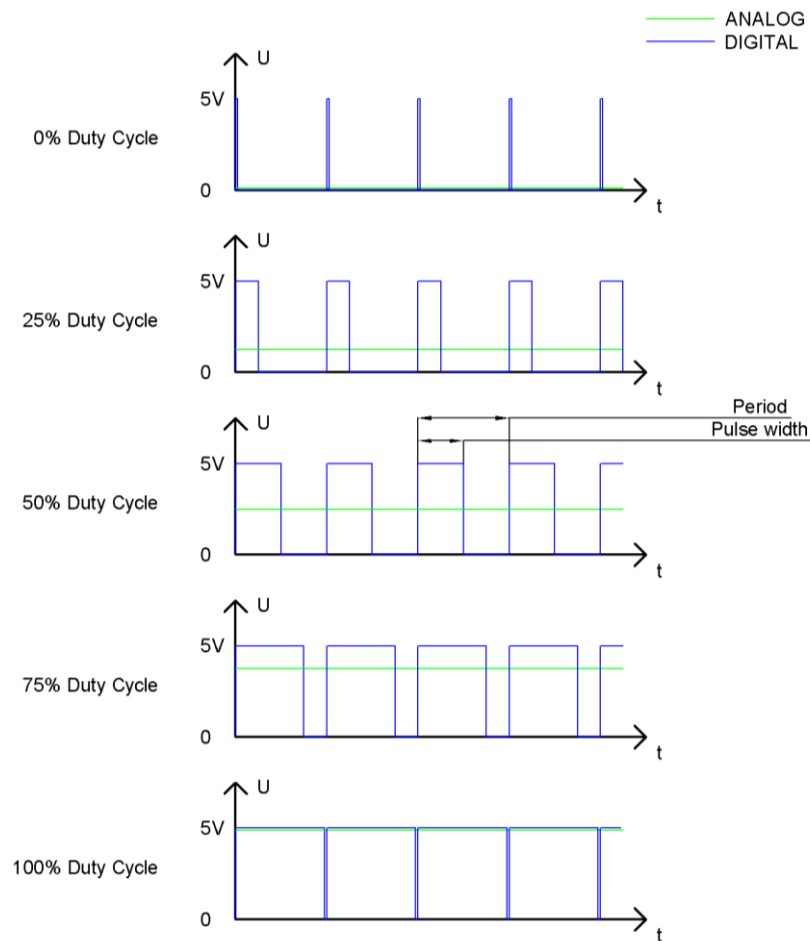

The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of a LED or the speed of DC motor and so on.

It is evident from the above that PWM is not real analog, and the effective value of the voltage is equivalent to the corresponding analog. Therefore, we can control the output power of the LED and other output modules to achieve different effects.

ESP32-S3 and PWM

On ESP32S3, the LEDC(PWM) controller has 8 separate channels, each of which can independently control frequency, duty cycle, and even accuracy. Unlike traditional PWM pins, the PWM output pins of ESP32-S3 are configurable, with one or more PWM output pins per channel. The relationship between the maximum frequency and bit precision is shown in the following formula, where the maximum value of bit is 31.


$$\text{Freq}_{\max} = \frac{80,000,000}{1 \ll \text{bit}}$$

For example, generate a PWM with an 8-bit precision ($2^8=256$. Values range from 0 to 255) with a maximum frequency of $80,000,000/256 = 312,500\text{Hz}$.)


Circuit

This circuit is the same as the one in engineering Blink.

Schematic diagram

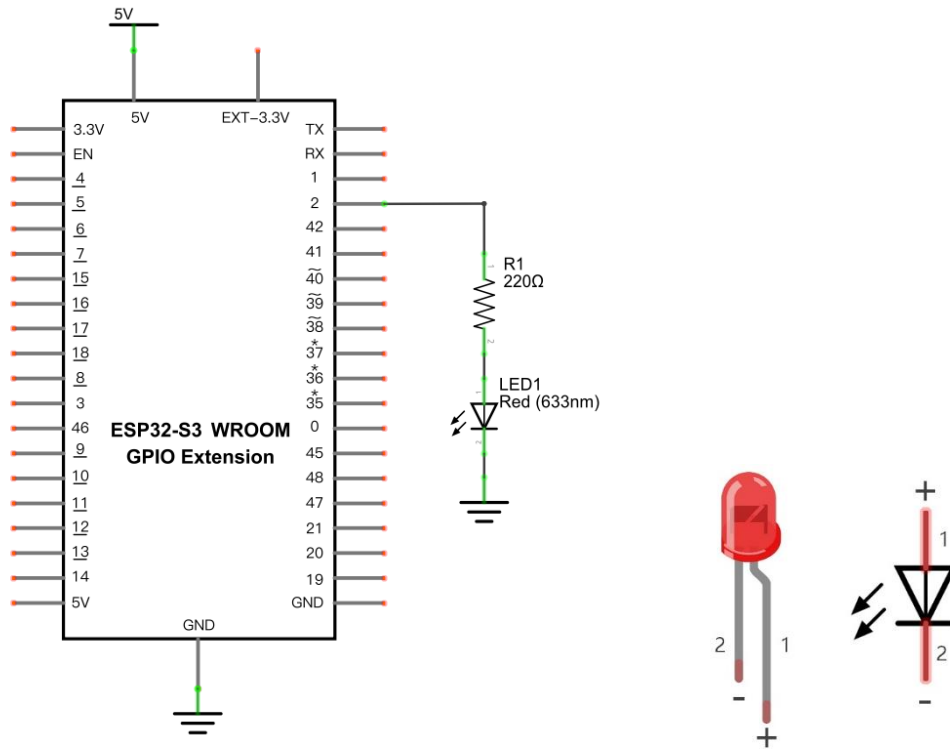

Hardware connection. If you need any support, please contact us via: support@freenove.com

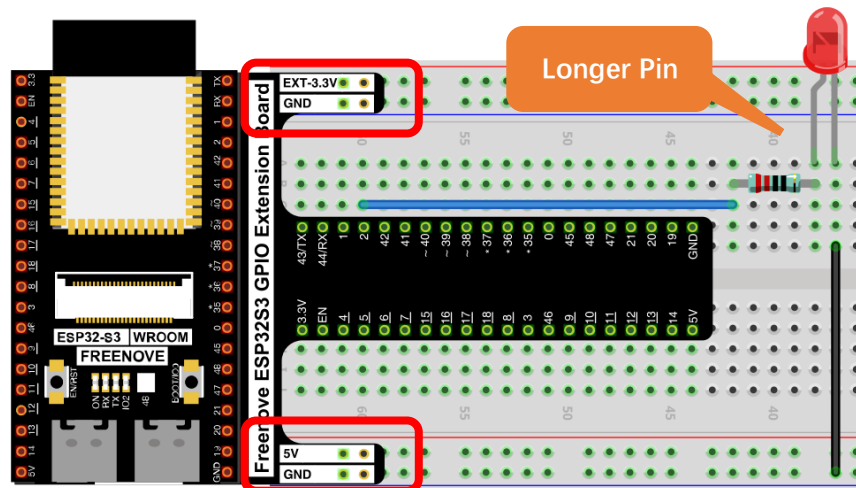

Don't rotate ESP32-S3 WROOM 180° for connection.

Any concerns? support@freenove.com

Code

This project is designed to make PWM output GPIO2 with pulse width increasing from 0% to 100%, and then reducing from 100% to 0% gradually.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “04.1_BreatheLight” and double click “BreatheLight.py”.

04.1_BreatheLight



```

1 from machine import Pin,PWM
2 import time
3
4 pwm =PWM(Pin(2),10000)
5 try:
6     while True:
7         for i in range(0,1023):
8             pwm.duty(i)
9             time.sleep_ms(1)
10
11         for i in range(0,1023):
12             pwm.duty(1023-i)
13             time.sleep_ms(1)
14 except:
15     pwm.deinit()
16

```

Shell

```

>>> %Run -c $EDITOR_CONTENT

```

MicroPython (ESP32) • COM3

Click “Run current script”, and you'll see that LED is turned from ON to OFF and then back from OFF to ON gradually like breathing.



The following is the program code:

```
1  from machine import Pin, PWM
2  import time
3
4  pwm = PWM(Pin(2, Pin.OUT), 10000)
5  try:
6      while True:
7          for i in range(0, 1023):
8              pwm.duty(i)
9              time.sleep_ms(1)
10
11         for i in range(0, 1023):
12             pwm.duty(1023-i)
13             time.sleep_ms(1)
14 except:
15     pwm.deinit()
```

The way that the ESP32-S3 PWM pins output is different from traditionally controllers. It can change frequency and duty cycle by configuring PWM's parameters at the initialization stage. Define GPIO2's output frequency as 10000Hz, and assign them to PWM.

```
4  pwm = PWM(Pin(2, Pin.OUT), 10000)
```

The range of duty cycle is 0-1023, so we use the first for loop to control PWM to change the duty cycle value, making PWM output 0% -100%; Use the second for loop to make PWM output 100%-0%.

```
7      for i in range(0, 1023):
8          pwm.duty(i)
9          time.sleep_ms(1)
10
11     for i in range(0, 1023):
12         pwm.duty(1023-i)
13         time.sleep_ms(1)
```

Each time PWM is used, the hardware Timer will be turned ON to cooperate it. Therefore, after each use of PWM, deinit() needs to be called to turned OFF the timer. Otherwise, the PWM may fail to work next time.

```
15  pwm.deinit()
```

Reference

Class PWM(pin, freq)

Before each use of PWM module, please add the statement **"from machine import PWM"** to the top of the python file.

pin: Any pin supports PWM output, except GPIO19,20

freq: Output frequency, with the range of 0-78125 Hz

duty: Duty cycle, with the range of 0-1023.

PWM.init(freq, duty): Initialize PWM, parameters are the same as above.

PWM.freq([freq_val]): When there is no parameter, the function obtains and returns PWM frequency; When parameters are set, the function is used to set PWM frequency and returns nothing.




PWM.duty([duty_val]): When there is no parameter, the function obtains and returns PWM duty cycle; When parameters are set, the function is used to set PWM duty cycle.

PWM.deinit(): Turn OFF PWM.

Project 4.2 Meteor Flowing Light


After learning about PWM, we can use it to control LED bar graph and realize a cooler flowing light. The component list, circuit, and hardware are exactly consistent with the project Flowing Light.

Component List

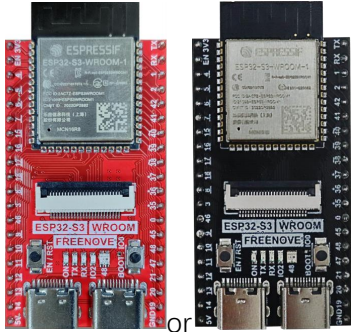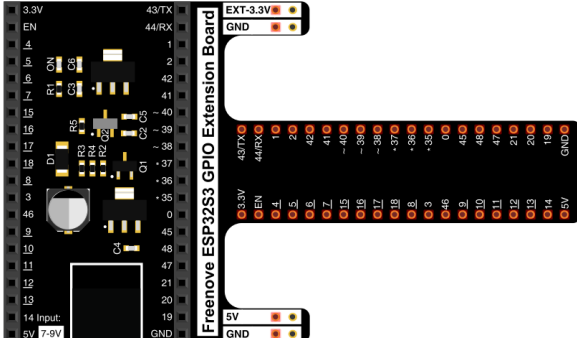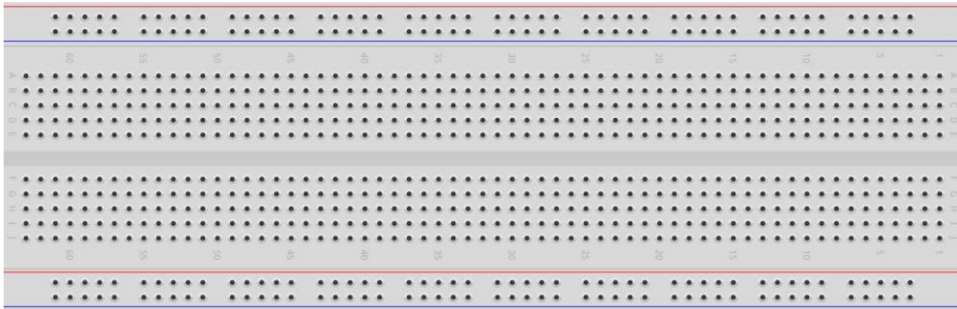
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
Jumper M/M x8 	LED bar graph x1 	Resistor 220Ω x8 

Circuit

Schematic diagram

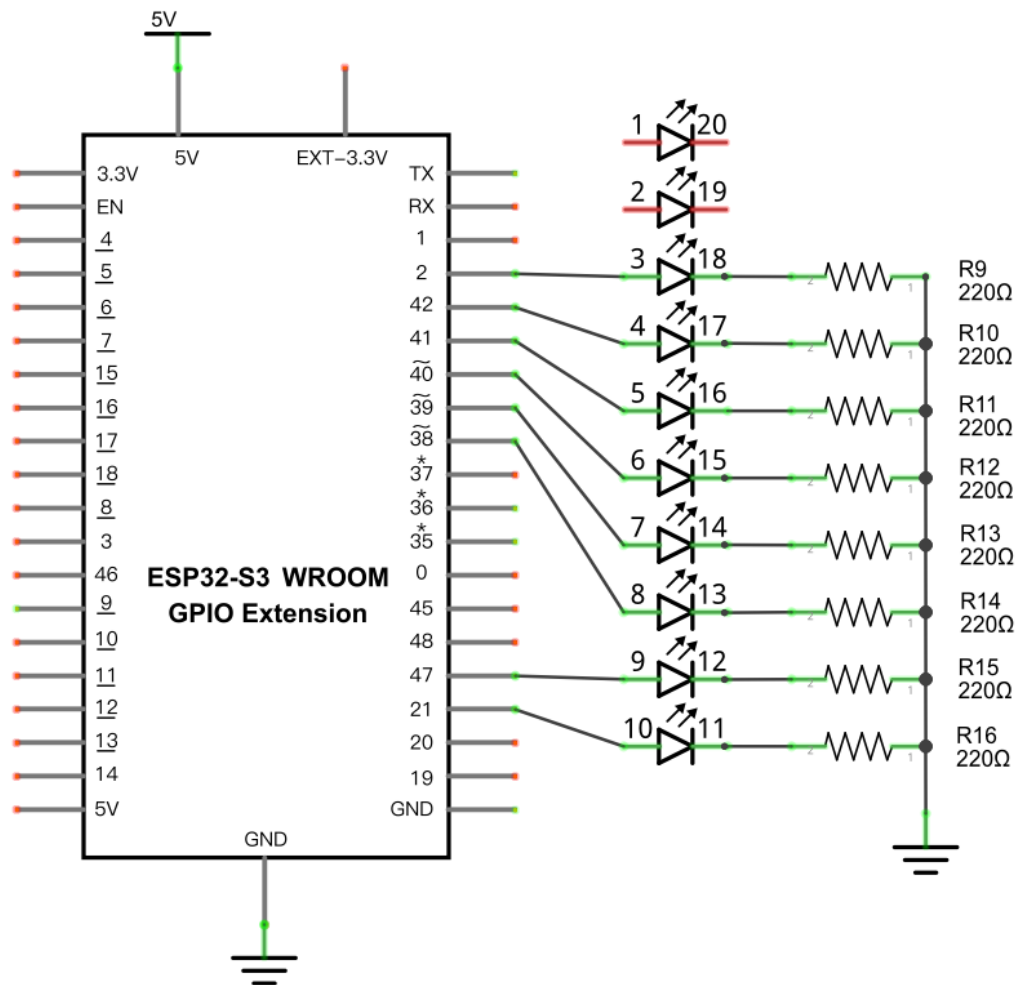

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

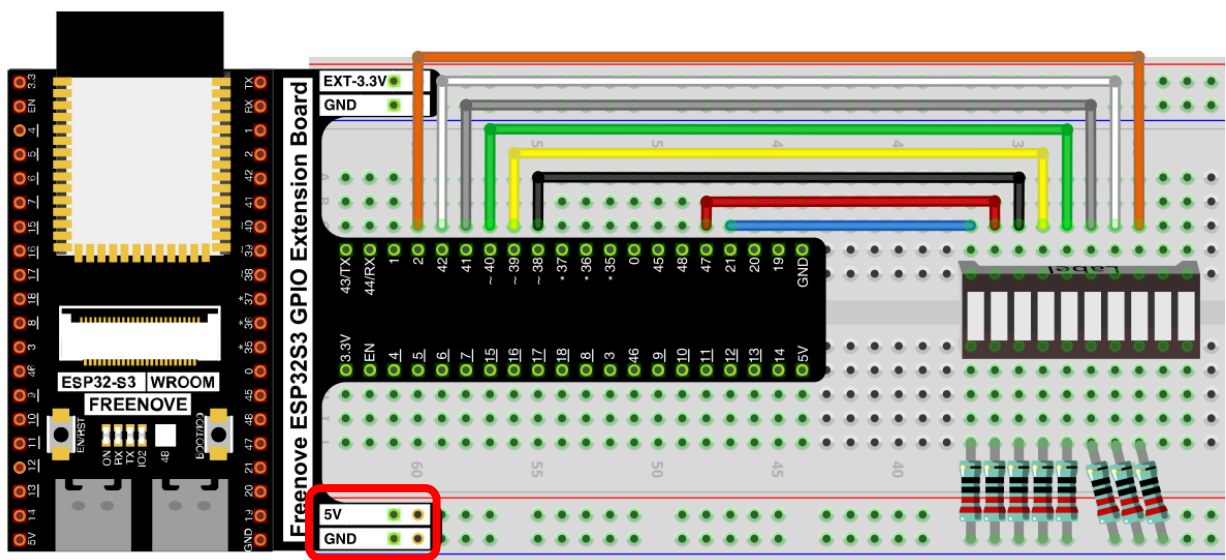


Any concerns? support@freenove.com

Code

Flowing Light with tail was implemented with PWM.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “04.2_FlowingLight”. Select “pwm.py”, right click to select “Upload to /”, wait for “pwm.py” to be uploaded to ESP32-S3 and then double click “FlowingLight.py”.

04.2_FlowingLight

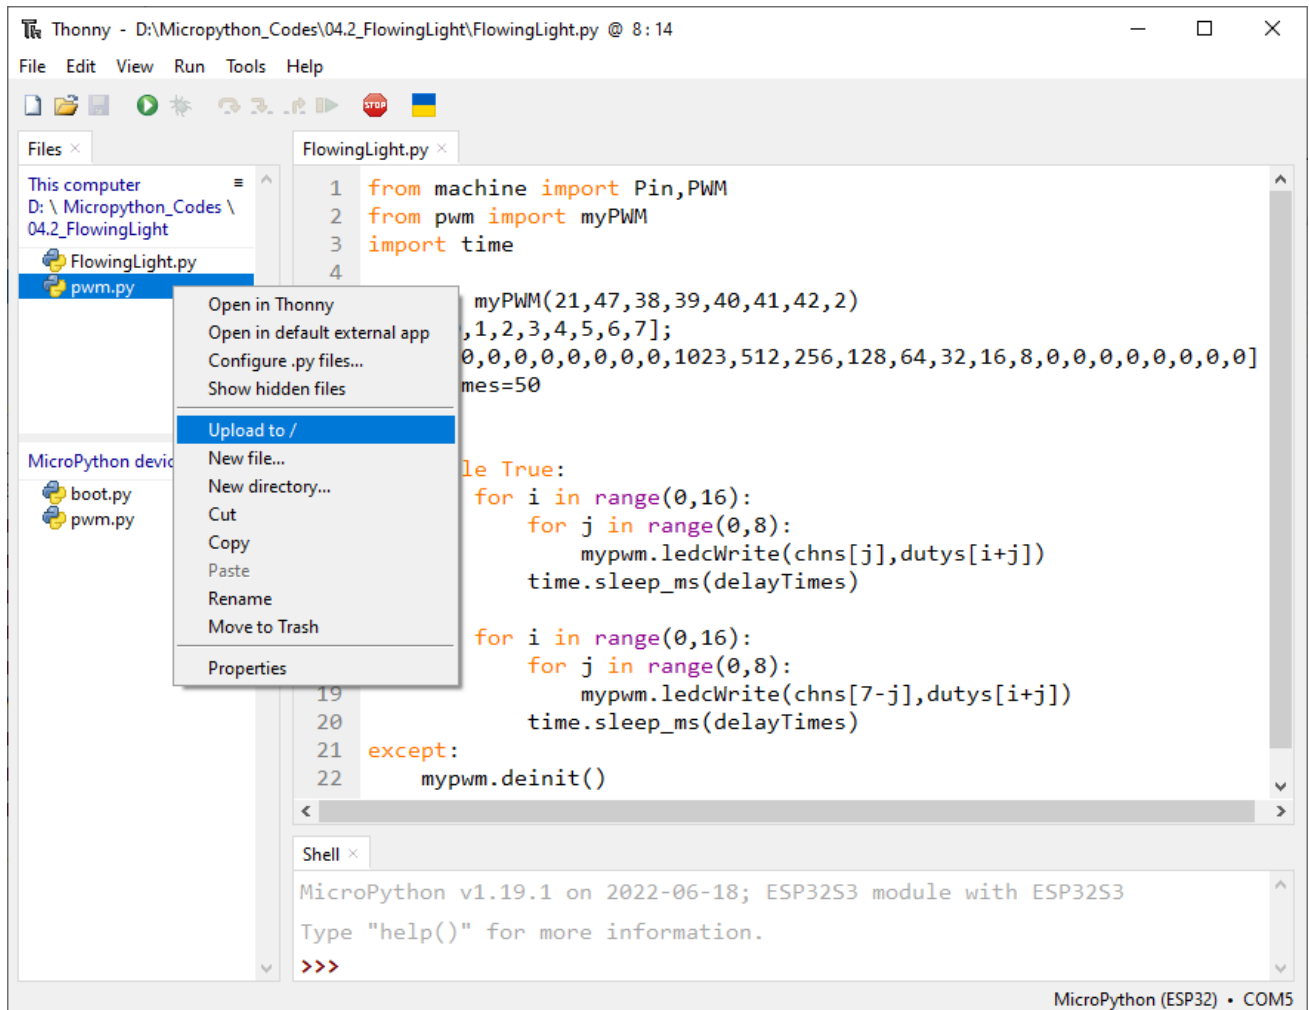

Click “Run current script”, and LED Bar Graph will gradually light up and out from left to right, then light up and out from right to left.

The following is the program code:

```

1  from machine import Pin, PWM
2  from pwm import myPWM
3  import time
4
5  mypwm = myPWM(21, 47, 38, 39, 40, 41, 42, 2)
6  chns=[0, 1, 2, 3, 4, 5, 6, 7];
7  dutys=[0, 0, 0, 0, 0, 0, 0, 1023, 512, 256, 128, 64, 32, 16, 8, 0, 0, 0, 0, 0, 0, 0];
8  delayTimes=50
9
10 try:
11     while True:
12         for i in range(0, 16):
13             for j in range(0, 8):
14                 mypwm.ledcWrite(chns[j], dutys[i+j])
15                 time.sleep_ms(delayTimes)
16
17         for i in range(0, 16):
18             for j in range(0, 8):
19                 mypwm.ledcWrite(chns[7-j], dutys[i+j])
20                 time.sleep_ms(delayTimes)
21 except:
22     mypwm.deinit()

```

Import the object myPWM from pwm.py and set corresponding pins for PWM channel.

```

2  from pwm import myPWM
...  ...
5  mypwm = myPWM(21, 47, 38, 39, 40, 41, 42, 2)

```

First we defined 8 GPIO, 8 PWM channels, and 24 pulse width values.

```

5  mypwm = myPWM(21, 47, 38, 39, 40, 41, 42, 2)
6  chns=[0, 1, 2, 3, 4, 5, 6, 7];
7  dutys=[0, 0, 0, 0, 0, 0, 0, 1023, 512, 256, 128, 64, 32, 16, 8, 0, 0, 0, 0, 0, 0, 0];

```

Call ledcWrite() to set duty cycle dutys[i+j] for the chns[j] channel of PWM.

```

14 mypwm.ledcWrite(chns[j], dutys[i+j])

```

Close the PWM of the object myPWM.

```

14 mypwm.deinit()

```


In the code, a nesting of two for loops are used to achieve this effect.

```

12     for i in range(0, 16):
13         for j in range(0, 8):
14             mypwm.ledcWrite(chns[j], dutys[i+j])
15             time.sleep_ms(delayTimes)
16
17     for i in range(0, 16):
18         for j in range(0, 8):
19             mypwm.ledcWrite(chns[7-j], dutys[i+j])
20             time.sleep_ms(delayTimes)

```

In the main function, a nested for loop is used to control the pulse width of the PWM. Every time *i* in the first for loop increases by 1, the LED Bar Graph will move one grid, and gradually change according to the value in the array *dutys*. As shown in the following table, the value in the second row is the value of the array *dutys*, and the 8 green grids in each row below represent the 8 LEDs on the LED Bar Graph. Each time *i* increases by 1, the value of the LED Bar Graph will move to the right by one grid, and when it reaches the end, it will move from the end to the starting point, achieving the desired effect.

0	1	2	3	4	5	6	7	8	9	1	1	1	1	1	1	1	1	1	2	2	2	2	2
d	0	0	0	0	0	0	0		1	5	2	1	6	3	1	8	0	0	0	0	0	0	0
i									0	1	5	2	4	2	6								
									2	2	6	8											
0									3														
1																							
...																							
14																							
15																							
16																							


How to import a custom python module

Each Python file, as long as it's stored on the file system of ESP32S3, is a module. To import a custom module, the module file needs to be located in the MicroPython environment variable path or in the same path as the currently running program.

First, customize a python module "custom.py". Create a new py file and name it "custom.py". Write code to it and save it to ESP32S3.



Second, import custom module "custom" to main.py

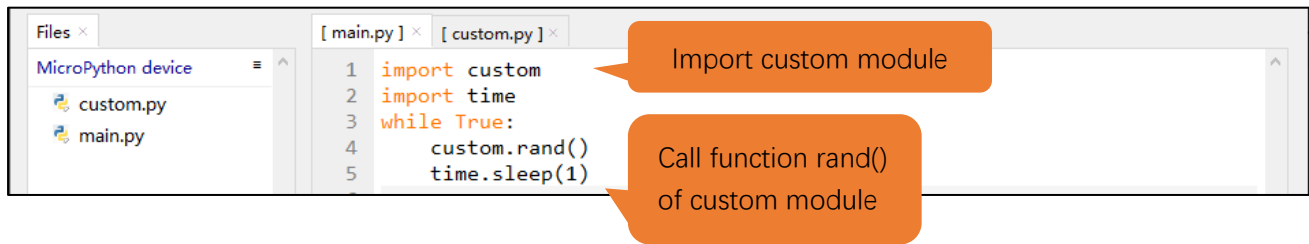




Chapter 5 RGB LED

In this chapter, we will learn how to control a RGB LED. It can emit different colors of light. Next, we will use RGB LED to make a multicolored light.

Project 5.1 Random Color Light


In this project, we will make a multicolored LED. And we can control RGB LED to switch different colors automatically.

Component List

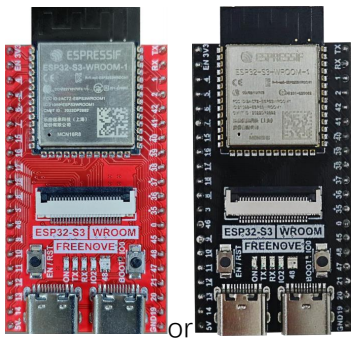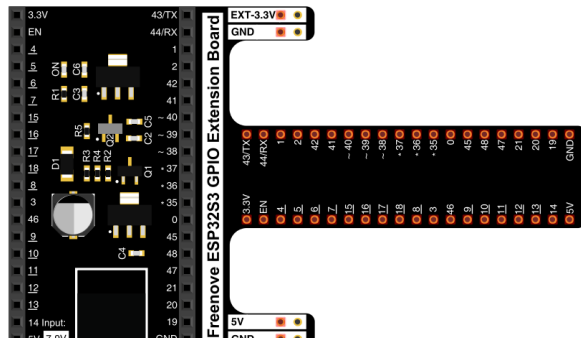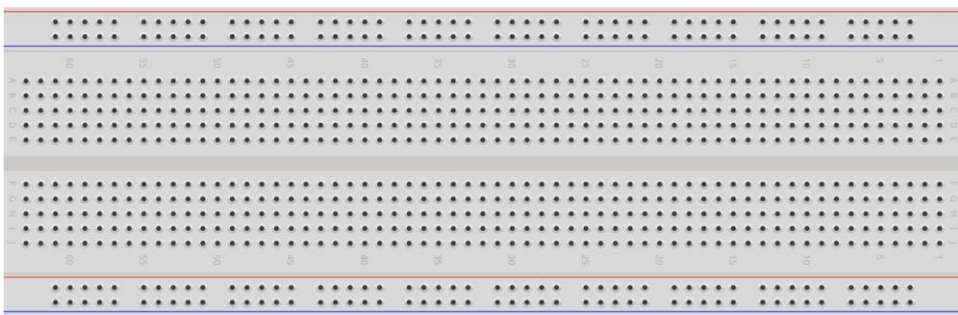
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
RGBLED x1 	Resistor 220Ω x3 	Jumper M/M x4 

Related knowledge

RGB LED has integrated 3 LEDs that can respectively emit red, green and blue light. And it has 4 pins. The long pin (1) is the common port, that is, 3 LED 's positive or negative port. The RGB LED with common positive port and its symbol is shown below. We can make RGB LED emit various colors of light by controlling these 3 LEDs to emit light with different brightness,

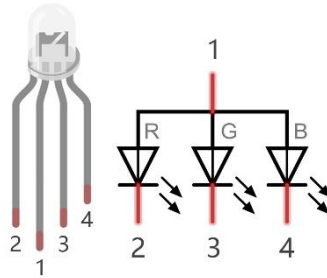

Red, green, and blue are known as three primary colors. When you combine these three primary-color lights with different brightness, it can produce almost all kinds of visible lights. Computer screens, single pixel of cell phone screen, neon, and etc. are working under this principle.

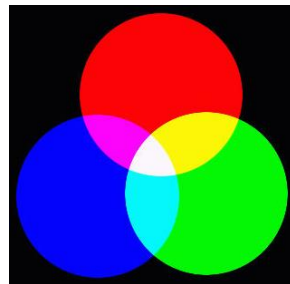


RGB


If we use three 8-bit PWMs to control the RGB LED, in theory, we can create $2^8 \times 2^8 \times 2^8 = 16777216$ (16 million) colors through different combinations.

Circuit

Schematic diagram

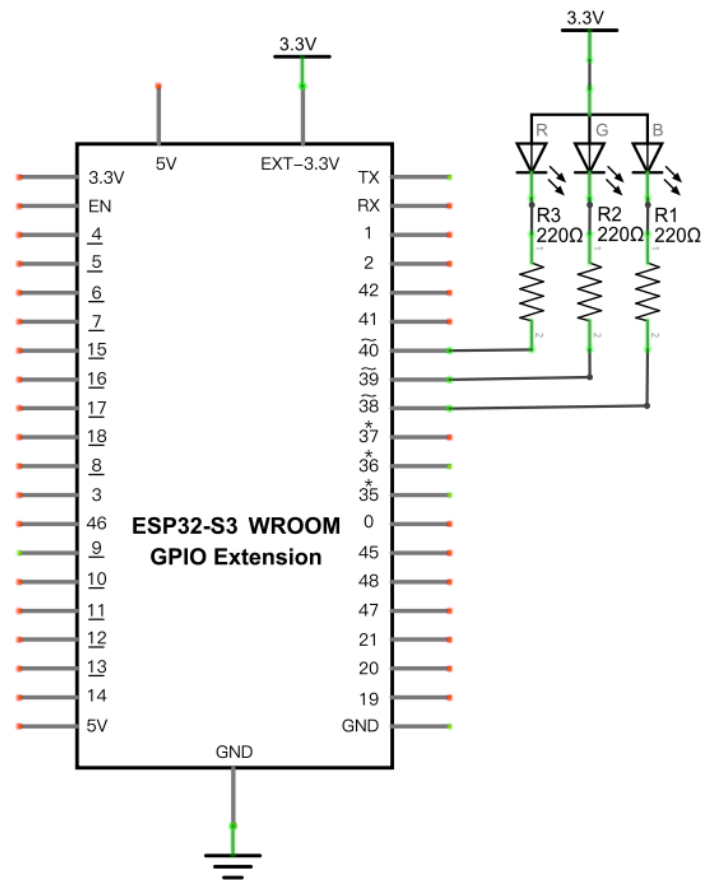

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

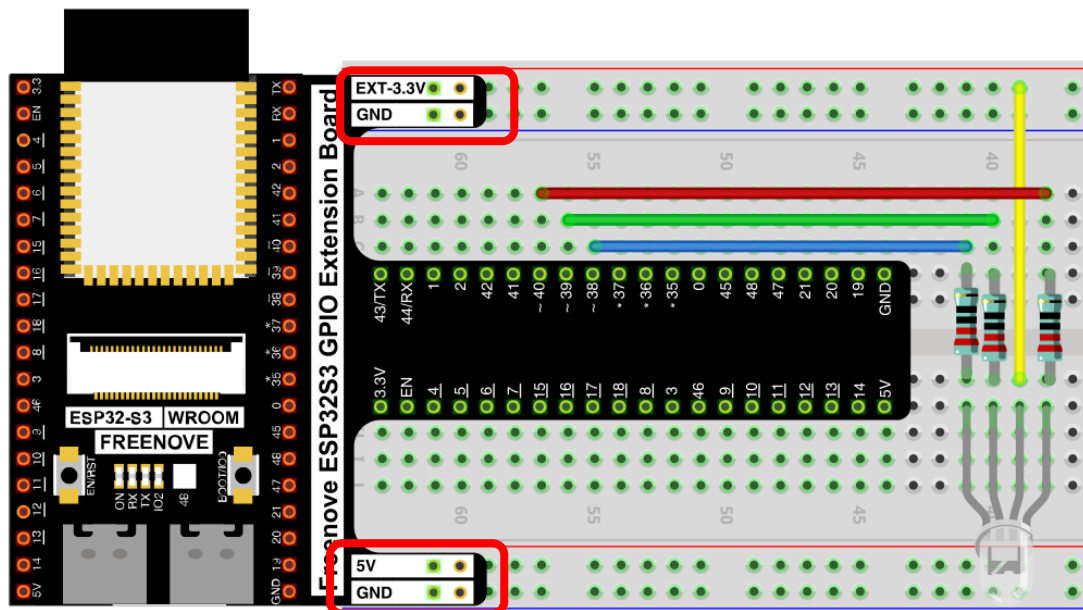

Code

We need to create three PWM channels and use random duty cycle to make random RGBLED color.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “05.1_RandomColorLight” and double click “RandomColorLight.py”.

05.1_RandomColorLight

```

Thonny - D:\Micropython_Codes\05.1_RandomColorLight\RandomColorLight.py @ 11:21
File Edit View Run Tools Help

Files
This computer
D:\Micropython_Codes\
05.1_RandomColorLight
RandomColorLight.py

MicroPython device
boot.py

RandomColorLight.py
1 from machine import Pin,PWM
2 from random import randint
3 import time
4
5 pins=[38,39,40]
6
7 pwm0=PWM(Pin(pins[0]),10000)
8 pwm1=PWM(Pin(pins[1]),10000)
9 pwm2=PWM(Pin(pins[2]),10000)
10
11 def setColor(r,g,b):
12     pwm0.duty(1023-r)
13     pwm1.duty(1023-g)
14     pwm2.duty(1023-b)
15
16 try:
17     while True:
18         red = randint(0,1023)
19         green = randint(0,1023)
20         blue = randint(0,1023)
21         setColor(red,green,blue)
22         time.sleep_ms(200)

Shell
>>> %Run -c $EDITOR_CONTENT

MicroPython (ESP32) • COM5
  
```

Click “Run current script”, RGBLED begins to display random colors.

If you have any concerns, please contact us via: support@freenove.com

The following is the program code:

```

1  from machine import Pin, PWM
2  from random import randint
3  import time
4
5  pins=[40, 39, 38]
6
7  pwm0=PWM(Pin(pins[0]), 10000)
8  pwm1=PWM(Pin(pins[1]), 10000)
9  pwm2=PWM(Pin(pins[2]), 10000)
10
11 def setColor(r, g, b):
12     pwm0.duty(1023-r)
13     pwm1.duty(1023-g)
14     pwm2.duty(1023-b)
15
16 try:
17     while True:
18         red = randint(0, 1023)
19         green = randint(0, 1023)
20         blue = randint(0, 1023)
21         setColor(red, green, blue)
22         time.sleep_ms(200)
23 except:
24     pwm0.deinit()
25     pwm1.deinit()
26     pwm2.deinit()

```

Import Pin, PWM and Random Function modules.

```

12 from machine import Pin, PWM
13 from random import randint
14 import time

```

Configure output mode of GPIO38, GPIO39 and GPIO40 as PWM output and PWM frequency as 10000Hz

```

5  pins=[40, 39, 38]
6
7  pwm0=PWM(Pin(pins[0]), 10000)
8  pwm1=PWM(Pin(pins[1]), 10000)
9  pwm2=PWM(Pin(pins[2]), 10000)

```

Define a function to set the color of RGBLED.

```

11 def setColor(r, g, b):
12     pwm0.duty(1023-r)
13     pwm1.duty(1023-g)
14     pwm2.duty(1023-b)

```

Call random function randint() to generate a random number in the range of 0-1023 and assign the value to red.

```
18 red = randint(0, 1023)
```

Obtain 3 random number every 200 milliseconds and call function setColor to make RGBLED display dazzling colors.

```
17 while True:
18     red = randint(0, 1023)
19     green = randint(0, 1023)
20     blue = randint(0, 1023)
21     setColor(red, green, blue)
22     time.sleep_ms(200)
```

Reference

Class random

Before each use of the module **random**, please add the statement “**import random**” to the top of Python file.

randint(start, end): Randomly generates an integer between the value of start and end.

start: Starting value in the specified range, which would be included in the range.

end: Ending value in the specified range, which would be included in the range.

random(): Randomly generates a floating point number between 0 and 1.

random.uniform(start, end): Randomly generates a floating point number between the value of start and end

start: Starting value in the specified range, which would be included in the range.

end: Ending value in the specified range, which would be included in the range.

random.getrandbits(size): Generates an integer with **size** random bits

For example:

size = 4, it generates an integer in the range of 0 to 0b1111

size = 8, it generates an integer in the range of 0 to 0b11111111

random.randrange(start, end, step): Randomly generates a positive integer in the range from start to end and increment to step.

start: Starting value in the specified range, which would be included in the range

end: Ending value in the specified range, which would be included in the range.

step: An integer specifying the incrementation.

random.seed(sed): Specifies a random seed, usually being applied in conjunction with other random number generators

sed: Random seed, a starting point in generating random numbers.

random.choice(obj): Randomly generates an element from the object obj.

obj: list of elements

Project 5.2 Gradient Color Light

In the previous project, we have mastered the usage of RGB LED, but the random display of colors is rather stiff. This project will realize a fashionable light with soft color changes.

Component list and the circuit are exactly the same as the random color light.

Using a color model, the color changes from 0 to 255 as shown below.



In this code, the color model will be implemented and RGBLED will change colors along the model.

Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "05.2_GradientColorLight" and double click "GradientColorLight.py".

05.2_GradientColorLight

The following is the program code:

```

1  from machine import Pin, PWM
2  import time
3
4  pins=[40, 39, 38];
5
6  pwm0=PWM(Pin(pins[0]), 1000)
7  pwm1=PWM(Pin(pins[1]), 1000)
8  pwm2=PWM(Pin(pins[2]), 1000)
9
10 red=0          #red
11 green=0        #green
12 blue=0         #blue
13
14 def setColor():
15     pwm0.duty(red)
16     pwm1.duty(green)
17     pwm2.duty(blue)
18
19 def wheel(pos):
20     global red, green, blue
21     WheelPos=pos%1023
22     print(WheelPos)
23     if WheelPos<341:
24         red=1023-WheelPos*3
25         green=WheelPos*3

```

```

26         blue=0
27
28         elif WheelPos>=341 and WheelPos<682:
29             WheelPos -= 341;
30             red=0
31             green=1023-WheelPos*3
32             blue=WheelPos*3
33         else :
34             WheelPos -= 682;
35             red=WheelPos*3
36             green=0
37             blue=1023-WheelPos*3
38
39     try:
40         while True:
41             for i in range(0,1023):
42                 wheel(i)
43                 setColor()
44                 time.sleep_ms(15)
45     except:
46         pwm0.deinit()
47         pwm1.deinit()
48         pwm2.deinit()

```

The function wheel() is a color selection method of the color model introduced earlier. The value range of the parameter pos is 0-1023. The function will return a data containing the duty cycle values of 3 pins.

```

19 def wheel(pos):
20     global red, green, blue
21     WheelPos=pos%1023
22     print(WheelPos)
23     if WheelPos<341:
24         red=1023-WheelPos*3
25         green=WheelPos*3
26         blue=0
27
28     elif WheelPos>=341 and WheelPos<682:
29         WheelPos -= 341;
30         red=0
31         green=1023-WheelPos*3
32         blue=WheelPos*3
33     else :
34         WheelPos -= 682;
35         red=WheelPos*3
36         green=0
37         blue=1023-WheelPos*3

```






Chapter 6 LEDPixel

This chapter will help you learn to use a more convenient RGB LED lamp, which requires only one GPIO control and can be connected in infinite series in theory. Each LED can be controlled independently.

Project 6.1 LEDPixel

Learn the basic usage of LEDPixel and use it to flash red, green, blue and white.

Component List

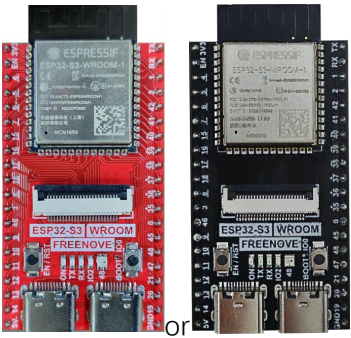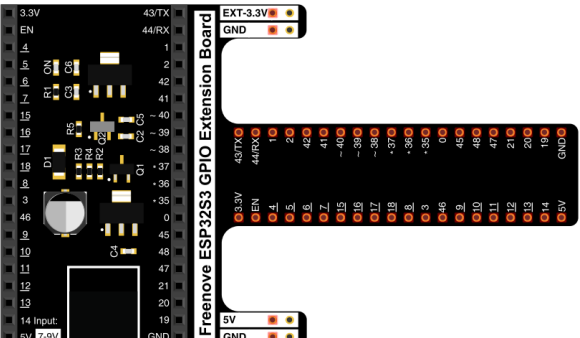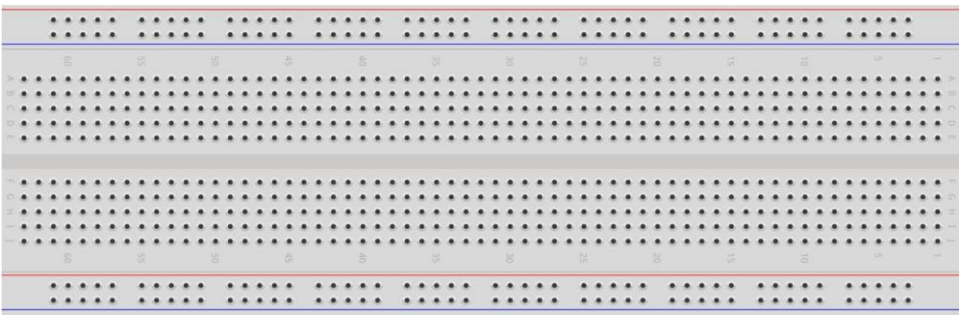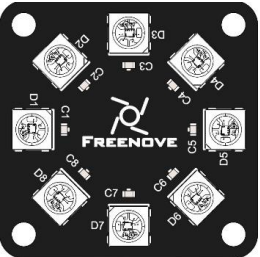ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Freenove 8 RGB LED Module x1 	Jumper F/M x3 


Related knowledge

Freenove 8 RGB LED Module


The Freenove 8 RGB LED Module is as below.

It consists of 8 WS2812, each of which requires only one pin to control and supports cascade. Each WS2812 has integrated 3 LEDs, red, green and blue respectively, and each of them supports 256-level brightness adjustment, which means that each WS2812 can emit $2^{24}=16,777,216$ different colors.

You can use only one data pin to control eight LEDs on the module. As shown below:

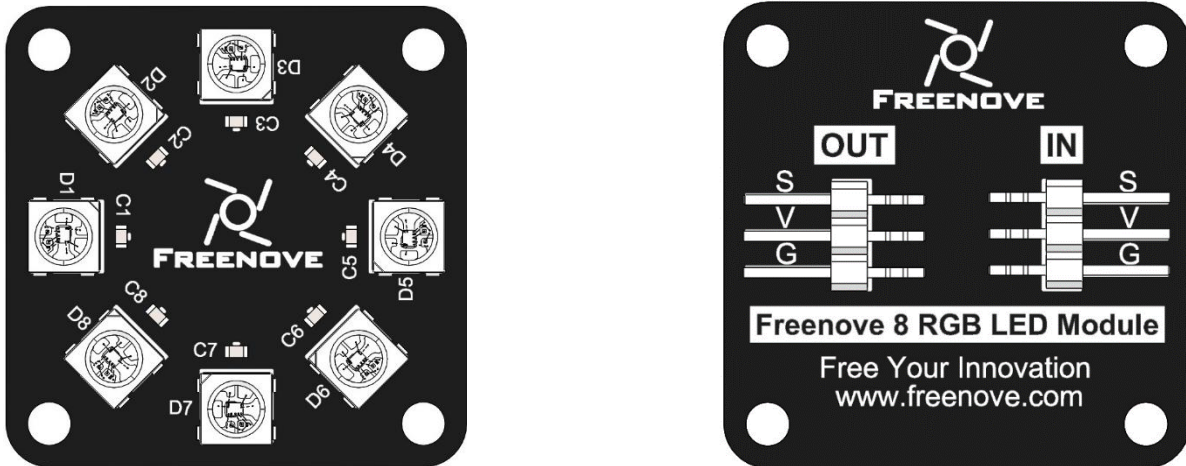

And you can also control many modules at the same time. Just connect OUT pin of one module to IN pin of another module. In this way, you can use one data pin to control 8, 16, 32 ... LEDs.

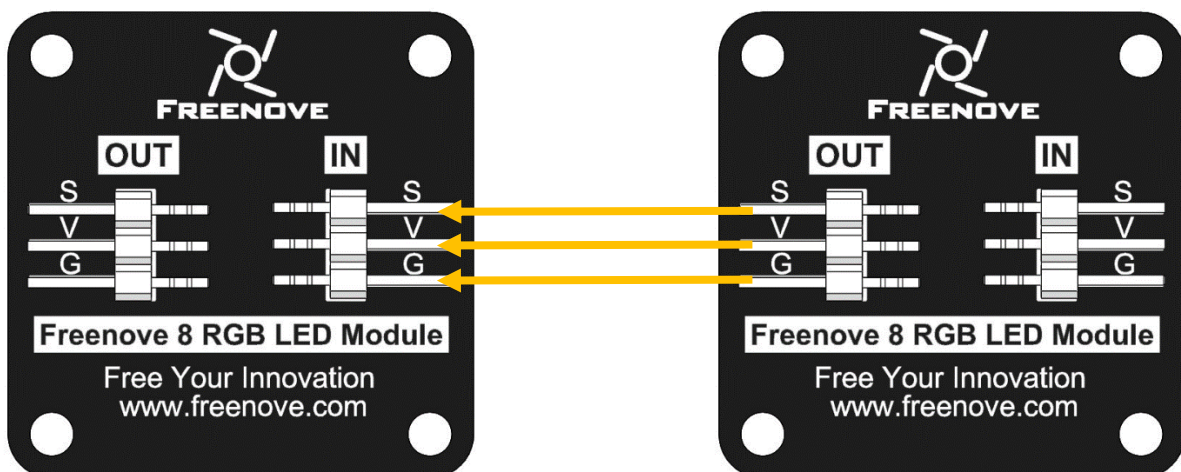


Pin description:

(IN)		(OUT)	
symbol	Function	symbol	Function
S	Input control signal	S	Output control signal
V	Power supply pin, +3.5V~5.5V	V	Power supply pin, +3.5V~5.5V
G	GND	G	GND


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Circuit

Schematic diagram

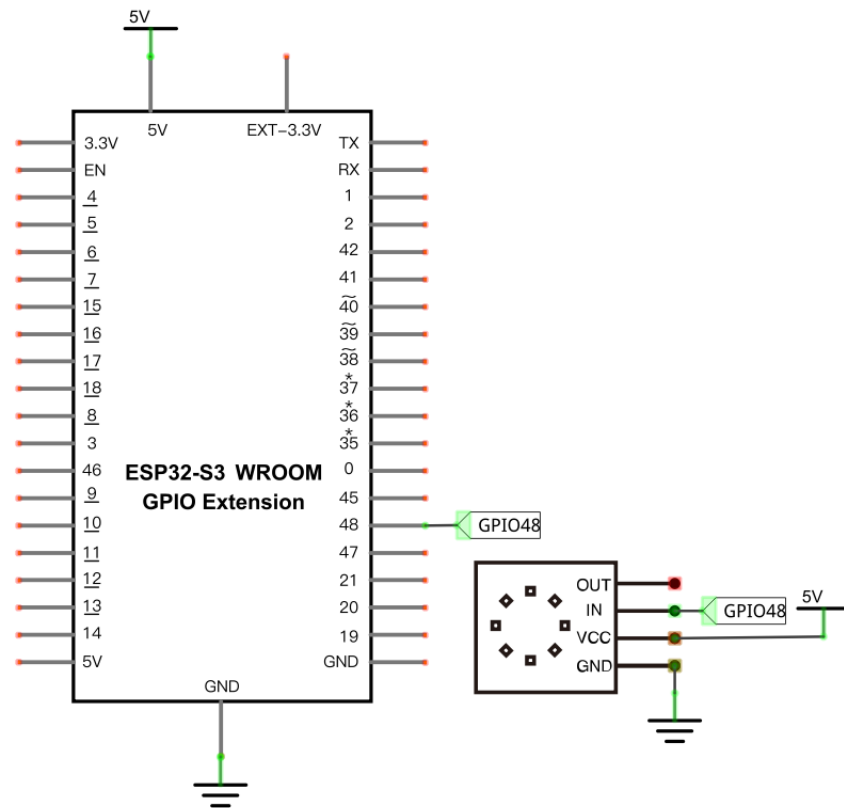

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

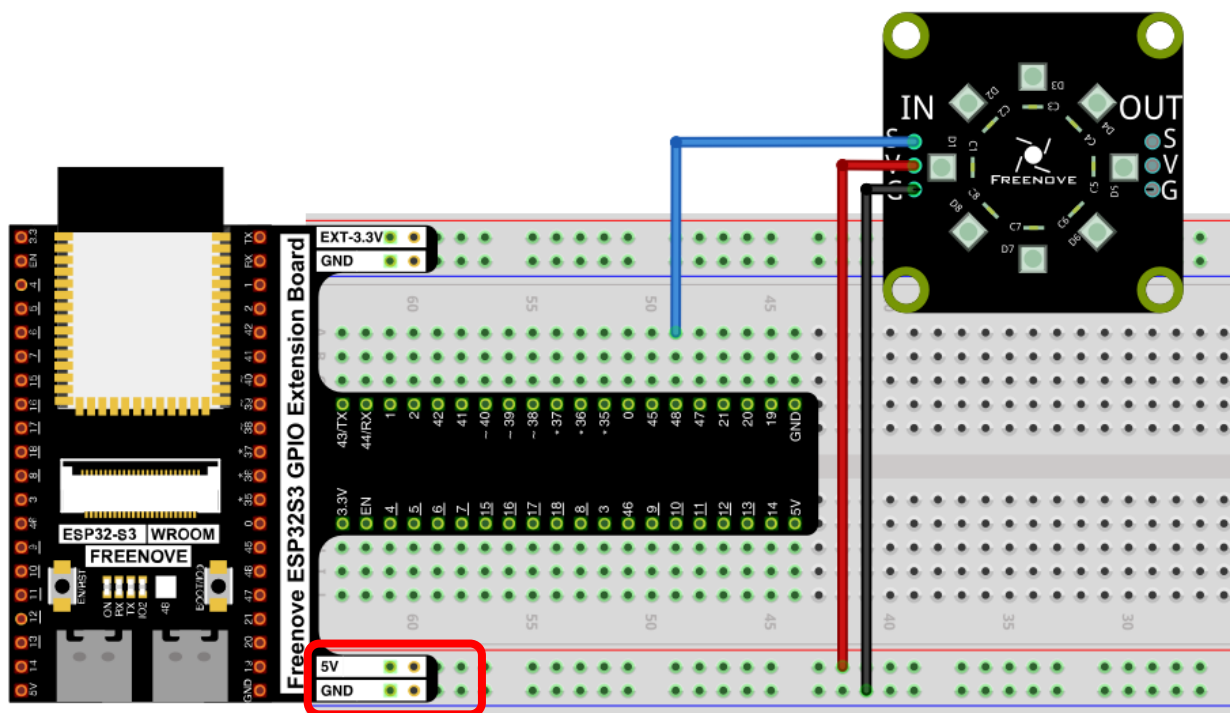


Any concerns? ✉ support@freenove.com

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “06.1_Neopixel” and double click “Neopixel.py”.

06.1_Neopixel

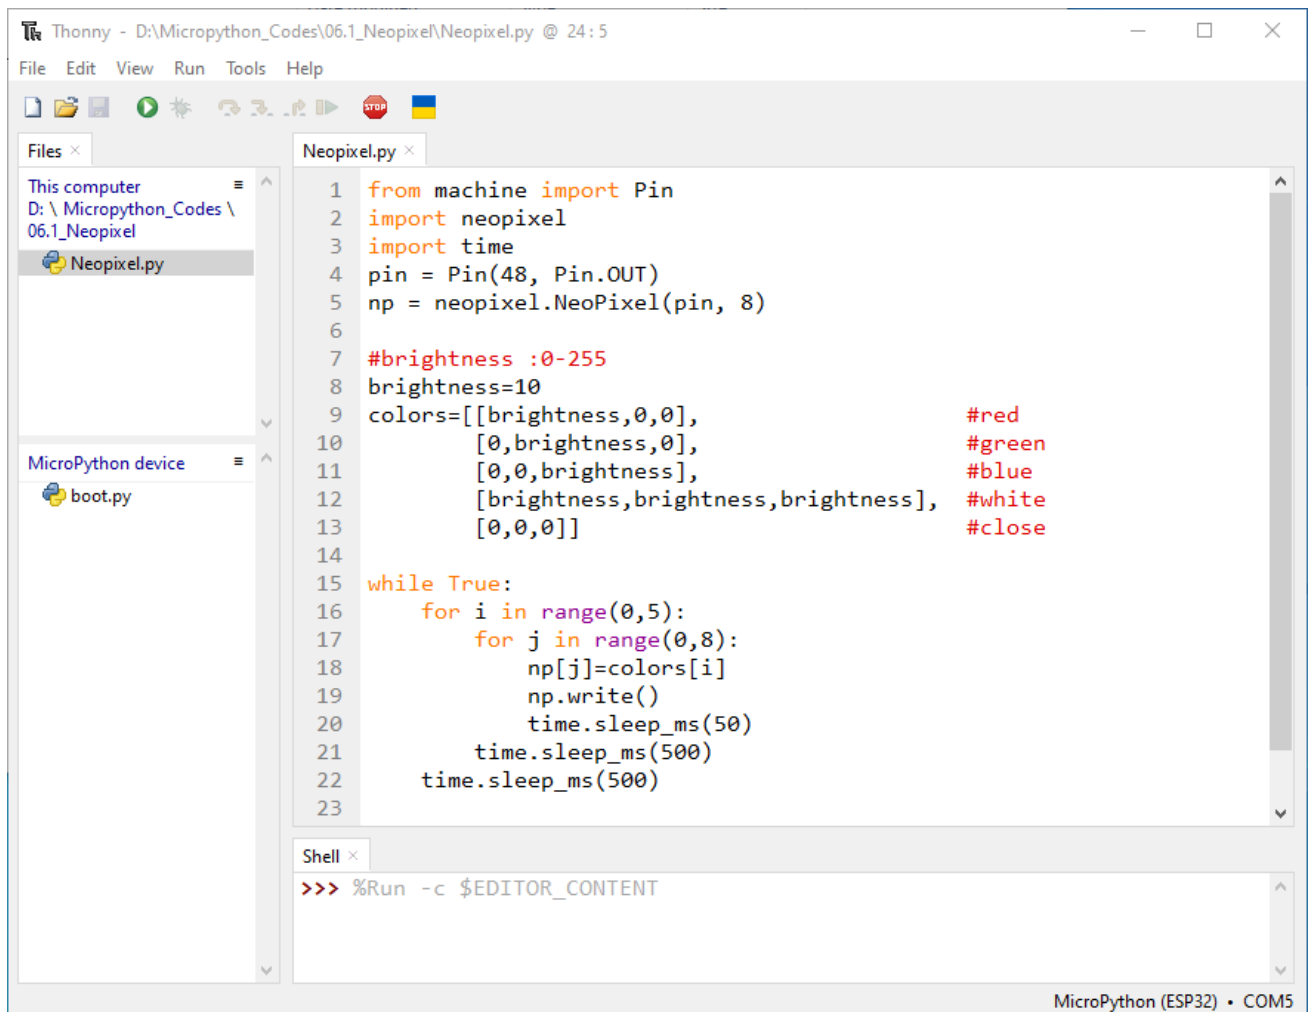

```

1  from machine import Pin
2  import neopixel
3  import time
4  pin = Pin(48, Pin.OUT)
5  np = neopixel.NeoPixel(pin, 8)
6
7  #brightness :0-255
8  brightness=10
9  colors=[[brightness,0,0],                #red
10         [0,brightness,0],                #green
11         [0,0,brightness],                #blue
12         [brightness,brightness,brightness], #white
13         [0,0,0]]                        #close
14
15  while True:
16      for i in range(0,5):
17          for j in range(0,8):
18              np[j]=colors[i]
19              np.write()
20              time.sleep_ms(50)
21              time.sleep_ms(500)
22              time.sleep_ms(500)
23

```

Shell


```

>>> %Run -c $EDITOR_CONTENT

```

MicroPython (ESP32) • COM5

Click “Run current script”, and Neopixel begins to light up in red, green, blue, white and black.

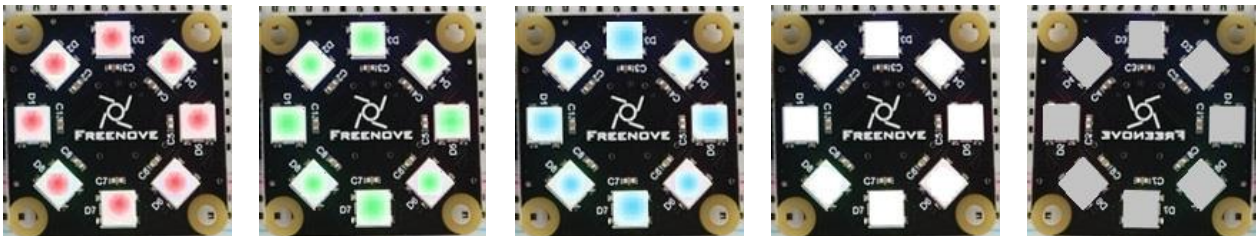

The following is the program code:

```

1  from machine import Pin
2  import neopixel
3  import time
4  pin = Pin(48, Pin.OUT)
5  np = neopixel.NeoPixel(pin, 8)
6
7  #brightness :0-255
8  brightness=10
9  colors=[[brightness,0,0],           #red
10         [0,brightness,0],          #green
11         [0,0,brightness],          #blue
12         [brightness,brightness,brightness], #white
13         [0,0,0]]                   #close
14
15  while True:
16      for i in range(0,5):
17          for j in range(0,8):
18              np[j]=colors[i]
19              np.write()
20              time.sleep_ms(50)
21              time.sleep_ms(500)
22              time.sleep_ms(500)

```

Import Pin, neopixel and time modules.

```

1  from machine import Pin
2  import neopixel
3  import time

```

Define the number of pin and LEDs connected to neopixel.

```

4  pin = Pin(48, Pin.OUT)
5  np = neopixel.NeoPixel(pin, 8)

```

Define the brightness of neopixel's LED and an array to store color.

```

7  #brightness :0-255
8  brightness=10
9  colors=[[brightness,0,0],           #red
10         [0,brightness,0],          #green
11         [0,0,brightness],          #blue
12         [brightness,brightness,brightness], #white
13         [0,0,0]]                   #close

```

Assign the color data to the array np and call function write() to send np array data to neopixel module.

```

18         np[j]=colors[i]
19         np.write()

```


Nest two for loops to make the module repeatedly display five states of red, green, blue, white and OFF.

```
15 while True:
16     for i in range(0,5):
17         for j in range(0,8):
18             np[j]=colors[i]
19             np.write()
20             time.sleep_ms(50)
21             time.sleep_ms(500)
22             time.sleep_ms(500)
```

Reference

Class neopixel

Before each use of **neopixel** module, please add the statement "**import neopixel**" to the top of Python file.

NeoPixel(pin, n): Define the number of output pins and LEDs of neopixel module

pin: Output pins

n: The number of LEDs.

NeoPixel.write(): Write data to LEDs.

Project 6.2 Rainbow Light

In the previous project, we have mastered the use of LEDPixel. This project will realize a slightly complicated rainbow light. The component list and the circuit are exactly the same as the project fashionable light.

Code

Continue to use the following color model to equalize the color distribution of the 8 leds and gradually change.



Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “06.2_Rainbow_light” and then double click “Rainbow_light.py”.

06.2_Rainbow_light

```

1 from machine import Pin
2 import neopixel
3 import time
4 pin = Pin(48, Pin.OUT)
5 np = neopixel.NeoPixel(pin, 8)
6
7 brightness=0.1          #brightness: 0-1.0
8 red=0                   #red
9 green=0                  #green
10 blue=0                  #blue
11
12 def wheel(pos):
13     global red,green,blue
14     WheelPos=pos%255
15     if WheelPos<85:
16         red=(255-WheelPos*3)
17         green=(WheelPos*3)
18         blue=0
19     elif WheelPos>=85 and WheelPos<170:
20         WheelPos -= 85;
21         red=0
22         green=(255-WheelPos*3)
23         blue=(WheelPos*3)

```

MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3
Type "help()" for more information.
>>>

Click “Run current script”, and the Freenove 8 RGB LED Strip displays different colors and the color changes gradually.



The following is the program code:

```
1  from machine import Pin
2  import neopixel
3  import time
4  pin = Pin(48, Pin.OUT)
5  np = neopixel.NeoPixel(pin, 8)
6
7  brightness=0.1          #brightness: 0 - 1.0
8  red=0                   #red
9  green=0                  #green
10 blue=0                   #blue
11
12 def wheel(pos):
13     global red, green, blue
14     WheelPos=pos%255
15     if WheelPos<85:
16         red=(255-WheelPos*3)
17         green=(WheelPos*3)
18         blue=0
19     elif WheelPos>=85 and WheelPos<170:
20         WheelPos -= 85;
21         red=0
22         green=(255-WheelPos*3)
23         blue=(WheelPos*3)
24     else :
25         WheelPos -= 170;
26         red=(WheelPos*3)
27         green=0
28         blue=(255-WheelPos*3)
29
30 while True:
```

```

31     for i in range(0,255):
32         for j in range(0,8):
33             wheel(i+j*255//8)
34             np[j]=(int(red*brightness),int(green*brightness),int(blue*brightness))
35             np.write()
36             time.sleep_ms(5)

```

Define a wheel() function to process the color data of neopixel module.

```

12 def wheel(pos):
13     global red, green, blue
14     WheelPos=pos%255
15     if WheelPos<85:
16         red=(255-WheelPos*3)
17         green=(WheelPos*3)
18         blue=0
19     elif WheelPos>=85 and WheelPos<170:
20         WheelPos -= 85;
21         red=0
22         green=(255-WheelPos*3)
23         blue=(WheelPos*3)
24     else :
25         WheelPos -= 170;
26         red=(WheelPos*3)
27         green=0
28         blue=(255-WheelPos*3)

```

Set the color brightness of the module.

```

7     brightness=0.1      #brightness: 0 - 1.0

```

Use a nesting of two for loops. The first for loop makes the value of i increase from 0 to 255 automatically and the wheel() function processes the value of i into data of the module's three colors; the second for loop writes the color data to the module.

```

31     for i in range(0,255):
32         for j in range(0,8):
33             wheel(i+j*255//8)
34             np[j]=(int(red*brightness),int(green*brightness),int(blue*brightness))
35             np.write()
36             time.sleep_ms(5)

```




Chapter 7 Buzzer

In this chapter, we will learn about buzzers that can make sounds.

Project 7.1 Doorbell

We will make this kind of doorbell: when the button is pressed, the buzzer sounds; and when the button is released, the buzzer stops sounding.

Component List

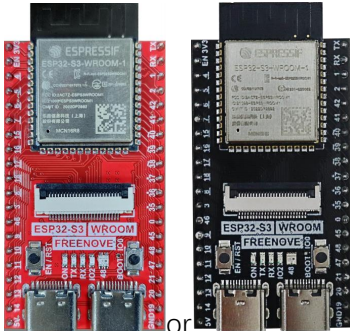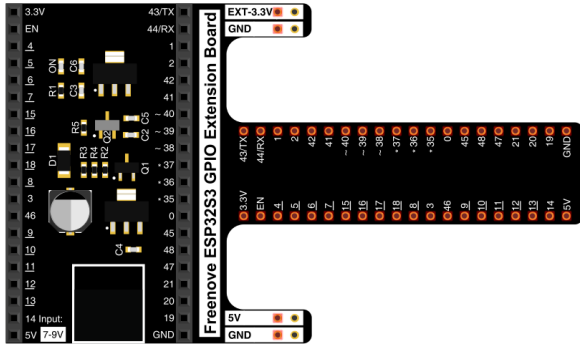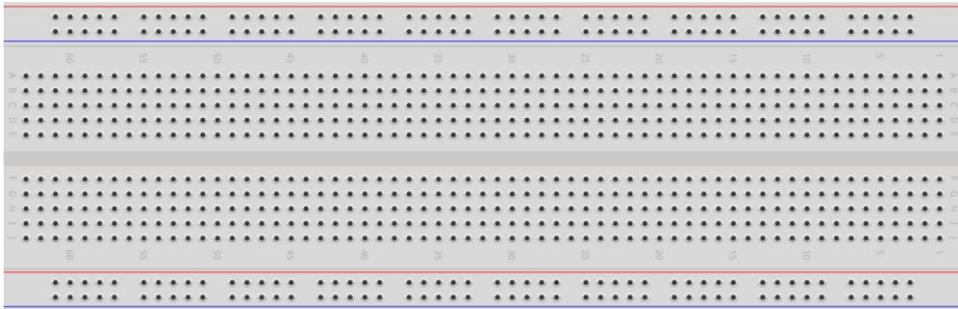
ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1		
				
Breadboard x1				
				
Jumper M/M x6				
				
NPN transistorx1 (S8050)	Active buzzer x1	Push button x1	Resistor 1kΩ x1	Resistor 10kΩ x2
				

Component knowledge


Buzzer

Buzzer is a sounding component, which is widely used in electronic devices such as calculator, electronic warning clock and alarm. Buzzer has two types: active and passive. Active buzzer has oscillator inside, which will sound as long as it is supplied with power. Passive buzzer requires external oscillator signal (generally use PWM with different frequency) to make a sound.

Active buzzer

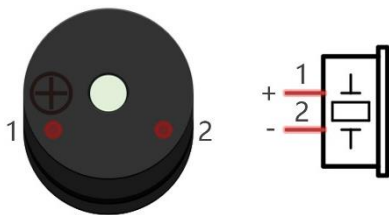

Passive buzzer

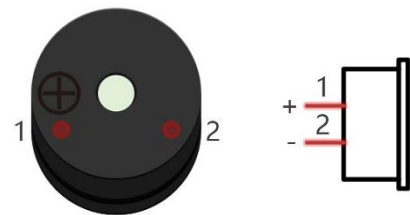

Active buzzer is easy to use. Generally, it can only make a specific frequency of sound. Passive buzzer requires an external circuit to make a sound, but it can be controlled to make a sound with different frequency. The resonant frequency of the passive buzzer is 2kHz, which means the passive buzzer is loudest when its resonant frequency is 2kHz.

Next, we will use an active buzzer to make a doorbell and a passive buzzer to make an alarm.

How to identify active and passive buzzer?

1. Usually, there is a label on the surface of active buzzer covering the vocal hole, but this is not an absolute judgment method.
2. Active buzzers are more complex than passive buzzers in their manufacture. There are many circuits and crystal oscillator elements inside active buzzers; all of this is usually protected with a waterproof coating (and a housing) exposing only its pins from the underside. On the other hand, passive buzzers do not have protective coatings on their underside. From the pin holes viewing of a passive buzzer, you can see the circuit board, coils, and a permanent magnet (all or any combination of these components depending on the model).

Active buzzer



Passive buzzer




Transistor


Because the buzzer requires such large current that GPIO of ESP32-S3 output capability cannot meet the requirement, a transistor of NPN type is needed here to amplify the current.

Transistor, the full name: semiconductor transistor, is a semiconductor device that controls current. Transistor can be used to amplify weak signal, or works as a switch. It has three electrodes(PINs): base (b), collector (c) and emitter (e). When there is current passing between "be", "ce" will allow several-fold current (transistor magnification) pass, at this point, transistor works in the amplifying area. When current between "be" exceeds a certain value, "ce" will not allow current to increase any longer, at this point, transistor works in the saturation area. Transistor has two types as shown below: PNP and NPN.

PNP transistor

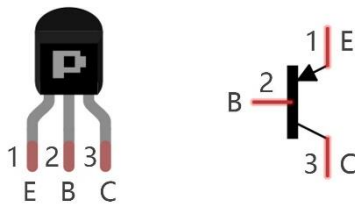

NPN transistor

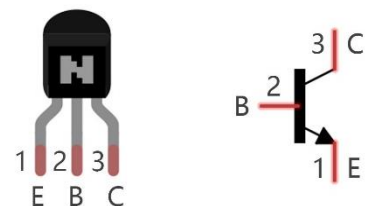


In our kit, the PNP transistor is marked with 8550, and the NPN transistor is marked with 8050.

Based on the transistor's characteristics, it is often used as a switch in digital circuits. As micro-controller's capacity to output current is very weak, we will use transistor to amplify current and drive large-current components.


When use NPN transistor to drive buzzer, we often adopt the following method. If GPIO outputs high level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GPIO outputs low level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

When use PNP transistor to drive buzzer, we often adopt the following method. If GPIO outputs low level, current will flow through R1, the transistor will get conducted, and the buzzer will sound. If GPIO outputs high level, no current flows through R1, the transistor will not be conducted, and buzzer will not sound.

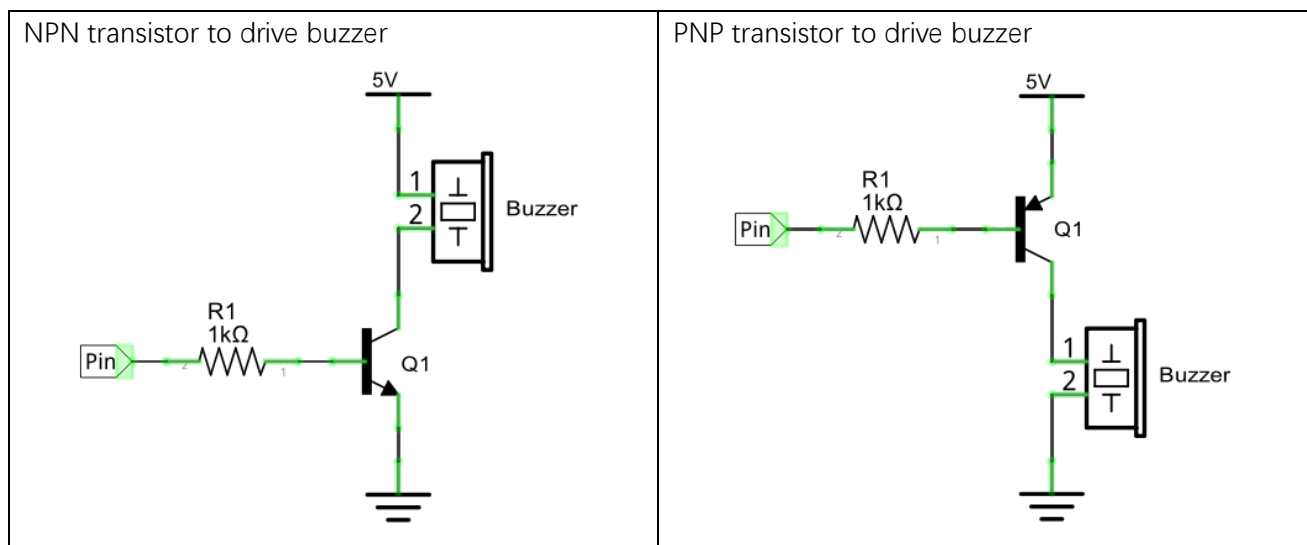


Circuit

Schematic diagram

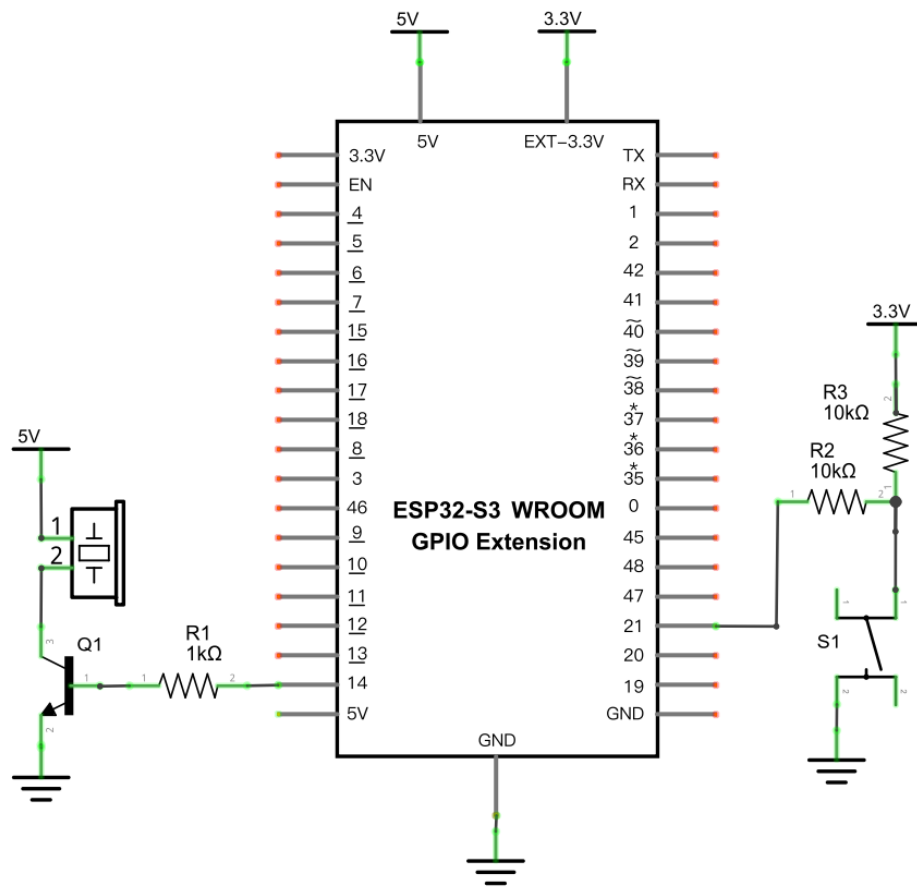

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

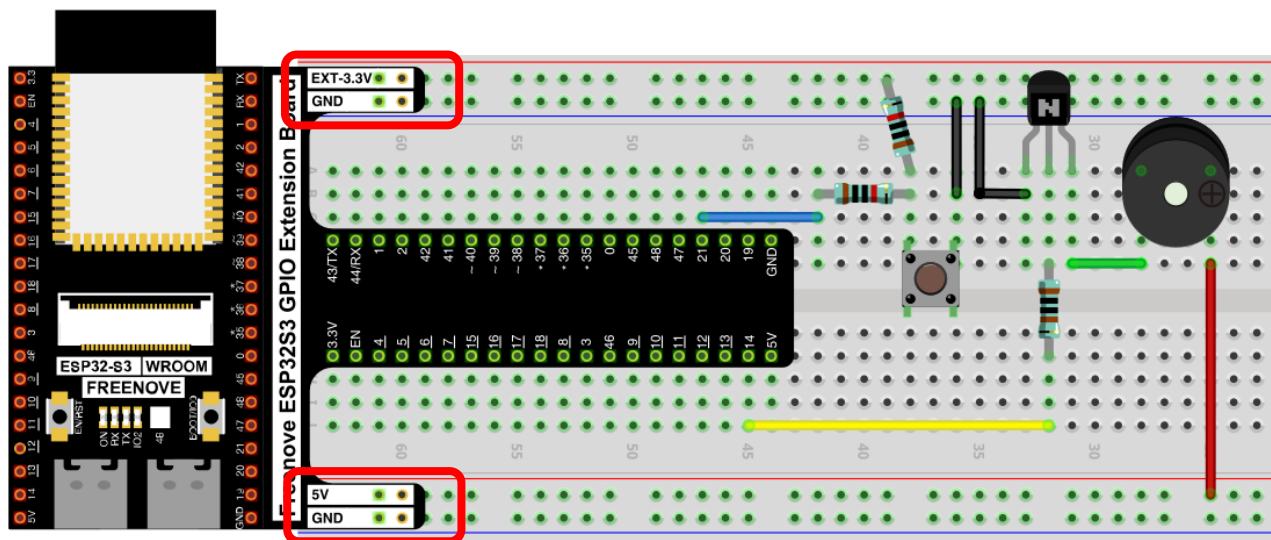

Note: in this circuit, the power supply for buzzer is 5V, and pull-up resistor of the button connected to the power 3.3V. The buzzer can work when connected to power 3.3V, but it will reduce the loudness.


Code

In this project, a buzzer will be controlled by a push button switch. When the button switch is pressed, the buzzer sounds and when the button is released, the buzzer stops. It is analogous to our earlier project that controlled an LED ON and OFF.


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “07.1_Doorbell” and double click “Doorbell.py”.

07.1_Doorbell

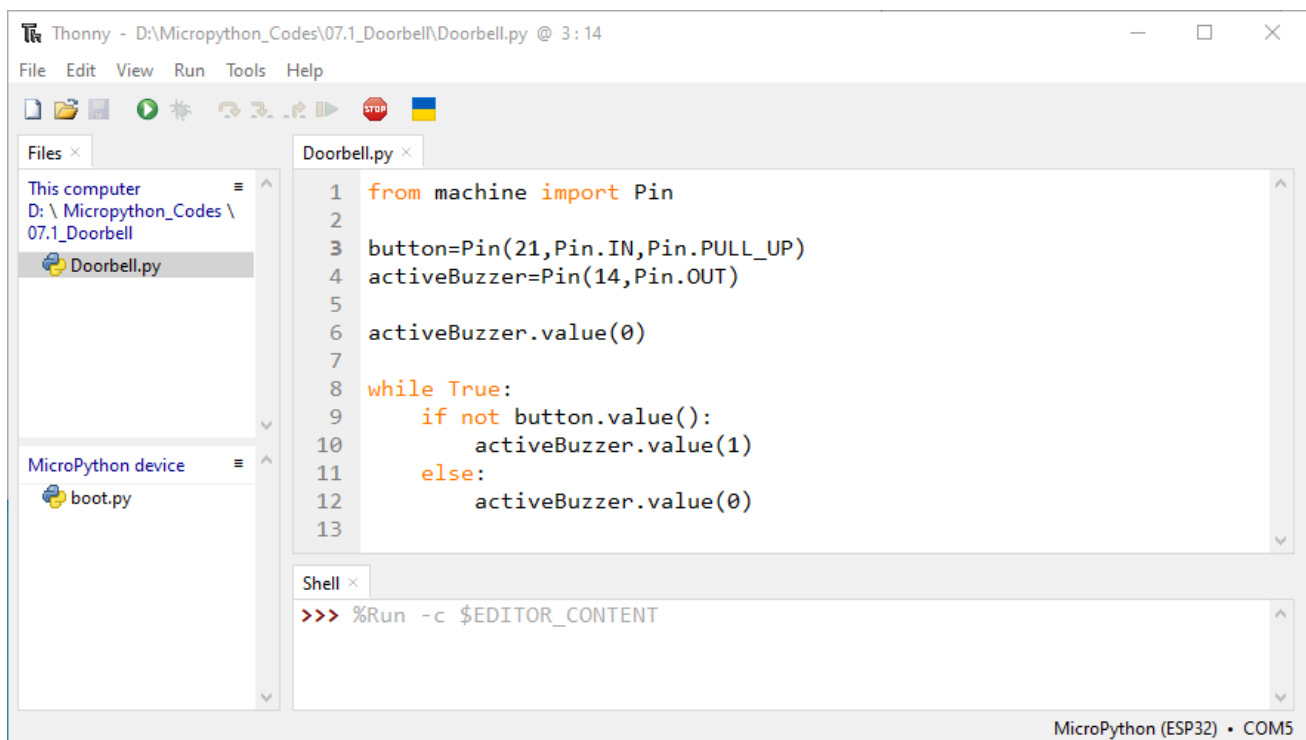

Click “Run current script”, press the push button switch and the buzzer will sound. Release the push button switch and the buzzer will stop.

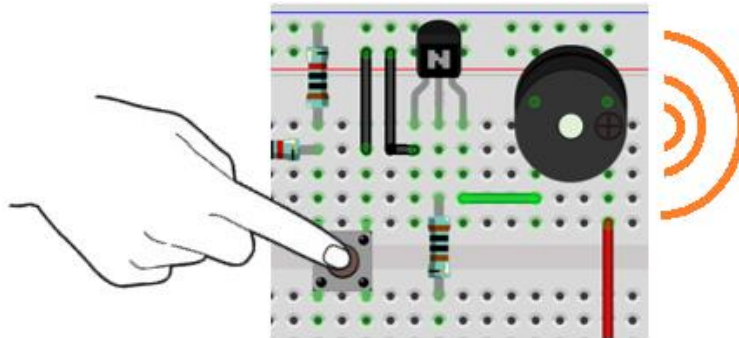

The following is the program code:

```
1  from machine import Pin
2
3  button=Pin(21,Pin.IN,Pin.PULL_UP)
4  activeBuzzer=Pin(14,Pin.OUT)
5
6  activeBuzzer.value(0)
7
8  while True:
9      if not button.value():
10         activeBuzzer.value(1)
11     else:
12         activeBuzzer.value(0)
```

The code is logically the same as using button to control LED.

Project 7.2 Alertor

Next, we will use a passive buzzer to make an alarm.


Component list and the circuit is similar to the last section. In the Doorbell circuit only the **active buzzer** needs to be **replaced** with a **passive buzzer**.

Code


In this project, the buzzer alarm is controlled by the button. Press the button, then buzzer sounds. If you release the button, the buzzer will stop sounding. In the logic, it is the same as using button to control LED. In the control method, passive buzzer requires PWM of certain frequency to sound.

Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "07.2_Alertor", and double click "Alertor.py".

07.2_Alertor

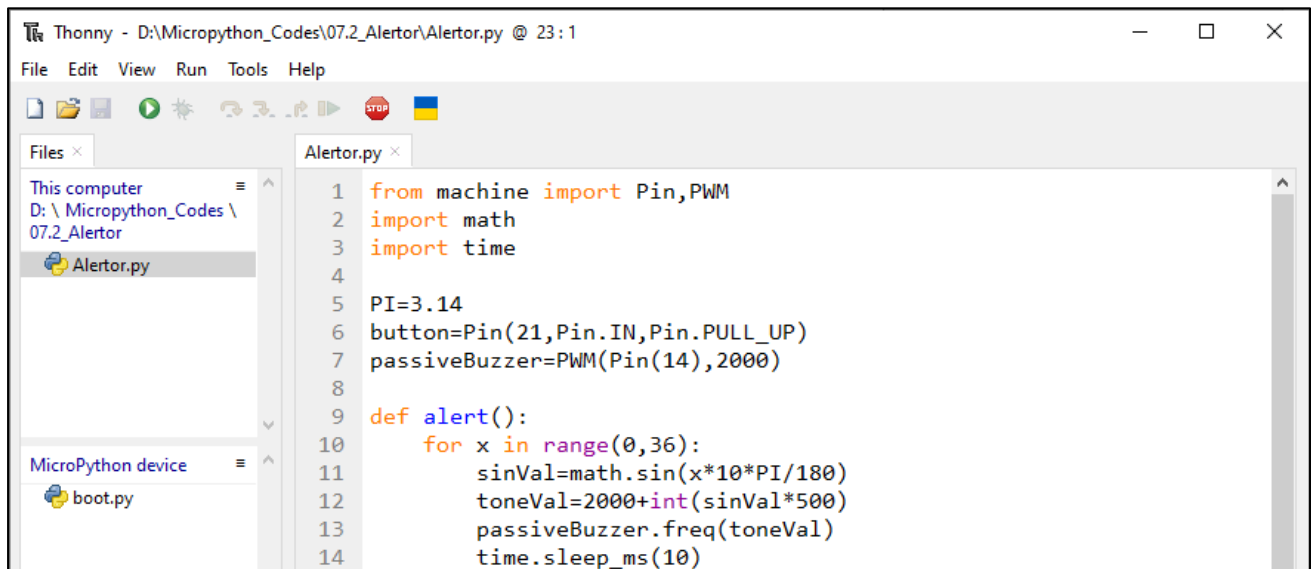

Click "Run current script", press the button, then alarm sounds. And when the button is release, the alarm will stop sounding.

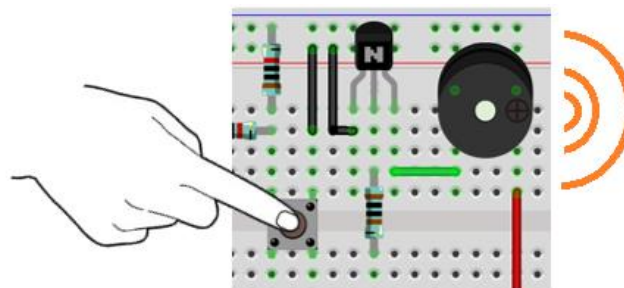

The following is the program code:

```

1 from machine import Pin,PWM
2 import math
3 import time
4
5 PI=3.14
  
```

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

```

6 button=Pin(21,Pin.IN,Pin.PULL_UP)
7 passiveBuzzer=PWM(Pin(14),2000)
8
9 def alert():
10     for x in range(0,36):
11         sinVal=math.sin(x*10*PI/180)
12         toneVal=2000+int(sinVal*500)
13         passiveBuzzer.freq(toneVal)
14         time.sleep_ms(10)
15     try:
16         while True:
17             if not button.value():
18                 passiveBuzzer.init()
19                 alert()
20             else:
21                 passiveBuzzer.deinit()
22     except:
23         passiveBuzzer.deinit()

```

Import PWM, Pin, math and time modules.

```

1 from machine import Pin,PWM
2 import math
3 import time

```

Define the pins of the button and passive buzzer.

```

5 PI=3.14
6 button=Pin(21,Pin.IN,Pin.PULL_UP)
7 passiveBuzzer=PWM(Pin(14),2000,512)

```

Call sin function of math module to generate the frequency data of the passive buzzer.

```

9 def alert():
10     for x in range(0,36):
11         sinVal=math.sin(x*10*PI/180)
12         toneVal=2000+int(sinVal*500)
13         passiveBuzzer.freq(toneVal)
14         time.sleep_ms(10)

```

When not using PWM, please turn it OFF in time.

```

22 passiveBuzzer.deinit()

```

Reference

```
double ledcWriteTone(uint8_t channel, double freq);
```

This updates the tone frequency value on the given channel.

This function has some bugs in the current version (V1.0.4): when the call interval is less than 20ms, the resulting PWM will have an exception. We will get in touch with the authorities to solve this problem and give solutions in the following two projects.




Chapter 8 Serial Communication

Serial Communication is a means of communication between different devices/devices. This section describes ESP32-S3's Serial Communication.

Project 8.1 Serial Print

This project uses ESP32-S3's serial communicator to send data to the computer and print it on the serial monitor.


Component List

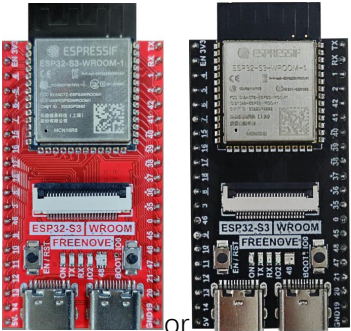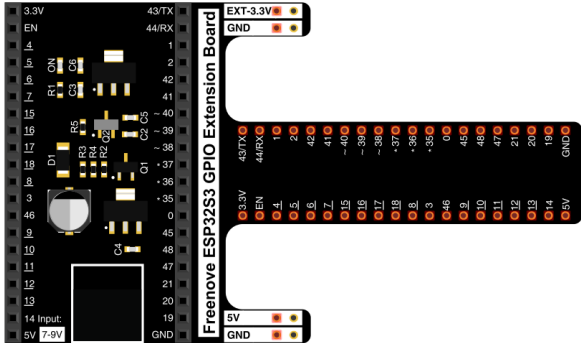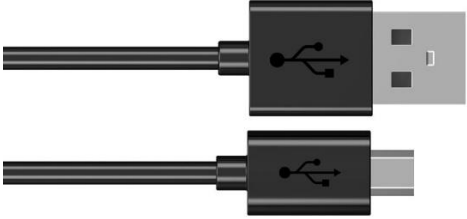ESP32-S3(N16R8)/ESP32-S3(N8R8)  or	GPIO Extension Board x1 
Micro USB Wire x1 	

Related knowledge

Serial communication

Serial communication generally refers to the Universal Asynchronous Receiver/Transmitter (UART), which is commonly used in electronic circuit communication. It has two communication lines, one is responsible for sending data (TX line) and the other for receiving data (RX line). The serial communication connections two devices use is as follows:

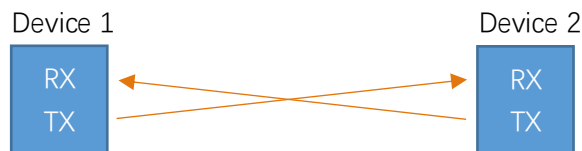

Before serial communication starts, the baud rate of both sides must be the same. Communication between devices can work only if the same baud rate is used. The baud rates commonly used is 9600 and 115200.


Serial port on ESP32S3

Freenove ESP32-S3 has integrated USB to serial transfer, so it could communicate with computer connecting to USB cable.



Circuit

Connect Freenove ESP32-S3 to the computer with USB cable.

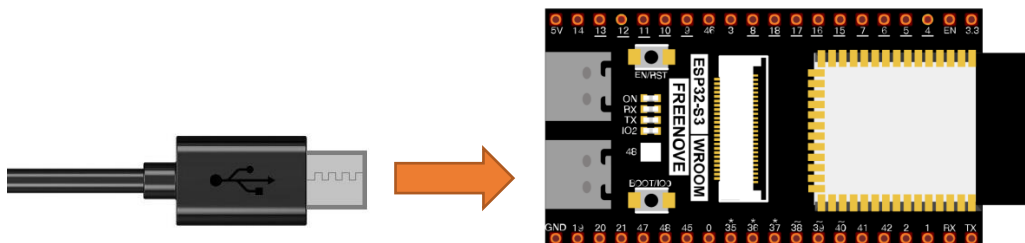


Code


Move the program folder "**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**" to disk(D) in advance with the path of "**D:/Micropython_Codes**".

Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "08.1_Serial_Print" and double "Serial_Print.py".

08.1_Serial_Print

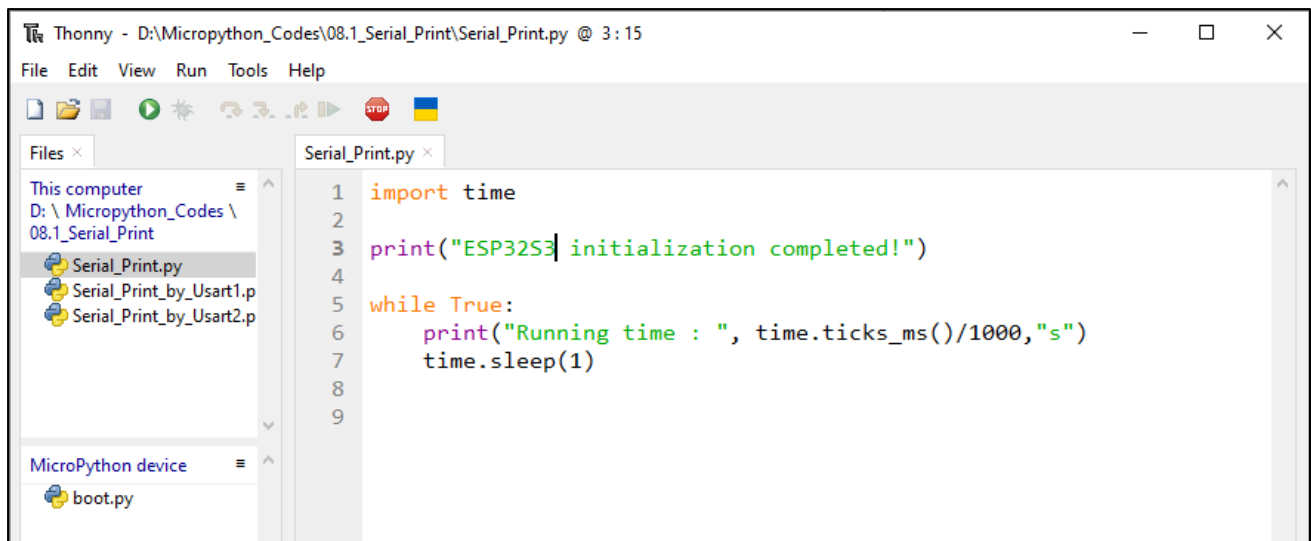


Click "Run current script" and observe the changes of "Shell", which will display the time when ESP32-S3 is powered on once per second.

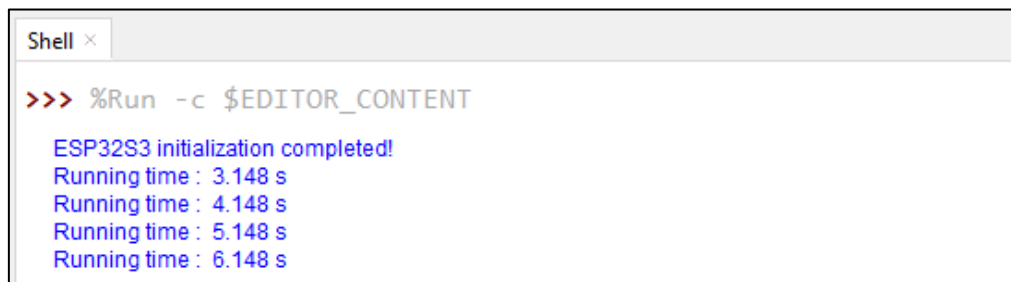

The following is the program code:

```
1 import time
2
3 print("ESP32-S3 initialization completed!")
4
5 while True:
6     print("Running time : ", time.ticks_ms()/1000, "s")
7     time.sleep(1)
```

ESP32-S3 has 3 serial ports, one of which is used as REPL, that is, Pin(43) and Pin(44) are occupied, and generally it is not recommended to be used as tx, rx. The other two serial ports can be configured simply by calling the UART module.

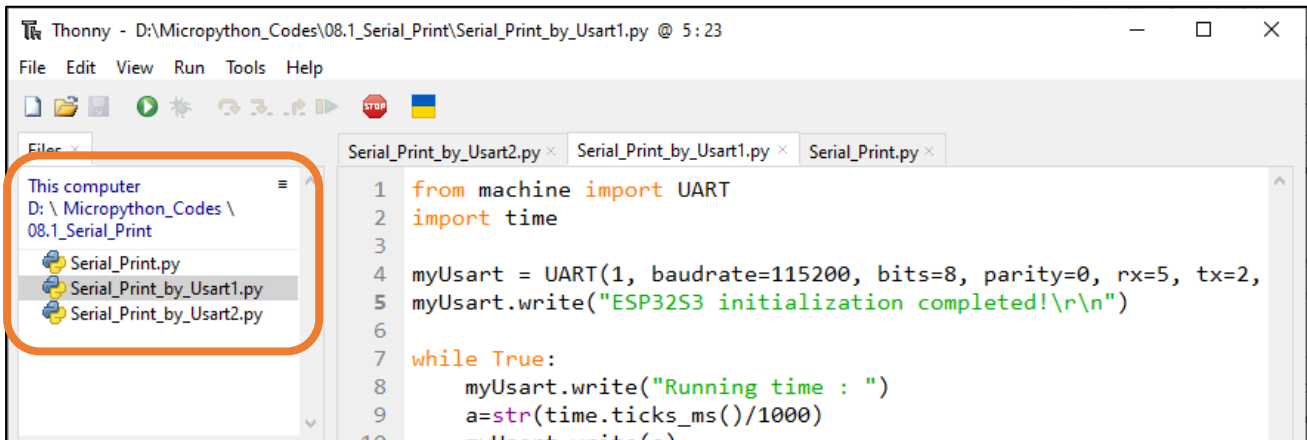

Reference

Class UART

Before each use of **UART** module, please add the statement “**from machine import UART**” to the top of python file.

UART(id, baudrate, bits, parity, rx, tx, stop, timeout): Define serial ports and configure parameters for them.

id: Serial Number. The available serial port number is 1 or 2

baudrate: Baud rate

bits: The number of each character.

parity: Check even or odd, with 0 for even checking and 1 for odd checking.

rx, tx: UAPT's reading and writing pins

Note: Pin(1) and Pin(3) are occupied and not recommend to be used as tx,rx.

stop: The number of stop bits, and the stop bit is 1 or 2.

timeout: timeout period (Unit: millisecond)

$0 < \text{timeout} \leq 0x7FFF\ FFFF$ (decimal: $0 < \text{timeout} \leq 2147483647$)

UART.init(baudrate, bits, parity, stop, tx, rx, rts, cts): Initialize serial ports

tx: writing pins of uart

rx: reading pins of uart

rts: rts pins of uart

cts: cts pins of uart

UART.read(nbytes): Read nbytes bytes

UART.read(): Read data

UART.write(buf): Write byte buffer to UART bus

UART.readline(): Read a line of data, ending with a newline character.

UART.readinto(buf): Read and write data into buffer.

UART.readinto(buf, nbytes): Read and write data into buffer.

UART.any(): Determine whether there is data in serial ports. If yes, return the number of bytes; Otherwise, return 0.

Project 8.2 Serial Read and Write


From last section, we use serial port on Freenove ESP32-S3 to send data to a computer, now we will use that to receive data from computer.

Component and circuit are the same as in the previous project.


Code

Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "08.2_Serial_Read_and_Write" and double click "Serial_Read_and_Write.py".

08.2_Serial_Read_and_Write

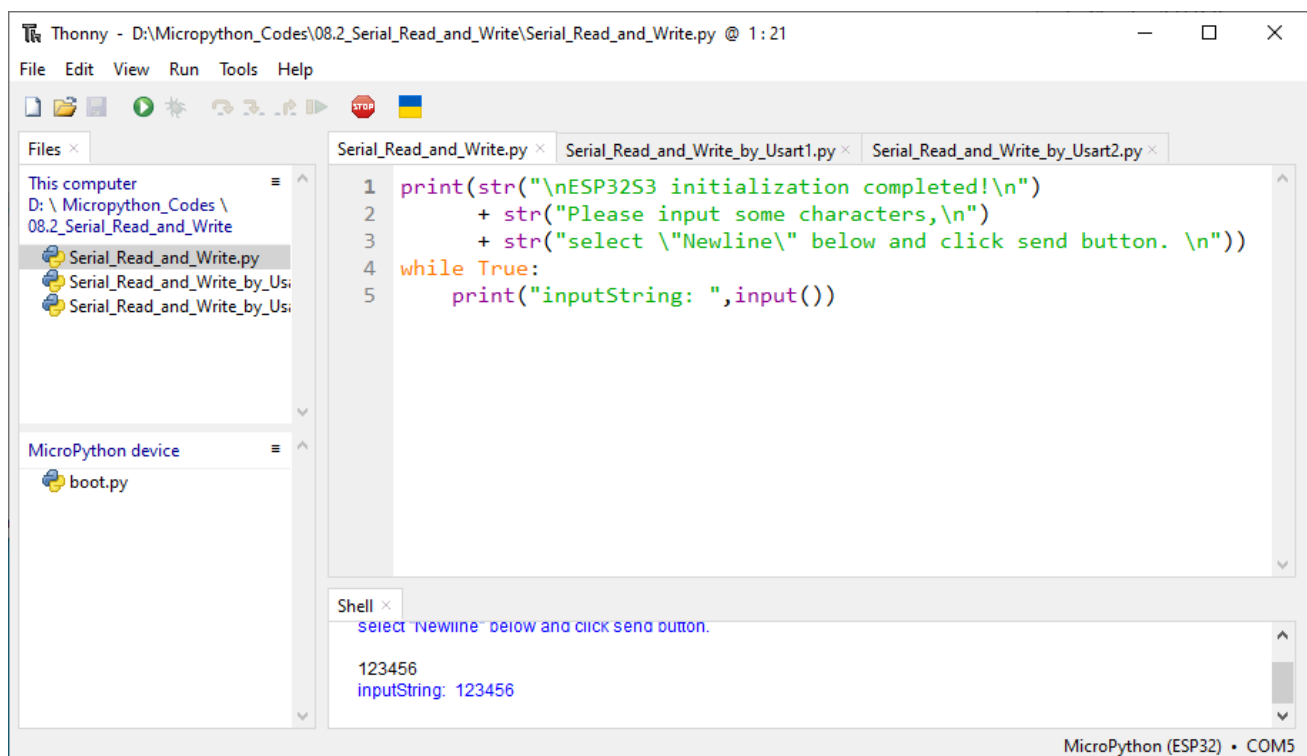

Click "Run current script" and ESP32-S3 will print out data at "Shell" and wait for users to enter any messages. Press Enter to end the input, and "Shell" will print out data that the user entered. If you want to use other serial ports, you can use other python files in the same directory.

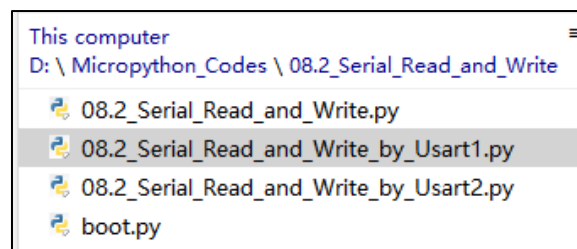





Chapter 9 AD Converter

Signals in life are divided into digital signals and analog signals. In this chapter, we will learn how to use ESP32-S3 to read analog signals.

Project 9.1 Read the Voltage of Potentiometer

In this project, we will use the ADC function of ESP32-S3 to read the voltage value of the potentiometer and print it through the serial port monitor.


Component List

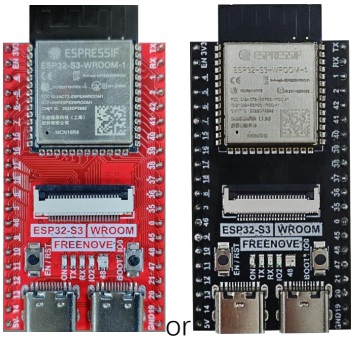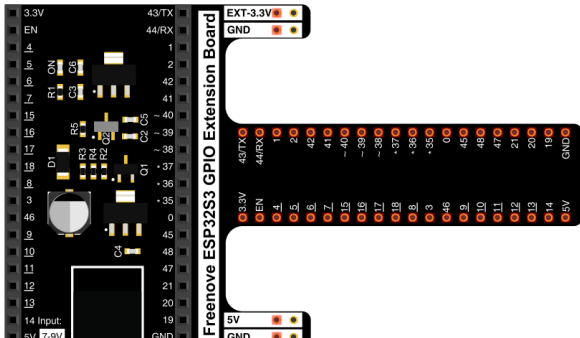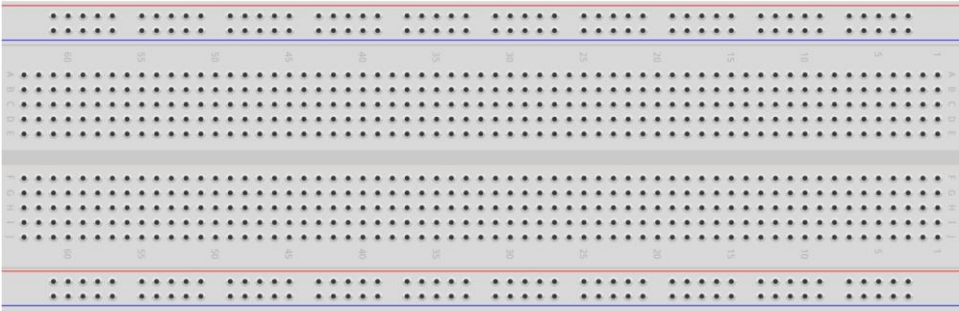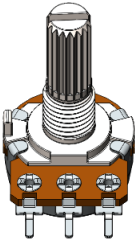ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Rotary potentiometer x1 	Jumper M/M x3 

Related knowledge

ADC

An ADC is an electronic integrated circuit used to convert analog signals such as voltages to digital or binary form consisting of 1s and 0s. The range of our ADC on ESP32-S3 is 12 bits, that means the resolution is $2^{12}=4096$, and it represents a range (at 3.3V) will be divided equally to 4096 parts. The range of analog values corresponds to ADC values. So the more bits the ADC has, the denser the partition of analog will be and the greater the precision of the resulting conversion.

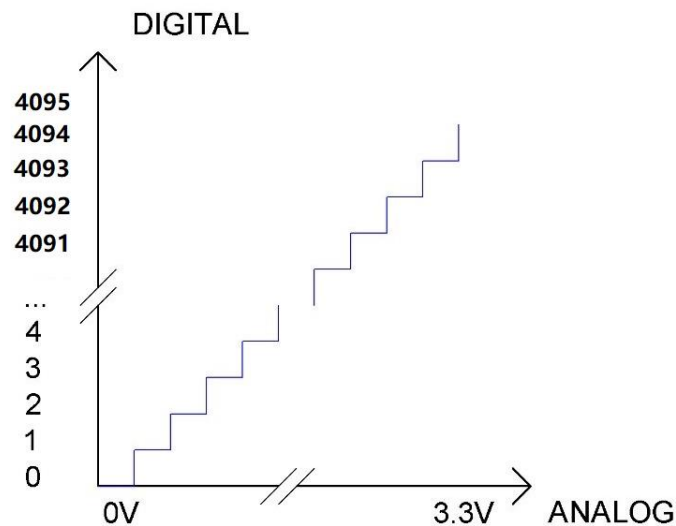

Subsection 1: the analog in range of $0V \sim 3.3/4095 V$ corresponds to digital 0;

Subsection 2: the analog in range of $3.3/4095 V \sim 2 \times 3.3/4095 V$ corresponds to digital 1;

...

The following analog will be divided accordingly.

The conversion formula is as follows:

$$ADC\ Value = \frac{Analog\ Voltage}{3.3} * 4095$$

ADC on ESP32S3


ESP32-S3 has two digital analog converters with successive approximations of 12-bit accuracy, and a total of 18 pins can be used to measure analog signals. GPIO pin sequence number and analog pin definition are shown in the following table.

GPIO number	ADC channel
GPIO 1	ADC1_CH0
GPIO 2	ADC1_CH1
GPIO 3	ADC1_CH2
GPIO 4	ADC1_CH3
GPIO 5	ADC1_CH4
GPIO 6	ADC1_CH5
GPIO 7	ADC1_CH6
GPIO 8	ADC1_CH7
GPIO 9	ADC1_CH8
GPIO 10	ADC1_CH9
GPIO 11	ADC2_CH0
GPIO 12	ADC2_CH1
GPIO 13	ADC2_CH2
GPIO 14	ADC2_CH3
GPIO 15	ADC2_CH4
GPIO 16	ADC2_CH5
GPIO 17	ADC2_CH6
GPIO 18	ADC2_CH7

Component knowledge


Potentiometer

A potentiometer is a three-terminal resistor. Unlike the resistors that we have used thus far in our project which have a fixed resistance value, the resistance value of a potentiometer can be adjusted. A potentiometer is often made up by a resistive substance (a wire or carbon element) and movable contact brush. When the brush moves along the resistor element, there will be a change in the resistance of the potentiometer's output side (3) (or change in the voltage of the circuit that is a part). The illustration below represents a linear sliding potentiometer and its electronic symbol on the right.

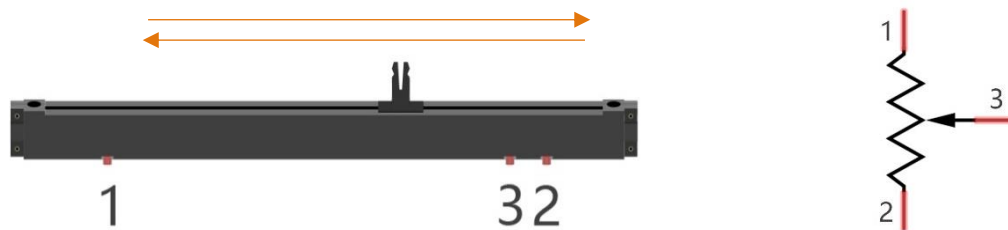


What between potentiometer pin 1 and pin 2 is the resistor body, and pins 3 is connected to brush. When brush moves from pin 1 to pin 2, the resistance between pin 1 and pin 3 will increase up to body resistance linearly, and the resistance between pin 2 and pin 3 will decrease down to 0 linearly.

In the circuit. The both sides of resistance body are often connected to the positive and negative electrode of the power. When you slide the brush pin 3, you can get a certain voltage in the range of the power supply.

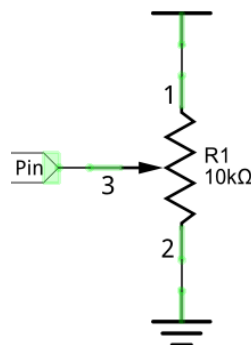


Rotary potentiometer

Rotary potentiometer and linear potentiometer have similar function; their only difference is: the resistance is adjusted by rotating the potentiometer.

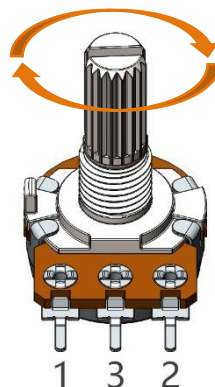


Circuit

Schematic diagram

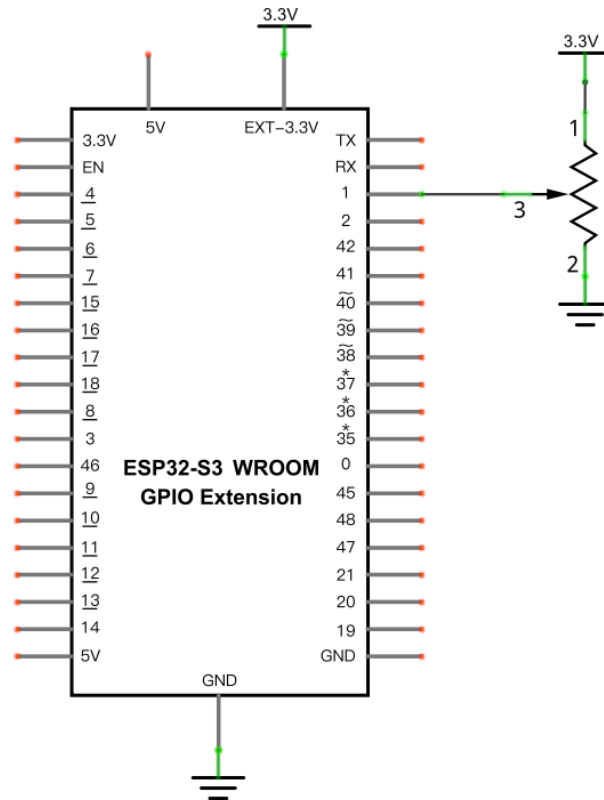

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

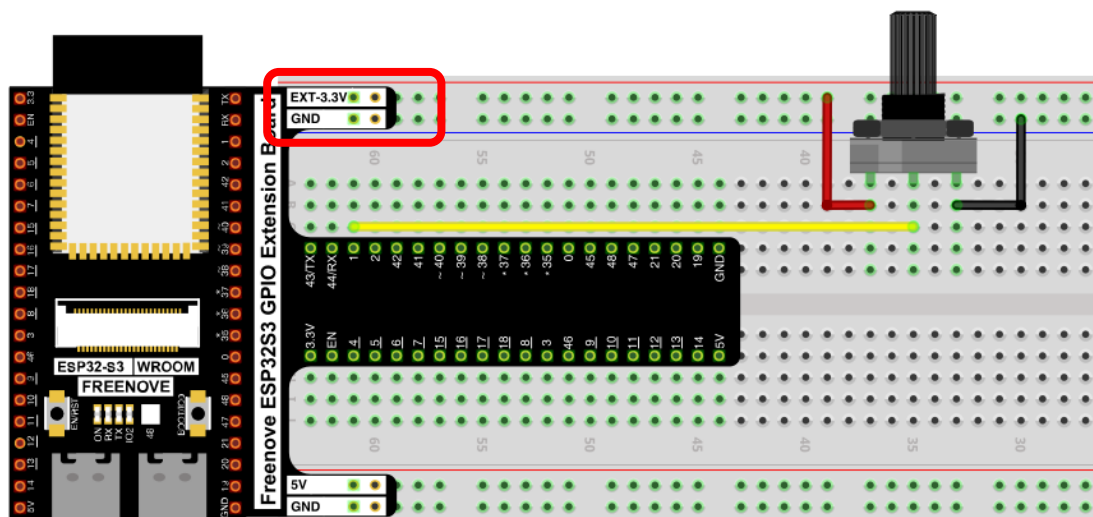


Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “09.1_AnalogRead” and then click “AnalogRead.py”.

09.1_AnalogRead

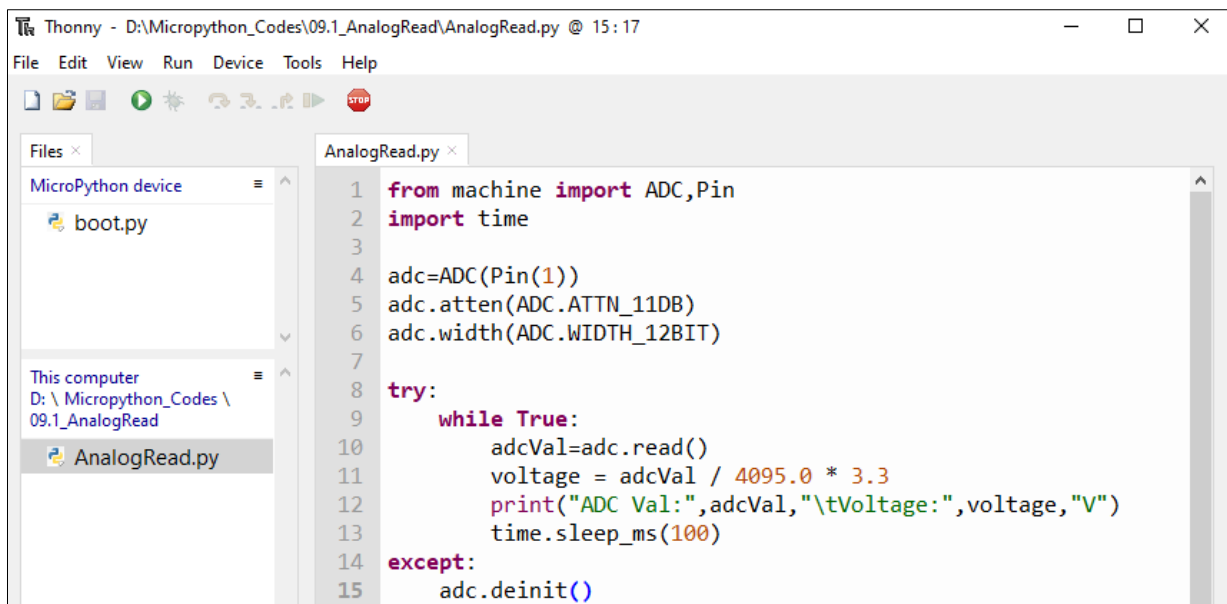

Click “Run current script” and observe the message printed in “Shell”.

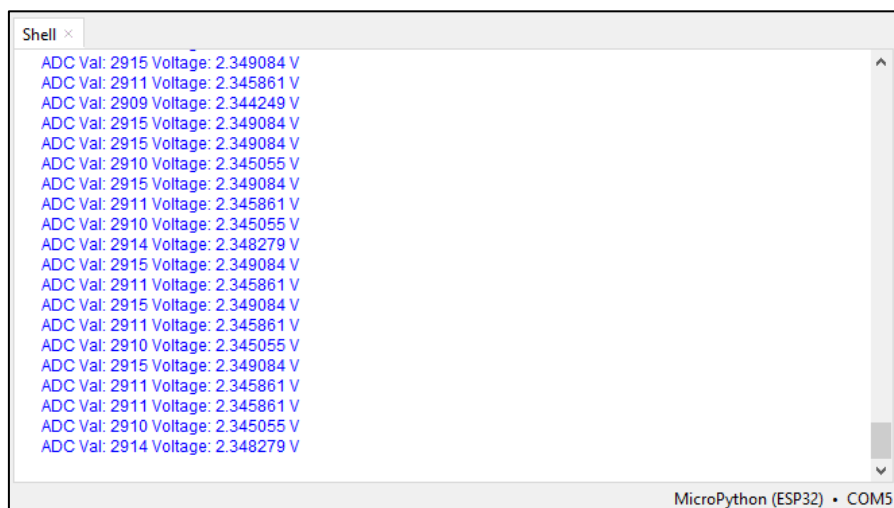

The following is the code:

```

1 from machine import ADC, Pin
2 import time
3
4 adc=ADC(Pin(1))
5 adc.atten(ADC.ATTN_11DB)
6 adc.width(ADC.WIDTH_12BIT)
  
```

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

```

7
8     try:
9         while True:
10             adcVal=adc.read()
11             voltage = adcVal / 4095.0 * 3.3
12             print("ADC Val:",adcVal,"\tVoltage:",voltage,"V")
13             time.sleep_ms(100)
14     except:
15         adc.deinit()

```

Import Pin, ADC modules.

```

1     from machine import ADC, Pin
2     import time

```

Turn on and configure the ADC with the range of 0-3.3V and the data width of 12-bit data width.

```

4     adc=ADC(Pin(1))
5     adc.atten(ADC.ATTN_11DB)
6     adc.width(ADC.WIDTH_12BIT)

```

Read ADC value once every 100 milliseconds, convert ADC value and print these data to "Shell".

```

9         while True:
10             adcVal=adc.read()
11             voltage = adcVal / 4095.0 * 3.3
12             print("ADC Val:",adcVal,"\tVoltage:",voltage,"V")
13             time.sleep_ms(100)

```

Reference

Class ADC

Before each use of ACD module, please add the statement **"from machine import ADC"** to the top of the python file.

machine.ADC(pin): Create an ADC object associated with the given pin.

pin: Available pins are: Pin(1-18)。

ADC.read(): Read ADC and return the value.

ADC.atten(db): Set attenuation ration (that is, the full range voltage, such as the voltage of 11db full range is 3.3V)

db: attenuation ratio

ADC.ATTIN_0DB —full range of 1.2V

ADC.ATTN_2_5_DB —full range of 1.5V

ADC.ATTN_6DB —full range of 2.0 V

ADC.ATTN_11DB —full range of 3.3V

ADC.width(bit): Set data width.

bit: data bit

ADC.WIDTH_9BIT —9 data width

ADC.WIDTH_10BIT — 10 data width

ADC.WIDTH_11BIT — 11 data width

ADC.WIDTH_12BIT — 12 data width





Chapter 10 Potentiometer & LED

We have already learned about the use of ADC and PWM. In this chapter, we will learn how to use a potentiometer to control the brightness of LED.

Project 10.1 Soft Light


In this project, we will make a soft light. We will use an ADC Module to read ADC values of a potentiometer and map it to duty cycle of the PWM used to control the brightness of a LED. Then you can change the brightness of a LED by adjusting the potentiometer.

 Component List

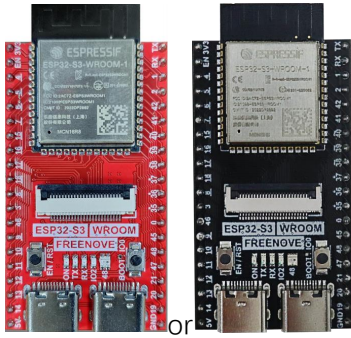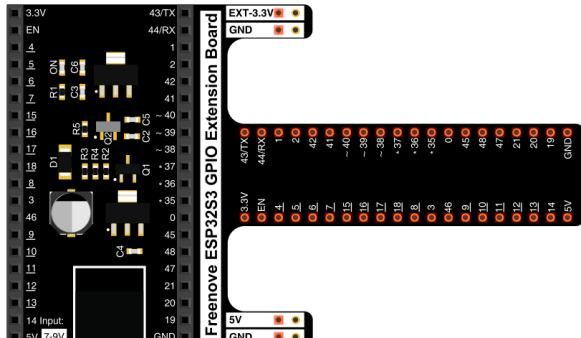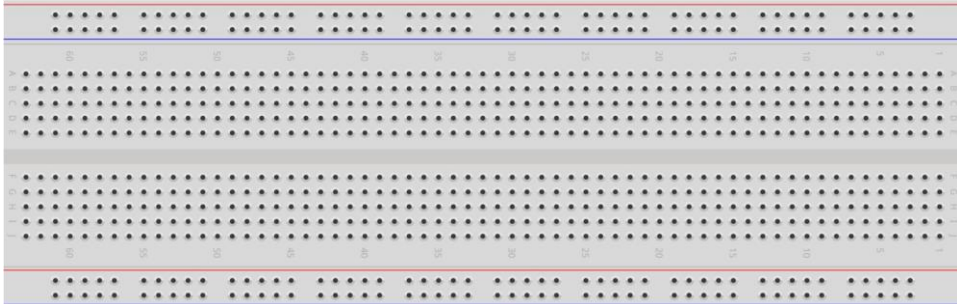
ESP32-S3(N16R8)/ESP32-S3(N8R8) 		GPIO Extension Board x1 	
Breadboard x1 			
Rotary potentiometer x1 	Resistor 220Ω x1 	LED x1 	Jumper M/M x5 

Circuit

Schematic diagram

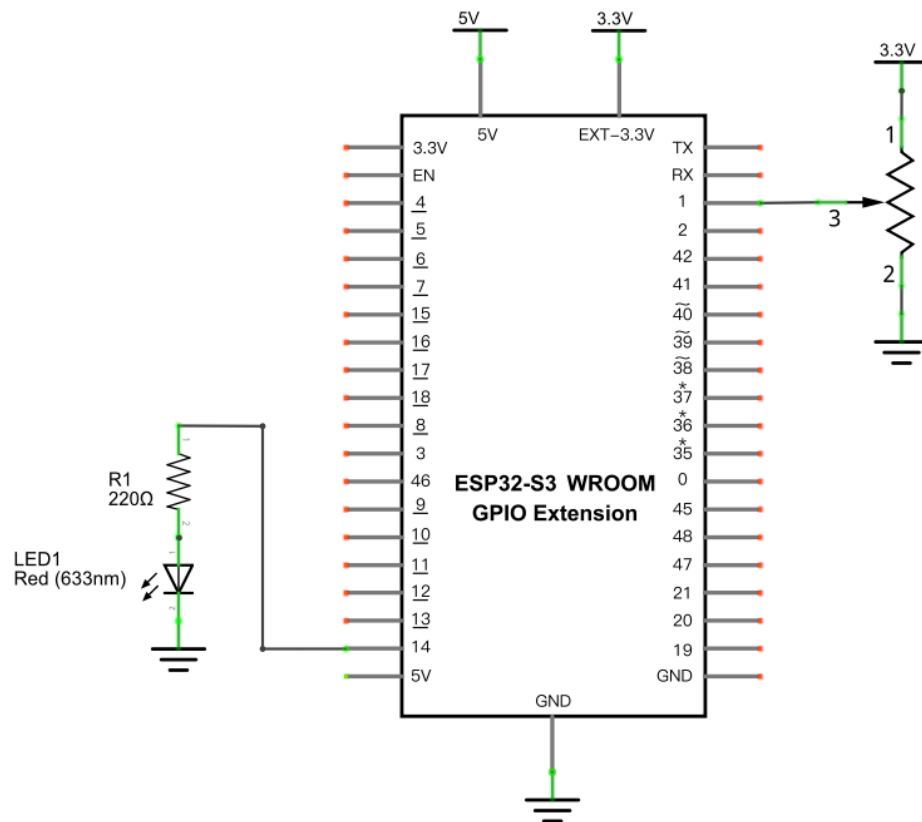

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

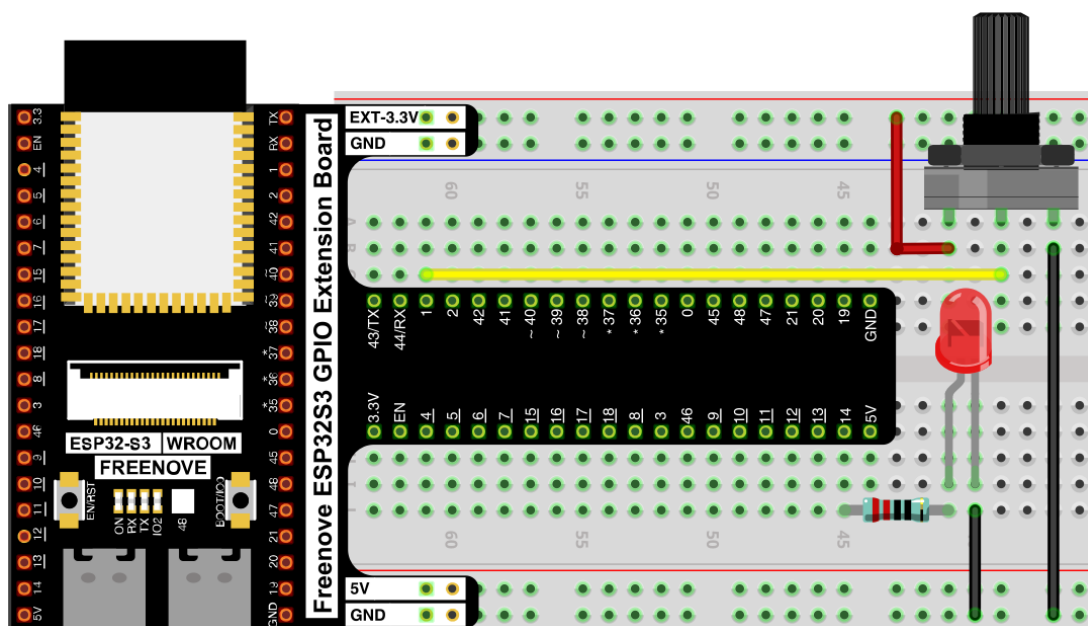


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “10.1_Soft_LED” and double click “Soft_LED.py”.

10.1_Soft_LED

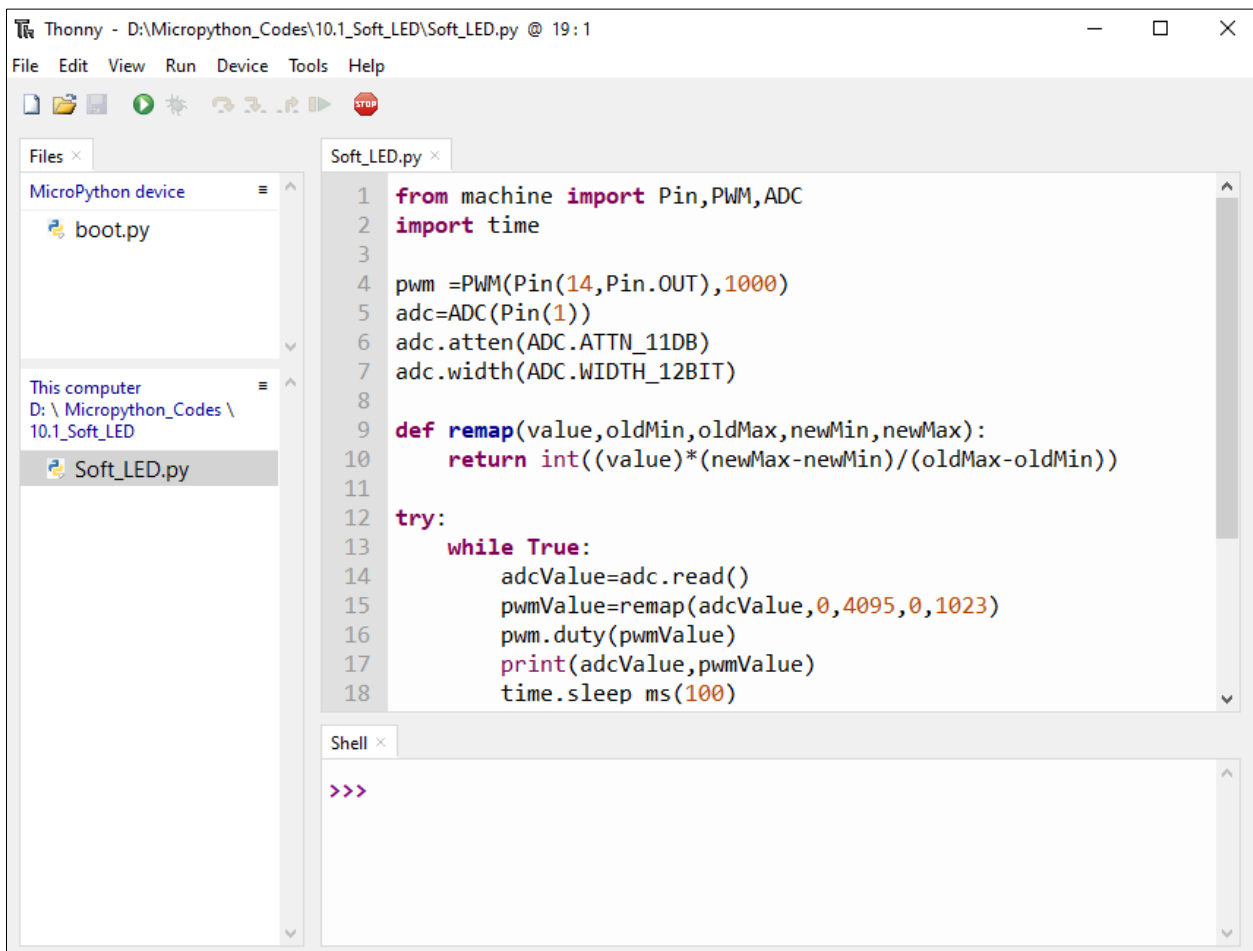

Click “Run current script”. Rotate the handle of potentiometer and the brightness of LED will change correspondingly.

The following is the code:

```

1 from machine import Pin, PWM, ADC
2 import time
3
4 pwm =PWM(Pin(14,Pin.OUT),1000)
5 adc=ADC(Pin(1))
6 adc.atten(ADC.ATTN_11DB)
7 adc.width(ADC.WIDTH_12BIT)
8
9 def remap(value,oldMin,oldMax,newMin,newMax):
10     return int((value)*(newMax-newMin)/(oldMax-oldMin))

```

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)





```
11
12 try:
13     while True:
14         adcValue=adc.read()
15         pwmValue=remap(adcValue, 0, 4095, 0, 1023)
16         pwm.duty(pwmValue)
17         print(adcValue, pwmValue)
18         time.sleep_ms(100)
19 except:
20     adc.deinit()
21     pwm.deinit()
```

In the code, read the ADC value of the potentiometer. The ADC value range is 0-4095. However, the default input range of the duty() function is 0-1023. Therefore, we need to write a remap() function to map the read ADC value to a value that conforms to the input range of the duty() function.

Project 10.2 Soft Colorful Light


In this project, 3 potentiometers are used to control the RGB LED and in principle it is the same as the Soft Light project. Namely, read the voltage value of the potentiometer and then convert it to PWM used to control LED brightness. Difference is that the original project only controlled one LED, but this project required (3) RGB LEDs.

Component List

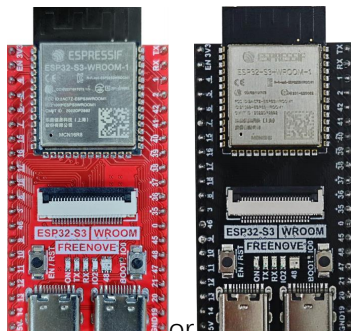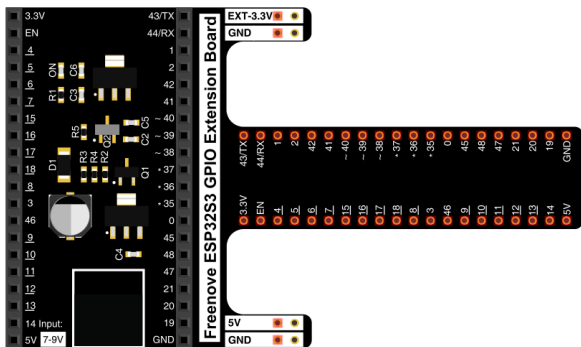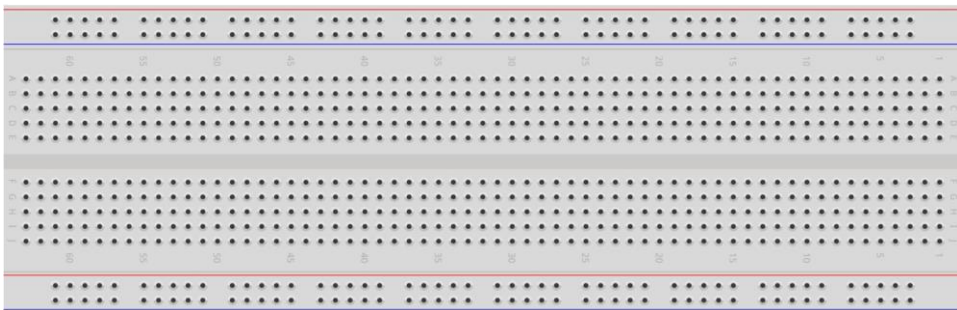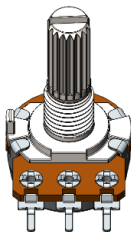
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 		
Breadboard x1 			
Rotary potentiometer x3 	Resistor 220Ω x3 	RGBLED x1 	Jumper M/M x13 

Circuit

Schematic diagram

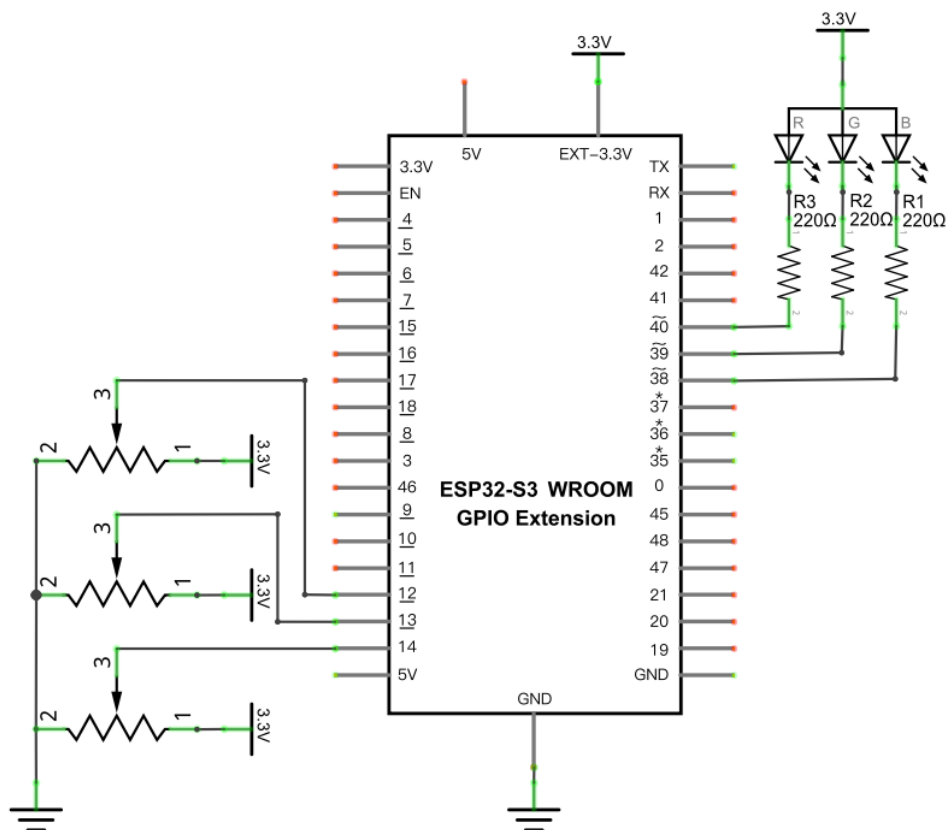


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

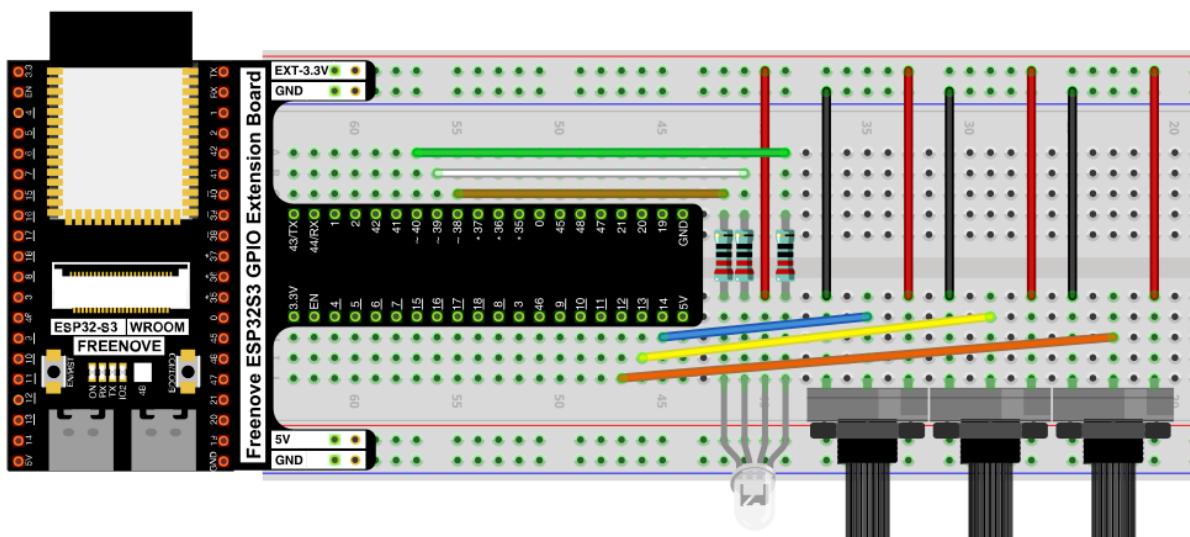

Code

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “10.2_Soft_Colorful_Light” and double click “Soft_Colorful_Light.py”.

10.2_Soft_Colorful_Light

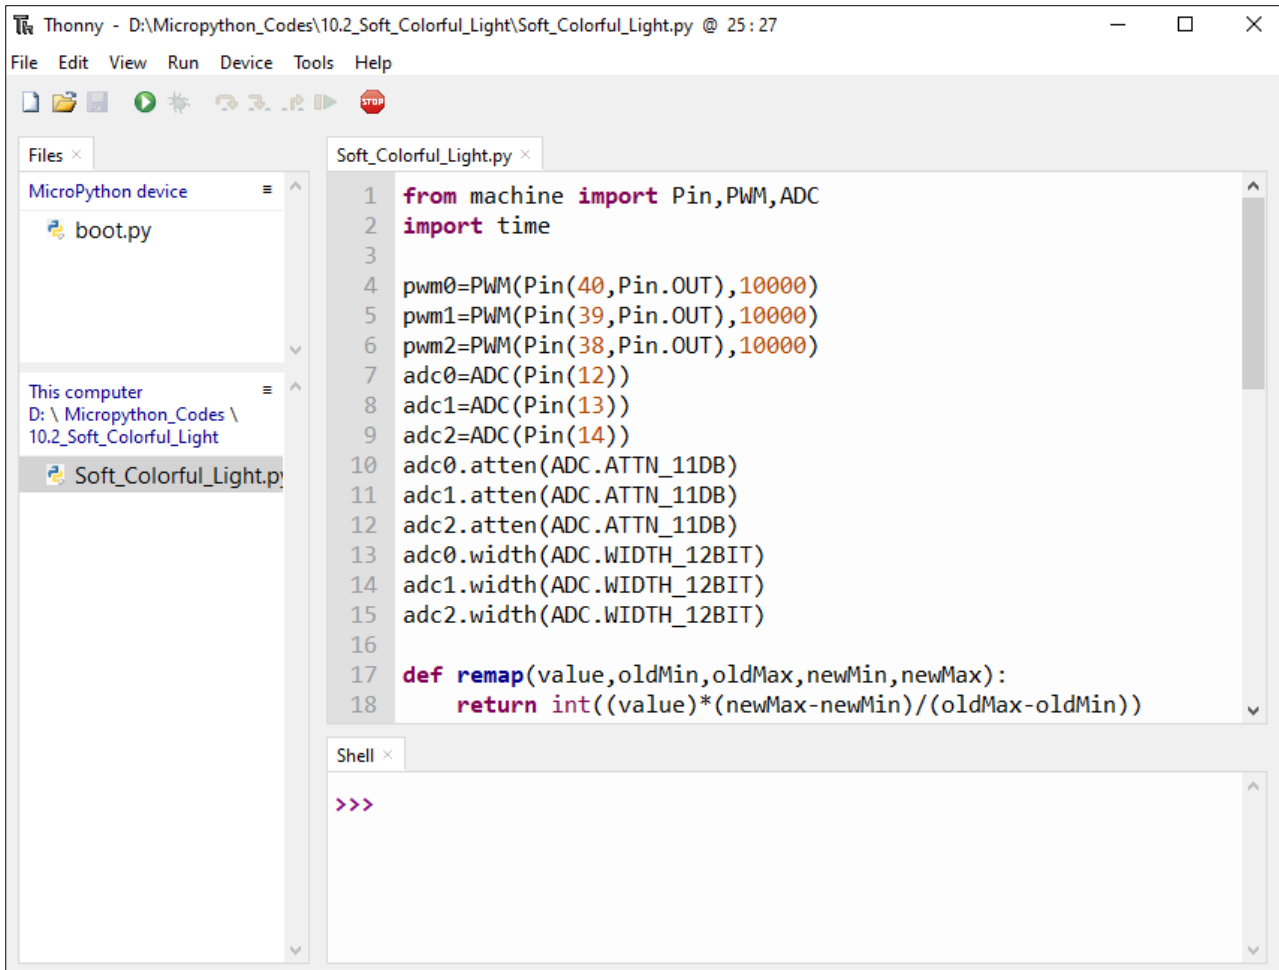

Click “Run current script” and control the change of RGBLED color by rotating the handles of three rotary potentiometers.

The following is the program code:

```

1 from machine import Pin, PWM, ADC
2 import time
3
4 pwm0=PWM(Pin(40, Pin. OUT), 10000)
5 pwm1=PWM(Pin(39, Pin. OUT), 10000)
6 pwm2=PWM(Pin(38, Pin. OUT), 10000)
7 adc0=ADC(Pin(12))
8 adc1=ADC(Pin(13))
9 adc2=ADC(Pin(14))
10 adc0. atten (ADC. ATTN_11DB)
11 adc1. atten (ADC. ATTN_11DB)
  
```






```
12 adc2.atten(ADC.ATTN_11DB)
13 adc0.width(ADC.WIDTH_12BIT)
14 adc1.width(ADC.WIDTH_12BIT)
15 adc2.width(ADC.WIDTH_12BIT)
16
17 def remap(value,oldMin,oldMax,newMin,newMax):
18     return int((value)*(newMax-newMin)/(oldMax-oldMin))
19
20 try:
21     while True:
22         pwm0.duty(1023-remap adc0.read(),0,4095,0,1023))
23         pwm1.duty(1023-remap adc1.read(),0,4095,0,1023))
24         pwm2.duty(1023-remap adc2.read(),0,4095,0,1023))
25         time.sleep_ms(100)
26 except:
27     adc0.deinit()
28     adc1.deinit()
29     adc2.deinit()
30     pwm0.deinit()
31     pwm1.deinit()
32     pwm2.deinit()
```

In the code, read the ADC value of 3 potentiometers and map it into PWM duty cycle to control the control 3 LEDs with different color of RGBLED, respectively.

Project 10.3 Soft Rainbow Light


In this project, we use potentiometer to control Freenove 8 RGB LED Module.

Component List

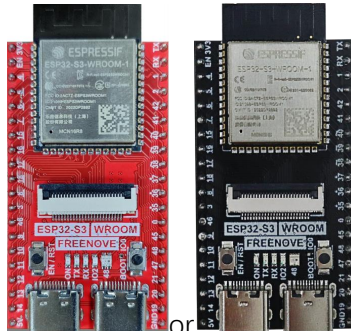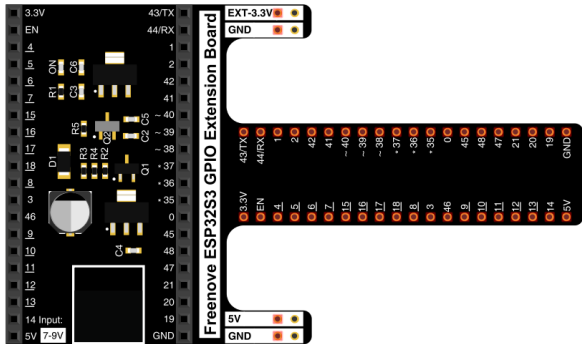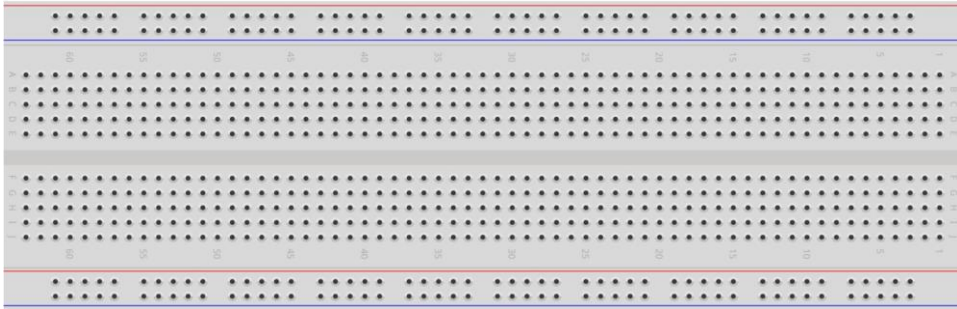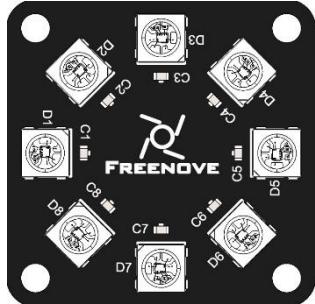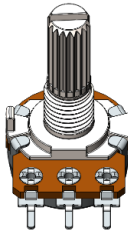
ESP32-S3(N16R8)/ESP32-S3(N8R8)  OR	GPIO Extension Board x1 	
Breadboard x1 		
Freenove 8 RGB LED Module x1 	Rotary potentiometer x1 	Jumper F/M x3 Jumper M/M x3 

Circuit

Schematic diagram

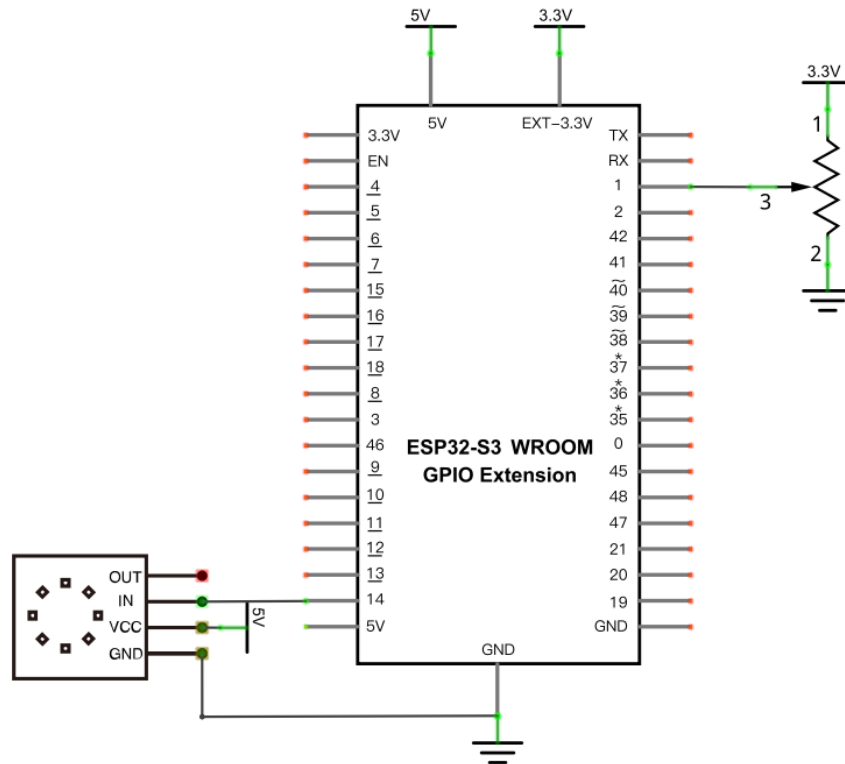


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

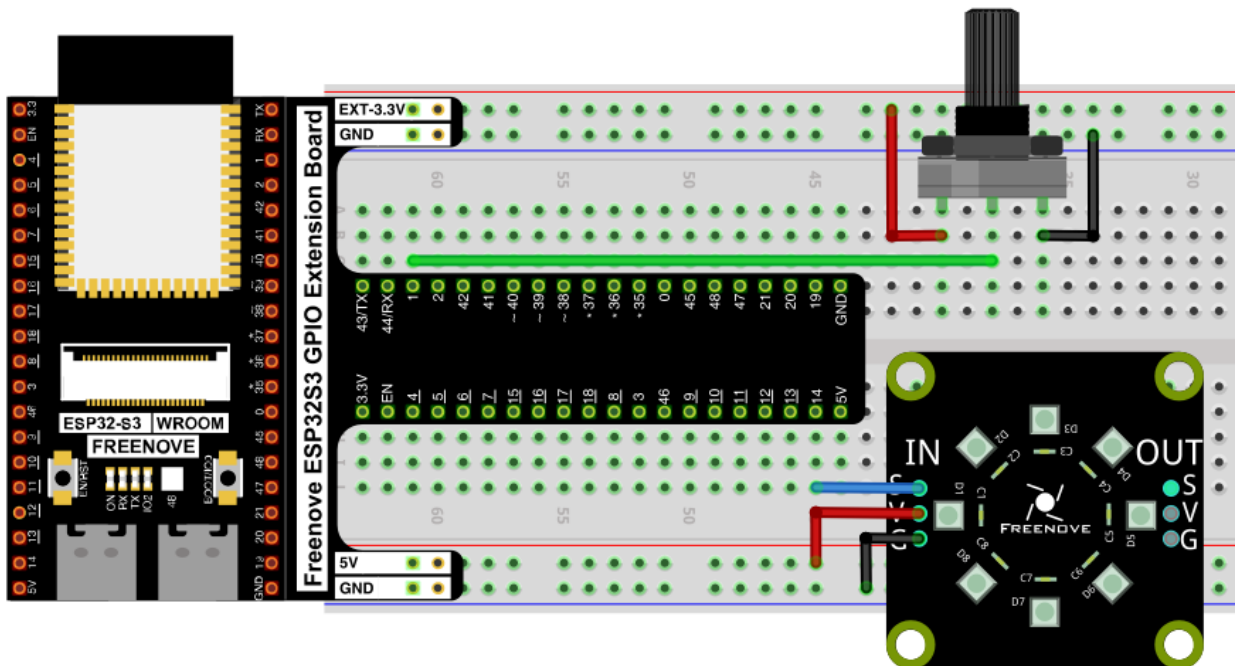

Code

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “10.3_Soft_Rainbow_Light” and double click “Soft_Rainbow_Light.py”.

10.3_Soft_Rainbow_Light

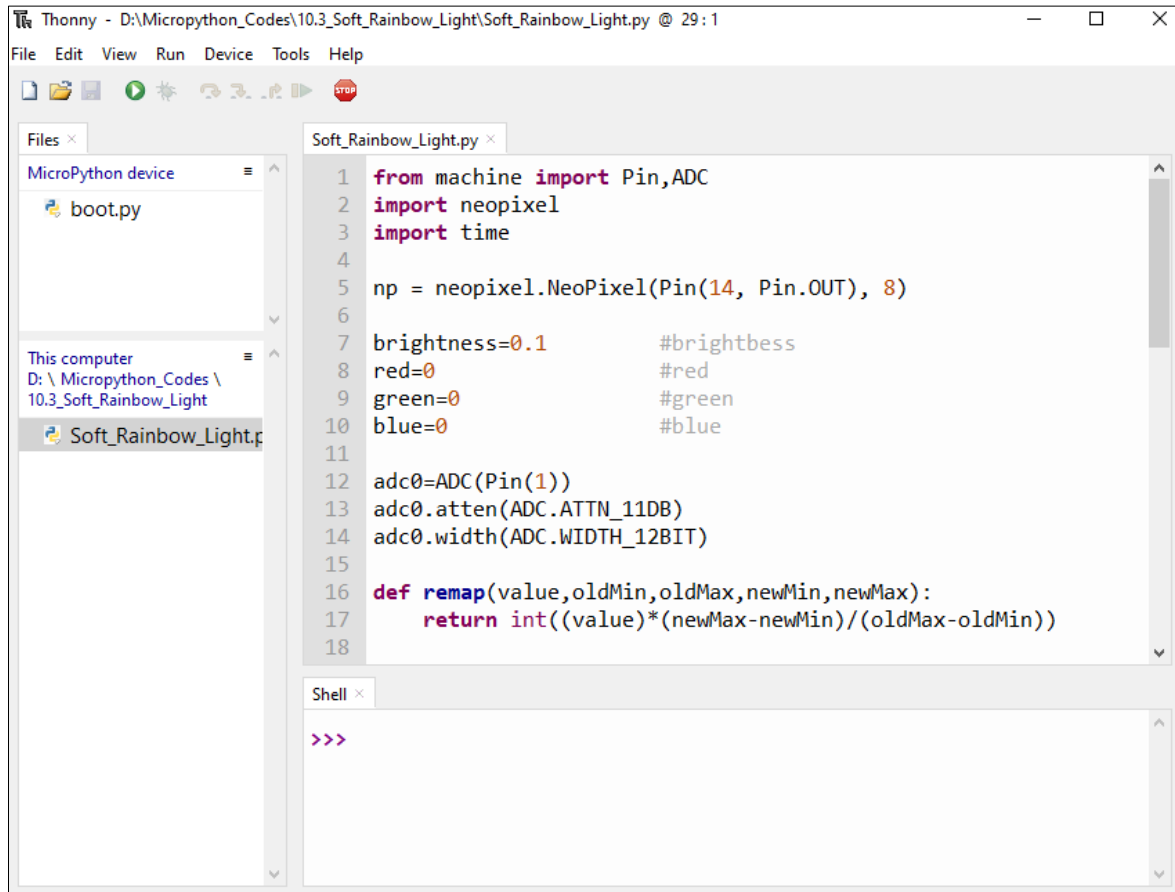

Click “Run current script”. Rotate the handle of potentiometer and the color of the lights will change.



The following is the program code:

```

1 from machine import Pin,ADC
2 import neopixel
3 import time
4
5 np = neopixel.NeoPixel(Pin(14, Pin.OUT), 8)

```

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

```

6
7 brightness=0.1          #brightbess
8 red=0                   #red
9 green=0                  #green
10 blue=0                  #blue
11
12 adc0=ADC(Pin(1))
13 adc0.atten(ADC. ATTN_11DB)
14 adc0.width(ADC. WIDTH_12BIT)
15
16 def remap(value,oldMin,oldMax,newMin,newMax):
17     return int((value)*(newMax-newMin)/(oldMax-oldMin))
18
19 def wheel(pos):
20     global red,green,blue
21     WheelPos=pos%255
22     if WheelPos<85:
23         red=(255-WheelPos*3)
24         green=(WheelPos*3)
25         blue=0
26     elif WheelPos>=85 and WheelPos<170:
27         WheelPos -= 85;
28         red=0
29         green=(255-WheelPos*3)
30         blue=(WheelPos*3)
31     else :
32         WheelPos -= 170;
33         red=(WheelPos*3)
34         green=0
35         blue=(255-WheelPos*3)
36 try:
37     while True:
38         adcValue=remap(adc0.read(), 0, 4095, 0, 255)
39         for j in range(0,8):
40             wheel (adcValue+j*255//8)
41             np[j]=(int(red*brightness),int(green*brightness),int(blue*brightness))
42             np.write()
43             time.sleep_ms(50)
44 except:
45     adc0.deinit()

```

The logic of the code is basically the same as the previous project [Rainbow Light](#). The difference is that in this code, the starting point of the color is controlled by the potentiometer.




Chapter 11 Photoresistor & LED

In this chapter, we will learn how to use a photoresistor.

Project 11.1 NightLamp

A photoresistor is very sensitive to the amount of light present. We can take advantage of the characteristic to make a nightlight with the following function: when the ambient light is less (darker environment) the LED will automatically become brighter to compensate and when the ambient light is greater (brighter environment) the LED will automatically dim to compensate.


Component List

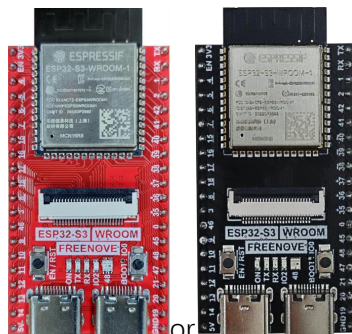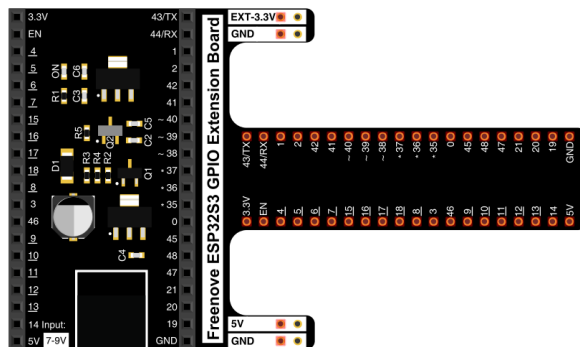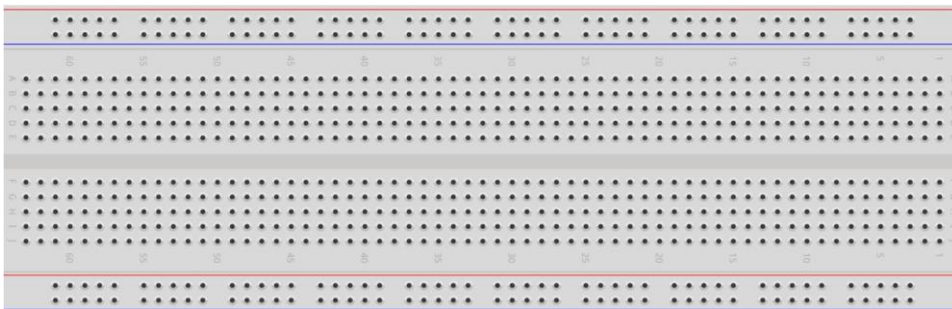ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1	
 or			
Breadboard x1			
			
Photoresistor x1	Resistor		LED x1
	220Ω x1	10KΩ x1	
			Jumper M/M x4
			


Component knowledge

Photoresistor

A photoresistor is simply a light sensitive resistor. It is an active component that decreases resistance with respect to receiving luminosity (light) on the component's light sensitive surface. A photoresistor's resistance value will change in proportion to the ambient light detected. With this characteristic, we can use a photoresistor to detect light intensity. The photoresistor and its electronic symbol are as follows.

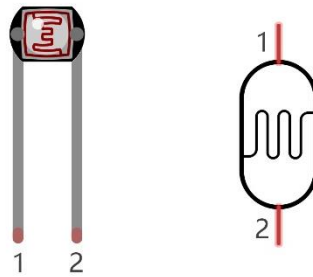

The circuit below is used to detect the change of a photoresistor's resistance value:

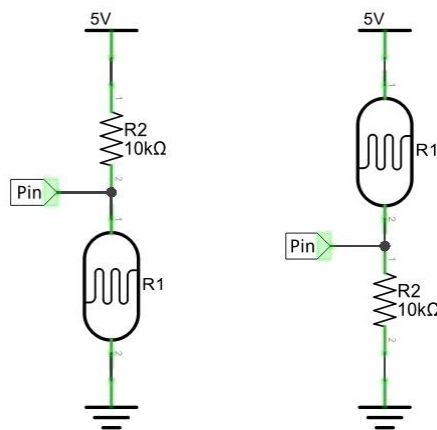


In the above circuit, when a photoresistor's resistance value changes due to a change in light intensity, the voltage between the photoresistor and resistor R1 will also change. Therefore, the intensity of the light can be obtained by measuring this voltage.


Circuit

The circuit of this project is similar to project Soft Light. The only difference is that the input signal is changed from a potentiometer to a combination of a photoresistor and a resistor.

Schematic diagram

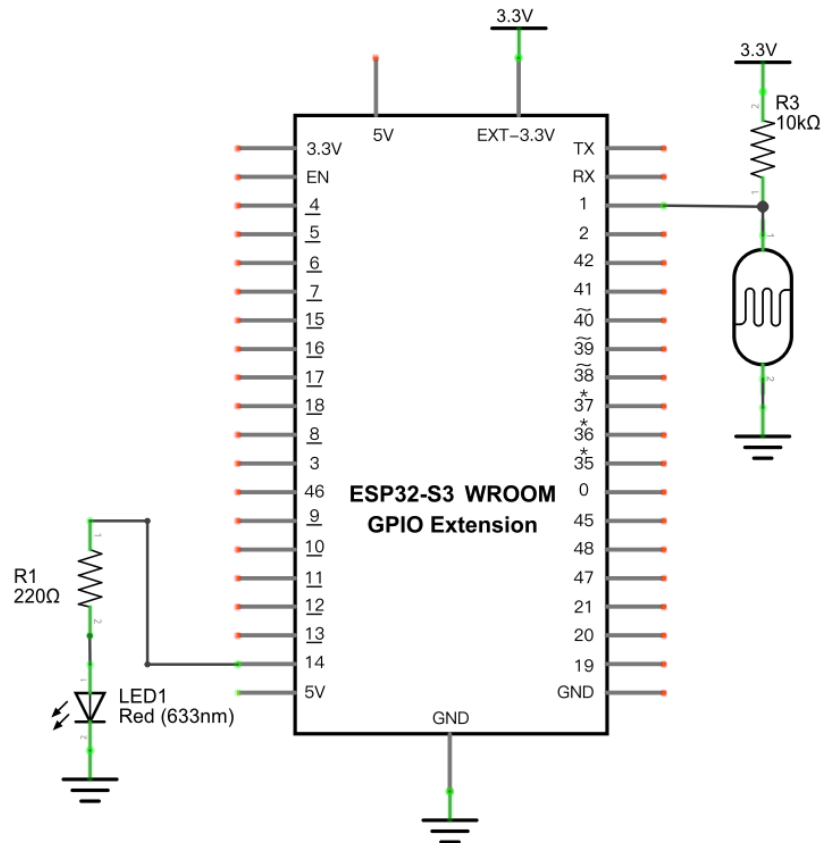

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

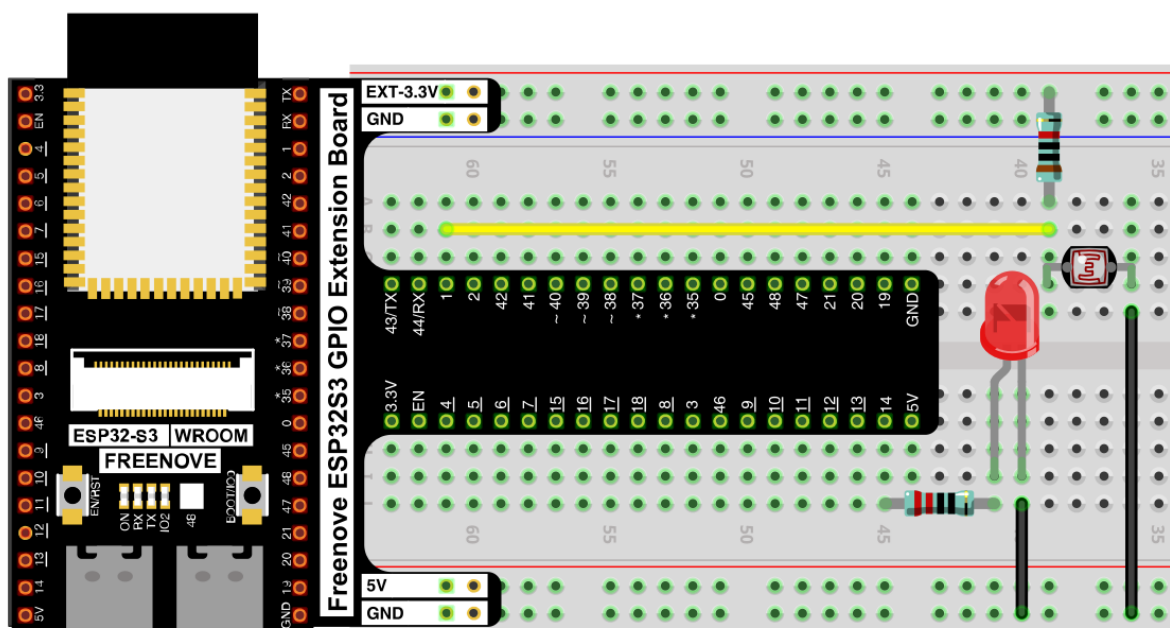


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Codes of this project is logically the same as the project [Soft Light](#).

11.1_Nightlamp

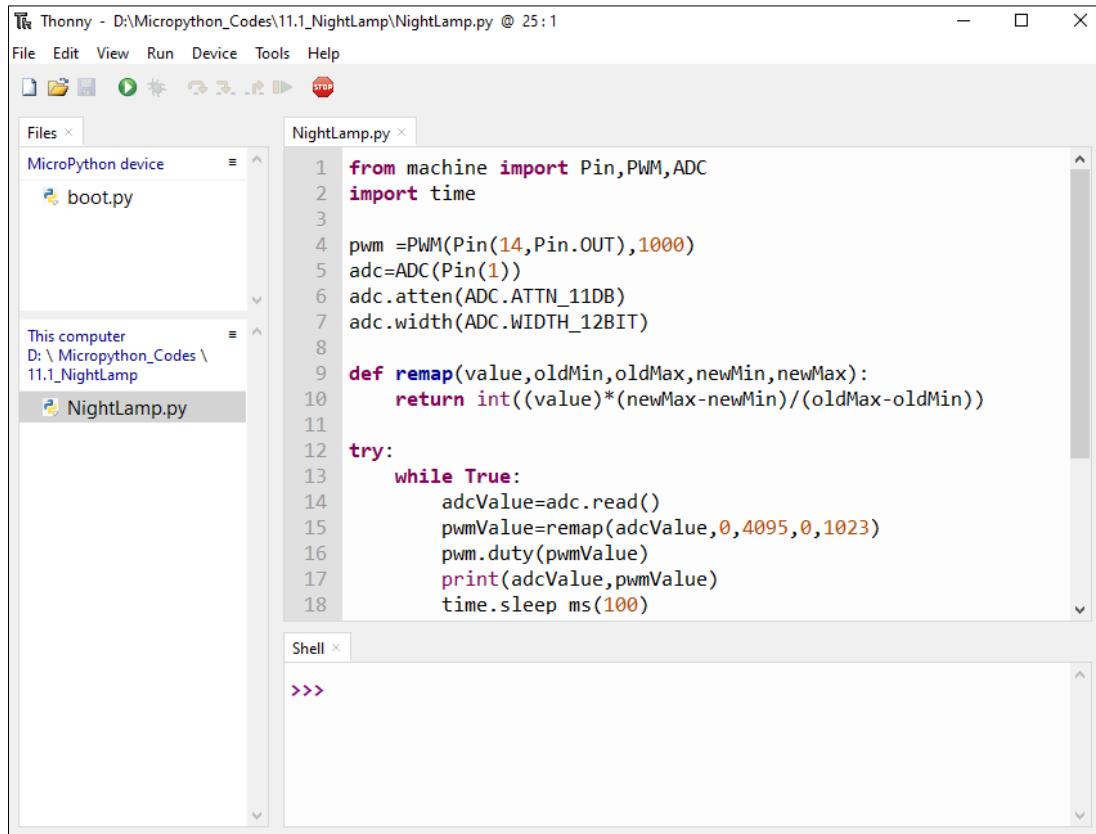

Click “Run current script”. Cover the photoresistor with your hands or illuminate it with lights, the brightness of LEDs will change.

The following is the program code:

```

1 from machine import Pin, PWM, ADC
2 import time
3
4 pwm =PWM(Pin(14,Pin. OUT), 1000)
5 adc=ADC(Pin(1))
6 adc. atten(ADC. ATTN_11DB)
7 adc. width(ADC. WIDTH_12BIT)
8
9 def remap(value,oldMin,oldMax,newMin,newMax):
10     return int((value)*(newMax-newMin)/(oldMax-oldMin))
11
12 try:
13     while True:
14         adcValue=adc. read()

```



```
14         pwmValue=remap(adcValue, 0, 4095, 0, 1023)
15         pwm.duty(pwmValue)
16         print(adcValue, pwmValue)
17         time.sleep_ms(100)
18     except:
19         adc.deinit()
20         pwm.deinit()
```

In this code, we use ADC to read the ADC value of the photoresistor and map it to the PWM of the control LED, so that the brightness of the LED can change accordingly with the change of the ambient light intensity.




Chapter 12 Thermistor

In this chapter, we will learn about thermistors which are another kind of resistor

Project 12.1 Thermometer

A thermistor is a type of resistor whose resistance value is dependent on temperature and changes in temperature. Therefore, we can take advantage of this characteristic to make a thermometer.


Component List

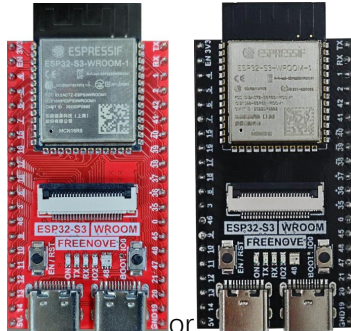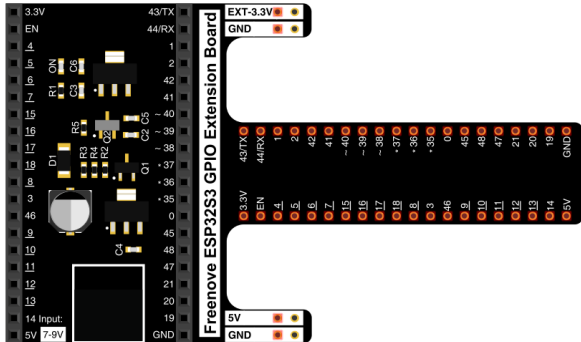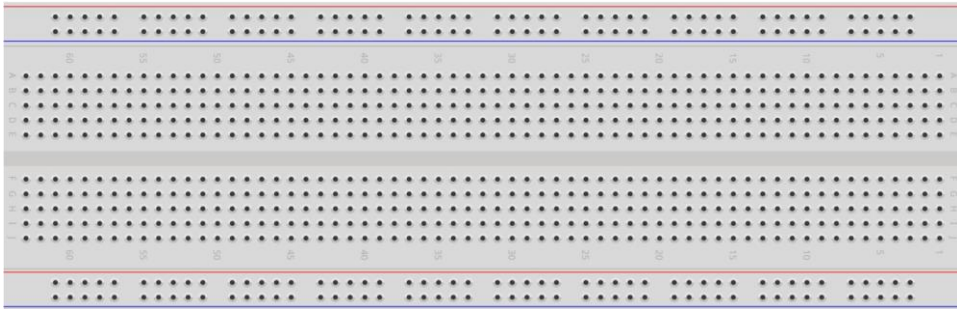ESP32-S3(N16R8)/ESP32-S3(N8R8)	GPIO Extension Board x1
	
Breadboard x1	
	
Thermistor x1	Resistor 10kΩ x1
	
Jumper M/M x3	
	

Component knowledge

Thermistor

A thermistor is a temperature sensitive resistor. When it senses a change in temperature, the resistance of the thermistor will change. We can take advantage of this characteristic by using a thermistor to detect temperature intensity. A thermistor and its electronic symbol are shown below.

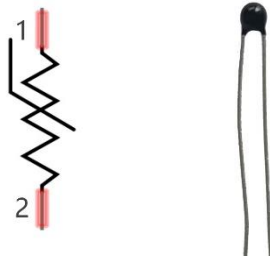

The relationship between resistance value and temperature of a thermistor is:

$$R_t = R * \text{EXP} \left[B * \left(\frac{1}{T_2} - \frac{1}{T_1} \right) \right]$$

Where:

R_t is the thermistor resistance under T_2 temperature;

R is the nominal resistance of thermistor under T_1 temperature;


$\text{EXP}[n]$ is n th power of E ;

B is for thermal index;

T_1, T_2 is Kelvin temperature (absolute temperature). Kelvin temperature = $273.15 + \text{Celsius temperature}$.

For the parameters of the thermistor, we use: $B=3950$, $R=10k$, $T_1=25$.

The circuit connection method of the thermistor is similar to photoresistor, as the following:

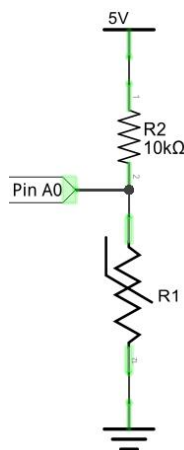

We can use the value measured by the ADC converter to obtain the resistance value of thermistor, and then we can use the formula to obtain the temperature value.


Therefore, the temperature formula can be derived as:

$$T_2 = 1 / \left(\frac{1}{T_1} + \ln \left(\frac{R_t}{R} \right) / B \right)$$


Circuit

The circuit of this project is similar to the one in the last chapter. The only difference is that the photoresistor is replaced by the thermistor.

Schematic diagram

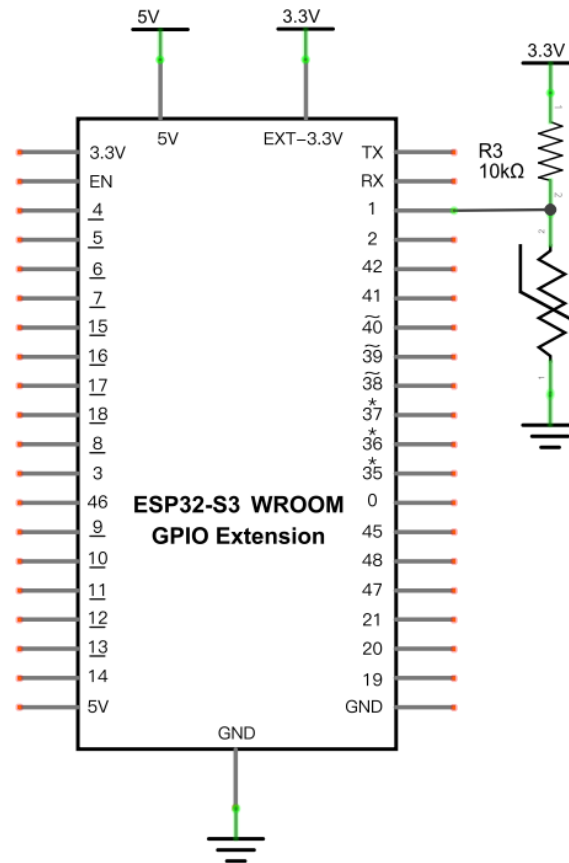

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

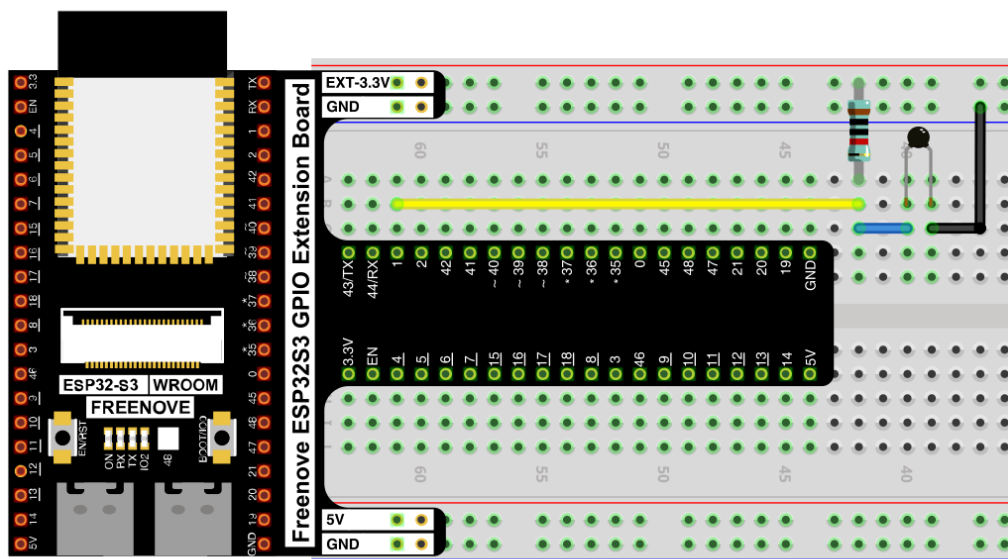


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “12.1_Thermometer” and double click “Thermometer.py”.

12.1_Thermometer

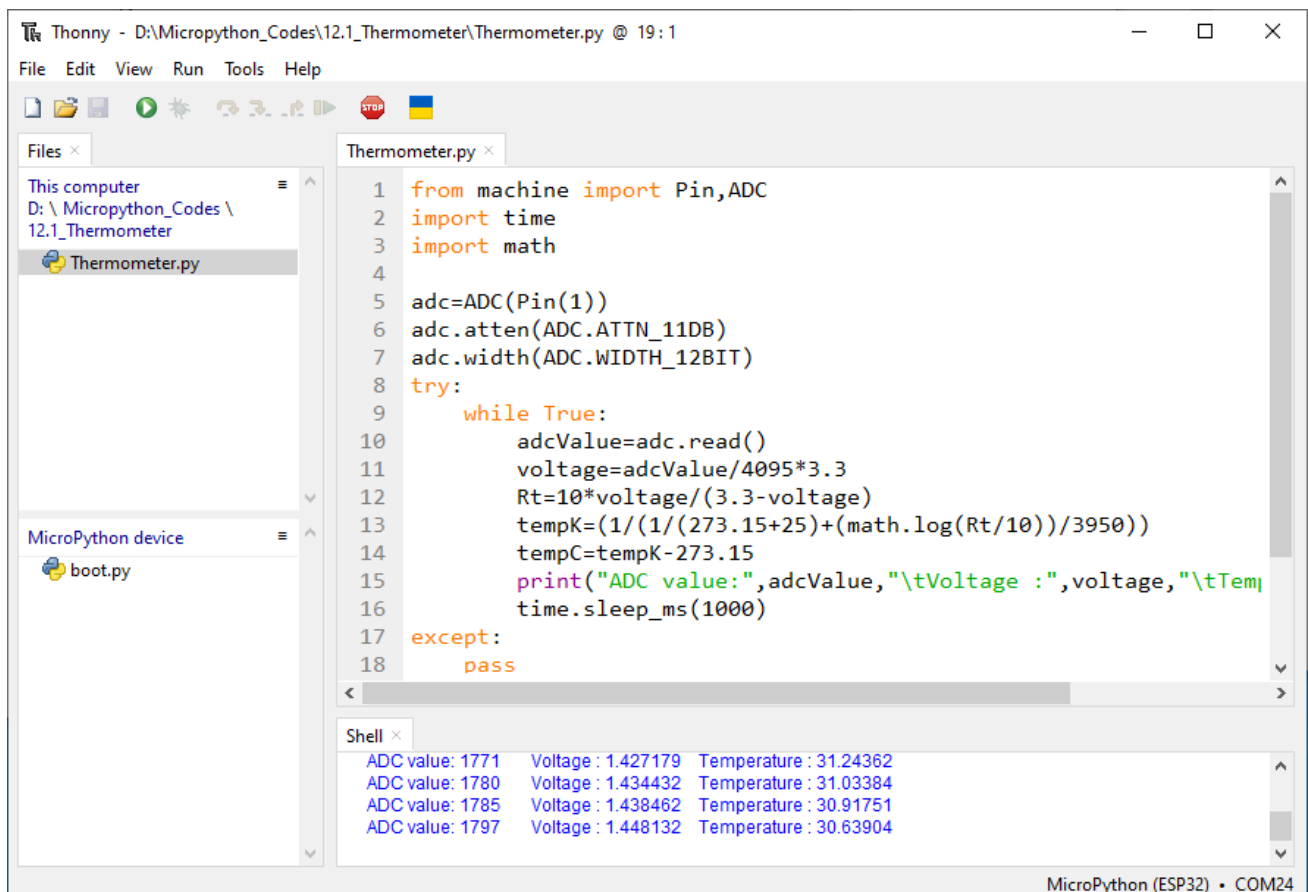

The screenshot shows the Thonny IDE interface. The main editor displays the code for Thermometer.py, which imports Pin and ADC from the machine module, sets up an ADC on pin 1, and enters a loop that reads the ADC value, calculates the voltage, resistance, and temperature, and prints them. The Shell at the bottom shows the output of the script, displaying ADC values, voltage, and temperature in a tabular format.

```

1 from machine import Pin,ADC
2 import time
3 import math
4
5 adc=ADC(Pin(1))
6 adc.atten(ADC.ATTN_11DB)
7 adc.width(ADC.WIDTH_12BIT)
8 try:
9     while True:
10         adcValue=adc.read()
11         voltage=adcValue/4095*3.3
12         Rt=10*voltage/(3.3-voltage)
13         tempK=(1/(1/(273.15+25)+(math.log(Rt/10))/3950))
14         tempC=tempK-273.15
15         print("ADC value:",adcValue,"\tVoltage :",voltage,"\tTemj
16         time.sleep_ms(1000)
17 except:
18     pass
  
```

Shell

ADC value: 1771	Voltage: 1.427179	Temperature: 31.24362
ADC value: 1780	Voltage: 1.434432	Temperature: 31.03384
ADC value: 1785	Voltage: 1.438462	Temperature: 30.91751
ADC value: 1797	Voltage: 1.448132	Temperature: 30.63904


MicroPython (ESP32) • COM24

Click “Run current script” and “Shell” will constantly display the current ADC value, voltage value and temperature value. Try to “pinch” the thermistor (without touching the leads) with your index finger and thumb for a brief time, you should see that the temperature value increases.

If you have any concerns, please contact us via: support@freenove.com

```
Shell x
MicroPython V1.12.0 on 2019-12-20; ESP32 module (SPIRAM) with ESP32
Type "help()" for more information.
>>> %Run -c $EDITOR_CONTENT

ADC value: 2175      Voltage : 1.752747      Temperature : 22.21976
ADC value: 2176      Voltage : 1.753553      Temperature : 22.19809
ADC value: 2141      Voltage : 1.725348      Temperature : 22.95731
ADC value: 1989      Voltage : 1.602857      Temperature : 26.2919
ADC value: 1943      Voltage : 1.565788      Temperature : 27.31705
ADC value: 1943      Voltage : 1.565788      Temperature : 27.31705
ADC value: 1943      Voltage : 1.565788      Temperature : 27.31705
ADC value: 1942      Voltage : 1.564982      Temperature : 27.33945
ADC value: 1942      Voltage : 1.564982      Temperature : 27.33945
ADC value: 1943      Voltage : 1.565788      Temperature : 27.31705
ADC value: 2097      Voltage : 1.68989       Temperature : 23.91562
ADC value: 2218      Voltage : 1.787399      Temperature : 21.29001
```

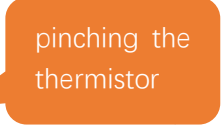

pinching the thermistor

The following is the code:

```
1  from machine import Pin, ADC
2  import time
3  import math
4
5  adc=ADC(Pin(1))
6  adc.atten(ADC.ATTN_11DB)
7  adc.width(ADC.WIDTH_12BIT)
8
9  try:
10     while True:
11         adcValue=adc.read()
12         voltage=adcValue/4095*3.3
13         Rt=10*voltage/(3.3-voltage)
14         tempK=(1/(1/(273.15+25)+(math.log(Rt/10))/3950))
15         tempC=tempK-273.15
16         print("ADC value:", adcValue, "\tVoltage :", voltage, "\tTemperature :", tempC);
17         time.sleep_ms(1000)
18 except:
19     pass
```

In the code, the ADC value of ADC module A0 port is read, and then it calculates the voltage and the resistance of Thermistor according to Ohms Law. Finally, it calculates the temperature sensed by the Thermistor, according to the formula.





Chapter 13 Joystick

In the previous chapter, we have learned how to use rotary potentiometer. Now, let's learn a new electronic module joystick which working on the same principle as rotary potentiometer.

Project 13.1 Joystick

In this project, we will read the output data of a joystick and display it to the Terminal screen.


Component List

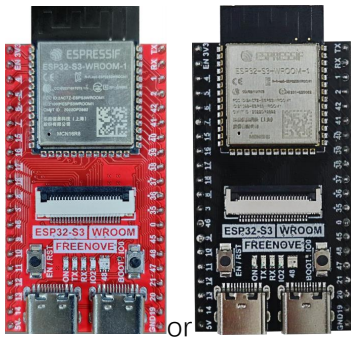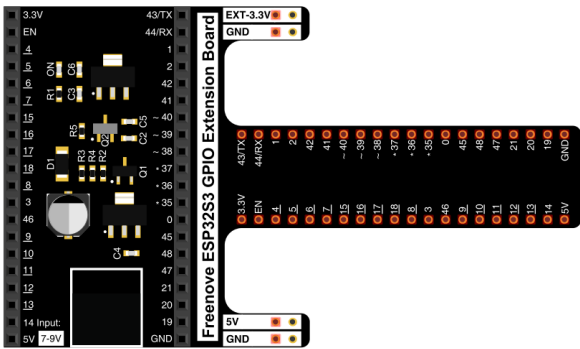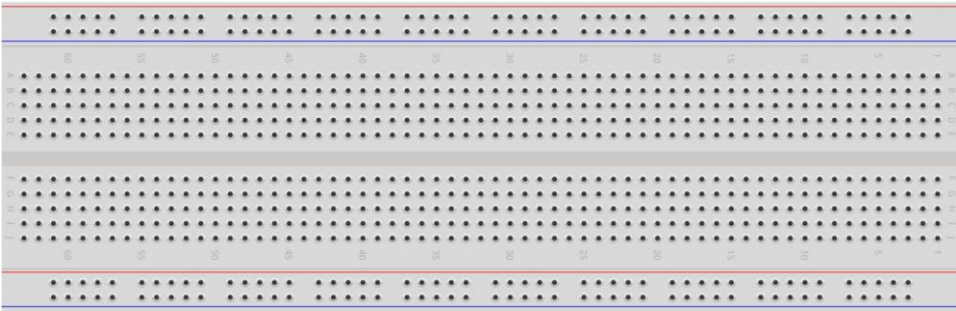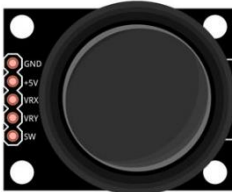ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Joystick x1 	Jumper F/M x5 


Component knowledge

Joystick

A joystick is a kind of input sensor used with your fingers. You should be familiar with this concept already as they are widely used in gamepads and remote controls. It can receive input on two axes (Y and or X) at the same time (usually used to control direction on a two dimensional plane). And it also has a third direction capability by pressing down (Z axis/direction).

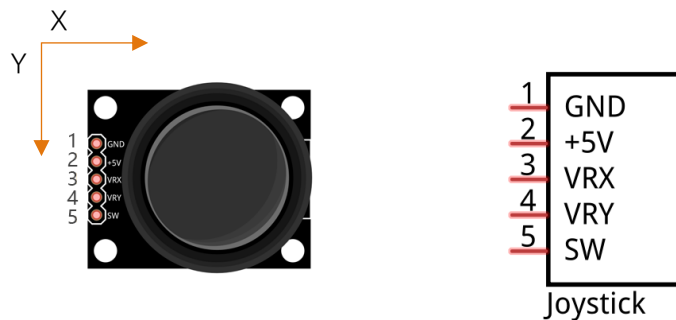


This is accomplished by incorporating two rotary potentiometers inside the joystick Module at 90 degrees of each other, placed in such a manner as to detect shifts in direction in two directions simultaneously and with a push button switch in the “vertical” axis, which can detect when a User presses on the Joystick.

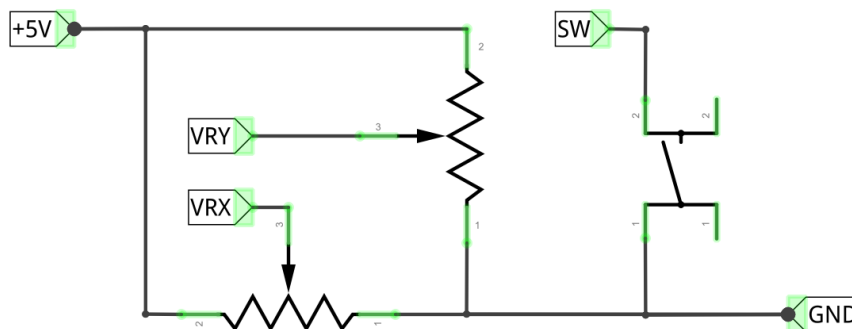


When the joystick data is read, there are some differences between the axes: data of X and Y axes is analog, which needs to use the ADC. The data of the Z axis is digital, so you can directly use the GPIO to read this data or you have the option to use the ADC to read this.

Circuit

Schematic diagram

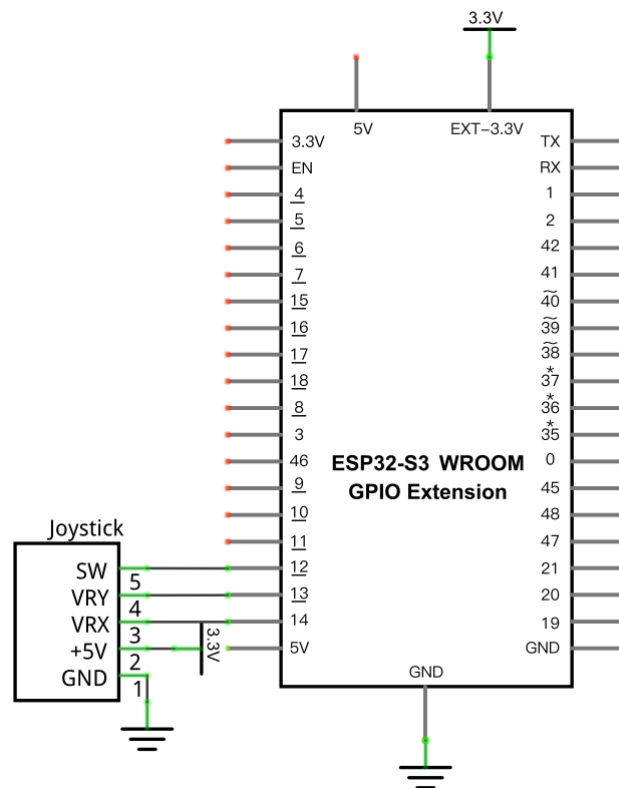

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

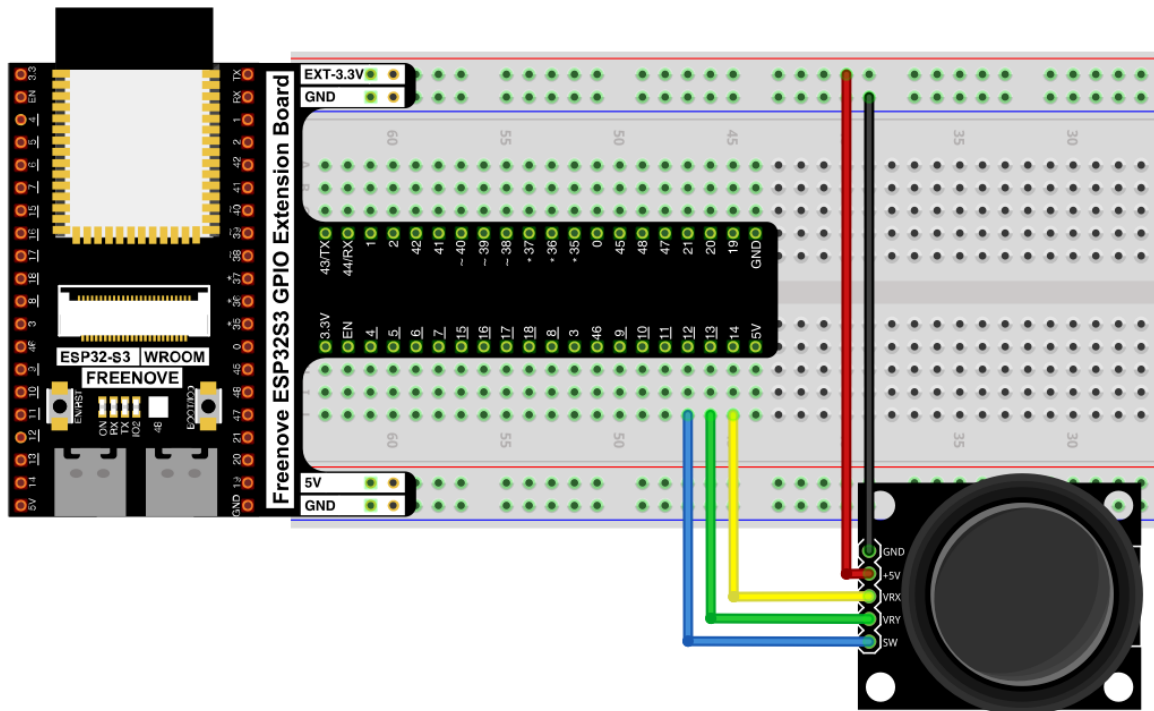


Code

In this project's code, we will read the ADC values of X and Y axes of the Joystick, and read digital quality of the Z axis, then display these out in Terminal.


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “13.1_Joystick” and double click “Joystick.py”.

13.1_Joystick

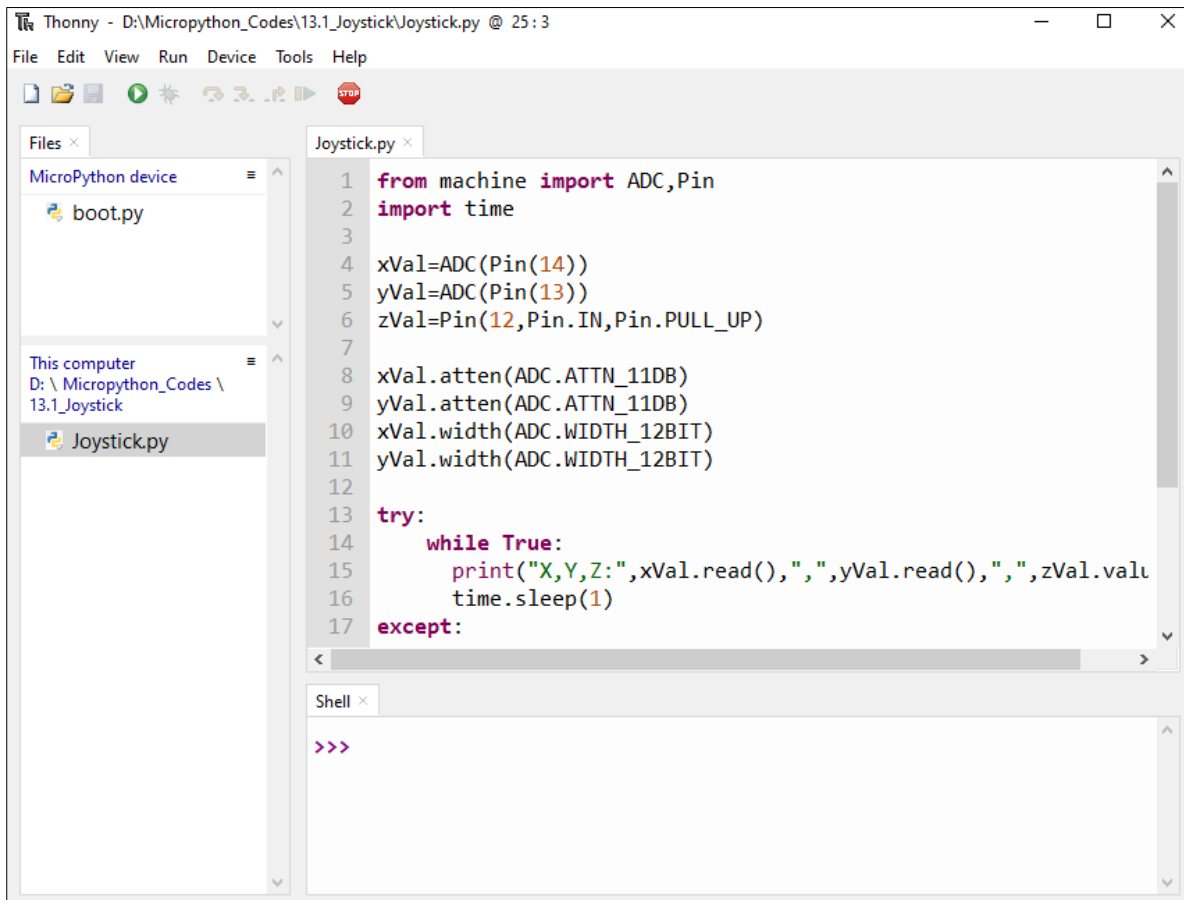

Click “Run current script”. Shifting the Joystick or pressing it down will make the printed data in “Shell” change.

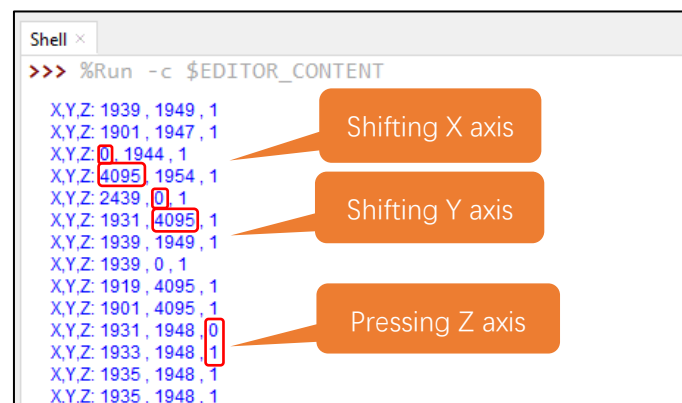

The flowing is the code:

```

1  from machine import ADC, Pin
2  import time
3
4  xVal=ADC(Pin(14))
5  yVal=ADC(Pin(13))
6  zVal=Pin(12, Pin.IN, Pin.PULL_UP)
7
8  xVal atten(ADC.ATTN_11DB)
9  yVal atten(ADC.ATTN_11DB)
10 xVal.width(ADC.WIDTH_12BIT)
11 yVal.width(ADC.WIDTH_12BIT)
12
13 try:
14     while True:
15         print("X,Y,Z:", xVal.read(), ",", yVal.read(), ",", zVal.value())
16         time.sleep(1)
17 except:
18     xVal.deinit()
19     yVal.deinit()

```

Set the acquisition range of voltage of the two ADC channels to 0-3.3V, and the acquisition width of data to 0-4095.

```

8  xVal.atten(ADC.ATTN_11DB)
9  yVal.atten(ADC.ATTN_11DB)
10 xVal.width(ADC.WIDTH_12BIT)
11 yVal.width(ADC.WIDTH_12BIT)

```

In the code, configure Z_Pin to pull-up input mode. In loop(), use Read () to read the value of axes X and Y and use value() to read the value of axis Z, and then display them.

```

14 print("X,Y,Z:", xVal.read(), ",", yVal.read(), ",", zVal.value())

```




Chapter 14 74HC595 & LED Bar Graph

We have used LED bar graph to make a flowing water light, in which 10 GPIO ports of ESP32-S3 is occupied. More GPIO ports mean that more peripherals can be connected to ESP32S3, so GPIO resource is very precious. Can we make flowing water light with less GPIO? In this chapter, we will learn a component, 74HC595, which can achieve the target.

Project 14.1 Flowing Water Light

Now let's learn how to use the 74HC595 IC chip to make a flowing water light using less GPIO.


Component List

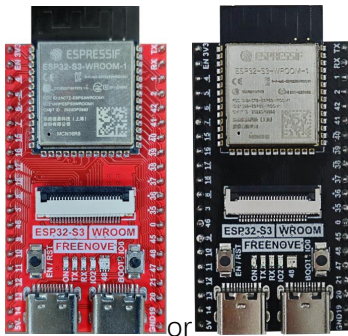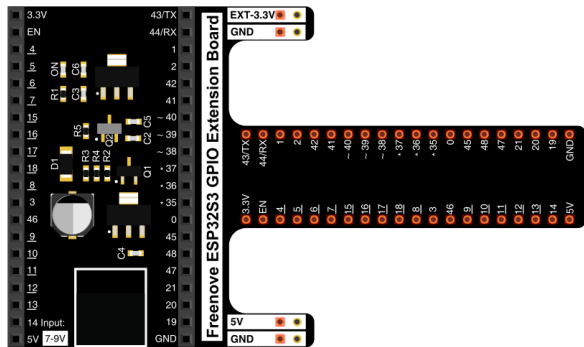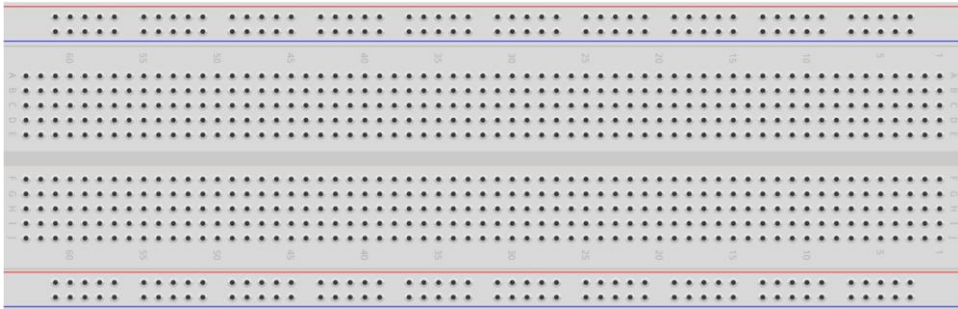ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 		
Breadboard x1 			
74HC595 x1 	LED Bar Graph x1 	Resistor 220Ω x8 	Jumper M/M x15 

Related knowledge

74HC595

A 74HC595 chip is used to convert serial data into parallel data. A 74HC595 chip can convert the serial data of one byte into 8 bits, and send its corresponding level to each of the 8 ports correspondingly. With this characteristic, the 74HC595 chip can be used to expand the IO ports of a ESP32S3. At least 3 ports are required to control the 8 ports of the 74HC595 chip.

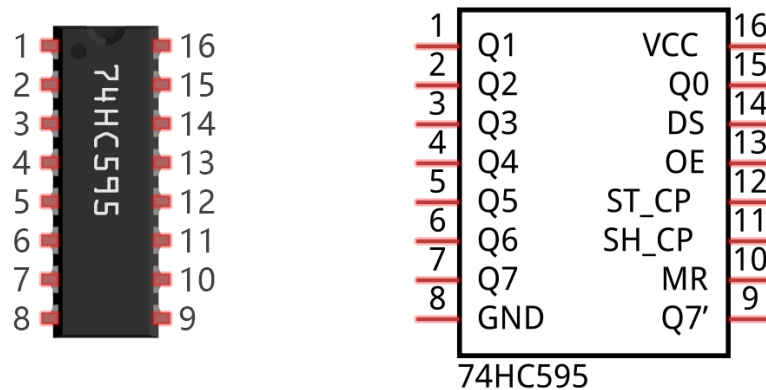


The ports of the 74HC595 chip are described as follows:

Pin name	GPIO number	Description
Q0-Q7	15, 1-7	Parallel data output
VCC	16	The positive electrode of power supply, the voltage is 2~6V
GND	8	The negative electrode of power supply
DS	14	Serial data Input
OE	13	Enable output, When this pin is in high level, Q0-Q7 is in high resistance state When this pin is in low level, Q0-Q7 is in output mode
ST_CP	12	Parallel Update Output: when its electrical level is rising, it will update the parallel data output.
SH_CP	11	Serial shift clock: when its electrical level is rising, serial data input register will do a shift.
MR	10	Remove shift register: When this pin is in low level, the content in shift register will be cleared.
Q7'	9	Serial data output: it can be connected to more 74HC595 in series.


For more detail, please refer to the datasheet on the 74HC595 chip.

Circuit

Schematic diagram

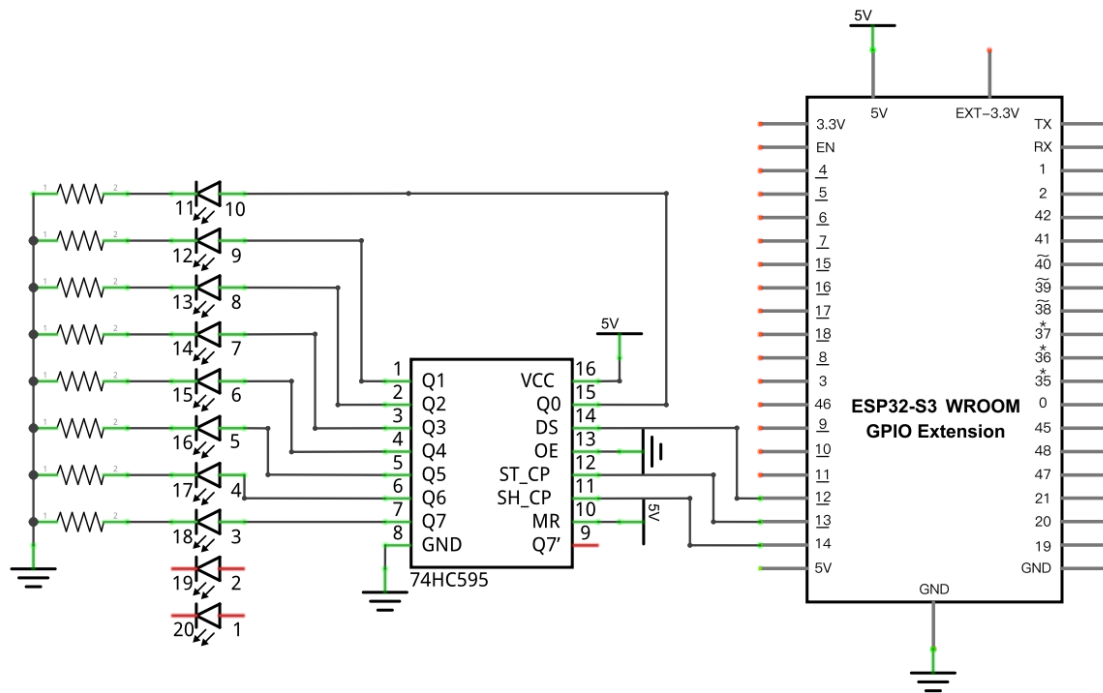

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

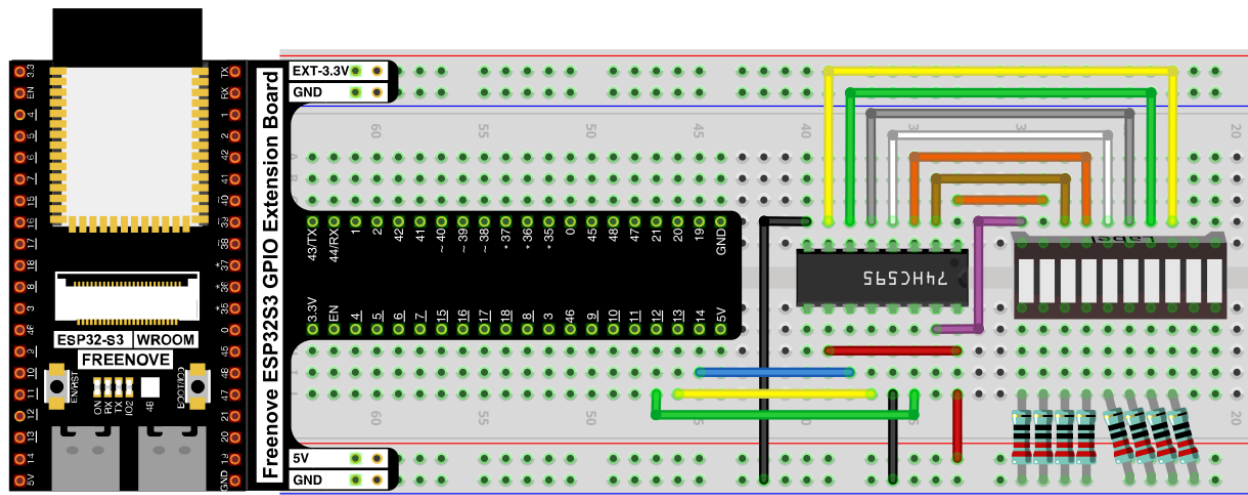

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)


Code

In this project, we will make a flowing water light with a 74HC595 chip to learn about its functions.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “14.1_Flowing_Water_Light”. Select “my74HC595.py”, right click your mouse to select “Upload to /”, wait for “my74HC595.py” to be uploaded to ESP32-S3 and then double click “Flowing_Water_Light.py”.

14.1_Flowing_Water_Light

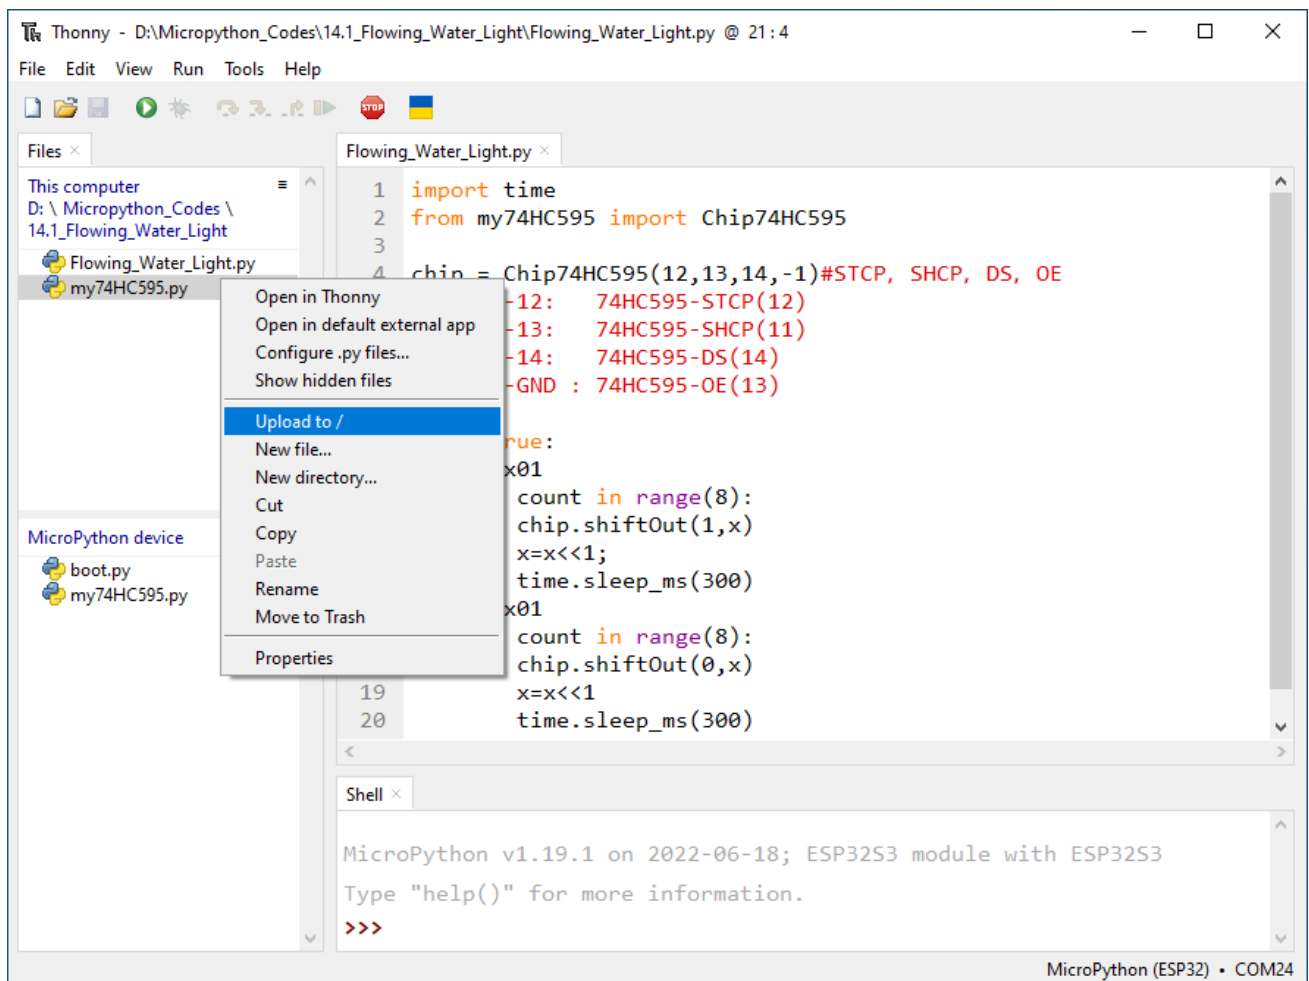

Click “Run current script” and you will see that Bar Graph LED starts with the flowing water pattern flashing from left to right and then back from right to left. If it displays nothing, maybe the LED Bar is connected upside down, please unplug it and then re-plug it reversely.

If you have any concerns, please contact us via: support@freenove.com

The following is the program code:

```

1  import time
2  from my74HC595 import Chip74HC595
3
4  chip = Chip74HC595(12, 13, 14, -1)#STCP, SHCP, DS, OE
5  # ESP32-12: 74HC595-STCP(12)
6  # ESP32-13: 74HC595-SHCP(11)
7  # ESP32-14: 74HC595-DS(14)
8  # ESP32-GND : 74HC595-OE(13)
9
10 while True:
11     x=0x01
12     for count in range(8):
13         chip.shiftOut(1, x)
14         x=x<<1;
15         time.sleep_ms(300)
16     x=0x01
17     for count in range(8):
18         chip.shiftOut(0, x)
19         x=x<<1
20         time.sleep_ms(300)

```

Import time and my74HC595 modules.

```

1  import time
2  from my74HC595 import Chip74HC595

```

Assign pins for ESP32-S3 to connect to 74HC595.

```

4  chip = Chip74HC595(12, 13, 14, -1)#STCP, SHCP, DS, OE

```

The first for loop makes LED Bar display separately from left to right while the second for loop make it display separately from right to left.

```

11     x=0x01
12     for count in range(8):
13         chip.shiftOut(1, x) #High bit is sent first
14         x=x<<1
15         time.sleep_ms(300)
16     x=0x01
17     for count in range(8):
18         chip.shiftOut(0, x) #Low bit is sent first
19         x=x<<1
20         time.sleep_ms(300)

```

Reference

Class Chip74HC595

Before each use of the object **Chip74HC595**, make sure my74HC595.py has been uploaded to "/" of ESP32S3, and then add the statement "**from my74HC595 import Chip74HC595**" to the top of the python file.

Chip74HC595():An object. By default, 74HC595's DS pin is connected to Pin(14) of ESP32S3, ST_CP pin is connected to ESP32S3's Pin(12) and OE pin is connected to ESP32S3's Pin(5). If you need to modify the pins, just do the following operations.

chip=Chip74HC595() or **chip=Chip74HC595(12,13,14,5)**

shiftOut(direction, data): Write data to 74HC595.

direction: 1/0. "1" presents that high-order byte will be sent first while "0" presents that low-order byte will be sent first.

data: The content that is sent, which is one-byte data.

clear(): Clear the latch data of 74HC595.





Chapter 15 74HC595 & 7-Segment Display.

In this chapter, we will introduce the 7-Segment Display.

Project 15.1 7-Segment Display.

We will use 74HC595 to control 7-segment display and make it display hexadecimal character "0-F".

 
Component List

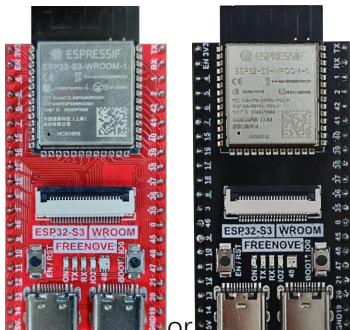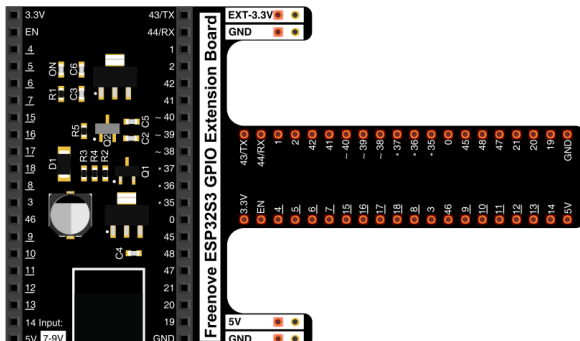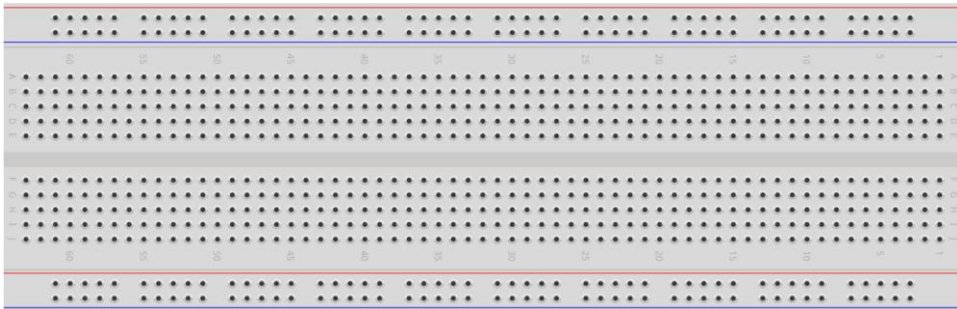ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 		
Breadboard x1 			
74HC595 x1 	7-segment display x1 	Resistor 220Ω x8 	Jumper M/M 

Component knowledge

7-segment display

A 7-segment display is a digital electronic display device. There is a figure "8" and a decimal point represented, which consists of 8 LEDs. The LEDs have a common anode and individual cathodes. Its internal structure and pin designation diagram is shown below:

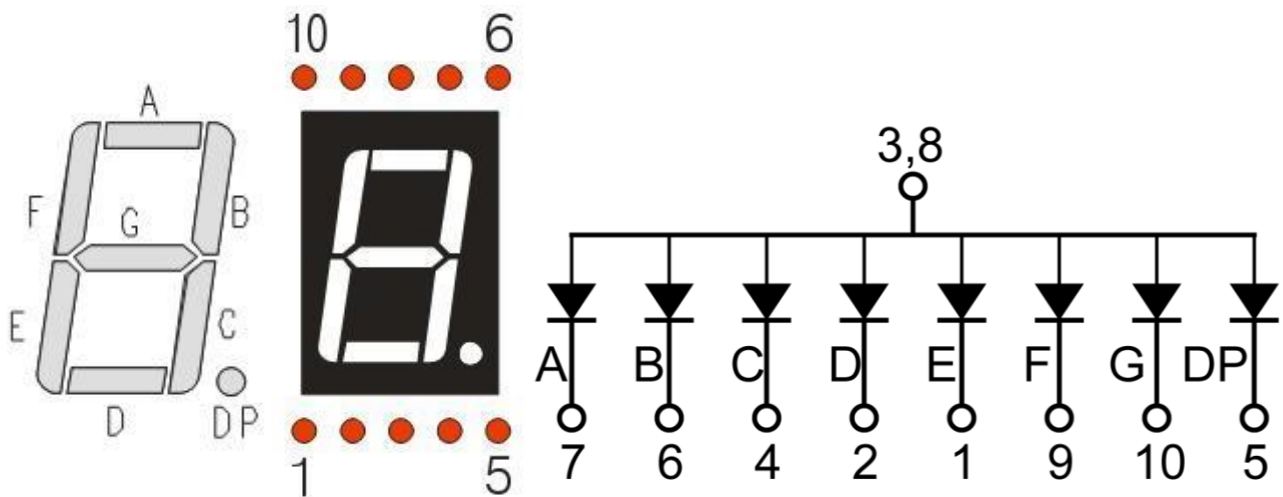

As we can see in the above circuit diagram, we can control the state of each LED separately. Also, by combining LEDs with different states of ON and OFF, we can display different characters (Numbers and Letters). For example, to display a "0": we need to turn ON LED segments A, B, C, D, E and F, and turn OFF LED segments G and DP.




In this project, we will use a 7-Segment Display with a common anode. Therefore, when there is an input low level to a LED segment the LED will turn ON. Defining segment "A" as the lowest level and segment "DP" as the highest level, from high to low would look like this: "DP", "G", "F", "E", "D", "C", "B", "A". Character "0" corresponds to the code: `1100 0000b=0xc0`.

For detailed code values, please refer to the following table (common anode).


CHAR	DP	G	F	E	D	C	B	A	Hex	ASCII
0	1	1	0	0	0	0	0	0	0xc0	1100 0000
1	1	1	1	1	1	0	0	1	0xf9	1111 1001
2	1	0	1	0	0	1	0	0	0xa4	1010 0100
3	1	0	1	1	0	0	0	0	0xb0	1011 0000
4	1	0	0	1	1	0	0	1	0x99	1001 1001
5	1	0	0	1	0	0	1	0	0x92	1001 0010
6	1	0	0	0	0	0	1	0	0x82	1000 0010
7	1	1	1	1	1	0	0	0	0xf8	1111 1000
8	1	0	0	0	0	0	0	0	0x80	1000 0000
9	1	0	0	1	0	0	0	0	0x90	1001 0000
A	1	0	0	0	1	0	0	0	0x88	1000 1000
B	1	0	0	0	0	0	1	1	0x83	1000 0011
C	1	1	0	0	0	1	1	0	0xc6	1100 0110
D	1	0	1	0	0	0	0	1	0xa1	1010 0001
E	1	0	0	0	0	1	1	0	0x86	1000 0110
F	1	0	0	0	1	1	1	0	0x8e	1000 1110

Circuit

Schematic diagram

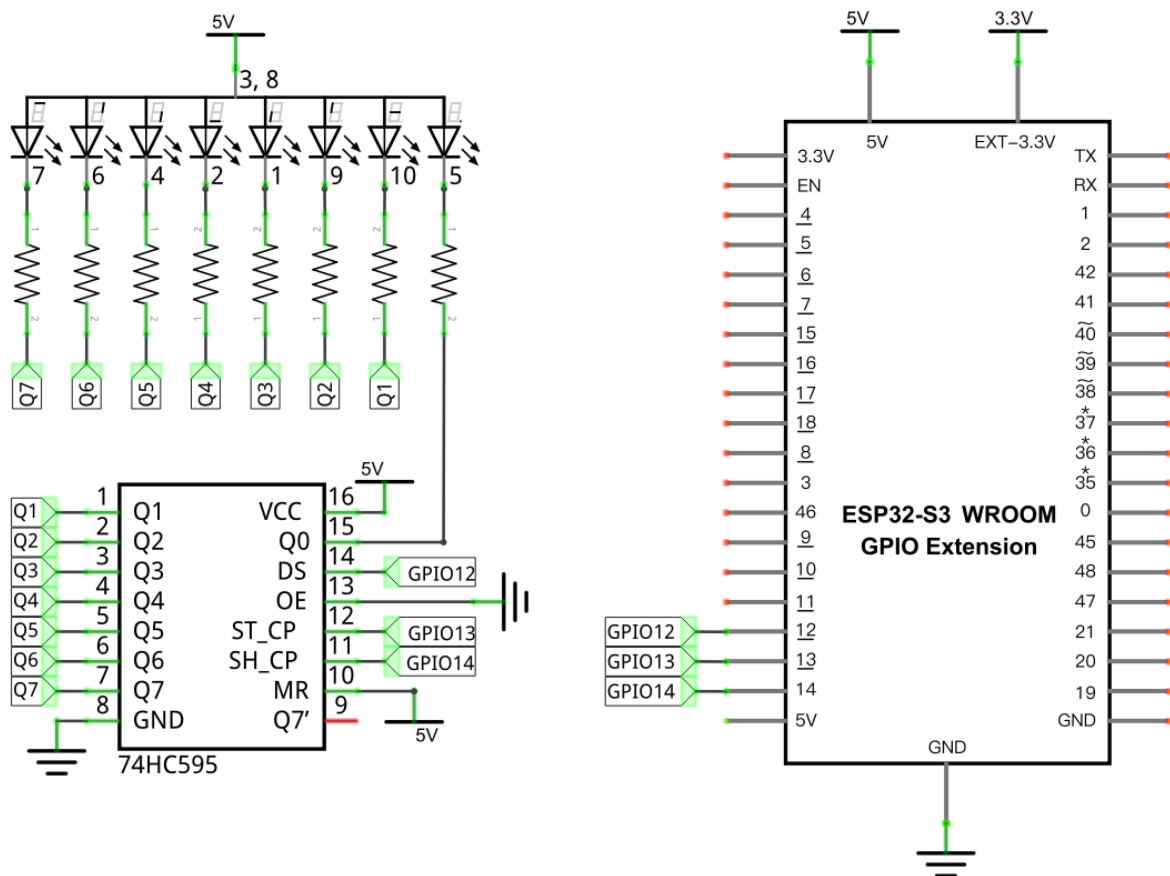

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

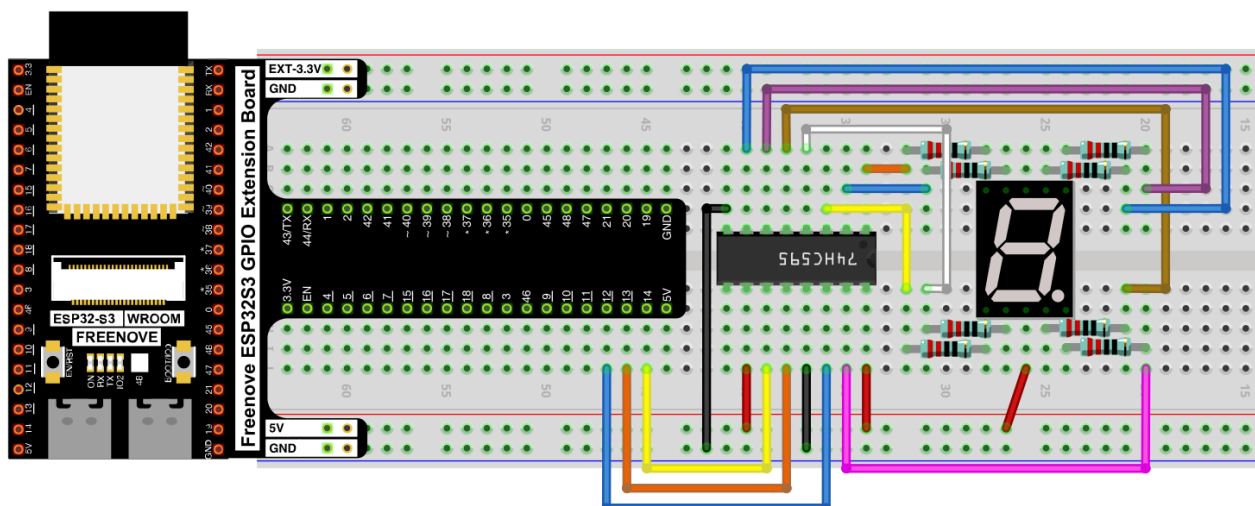

Code


In this section, the 74HC595 is used in the same way as in the previous section, but with different values transferred. We can learn how to master the digital display by sending the code value of "0" - "F".

Move the program folder "**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**" to disk(D) in advance with the path of "**D:/Micropython_Codes**".


Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "15.1_74HC595_and_7_segment_display".

Select "my74HC595.py", right click your mouse to select "Upload to /", wait for "my74HC595.py" to be uploaded to ESP32-S3 and then double click "74HC595_and_7_segment_display.py".

15.1_74HC595_and_7_segment_display

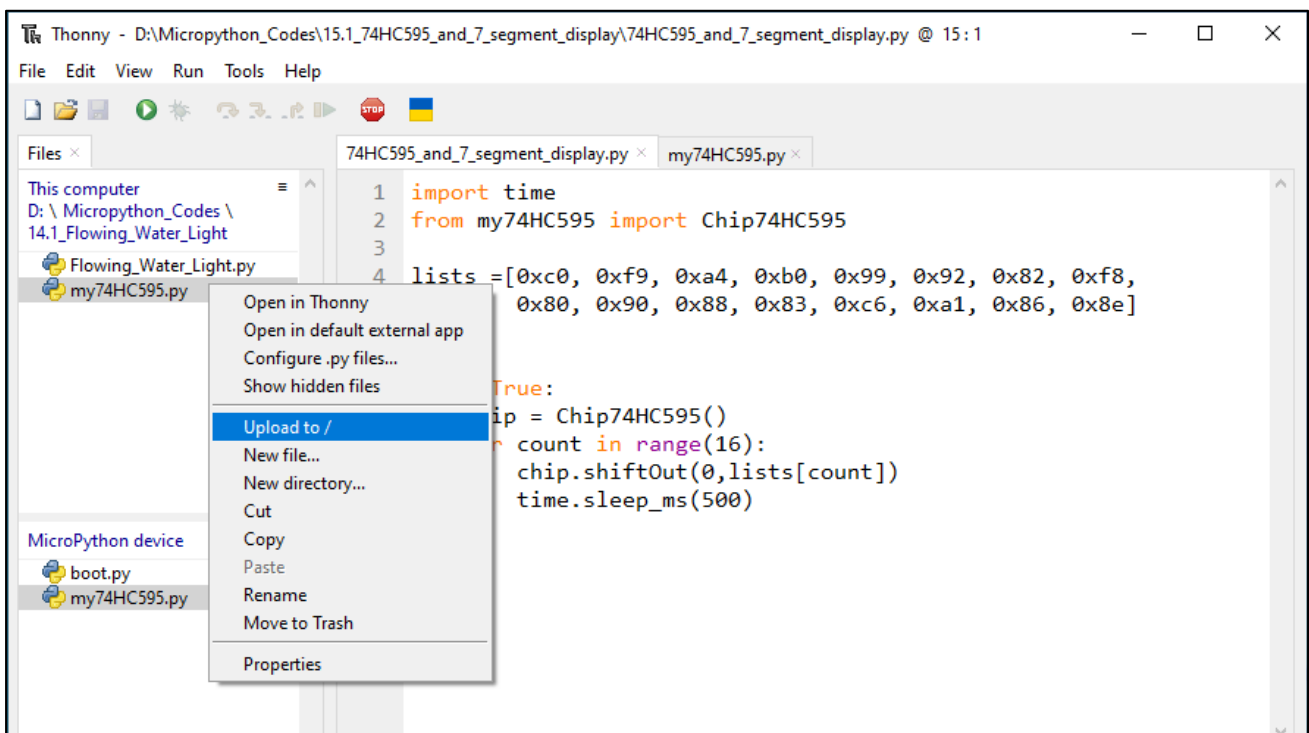

Click "Run current script", and you'll see a 1-bit, 7-segment display displaying 0-f in a loop.

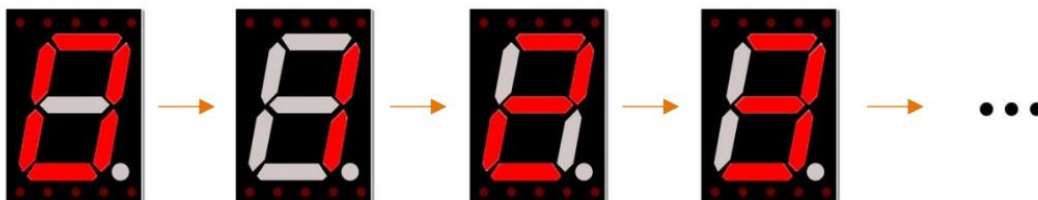

The following is the program code:

```

1  import time
2  from my74HC595 import Chip74HC595
3
4  lists =[0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
5          0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e]
6
7  chip = Chip74HC595(12, 13, 14)
8  try:
9      while True:
10         for count in range(16):
11             chip.shiftOut(0, lists[count])
12             time.sleep_ms(500)
13 except:
14     pass

```

Import time and my74HC595 modules.

```

1  import time
2  from my74HC595 import Chip74HC595

```

Put the encoding "0" - "F" into the list.

```

4  lists =[0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
5          0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e]

```

Define an object, whose pins applies default configuration, to drive 74HC595.

```

7  chip = Chip74HC595(12, 13, 14)

```

Send data of digital tube to 74HC595 chip.

```




11 chip.shiftOut(0, lists[count])

```


Project 15.2 4-Digit 7-Segment Display

Now, let's try to control more digit 7-segment display


Component List

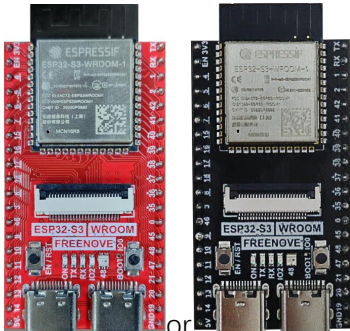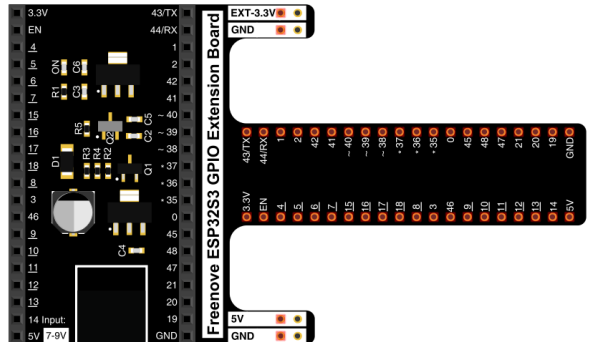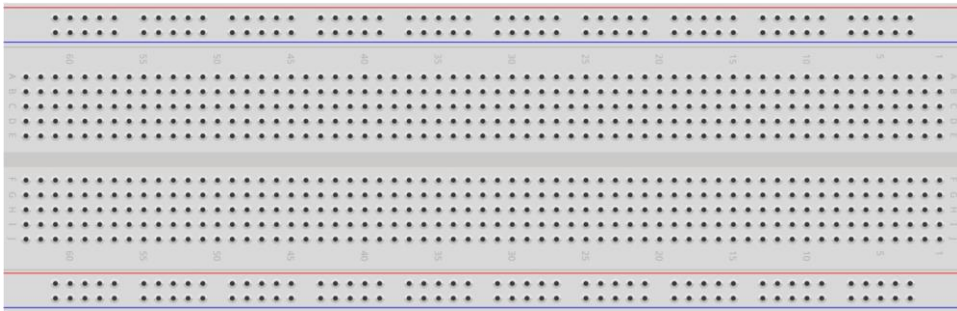ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1	
			
or			
Breadboard x1			
			
74HC595 x1	7-segment display x1	Resistor 220Ω x8	Jumper M/M
			


Component knowledge

4 Digit 7-Segment Display

A 4 Digit 7-segment display integrates four 7-segment displays into one module, therefore it can display more characters. All of the LEDs contained have a common anode and individual cathodes. Its internal structure and pin designation diagram is shown below:

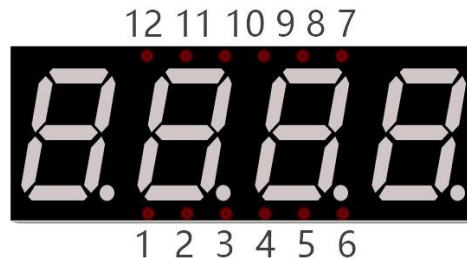

The internal electronic circuit is shown below, and all 8 LED cathode pins of each 7-segment display are connected together.

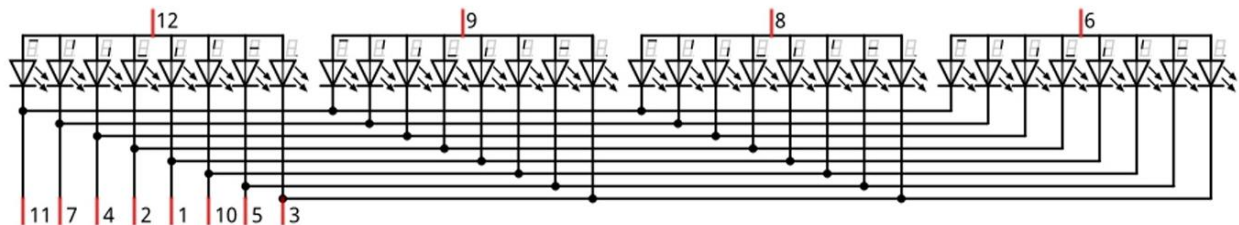


Display method of 4 digit 7-segment display is similar to 1 digit 7-segment display. The difference between them is that the 4-digit displays each Digit is visible in turn, one by one and not together. We need to first send high level to the common end of the first digit display, and send low level to the remaining three common ends, and then send content to 8 LED cathode pins of the first Digit Display. At this time, the first 7-segment display will show visible content and the remaining three will be OFF.


Similarly, the second, third and fourth 7-segment displays will show visible content in turn by scanning the display. Although the four number characters are displayed in turn separately, this process is so fast that it is imperceptible to the naked eye. This is due to the principle of optical afterglow effect and the vision persistence effect in human sight. This is how we can see all 4 number characters at the same time. However, if each number character is displayed for a longer period, you will be able to see that the number characters are displayed separately.

Circuit

Schematic diagram

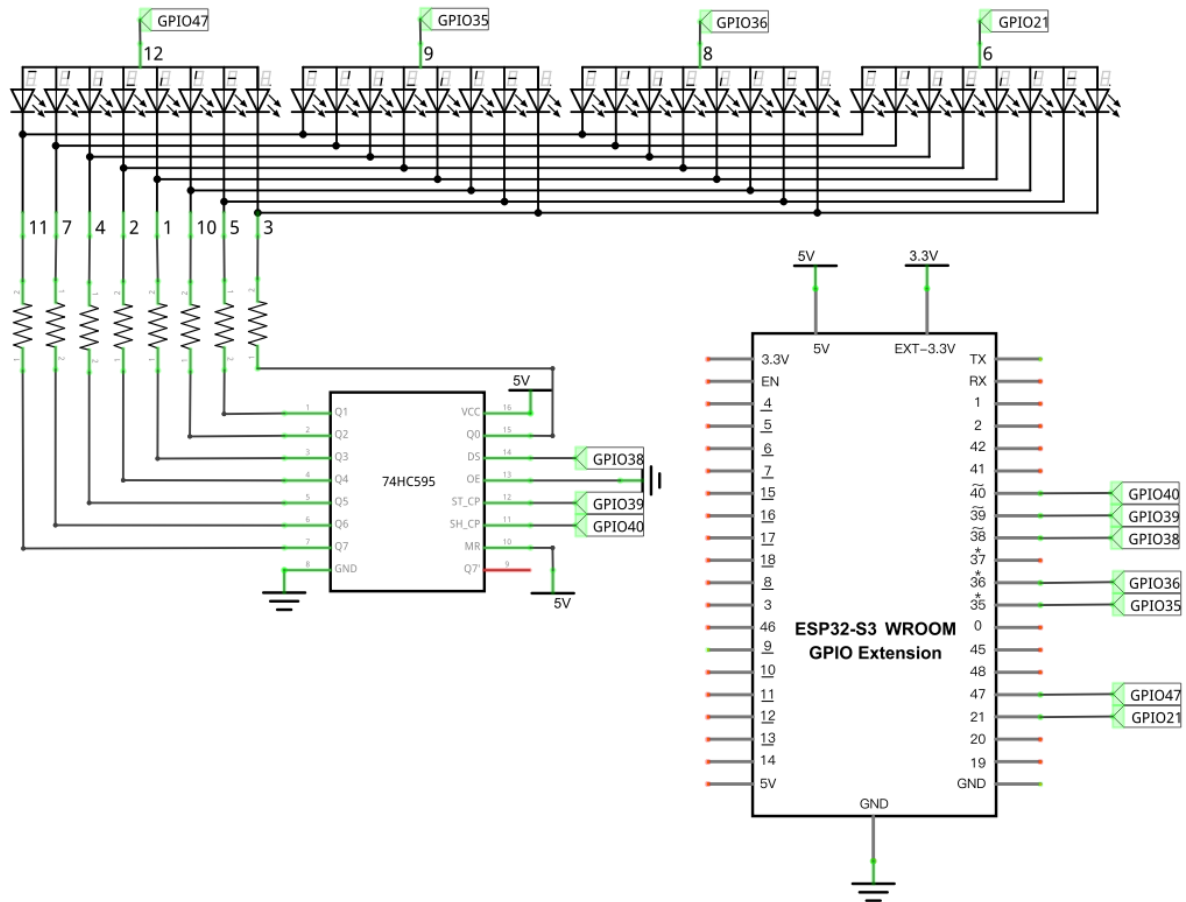

Hardware connection:

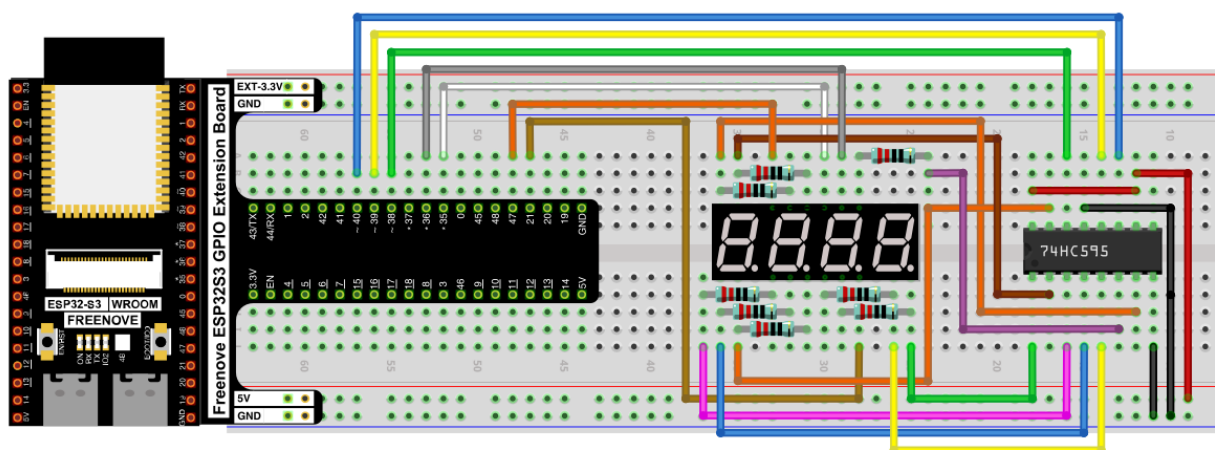


Code

In this code, we use the 74HC595 IC Chip to control the 4-Digit 7-Segment Display, and use the dynamic scanning method to show the changing number characters.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” →

“15.2_4_Digit_7_Segment_Display”. Select “my74HC595.py”, right click your mouse to select “Upload to /”, wait for “my74HC595.py” to be uploaded to ESP32-S3 and double click “4_Digit_7_Segment_Display.py”.

15.2_4_Digit_7_Segment_Display

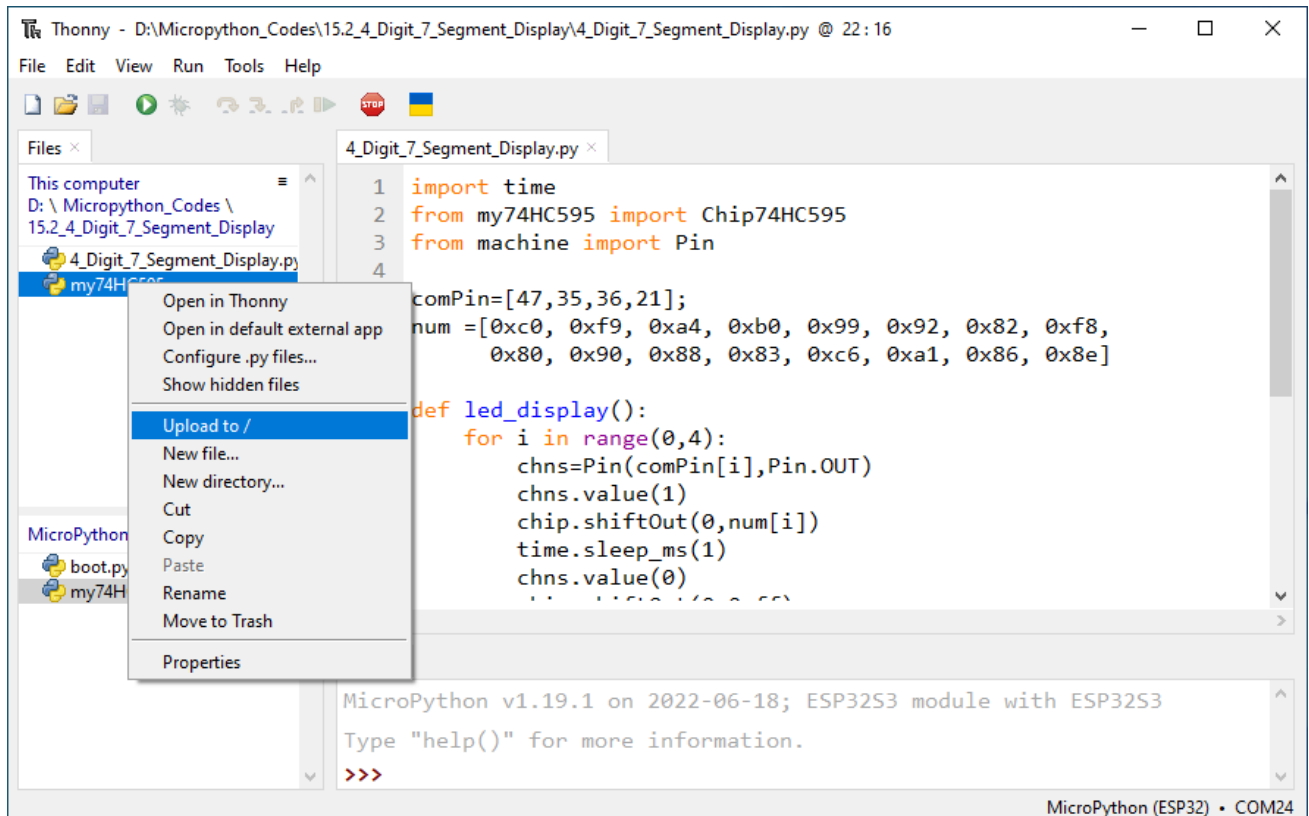

The following is the program code:

```

1  import time
2  from my74HC595 import Chip74HC595
3  from machine import Pin
4
5  comPin = [47, 35, 36, 21]
6  num = [0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
7         0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e]
8
9  def led_display():
10     for i in range(0,4):
11         chns=Pin(comPin[i],Pin.OUT)
12         chip.shiftOut(0,num[i])
13         chns.value(1)
14         time.sleep_ms(1)
15         chns.value(0)
16         chip.shiftOut(0,0xff)
17
18 #Pin(38)-74hc595.ds, Pin(39)-74hc595.st_cp, Pin(40)-74hc595.sh_cp
19 chip = Chip74HC595(38,39,40)
20 try:
21     while True:
22         led_display()
23 except:
24     pass

```

Import time, my74HC595 and Pin modules.

```

1  import time
2  from my74HC595 import Chip74HC595
3  from machine import Pin

```

Define common anode pins for digital tubes and request a list to put character encodings in it.

```

5  comPin = [47, 35, 36, 21]
6  num = [0xc0, 0xf9, 0xa4, 0xb0, 0x99, 0x92, 0x82, 0xf8,
7         0x80, 0x90, 0x88, 0x83, 0xc6, 0xa1, 0x86, 0x8e]

```

Request an object to drive 74HC595 and associate pins with it.

```

19 chip = Chip74HC595(38,39,40)

```

Make the digital tube display "0123".

```

9  def led_display():
10     for i in range(0,4):
11         chns=Pin(comPin[i],Pin.OUT)
12         chip.shiftOut(0,num[i])
13         chns.value(1)
14         time.sleep_ms(1)
15         chns.value(0)
16         chip.shiftOut(0,0xff)

```






Chapter 16 74HC595 & LED Matrix

Thus far we have learned how to use the 74HC595 IC chip to control the LED bar graph and the 7-segment display. We will now use 74HC595 IC chips to control a LED matrix.

Project 16.1 LED Matrix

In this project, we will use two 74HC595 IC chips to control a monochrome (one color) (8X8) LED matrix to make it display both simple graphics and characters.

 
Component List

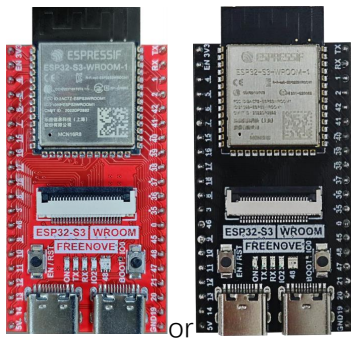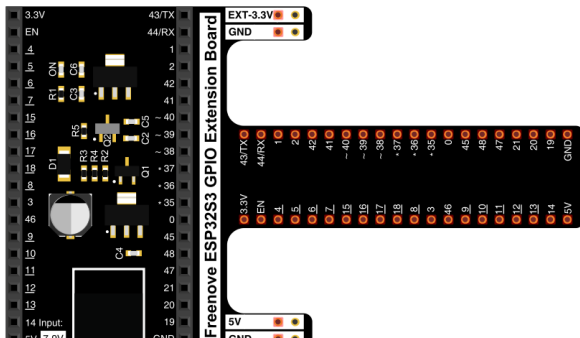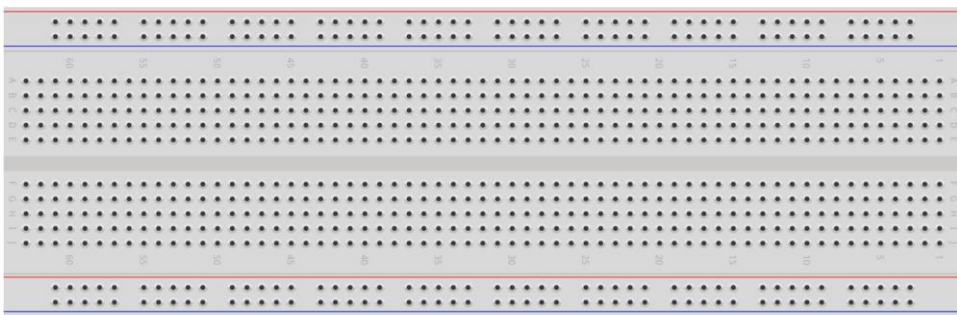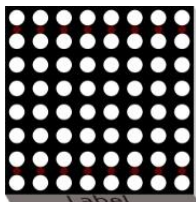ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 		
Breadboard x1 			
74HC595 x2 	8*8 LEDMatrix x1 	Resistor 220Ω x8 	Jumper M/M 

Component knowledge

LED Matrix


A LED matrix is a rectangular display module that consists of a uniform grid of LEDs. The following is an 8X8 monochrome (one color) LED matrix containing 64 LEDs (8 rows by 8 columns).

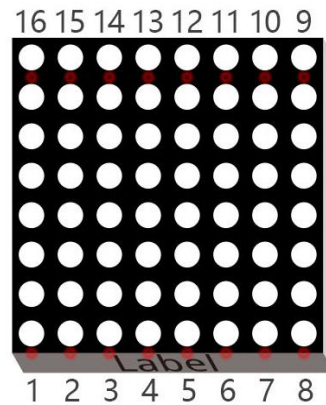

In order to facilitate the operation and reduce the number of ports required to drive this component, the positive poles of the LEDs in each row and negative poles of the LEDs in each column are respectively connected together inside the LED matrix module, which is called a common anode. There is another arrangement type. Negative poles of the LEDs in each row and the positive poles of the LEDs in each column are respectively connected together, which is called a common cathode.

The LED matrix that we use in this project is a common anode LED matrix.


Connection mode of common anode

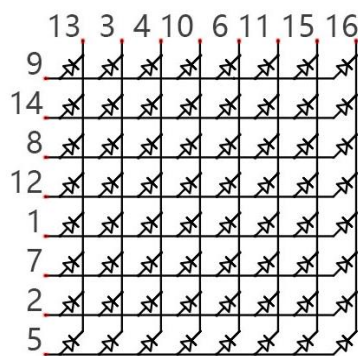

Connection mode of common cathode



Here is how a common anode LED matrix works. First, choose 16 ports on ESP32-S3 board to connect to the 16 ports of LED matrix. Configure one port in columns for low level, which makes that column the selected port. Then configure the eight port in the row to display content in the selected column. Add a delay value and then select the next column that outputs the corresponding content. This kind of operation by column is called scan. If you want to display the following image of a smiling face, you can display it in 8 columns, and each column is represented by one byte.

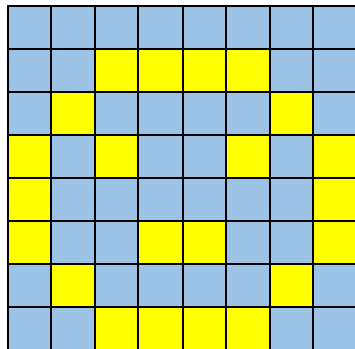

1	2	3	4	5	6	7	8
0	0	0	0	0	0	0	0
0	0	1	1	1	1	0	0
0	1	0	0	0	0	1	0
1	0	1	0	0	1	0	1
1	0	0	0	0	0	0	1
1	0	0	1	1	0	0	1
0	1	0	0	0	0	1	0
0	0	1	1	1	1	0	0

Column	Binary	Hexadecimal
1	0001 1100	0x1c
2	0010 0010	0x22
3	0101 0001	0x51
4	0100 0101	0x45
5	0100 0101	0x45
6	0101 0001	0x51
7	0010 0010	0x22
8	0001 1100	0x1c


To begin, display the first column, then turn off the first column and display the second column. (and so on) turn off the seventh column and display the 8th column, and then start the process over from the first column again like the control of LED bar graph project. The whole process will be repeated rapidly in a loop. Due to the principle of optical afterglow effect and the vision persistence effect in human sight, we will see a picture of a smiling face directly rather than individual columns of LEDs turned ON one column at a time (although in fact this is the reality we cannot perceive).

Then, to save the number of GPIO, we use a 74HC595. When the first column is turned ON, set the lights that need to be displayed in the first column to "1", otherwise to "0", as shown in the above example, where the value of the first column is 0x1c. This value is sent to 74HC595 to control the display of the first column of the LED matrix. Following the above idea, turn OFF the display of the first column, then turn ON the second column, and then send the value of the second column to 74HC595 Until each column is displayed, the LED matrix is displayed again from the first column.


Circuit

In circuit of this project, the power pin of the 74HC595 IC chip is connected to 3.3V. It can also be connected to 5V to make LED matrix brighter.

Schematic diagram

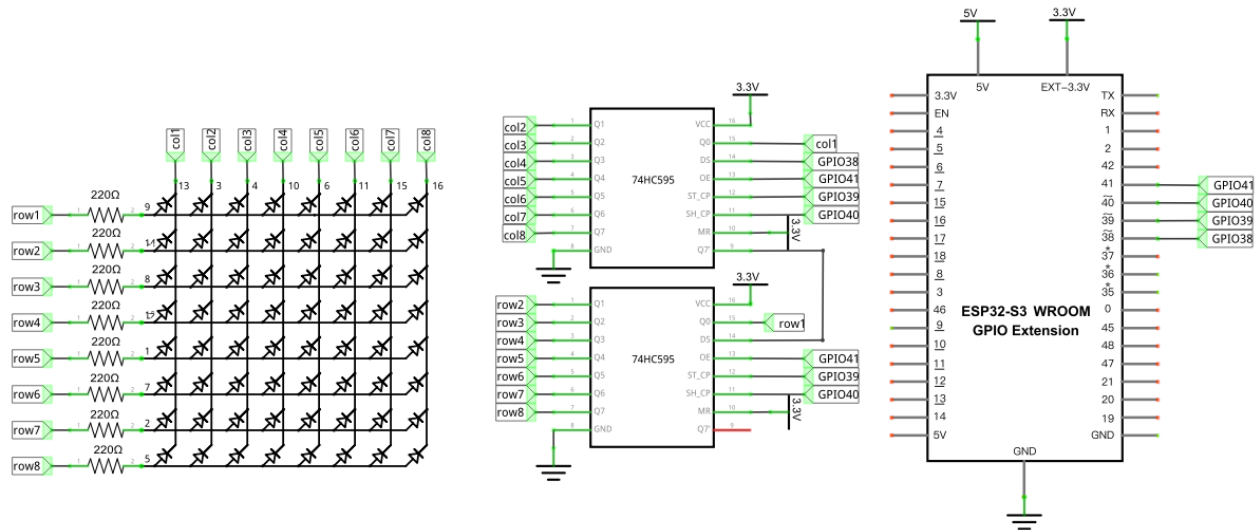

Hardware connection:

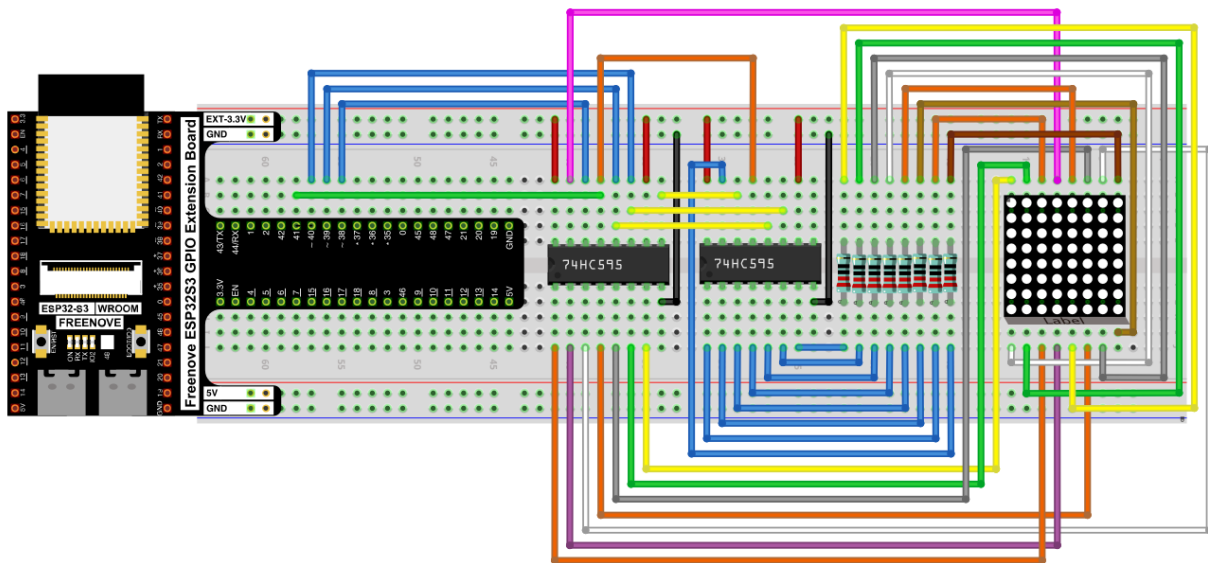

The following code will make LEDMatrix display a smiling face, and then display scrolling character "0-F". Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "Micropython_Codes". Select "HC595.py", right click your mouse to select "Upload to /", wait for "HC595.py" to be uploaded to ESP32-S3 and double click "LED_Matrix.py".

Thonny - D:\Micropython_Codes\15.3_LED_Matrix\LED_Matrix.py @ 32: 35

File Edit View Run Tools Help

Files x LED_Matrix.py x

This computer
D: \ Micropython_Codes \
15.3_LED_Matrix

LED_Matrix.py
my74HC595.py

MicroPython device
boot.py
my74HC595.py

1 import time
2 from my74HC595 import Chip74HC595
3
4 smilingFace=[0x1C, 0x22, 0x51, 0x45, 0x45, 0x51, 0x22, 0x14]#^_^#

Open in Thonny
Open in default external app
Configure .py files...
Show hidden files
Upload to /
New file...
New directory...
Cut
Copy
Paste
Rename
Move to Trash
Properties

>>> %Run -c \$EDITOR_CONTENT

MicroPython (ESP32) • COM24

Any concerns?  support@freenove.com

The following is the program code:

```

1  import time
2  from my74HC595 import Chip74HC595
3
4  smilingFace=[0x1C, 0x22, 0x51, 0x45, 0x45, 0x51, 0x22, 0x1C]^_^#
5  numdata = [
6      0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, # " "
7      0x00, 0x00, 0x3E, 0x41, 0x41, 0x3E, 0x00, 0x00, # "0"
8      0x00, 0x00, 0x21, 0x7F, 0x01, 0x00, 0x00, 0x00, # "1"
9      0x00, 0x00, 0x23, 0x45, 0x49, 0x31, 0x00, 0x00, # "2"
10     0x00, 0x00, 0x22, 0x49, 0x49, 0x36, 0x00, 0x00, # "3"
11     0x00, 0x00, 0x0E, 0x32, 0x7F, 0x02, 0x00, 0x00, # "4"
12     0x00, 0x00, 0x79, 0x49, 0x49, 0x46, 0x00, 0x00, # "5"
13     0x00, 0x00, 0x3E, 0x49, 0x49, 0x26, 0x00, 0x00, # "6"
14     0x00, 0x00, 0x60, 0x47, 0x48, 0x70, 0x00, 0x00, # "7"
15     0x00, 0x00, 0x36, 0x49, 0x49, 0x36, 0x00, 0x00, # "8"
16     0x00, 0x00, 0x32, 0x49, 0x49, 0x3E, 0x00, 0x00, # "9"
17     0x00, 0x00, 0x3F, 0x44, 0x44, 0x3F, 0x00, 0x00, # "A"
18     0x00, 0x00, 0x7F, 0x49, 0x49, 0x36, 0x00, 0x00, # "B"
19     0x00, 0x00, 0x3E, 0x41, 0x41, 0x22, 0x00, 0x00, # "C"
20     0x00, 0x00, 0x7F, 0x41, 0x41, 0x3E, 0x00, 0x00, # "D"
21     0x00, 0x00, 0x7F, 0x49, 0x49, 0x41, 0x00, 0x00, # "E"
22     0x00, 0x00, 0x7F, 0x48, 0x48, 0x40, 0x00, 0x00, # "F"
23     0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00, 0x00 # " "
24 ]
25
26 '''
27 Pin(38)      -   74HC595(1).ds,
28 Pin(39)      -   74HC595(1).st_cp,
29 Pin(40)      -   74HC595(1).sh_cp,
30 Pin(41)      -   74HC595(1).oe
31
32 74HC595(1).q7' -   74HC595(2).ds,
33 Pin(39)      -   74HC595(2).st_cp,
34 Pin(40)      -   74HC595(2).sh_cp,
35 Pin(41)      -   74HC595(2).oe
36 '''
37 chip = Chip74HC595(38, 39, 40, 41)
38 try:
39     while True:
40         for j in range(100):
41             cols=0x01
42             for i in range(8):
43                 chip.disable()
```

```

44         chip.shiftOut(1, smilingFace[i])
45         chip.shiftOut(1, ~cols)
46         time.sleep_us(500)
47         cols<<=1
48         chip.enable()
49     for i in range(136):
50         for k in range(5):
51             cols=0x01
52             for j in range(i, 8+i):
53                 chip.disable()
54                 chip.shiftOut(1, numdata[j])
55                 chip.shiftOut(0, ~cols)
56                 cols<<=1
57                 chip.enable()
58                 time.sleep_us(500)
59 except:
60     pass

```

Import time and my 74HC595 modules.

```

1  import time
2  from my74HC595 import Chip74HC595

```

Use a nesting of two for loops to display a smiling face.

```

20     for j in range(100):
21         cols=0x01
22         for i in range(8):
23             chip.disable()
24             chip.shiftOut(1, smilingFace[i])
25             chip.shiftOut(1, ~cols)
26             time.sleep_us(500)
27             cols<<=1
28             chip.enable()

```

Use a nesting of two for loops to display "0"- "F".

```

32     for i in range(136):
33         for k in range(5):
34             cols=0x01
35             for j in range(i, 8+i):
36                 chip.disable()
37                 chip.shiftOut(1, numdata[j])
38                 chip.shiftOut(0, ~cols)
39                 cols<<=1
40                 chip.enable()
41                 time.sleep_us(500)

```

The amount of pins of ESP32-S3 is limited, so we need to find ways to save pins. If we use ESP32S3's GPIO to control the LEDMatrix instead of 74HC595, we need 16 pins to drive LED matrix. In this example, we use two 74HC595 chips to drive the LED matrix, requiring only three pins, so that we could save the rest of 13 pins.

Reference

Class HC595

Before each use of HC595, please make sure HC595.py has been uploaded to "/" of ESP32S3, and then add the statement "**import HC595**" to the top of the python file.

Chip74HC595(): The object to control LEDMatrix.

chip=Chip74HC595() or **chip=Chip74HC595(15,2,4,5)**

set_bit_data(data): Write data to 74HC595.

clear(): Clear the latch data of 74HC595.





Chapter 17 Relay & Motor


In this chapter, we will learn a kind of special switch module, relay module.

Project 17.1 Relay & Motor

In this project, we will use a push button switch indirectly to control the motor via a relay.

Component List

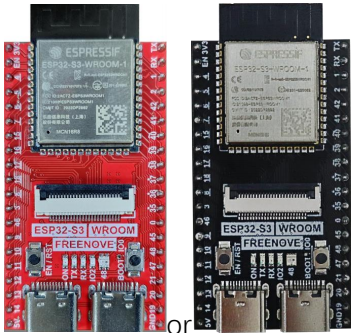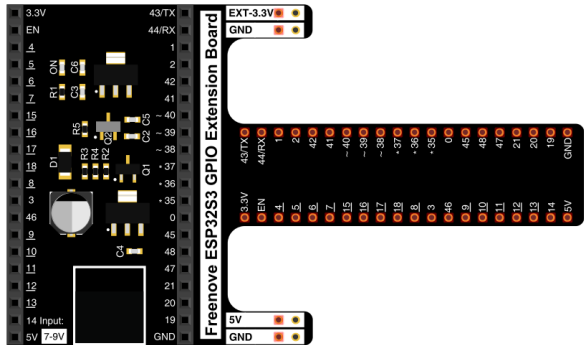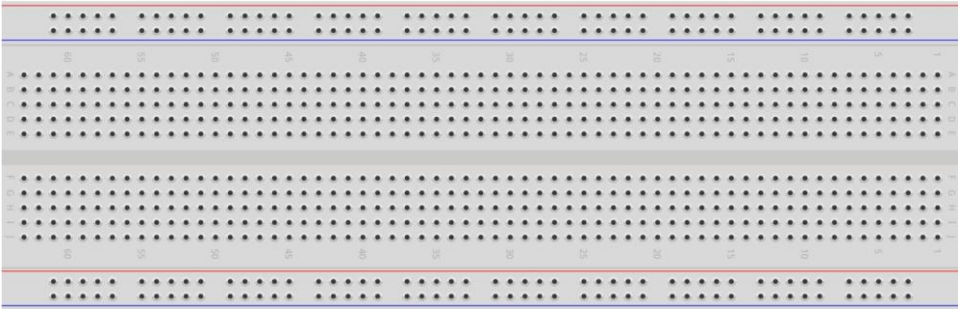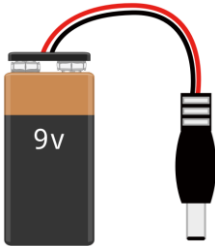ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper M/M 	9V battery (prepared by yourself) & battery line 


 
Resistor 10kΩ x2		Resistor 1kΩ x1		Resistor 220Ω x1	
					
NPN transistor x1	Relay x1	Motor x1	Push button x1	LED x1	Diode x1
					

Component knowledge

Relay

A relay is a safe switch which can use low power circuit to control high power circuit. It consists of electromagnet and contacts. The electromagnet is controlled by low power circuit and contacts are used in high power circuit. When the electromagnet is energized, it will attract contacts.

The following is a schematic diagram of a common relay and the feature and circuit symbol of a 5V relay used in this project:

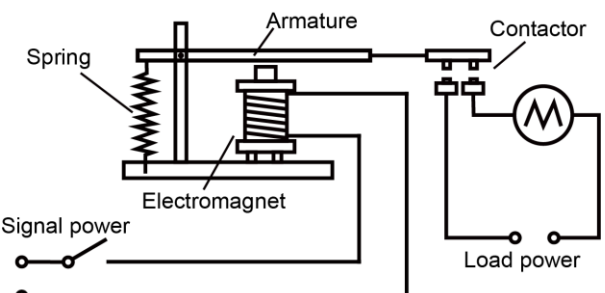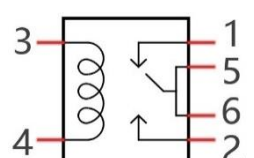Diagram	Feature:	Symbol
		

Pin 5 and pin 6 are connected to each other inside. When the coil pins 3 and 4 get connected to 5V power supply, pin 1 will be disconnected to pin 5&6 and pin 2 will be connected to pin 5&6. So pin 1 is called close end, pin 2 is called open end.


Inductor

The symbol of Inductance is “L” and the unit of inductance is the “Henry” (H). Here is an example of how this can be encountered: 1H=1000mH, 1mH=1000μH.

An inductor is an energy storage device that converts electrical energy into magnetic energy. Generally, it consists of winding coil, with a certain amount of inductance. Inductors hinder the change of current passing through it. When the current passing through it increases, it will attempt to hinder the increasing trend of current; and when the current passing through it decreases, it will attempt to hinder the decreasing trend of current. So the current passing through inductor is not transient.




The reference circuit for relay is as follows. The coil of relays can be equivalent to that of inductors, when the transistor disconnects power supply of the relay, the current in the coil of the relay can't stop immediately, causing an impact on power supply. So a parallel diode will get connected to both ends of relay coil pin in reversing direction, then the current will pass through diode, avoiding the impact on power supply.

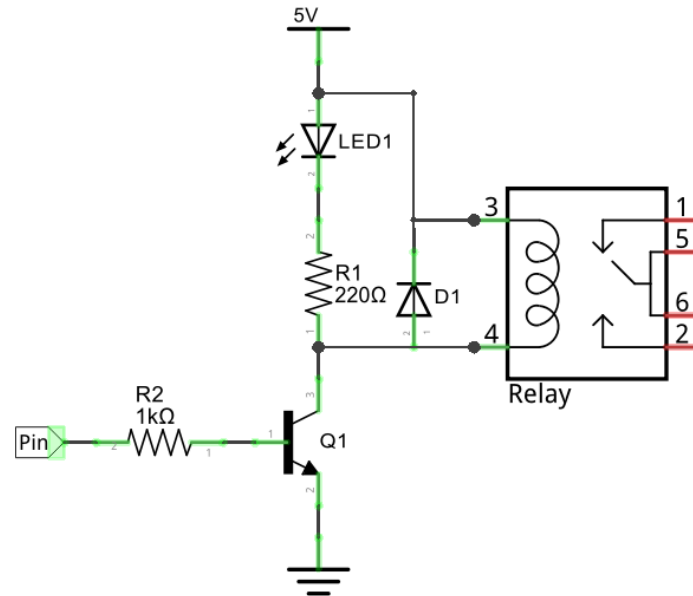


Motor

A motor is a device that converts electrical energy into mechanical energy. Motor consists of two parts: stator and rotor. When motor works, the stationary part is stator, and the rotating part is rotor. Stator is usually the outer case of motor, and it has terminals to connect to the power. Rotor is usually the shaft of motor, and can drive other mechanical devices to run. Diagram below is a small DC motor with two pins.

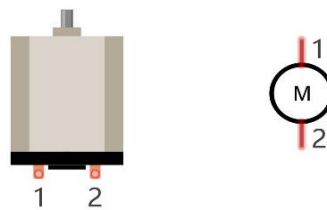


When a motor gets connected to the power supply, it will rotate in one direction. Reverse the polarity of power supply, then the motor rotates in opposite direction.

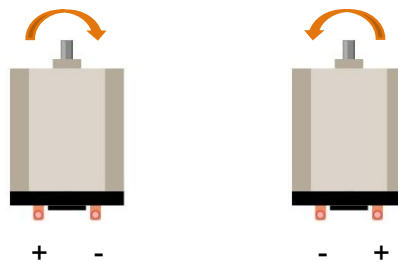


Circuit

Schematic diagram

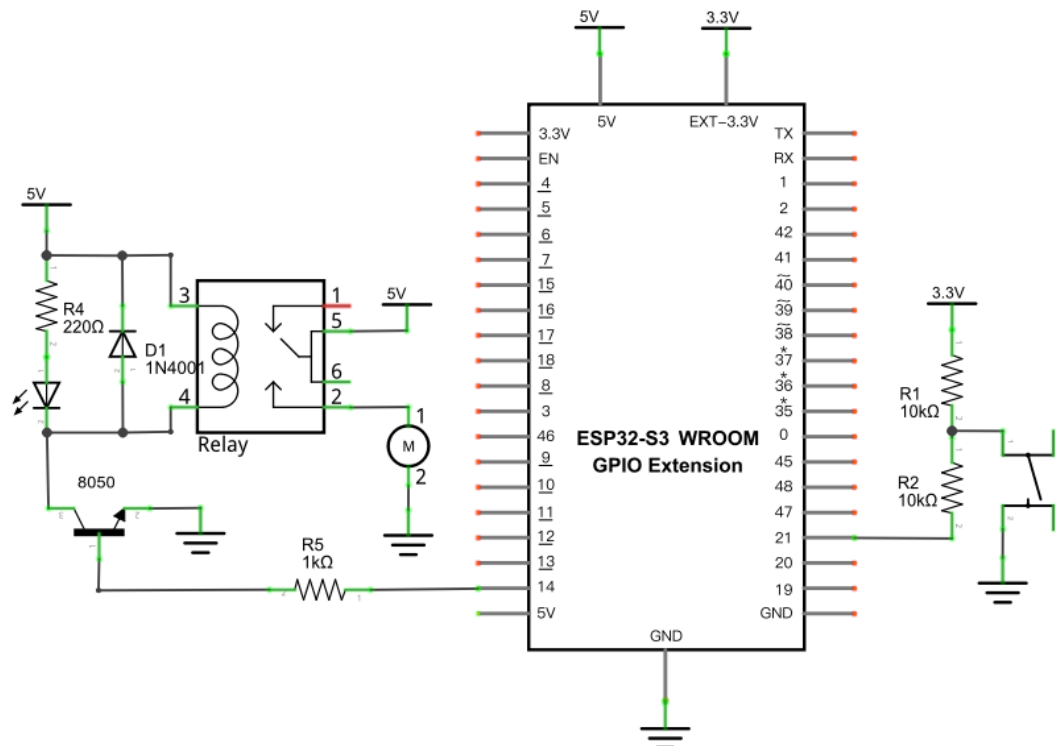

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

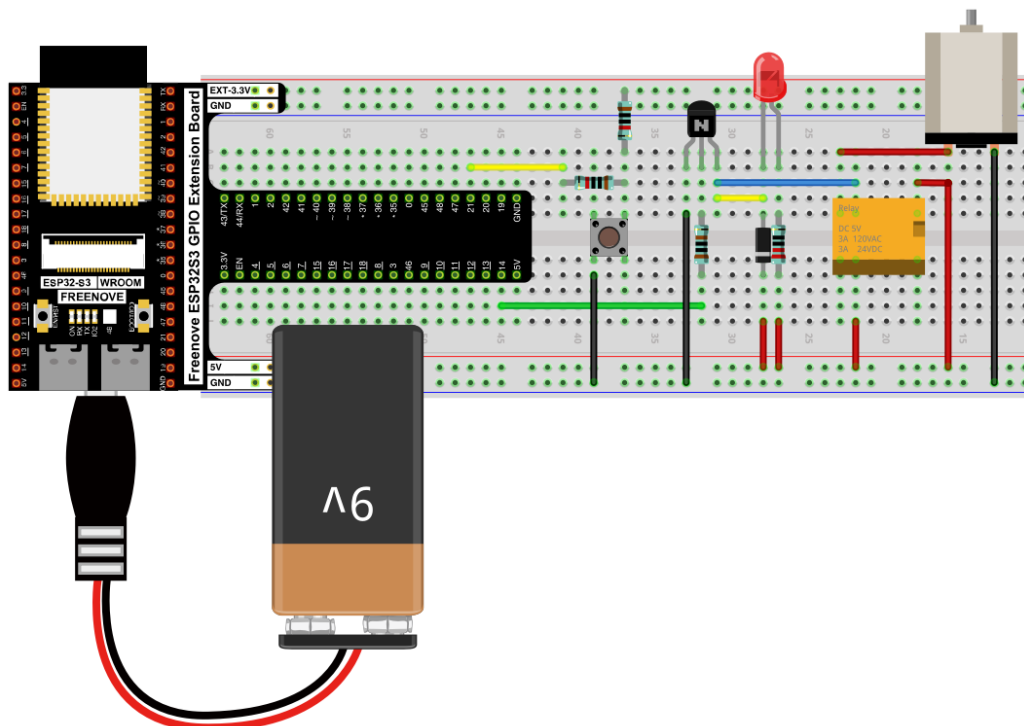

Note: the motor circuit uses A large current, about 0.2-0.3A without load. We recommend that you use a 9V battery to power the extension board.

Any concerns? ✉ support@freenove.com

Code

Use buttons to control the relays and motors.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “17.1_Relay_And_Motor” and double click “Relay_And_Motor.py”.

17.1_Relay_And_Motor



```

1 import time
2 from machine import Pin
3
4 relay = Pin(14, Pin.OUT)
5 button = Pin(21, Pin.IN, Pin.PULL_UP)
6
7 def reverseRelay():
8     if relay.value():
9         relay.value(0)
10    else:
11        relay.value(1)
12
13 while True:
14     if not button.value():
15         reverseRelay()

```

Shell

```

MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3
Type "help()" for more information.
>>>

```

MicroPython (ESP32) • COM24

Click “Run current script”. When the DC Motor is connected to a power supply, it will rotate in one direction. If you reverse the polarity of the power supply, the DC Motor will rotate in opposite direction.



The following is the program code:

```
1  import time
2  from machine import Pin
3
4  relay = Pin(14, Pin.OUT)
5  button = Pin(21, Pin.IN, Pin.PULL_UP)
6
7  def reverseRelay():
8      if relay.value():
9          relay.value(0)
10     else:
11         relay.value(1)
12
13 while True:
14     if not button.value():
15         time.sleep_ms(20)
16         if not button.value():
17             reverseRelay()
18             while not button.value():
19                 time.sleep_ms(20)
```

This section of code is basically the same as that of project Tablelamp. If you don't understand the program, you can click [here](#) to go back to the Tablelamp and study again.





Chapter 17.2 Motor & Driver



In this chapter, we will learn about DC motors and DC motor drivers and how to control the speed and direction of a DC motor.

Project 17.2 Control Motor with Potentiometer

Control the direction and speed of the motor with a potentiometer.

Component List

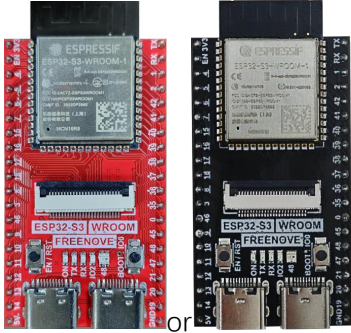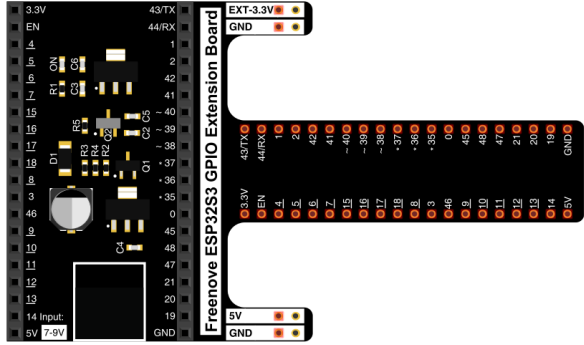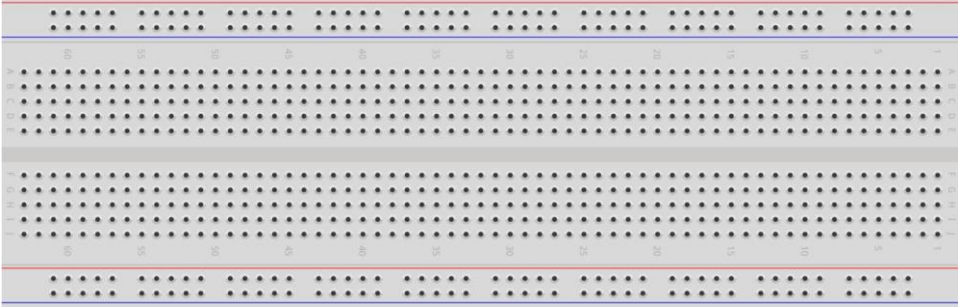
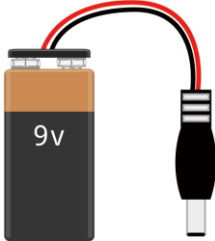
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper M/M 	9V battery (prepared by yourself) & battery line 

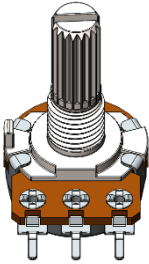 Rotary potentiometer x1 	Motor x1 	L293D 
--	---	--

Component knowledge

L293D

L293D is an IC chip (Integrated Circuit Chip) with a 4-channel motor drive. You can drive a unidirectional DC motor with 4 ports or a bi-directional DC motor with 2 ports or a stepper motor (stepper motors are covered later in this Tutorial).

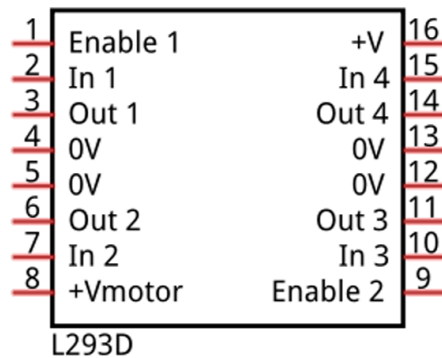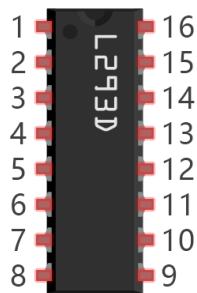


Port description of L293D module is as follows:

Pin name	Pin number	Description
In x	2, 7, 10, 15	Channel x digital signal input pin
Out x	3, 6, 11, 14	Channel x output pin, input high or low level according to In x pin, get connected to +Vmotor or 0V
Enable1	1	Channel 1 and channel 2 enable pin, high level enable
Enable2	9	Channel 3 and channel 4 enable pin, high level enable
0V	4, 5, 12, 13	Power cathode (GND)
+V	16	Positive electrode (VCC) of power supply, supply voltage 3.0~36V
+Vmotor	8	Positive electrode of load power supply, provide power supply for the Out pin x, the supply voltage is +V~36V


For more detail, please refer to the datasheet for this IC Chip.

When using L293D to drive DC motor, there are usually two connection options.

The following connection option uses one channel of the L239D, which can control motor speed through the PWM, However the motor then can only rotate in one direction.

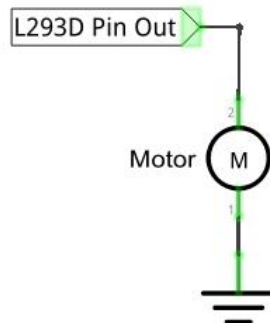

The following connection uses two channels of the L239D: one channel outputs the PWM wave, and the other channel connects to GND, therefore you can control the speed of the motor. When these two channel signals are exchanged, not only controls the speed of motor, but also can control the steering of the motor.

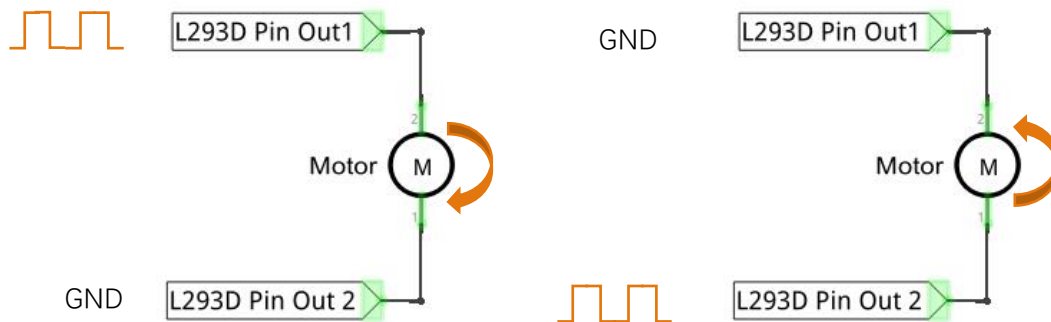


In practical use the motor is usually connected to channel 1 and 2 by outputting different levels to in1 and in2 to control the rotational direction of the motor, and output to the PWM wave to Enable1 port to control the motor's rotational speed. If the motor is connected to channel 3 and 4 by outputting different levels to in3 and in4 to control the motor's rotation direction, and output to the PWM wave to Enable2 pin to control the motor's rotational speed.


Circuit

Use caution when connecting this circuit, because the DC motor is a high-power component, do not use the power provided by the ESP32-S3 to power the motor directly, which may cause permanent damage to your ESP32-S3! The logic circuit can be powered by the ESP32-S3 power or an external power supply, which should share a common ground with ESP32-S3.

Schematic diagram

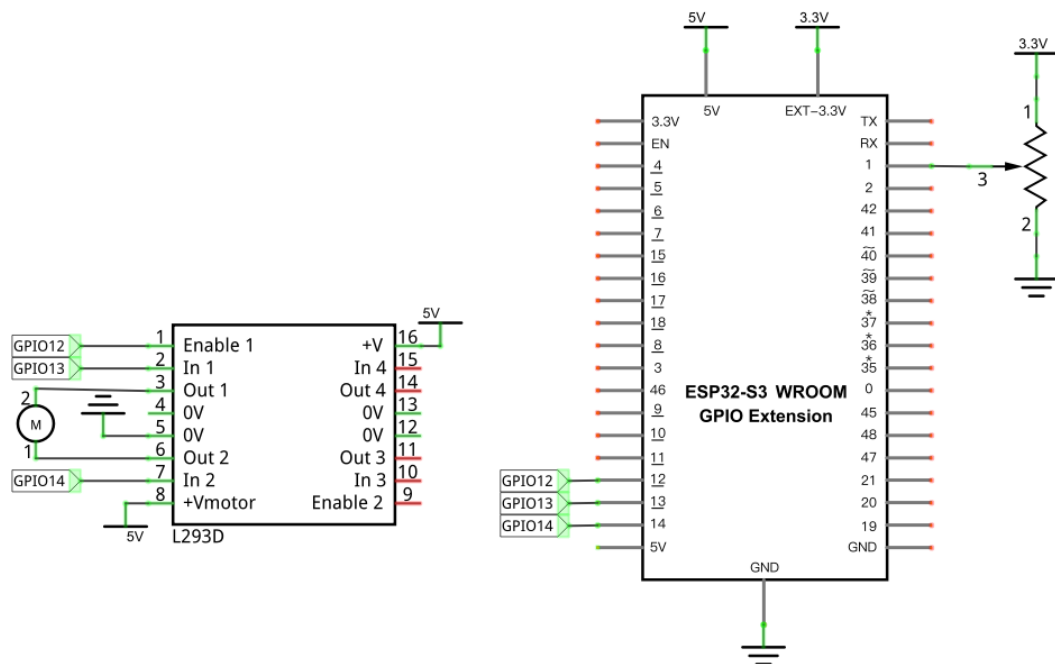

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

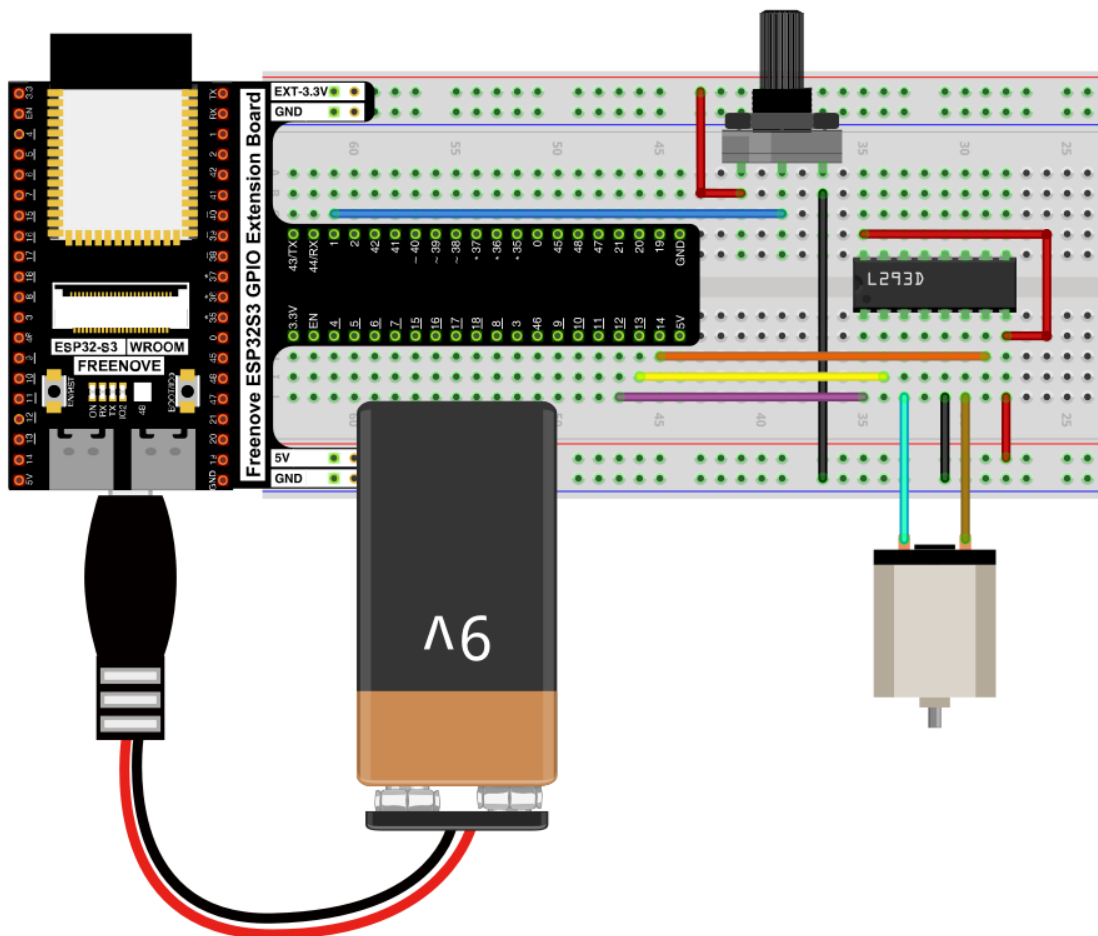

Note: the motor circuit uses A large current, about 0.2-0.3A without load. We recommend that you use a 9V battery to power the extension board.


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “17.2_Motor_And_Driver” and double click “Motor_And_Driver.py”.

17.2_Motor_And_Driver

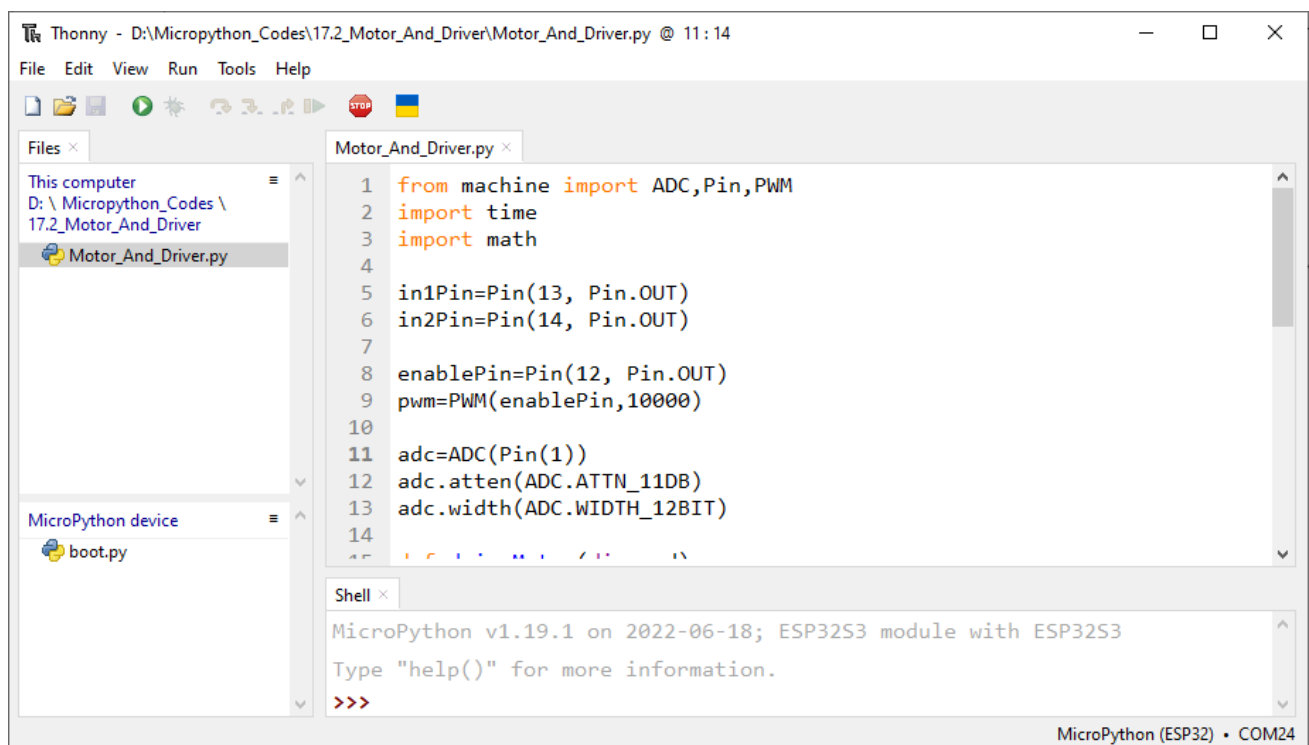

The screenshot shows the Thonny IDE interface. The main editor displays the following Python code in `Motor_And_Driver.py`:




```
1 from machine import ADC,Pin,PWM
2 import time
3 import math
4
5 in1Pin=Pin(13, Pin.OUT)
6 in2Pin=Pin(14, Pin.OUT)
7
8 enablePin=Pin(12, Pin.OUT)
9 pwm=PWM(enablePin,10000)
10
11 adc=ADC(Pin(1))
12 adc.atten(ADC.ATTN_11DB)
13 adc.width(ADC.WIDTH_12BIT)
14
```

The left sidebar shows the file explorer with the path `D:\Micropython_Codes\17.2_Motor_And_Driver\Motor_And_Driver.py` selected. The bottom panel shows the MicroPython shell with the following output:

```
MicroPython v1.19.1 on 2022-06-18; ESP32S3 module with ESP32S3
Type "help()" for more information.
>>>
```

The status bar at the bottom right indicates "MicroPython (ESP32) • COM24".

Click “Run current script”, rotate the potentiometer in one direction and the motor speeds up slowly in one direction. Rotate the potentiometer in the other direction and the motor will slow down to stop. And then rotate it in the original direction to accelerate the motor.

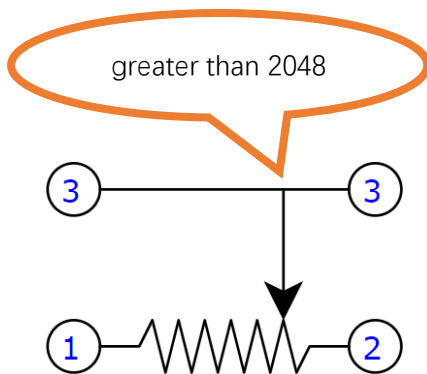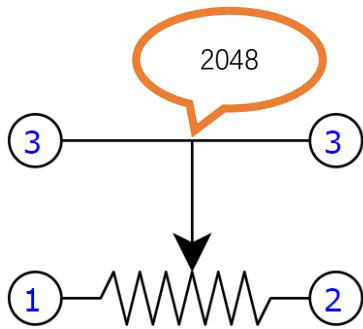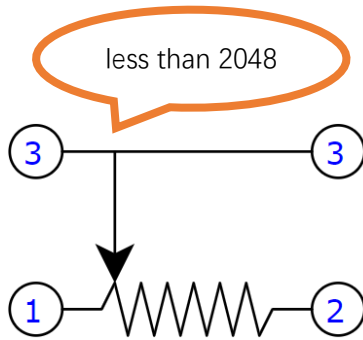

The following is the Code:

```
1  from machine import ADC, Pin, PWM
2  import time
3  import math
4
5  in1Pin=Pin(13, Pin.OUT)
6  in2Pin=Pin(14, Pin.OUT)
7
8  enablePin=Pin(12, Pin.OUT)
9  pwm=PWM(enablePin, 10000)
10
11 adc=ADC(Pin(1))
12 adc.atten(ADC.ATTN_11DB)
13 adc.width(ADC.WIDTH_12BIT)
14
15 def driveMotor(dir, spd):
16     if dir :
17         in1Pin.value(1)
18         in2Pin.value(0)
19     else :
20         in1Pin.value(0)
21         in2Pin.value(1)
22     pwm.duty(spd)
23
24 try:
25     while True:
26         potenVal = adc.read()
27         rotationSpeed = potenVal - 2048
28         if (potenVal > 2048):
29             rotationDir = 1;
30         else:
31             rotationDir = 0;
32         rotationSpeed=int(math.fabs((potenVal-2047)//2)-1)
33         driveMotor(rotationDir, rotationSpeed)
34         time.sleep_ms(10)
35 except:
36     adc.deinit()
37     pwm.deinit()
```

The ADC of ESP32-S3 has a 12-bit accuracy, corresponding to a range from 0 to 4095. In this program, set the number 2048 as the midpoint. If the value of ADC is less than 2048, make the motor rotate in one direction. If the value of ADC is greater than 2048, make the motor rotate in the other direction. Subtract 2048 from the ADC value and take the absolute value, and then divide this result by 2 to be the speed of the motor.

```

26     potenVal = adc.read()
27     rotationSpeed = potenVal - 2048
28     if (potenVal > 2048):
29         rotationDir = 1;
30     else:
31         rotationDir = 0;
32     rotationSpeed=int(math.fabs((potenVal-2047)//2)-1)
33     driveMotor(rotationDir, rotationSpeed)
34     time.sleep_ms(10)

```

Initialize pins of L293D chip.

```

5     in1Pin=Pin(13, Pin.OUT)
6     in2Pin=Pin(14, Pin.OUT)
7
8     enablePin=Pin(12, Pin.OUT)
9     pwm=PWM(enablePin, 10000)

```

Initialize ADC pins, set the range of voltage to 0-3.3V and the acquisition width of data to 0-4095.

```

11    adc=ADC(Pin(1))
12    adc.atten(ADC.ATTN_11DB)
13    adc.width(ADC.WIDTH_12BIT)

```

Function driveMotor is used to control the rotation direction and speed of the motor. The **dir** represents direction while **spd** refers to speed.

```

15    def driveMotor(dir, spd):
16        if dir :
17            in1Pin.value(1)
18            in2Pin.value(0)
19        else :
20            in1Pin.value(0)
21            in2Pin.value(1)
22        pwm.duty(spd)

```



Chapter 18 Servo

Previously, we learned how to control the speed and rotational direction of a motor. In this chapter, we will learn about servos which are a rotary actuator type motor that can be controlled to rotate to specific angles.

Project 18.1 Servo Sweep

First, we need to learn how to make a servo rotate.


Component List

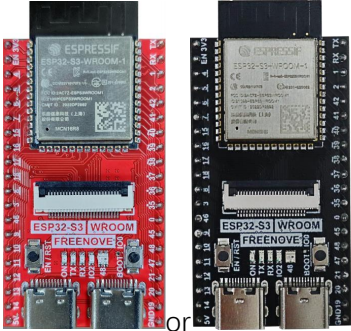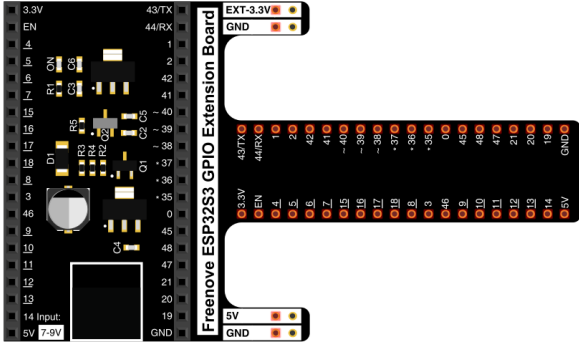ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Servo x1 	Jumper M/M x3 

Component knowledge

Servo

Servo is a compact package which consists of a DC motor, a set of reduction gears to provide torque, a sensor and control circuit board. Most servos only have a 180-degree range of motion via their “horn”. Servos can output higher torque than a simple DC motor alone and they are widely used to control motion in model cars, model airplanes, robots, etc. Servos have three wire leads which usually terminate to a male or female 3-pin plug. Two leads are for electric power: positive (2-VCC, Red wire), negative (3-GND, Brown wire), and the signal line (1-Signal, Orange wire), as represented in the Servo provided in your Kit.

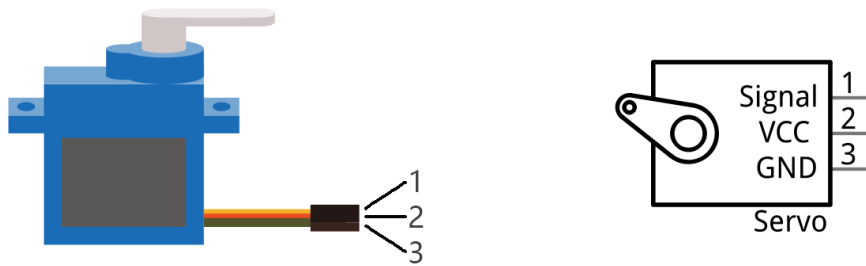

We will use a 50Hz PWM signal with a duty cycle in a certain range to drive the Servo. The lasting time of 0.5ms-2.5ms of PWM single cycle high level corresponds to the servo angle 0 degrees - 180 degree linearly. Part of the corresponding values are as follows:


High level time	Servo angle
0.5ms	0 degree
1ms	45 degree
1.5ms	90 degree
2ms	135 degree
2.5ms	180 degree

When you change the servo signal value, the servo will rotate to the designated angle.


Circuit

Use caution when supplying power to the servo, it should be 5V. Make sure you do not make any errors when connecting the servo to the power supply.

Schematic diagram

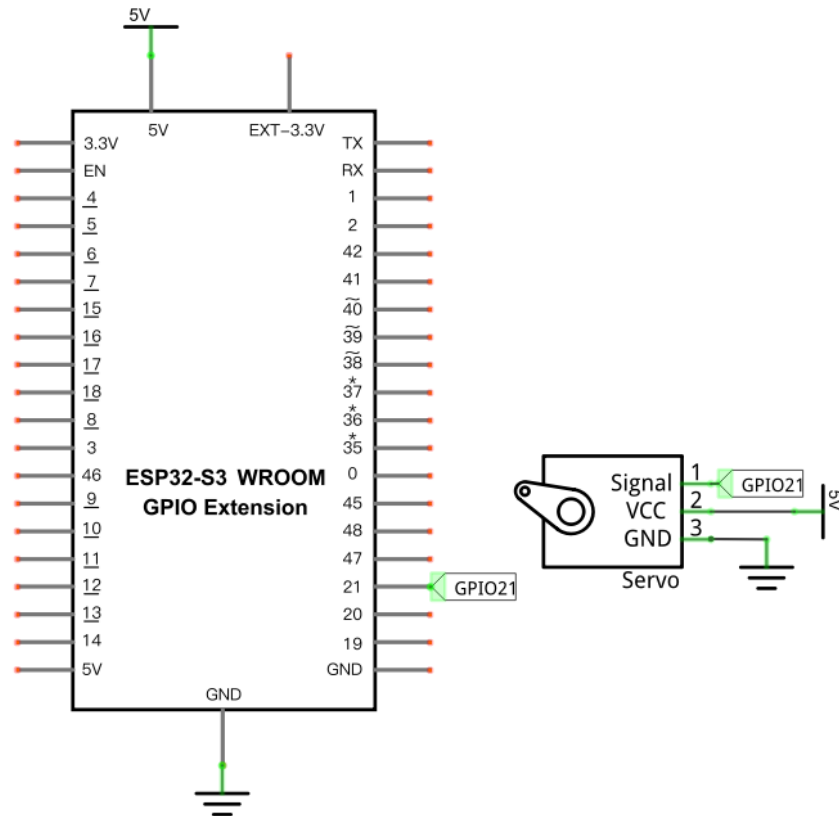

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

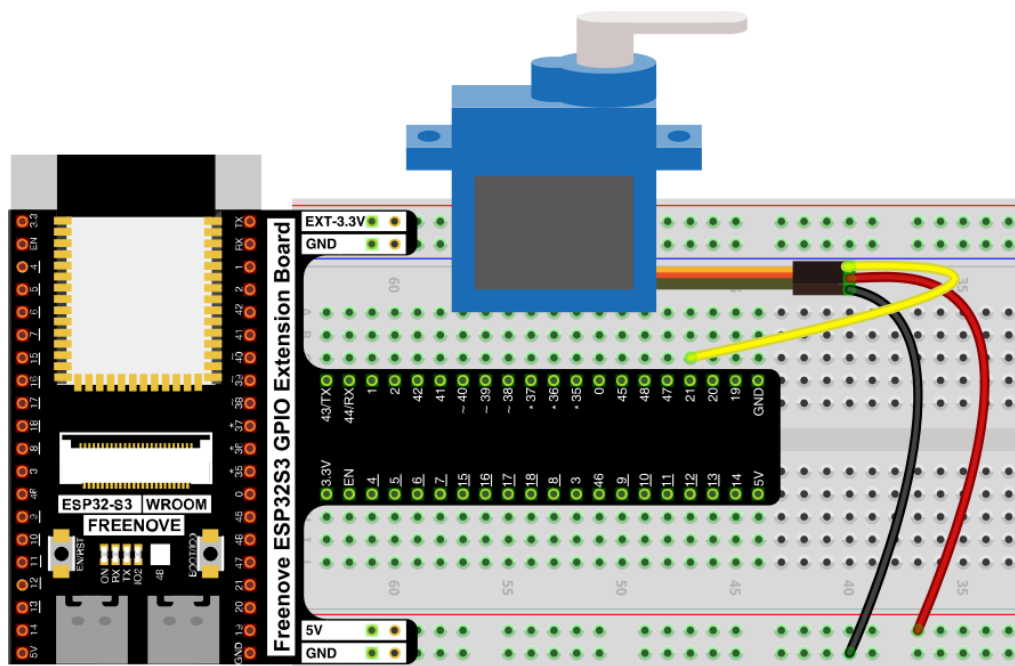


Any concerns? ✉ support@freenove.com

Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “18.1_Servo_Sweep”. Select “myservo.py”, right click your mouse to select “Upload to /”, wait for “myservo.py” to be uploaded to ESP32-S3 and then double click “Servo_Sweep.py”.

18.1_Servo_Sweep

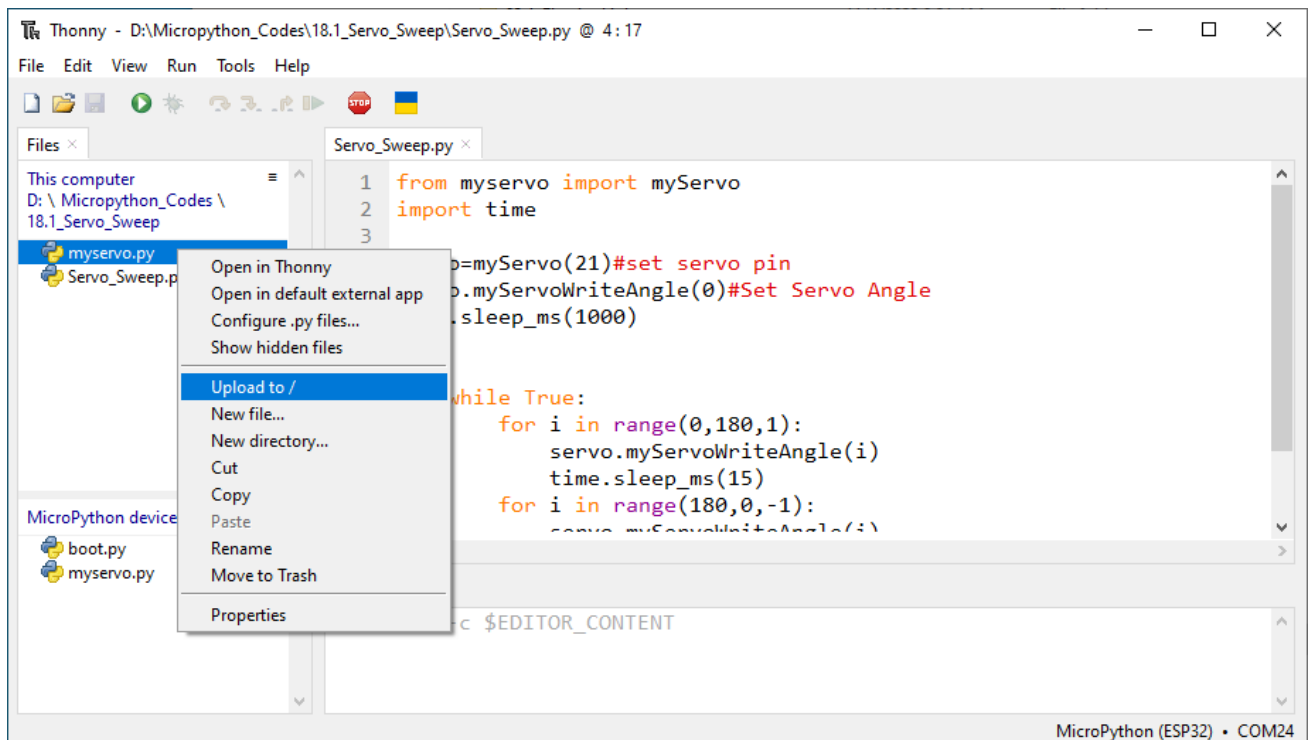

Click “Run current script”, the Servo will rotate from 0 degrees to 180 degrees and then reverse the direction to make it rotate from 180 degrees to 0 degrees and repeat these actions in an endless loop.

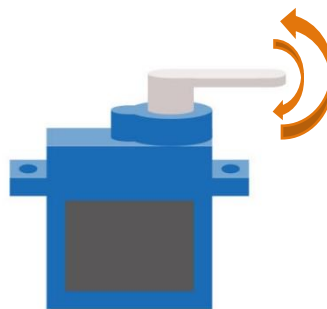

The following is the program code:

```
1  from myservo import myServo
2  import time
3
4  servo=myServo(21) #Set Servo Pin
5  servo.myServoWriteAngle(0) #Set Servo Angle
6  time.sleep_ms(1000)
7
8  try:
9      while True:
10         for i in range(0,180,1):
11             servo.myServoWriteAngle(i)
12             time.sleep_ms(15)
13         for i in range(180,0,-1):
14             servo.myServoWriteAngle(i)
15             time.sleep_ms(15)
16 except:
17     servo.deinit()
```

Import myservo module.

```
1  from myservo import myServo
```

Initialize pins of the servo and set the starting point of the servo to 0 degree.

```
4  servo=myServo(21)
5  servo.myServoWriteAngle(0)
6  time.sleep_ms(1000)
```

Control the servo to rotate to a specified angle within the range of 0-180 degrees.

```
8  servo.myServoWriteAngle(i)
```

Use two for loops. The first one controls the servo to rotate from 0 degree to 180 degrees while the other controls it to rotate back from 180 degrees to 0 degree.

```
10         for i in range(0,180,1):
11             servo.myServoWriteAngle(i)
12             time.sleep_ms(15)
13         for i in range(180,0,-1):
14             servo.myServoWriteAngle(i)
15             time.sleep_ms(15)
```


Reference

class myServo

Before each use of **myServo**, please make sure myservo.py has been uploaded to "/" of ESP32-S3, and then add the statement "**from myservo import myServo**" to the top of the python file.

myServo (): The object that controls the servo, with the default pin Pin(15), default frequency 50Hz and default duty cycle 512.

myServoWriteDuty(duty): The function that writes duty cycle to control the servo.

duty: Range from 26 to 128, with 26 corresponding to the servo's 0 degree and 128 corresponding to 180 degrees.

myServoWriteAngle(pos): Function that writes angle value to control the servo.

pos: Ranging from 0-180, corresponding the 0-180 degrees of the servo.






myServoWriteTime(us): Writes time to control the servo.

us: Range from 500-2500, with 500 corresponding to the servo's 0 degree and 2500 corresponding to 180 degrees.

Project 18.2 Servo Knop

Use a potentiometer to control the servo motor to rotate at any angle.


Component List

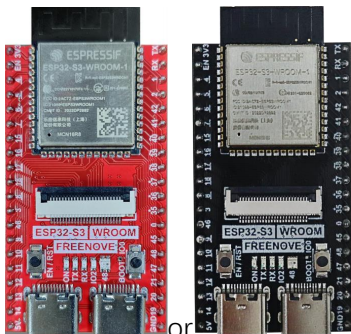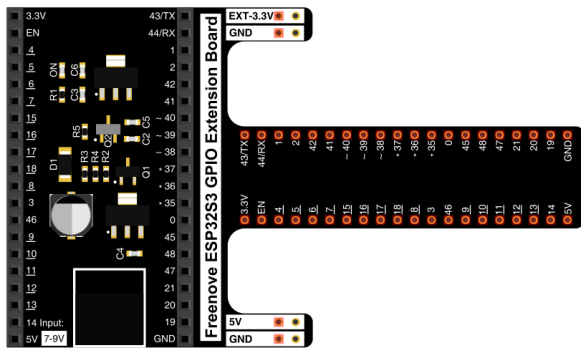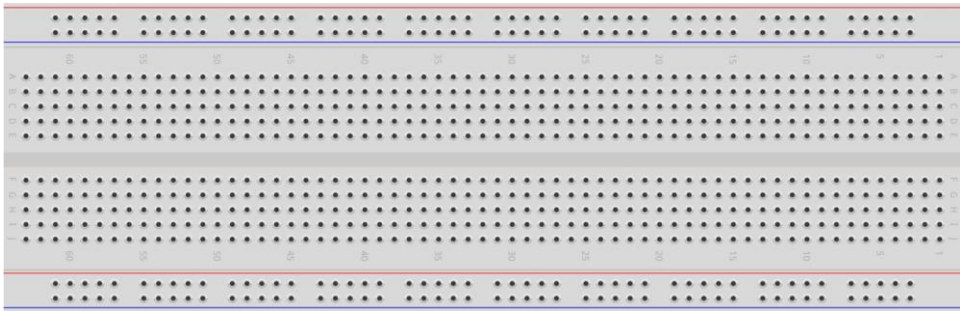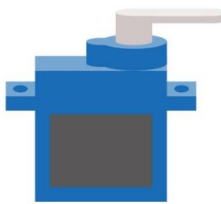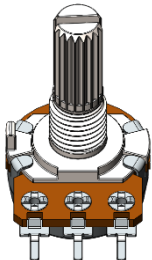ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
Servo x1 	Jumper M/M x6 	Rotary potentiometer x1 


Circuit

Use caution when supplying power to the servo, it should be 5V. Make sure you do not make any errors when connecting the servo to the power supply.

Schematic diagram

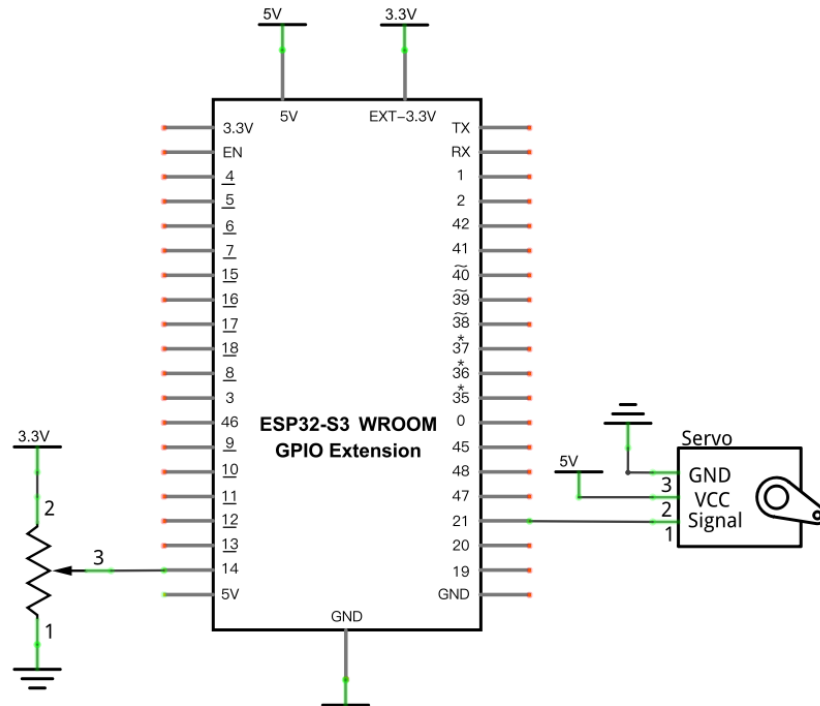

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

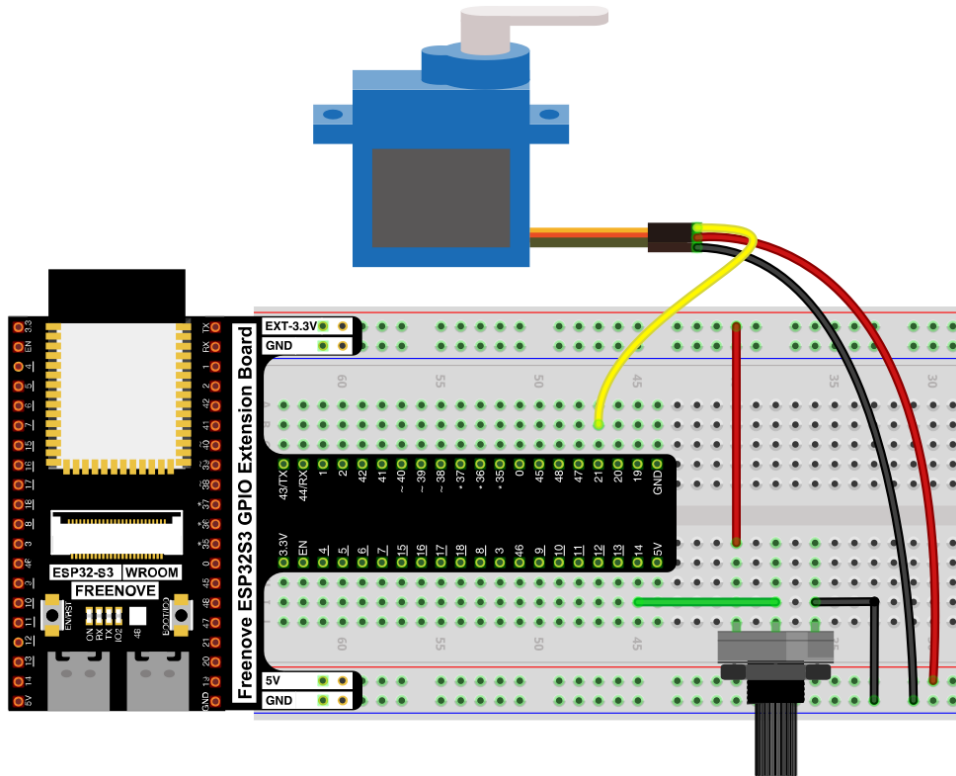


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “18.2_Servo_Knop”. Select “myservo.py”, right click your mouse to select “Upload to /”, wait for “myservo.py” to be uploaded to ESP32-S3 and then double click “Servo_Knop.py”.

18.2_Servo_Knop

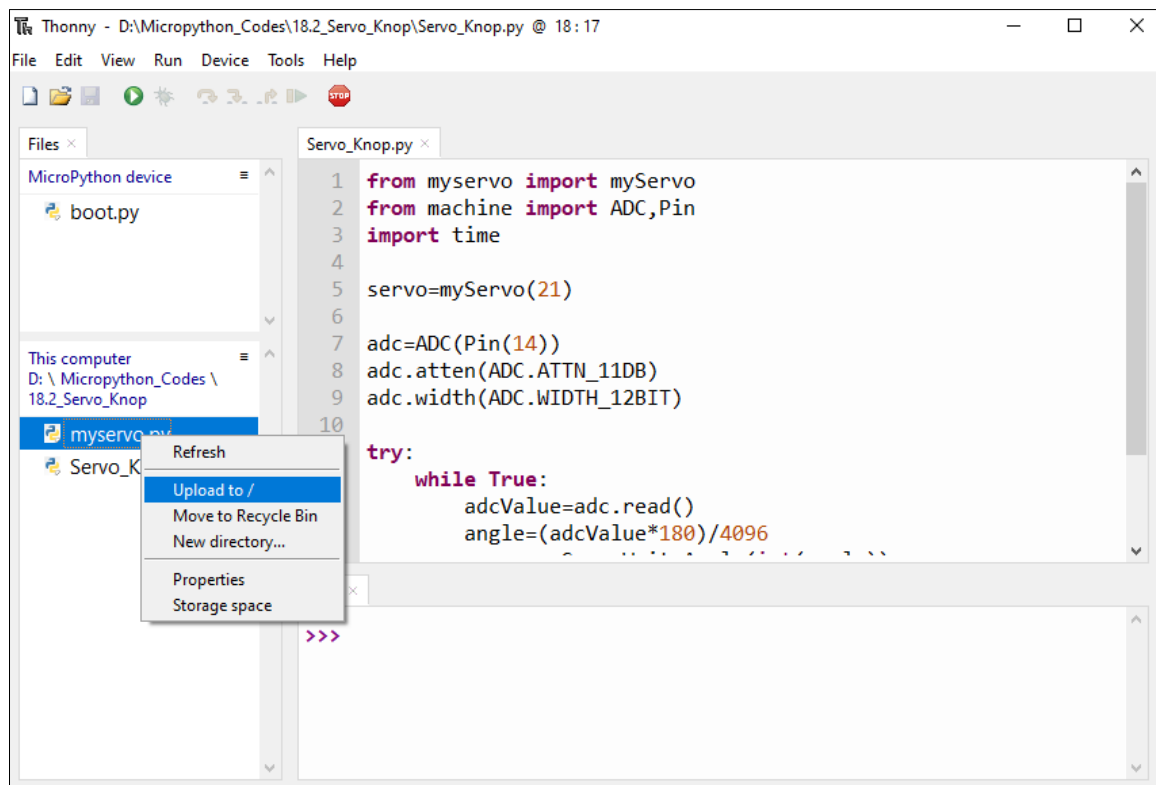

Click “Run current script”, twist the potentiometer back and forth, and the servo motor rotates accordingly.



The following is the program code:

```
1  from myservo import myServo
2  from machine import ADC, Pin
3  import time
4
5  servo=myServo(21)
6
7  adc=ADC(Pin(14))
8  adc.atten(ADC. ATTN_11DB)
9  adc.width(ADC. WIDTH_12BIT)
10
11  try:
12      while True:
13          adcValue=adc.read()
14          angle=(adcValue*180)/4096
15          servo.myServoWriteAngle(int(angle))
16          time.sleep_ms(50)
17  except:
18      adc.deinit()
19      servo.deinit()
```






In this project, we will use Pin(14) of ESP32-S3 to read the ADC value of the rotary potentiometer and then convert it to the angle value required by the servo and control the servo to rotate to the corresponding angle.

Chapter 19 Stepper Motor

In this project, we will learn how to drive a stepper motor, and understand its working principle.

Project 19.1 Stepper Motor


Component List

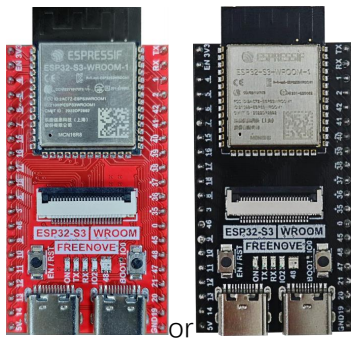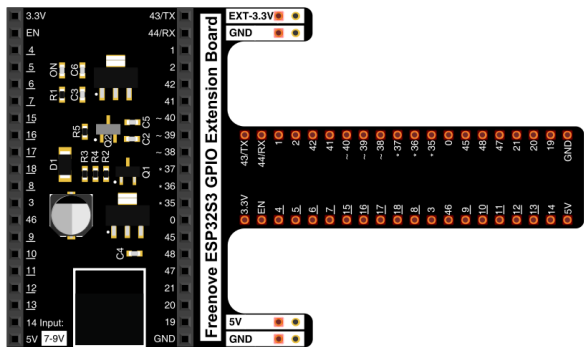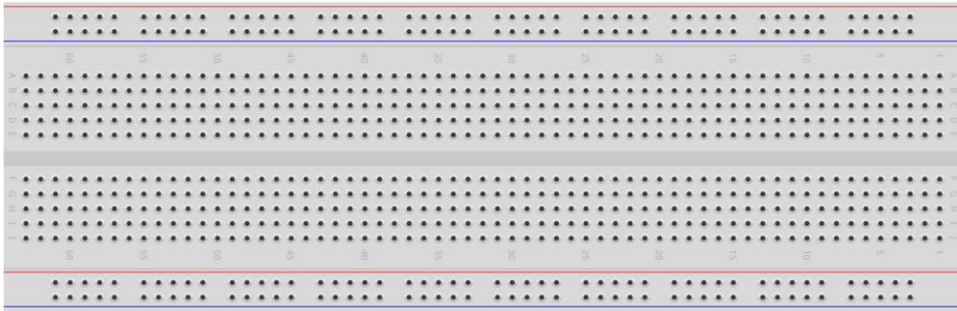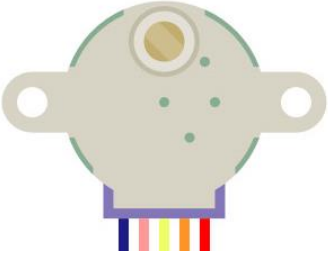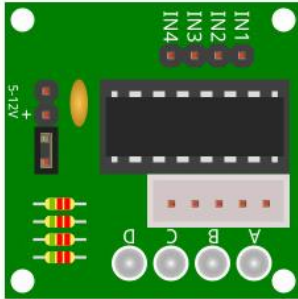ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
Stepper Motor x1 	ULN2003 Stepper Motor Driver x1 	Jumper F/M x6 


Component knowledge

Stepper Motor

Stepper motors are an open-loop control device, which converts an electronic pulse signal into angular displacement or linear displacement. In a non-overload condition, the speed of the motor and the location of the stops depends only on the pulse signal frequency and number of pulses and is not affected by changes in load as with a DC motor. A small four-phase deceleration stepper motor is shown here:

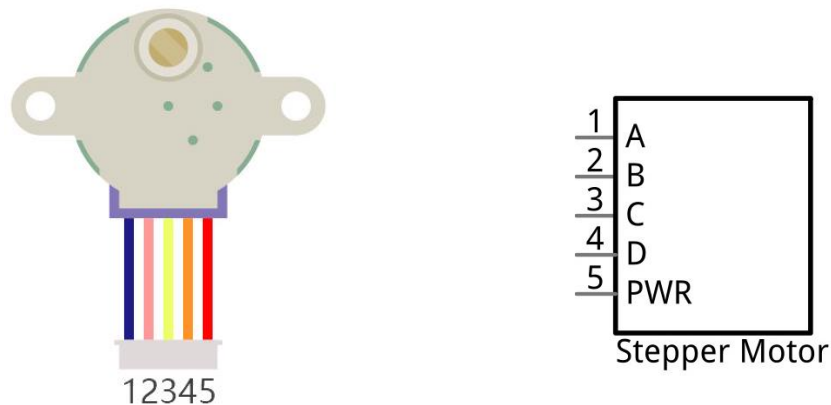


The electronic schematic diagram of a four-phase stepper motor is shown below:

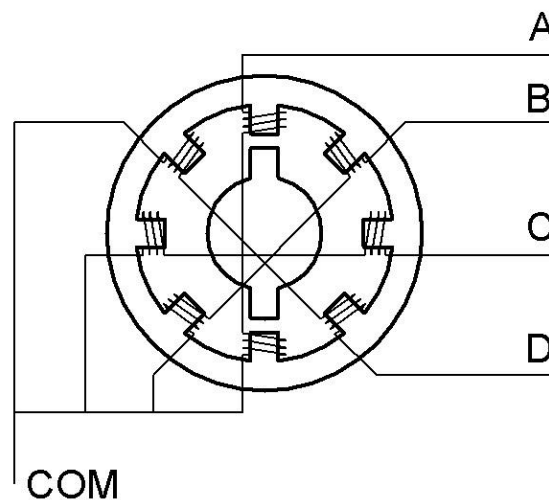

The outside case or housing of the stepper motor is the stator and inside the stator is the rotor. There are a specific number of individual coils, usually an integer multiple of the number of phases the motor has, when the stator is powered ON, an electromagnetic field will be formed to attract a corresponding convex diagonal groove or indentation in the rotor's surface. The rotor is usually made of iron or a permanent magnet. Therefore, the stepper motor can be driven by powering the coils on the stator in an ordered sequence (producing a series of "steps" or stepped movements).

A common driving process is as follows:

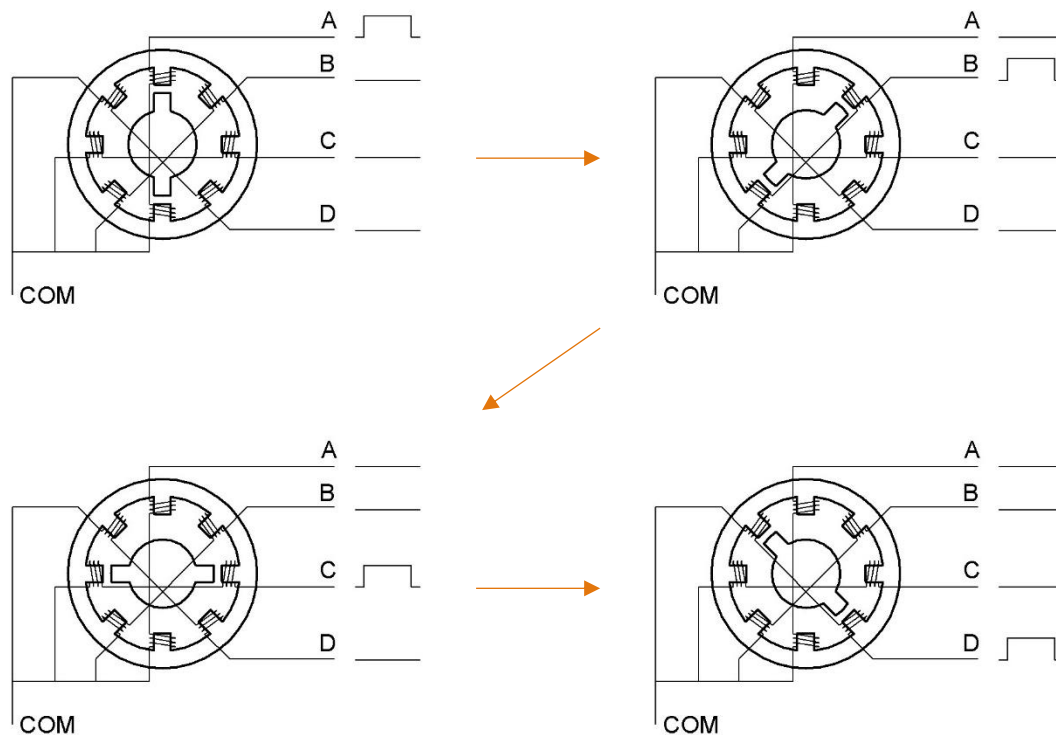


In the course above, the stepper motor rotates a certain angle once, which is called a step. By controlling the number of rotation steps, you can control the stepper motor rotation angle. By controlling the time between two steps, you can control the stepper motor rotation speed. When rotating clockwise, the order of coil powered on is: $A \rightarrow B \rightarrow C \rightarrow D \rightarrow A \rightarrow \dots$. And the rotor will rotate in accordance with the order, step by step down, called four steps four parts. If the coils are powered on in the reverse order, $D \rightarrow C \rightarrow B \rightarrow A \rightarrow D \rightarrow \dots$, the rotor will rotate in anti-clockwise direction.

There are other methods to control stepper motors, such as: connect A phase, then connect A B phase, the stator will be located in the center of A B, which is called a half-step. This method can improve the stability of the stepper motor and reduces noise. The sequence of powering the coils looks like this: $A \rightarrow AB \rightarrow B \rightarrow BC \rightarrow C \rightarrow CD \rightarrow D \rightarrow DA \rightarrow A \rightarrow \dots$, the rotor will rotate in accordance to this sequence at a half-step at a time, called four-steps, eight-part. Conversely, if the coils are powered ON in the reverse order the stepper motor will rotate in the opposite direction.

The stator in the stepper motor we have supplied has 32 magnetic poles. Therefore, to complete one full revolution requires 32 full steps. The rotor (or output shaft) of the stepper motor is connected to a speed reduction set of gears and the reduction ratio is 1:64. Therefore, the final output shaft (exiting the stepper motor's housing) requires $32 \times 64 = 2048$ steps to make one full revolution.

ULN2003 Stepper motor driver

A ULN2003 stepper motor driver is used to convert weak signals into more powerful control signals in order to drive the stepper motor. In the illustration below, the input signal IN1-IN4 corresponds to the output signal A-D, and 4 LEDs are integrated into the board to indicate the state of these signals. The PWR interface can be used as a power supply for the stepper motor. By default, PWR and VCC are connected.

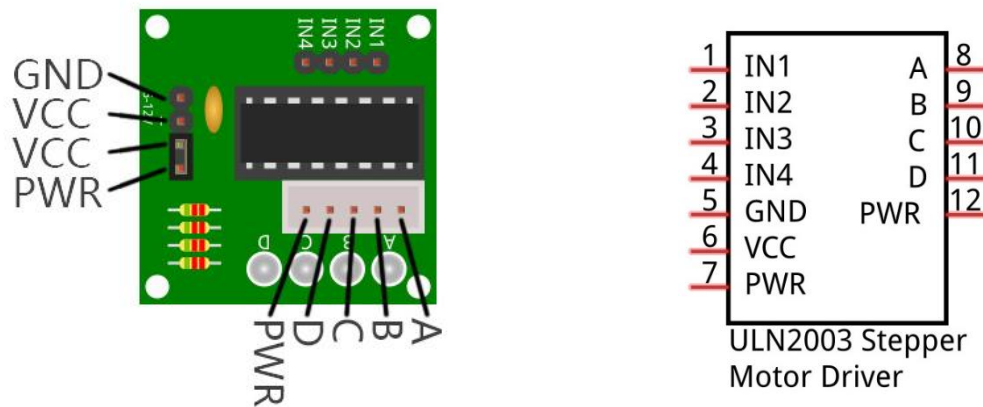


Code

This code uses the four-step, four-part mode to drive the Stepper Motor in the clockwise and anticlockwise directions.



Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “19.1_Stepping_Motor”. Select “stepmotor.py”, right click your mouse to select “Upload to /”, wait for “myservo.py” to be uploaded to ESP32-S3 and then double click “Stepping_Motor.py”.

19.1_Stepping_Motor

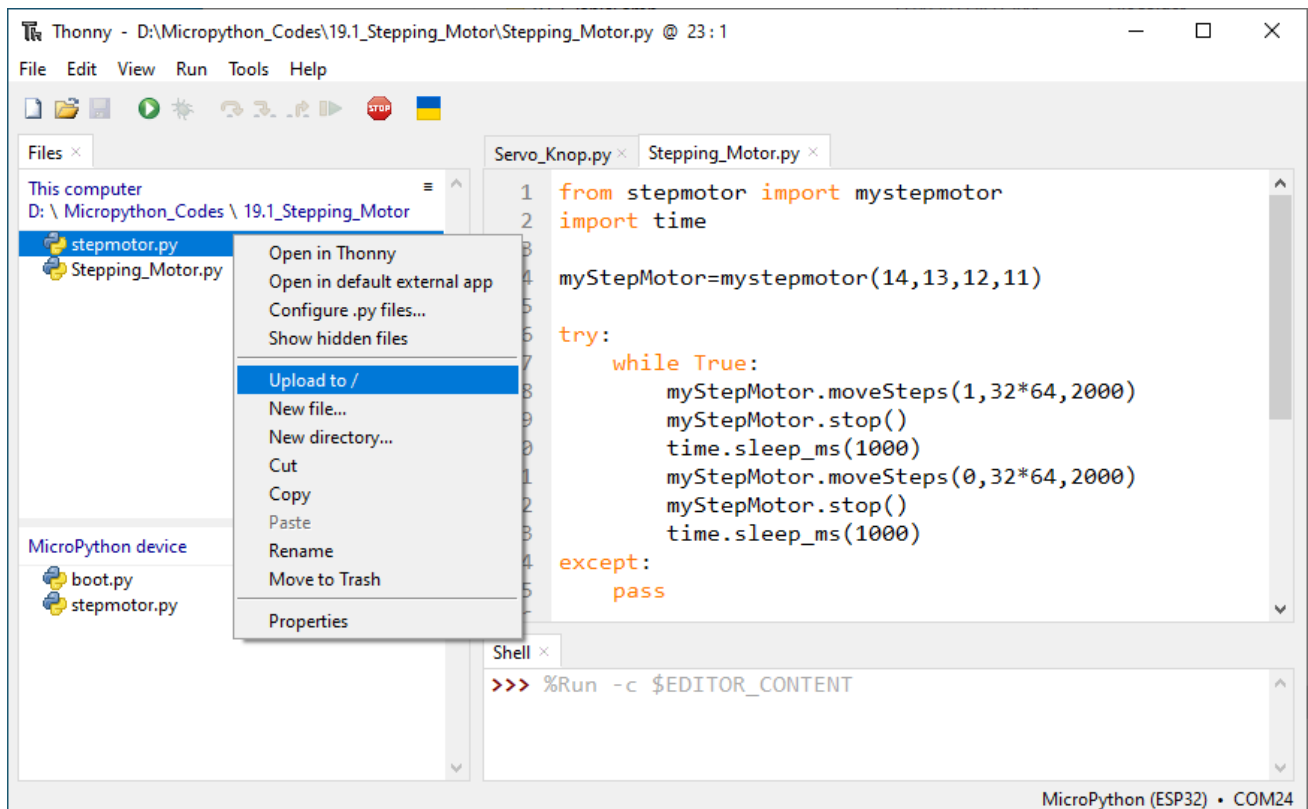

Click “Run current script”, the stepper motor will rotate 360° clockwise and stop for 1s, and then rotate 360° anticlockwise and stop for 1s. And it will repeat this action in an endless loop.

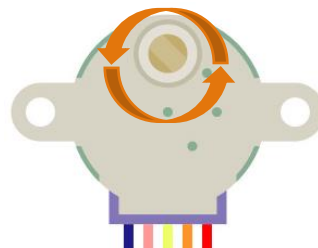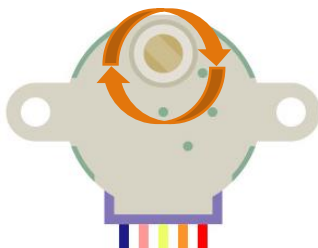

The following is the program code:

```

1  from stepmotor import mystepmotor
2  import time
3
4  myStepMotor=mystepmotor(14, 13, 12, 11)
5
6  try:
7      while True:
8          myStepMotor.moveSteps(1, 32*64, 2000)
9          myStepMotor.stop()
10         time.sleep_ms(1000)
11         myStepMotor.moveSteps(0, 32*64, 2000)
12         myStepMotor.stop()
13         time.sleep_ms(1000)
14 except:
15     pass

```

Import time and stepmotor modules.

```

1  from stepmotor import mystepmotor
2  import time

```

In this project, we define four pins to drive the stepper motor.

```

4  myStepMotor=mystepmotor(14, 13, 12, 11)

```

Call the function moveSteps to control the stepper motor to rotate for 360° and then call function stop() to stop it.

```

8          myStepMotor.moveSteps(1, 32*64, 2000)
9          myStepMotor.stop()

```

Repeatedly control the stepmotor to rotate 360° clockwise and then rotate 360° anti-clockwise.

```

7      while True:
8          myStepMotor.moveSteps(1, 32*64, 2000)
9          myStepMotor.stop()
10         time.sleep_ms(1000)
11         myStepMotor.moveSteps(0, 32*64, 2000)
12         myStepMotor.stop()
13         time.sleep_ms(1000)

```

Reference

class myServo

Before each use of the object **mystepmotor**, please make sure that stepmotor.py has been uploaded to "/" of ESP32S3, and then add the statement "**from stepmotor import mystepmotor**" to the top of the python file.

mystepmotor(): The object to control the stepper motor. The default control pins are Pin(14), Pin(13), Pin(12) and Pin(11).

moveSteps(direction,steps,us): Control the stepper motor to rotate a specified number of steps.

direction: The rotation direction of stepper motor.

Steps: Rotation steps of the stepper motor.

us: Time required by the stepper motor to rotate for one step.

moveAround(direction,turns,us): Control the stepper motor to rotate a specific number of turns.

Turns: Number of turns that the stepper motor rotates.

moveAngle(direction,angles,us): Control the stepper motor to rotate a specific angle.

Angles: Rotation angles that the stepper motor rotates.

stop(): Stop the stepper motor.





Chapter 20 LCD1602

In this chapter, we will learn about the LCD1602 Display Screen

Project 20.1 LCD1602

In this section we learn how to use LCD1602 to display something.

Component List

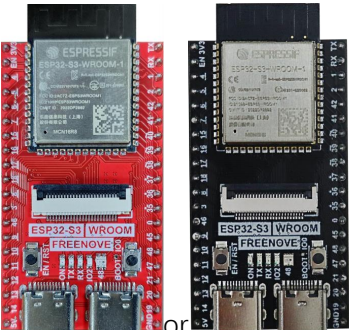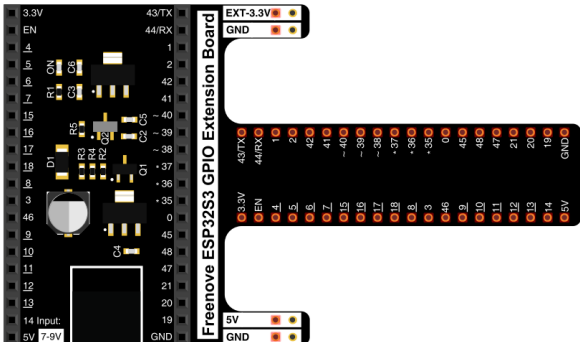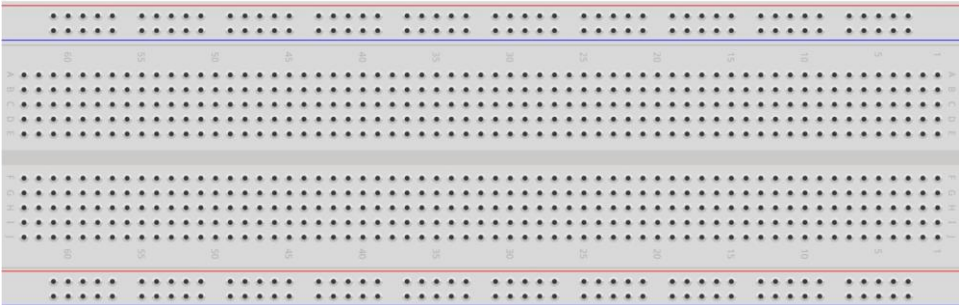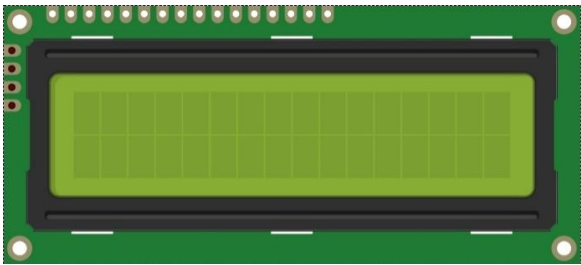ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
LCD1602 Module x1 	Jumper F/M x4 



Component knowledge

I2C communication



I2C (Inter-Integrated Circuit) is a two-wire serial communication mode, which can be used for the connection of micro controllers and their peripheral equipment. Devices using I2C communication must be connected to the serial data (SDA) line, and serial clock (SCL) line (called I2C bus). Each device has a unique address and can be used as a transmitter or receiver to communicate with devices connected to the bus.

LCD1602 communication'

The LCD1602 display screen can display 2 lines of characters in 16 columns. It is capable of displaying numbers, letters, symbols, ASCII code and so on. As shown below is a monochrome LCD1602 display screen along with its circuit pin diagram

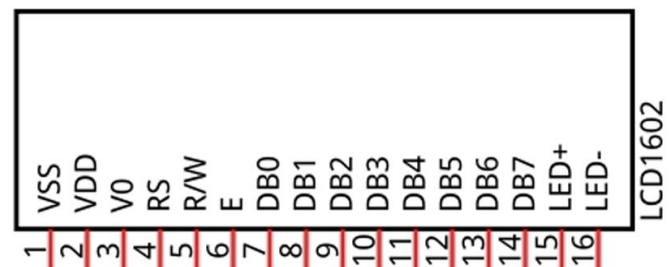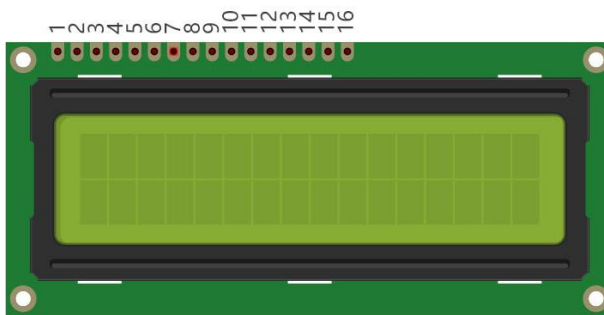


I2C LCD1602 display screen integrates a I2C interface, which connects the serial-input & parallel-output module to the LCD1602 display screen. This allows us to only use 4 lines to the operate the LCD1602.

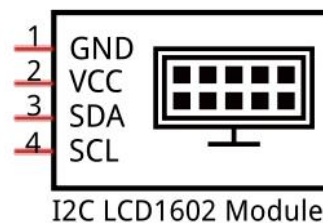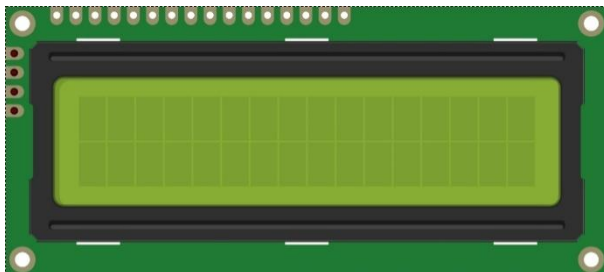


The serial-to-parallel IC chip used in this module is PCF8574T (PCF8574AT), and its default I2C address is 0x27(0x3F).

Below is the PCF8574 pin schematic diagram and the block pin diagram:

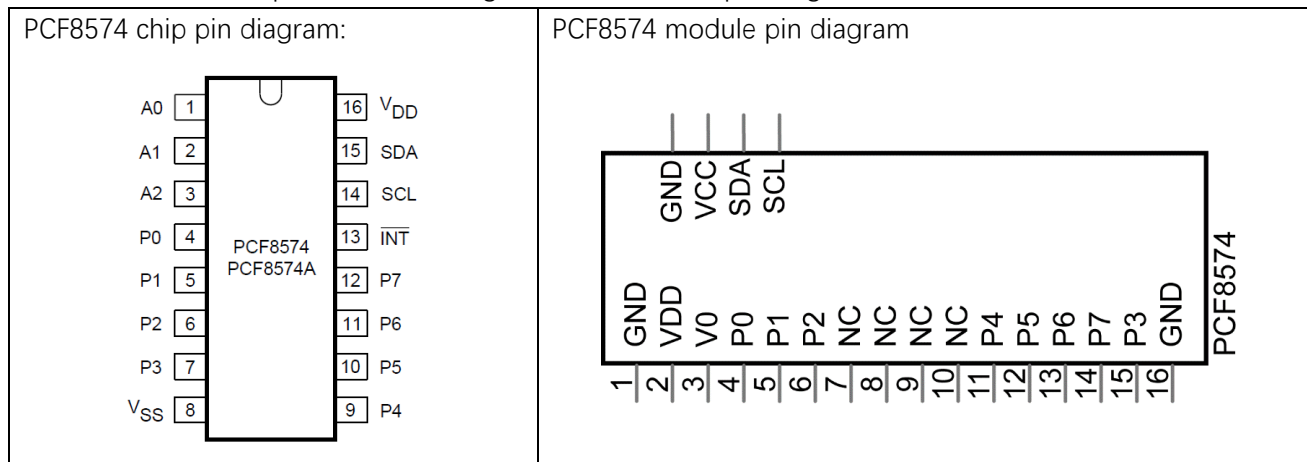


PCF8574 module pin and LCD1602 pin are corresponding to each other and connected with each other:

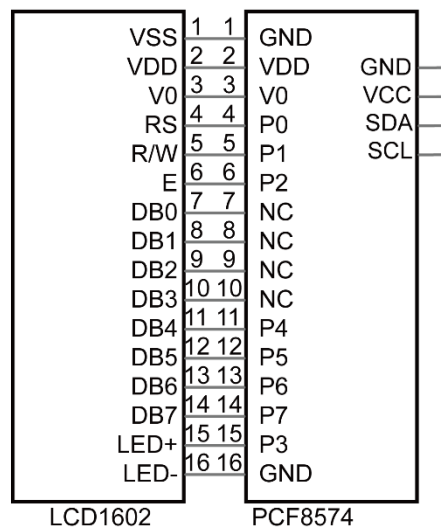


So we only need 4 pins to control the 16 pins of the LCD1602 display screen through the I2C interface. In this project, we will use the I2C LCD1602 to display some static characters and dynamic variables.

Circuit

Schematic diagram

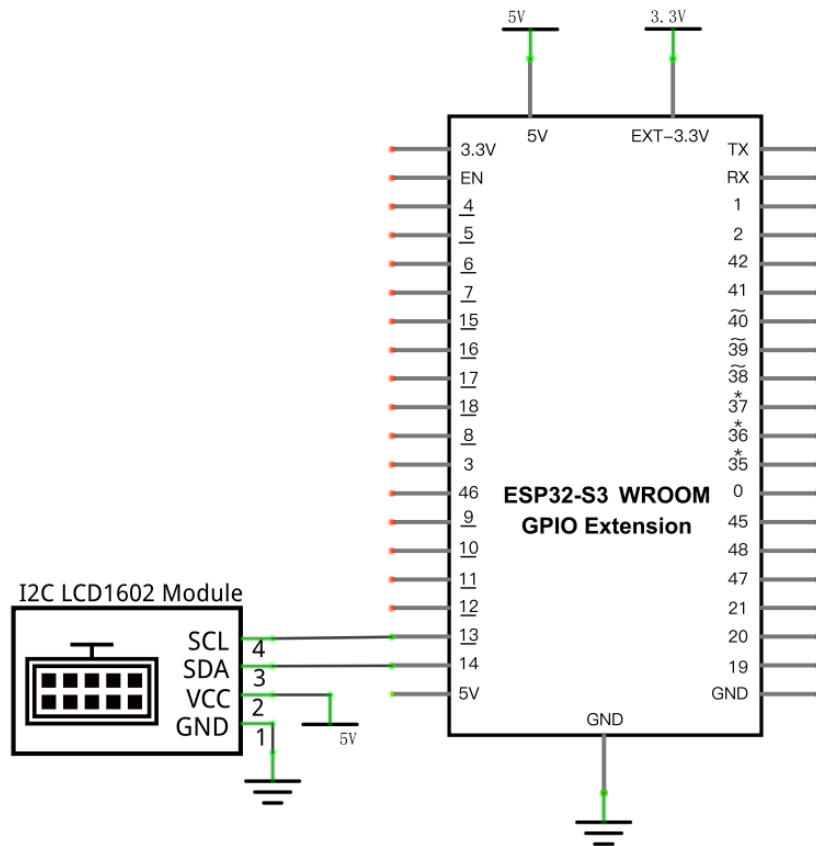

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

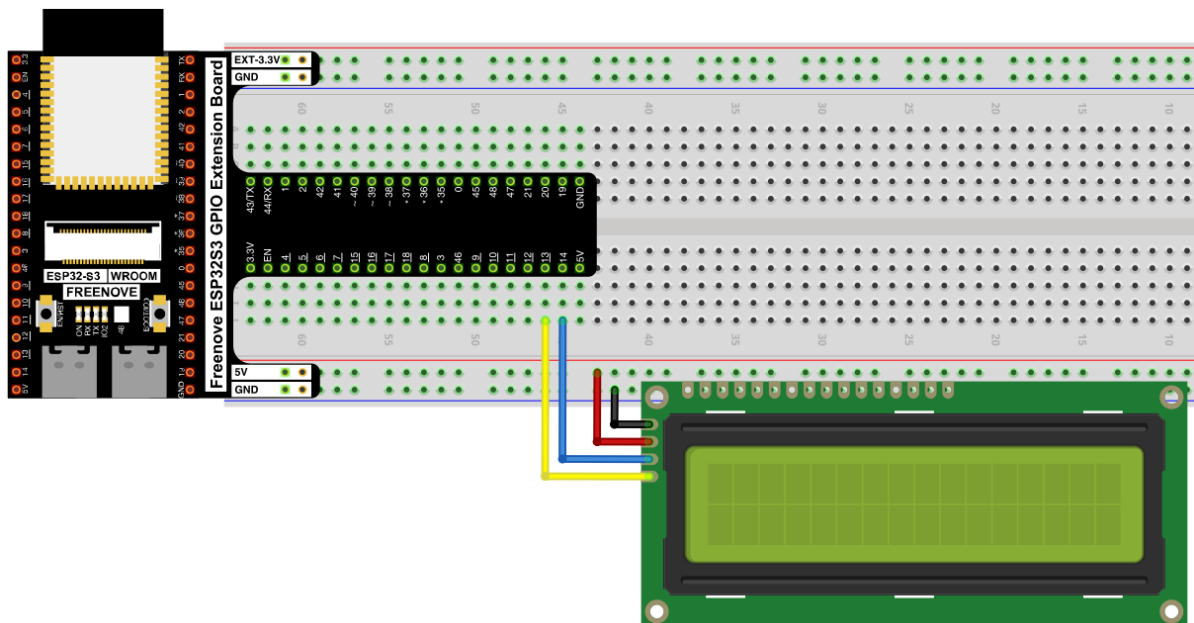


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “20.1_I2C_LCD1602”. Select “I2C_LCD.py” and “LCD_API.py”, right click your mouse to select “Upload to /”, wait for “I2C_LCD.py” and “LCD_API.py” to be uploaded to ESP32-S3 and then double click “I2C_LCD1602.py”.

20.1_I2C_LCD1602

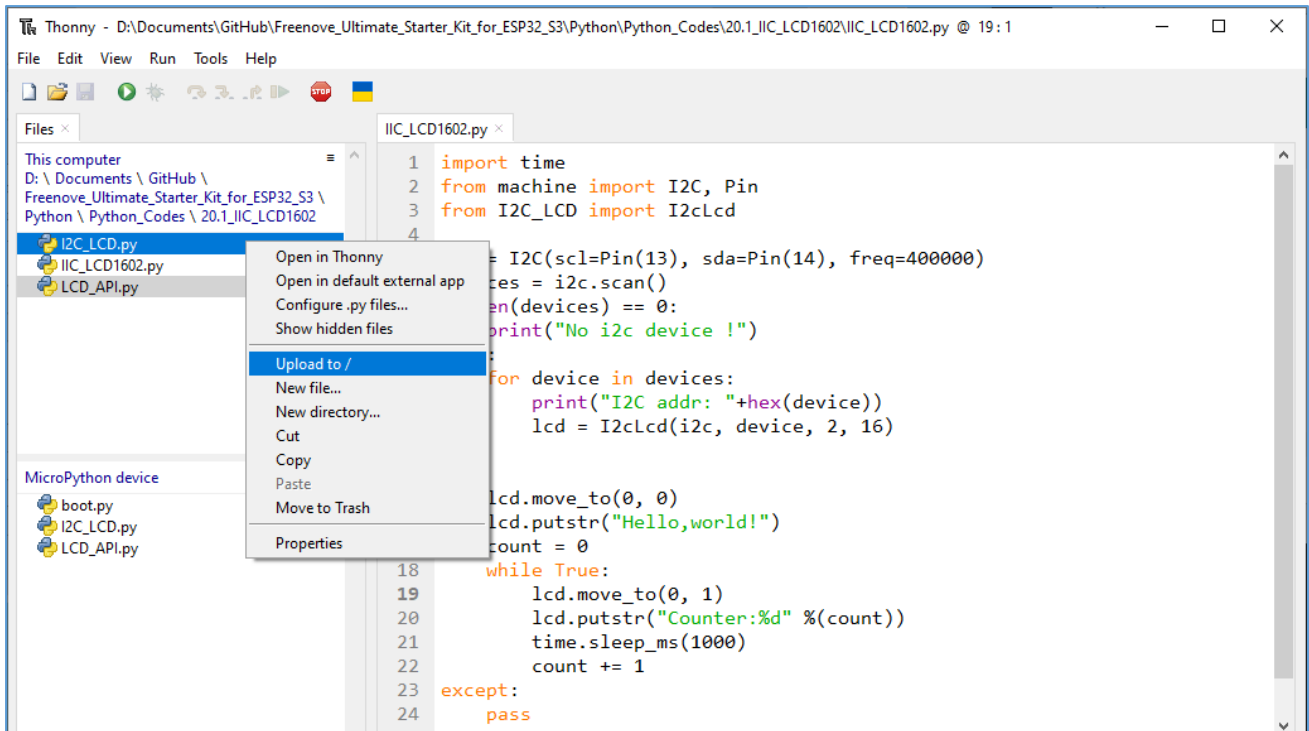

Click “Run current script” and LCD1602 displays some characters.



The following is the program code:

```

1  import time
2  from machine import I2C, Pin
3  from I2C_LCD import I2cLcd
4
5  i2c = I2C(scl=Pin(13), sda=Pin(14), freq=400000)
6  devices = i2c.scan()
7  if len(devices) == 0:
8      print("No i2c device !")
9  else:
10     for device in devices:
11         print("I2C addr: "+hex(device))
12         lcd = I2cLcd(i2c, device, 2, 16)
13
14     try:
15         lcd.move_to(0, 0)
16         lcd.putstr("Hello,world!")
17         count = 0
18         while True:
19             lcd.move_to(0, 1)
20             lcd.putstr("Counter:%d" %(count))
21             time.sleep_ms(1000)
22             count += 1
23     except:
24         pass

```

Import time, I2C and I2C_LCD modules.

```

1  import time
2  from machine import I2C, Pin
3  from I2C_LCD import I2cLcd

```

Instantiate the I2C LCD1602 screen. It should be noted here that if your LCD driver chip uses PCF8574T, set the I2C address to 0x27, and if uses PCF8574AT, set the I2C address to 0x3F.

Initialize I2C pins and associate them with I2CLCD module, and then set the number of rows and columns for LCD1602.

```

5  i2c = I2C(scl=Pin(13), sda=Pin(14), freq=400000)
6  devices = i2c.scan()
7  if len(devices) == 0:
8      print("No i2c device !")
9  else:
10     for device in devices:
11         print("I2C addr: "+hex(device))
12         lcd = I2cLcd(i2c, device, 2, 16)

```

Move the cursor of LCD1602 to the first row, first column, and print out "Hello, world!"

```

15     lcd.move_to(0, 0)
16     lcd.putstr("Hello,world!")

```

The second line of LCD1602 continuously prints the number of seconds after the ESP32-S3 program runs.

```
18 while True:
19     lcd.move_to(0, 1)
20     lcd.putstr("Counter:%d" %(count))
21     time.sleep_ms(1000)
22     count += 1
```

Reference

Class I2cLcd

Before each use of the object **I2cLcd**, please make sure that **I2C_LCD.py** and **LCD_API.py** have been uploaded to "/" of ESP32S3, and then add the statement "**from I2C_LCD import I2cLcd**" to the top of the python file.

clear(): Clear the LCD1602 screen display.

show_cursor(): Show the cursor of LCD1602.

hide_cursor(): Hide the cursor of LCD1602.

blink_cursor_on(): Turn on cursor blinking.

blink_cursor_off(): Turn off cursor blinking.

display_on(): Turn on the display function of LCD1602.

display_off(): Turn on the display function of LCD1602.

backlight_on(): Turn on the backlight of LCD1602.

backlight_off(): Turn on the backlight of LCD1602.

move_to(cursor_x, cursor_y): Move the cursor to a specified position.

cursor_x: Column cursor_x

cursor_y: Row cursor_y

putchar(char): Print the character in the bracket on LCD1602

putstr(string): Print the string in the bracket on LCD1602.




Chapter 21 Ultrasonic Ranging

In this chapter, we learn a module which use ultrasonic to measure distance, HC SR04.

Project 21.1 Ultrasonic Ranging


In this project, we use ultrasonic ranging module to measure distance, and print out the data in the terminal.

Component List

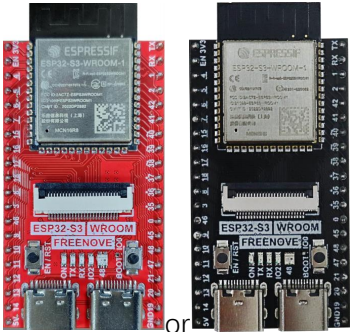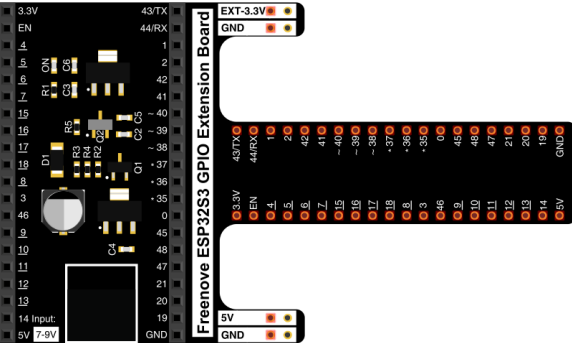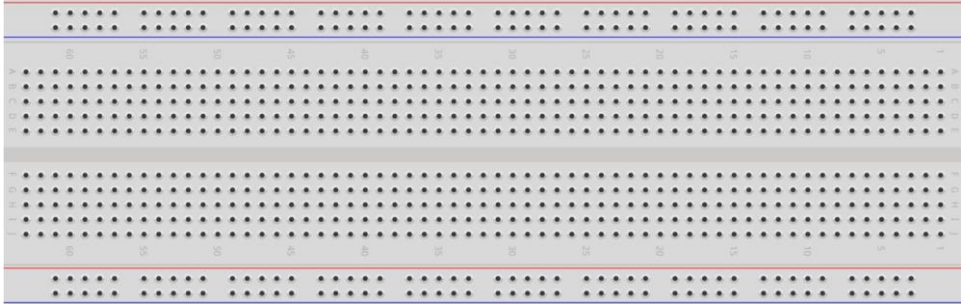
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper F/M x4 	HC SR04 x1 

Component Knowledge

The ultrasonic ranging module uses the principle that ultrasonic waves will be sent back when encounter obstacles. We can measure the distance by counting the time interval between sending and receiving of the ultrasonic waves, and the time difference is the total time of the ultrasonic wave's journey from being transmitted to being received. Because the speed of sound in air is a constant, about $v=340\text{m/s}$, we can calculate the distance between the ultrasonic ranging module and the obstacle: $s=vt/2$.

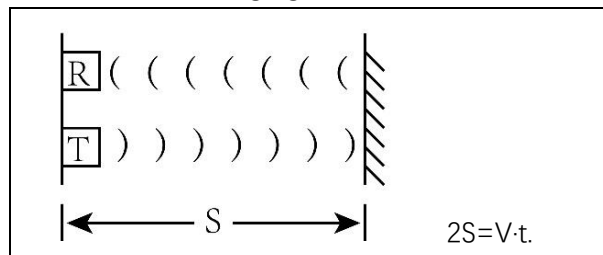

The HC-SR04 ultrasonic ranging module integrates both an ultrasonic transmitter and a receiver. The transmitter is used to convert electrical signals (electrical energy) into high frequency (beyond human hearing) sound waves (mechanical energy) and the function of the receiver is opposite of this. The picture and the diagram of the HC SR04 ultrasonic ranging module are shown below:

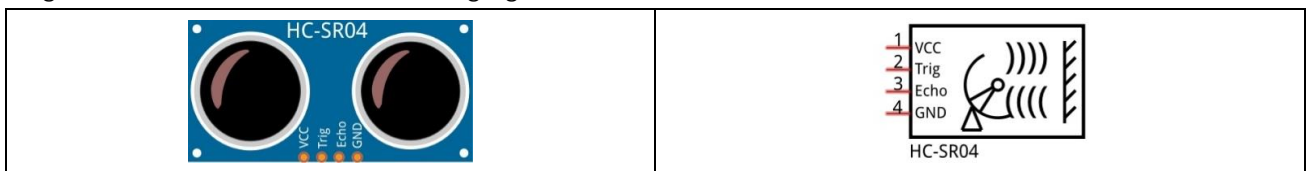

Pin description:

Pin	Description
VCC	power supply pin
Trig	trigger pin
Echo	Echo pin
GND	GND

Technical specs:


Working voltage: 5V

Working current: 12mA

Minimum measured distance: 2cm

Maximum measured distance: 200cm


Instructions for use: output a high-level pulse in Trig pin lasting for least 10us, the module begins to transmit ultrasonic waves. At the same time, the Echo pin is pulled up. When the module receives the returned ultrasonic waves from encountering an obstacle, the Echo pin will be pulled down. The duration of high level in the Echo pin is the total time of the ultrasonic wave from transmitting to receiving, $s=vt/2$.

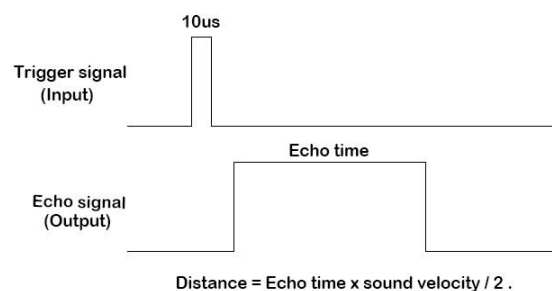


Circuit

Note that the voltage of ultrasonic module is 5V in the circuit.

Schematic diagram

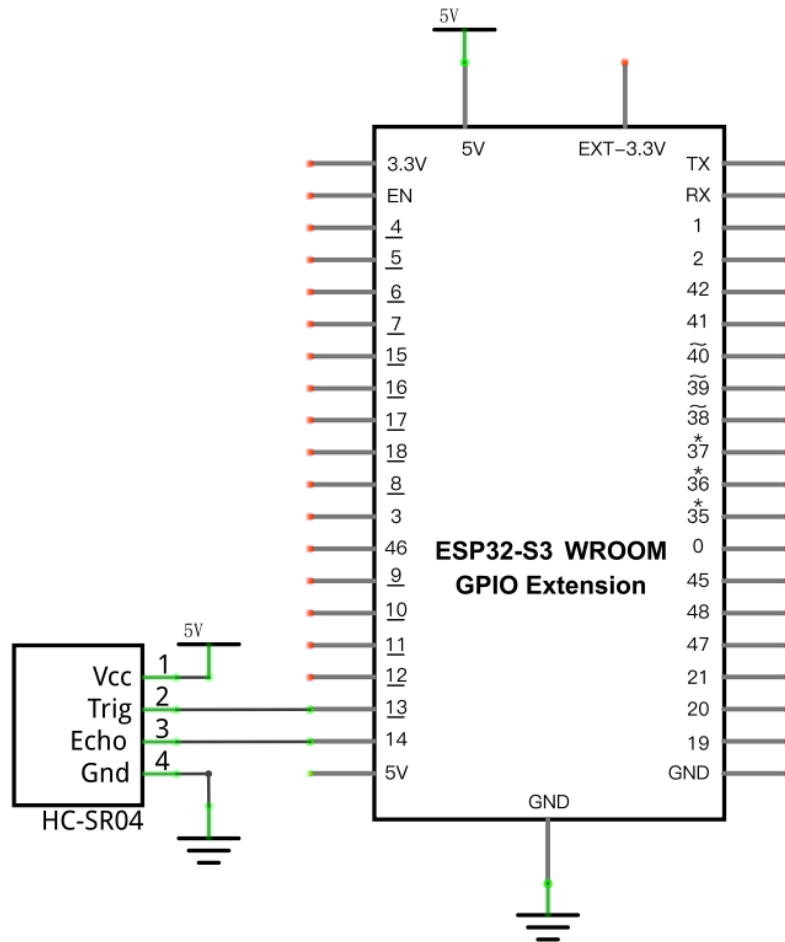

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

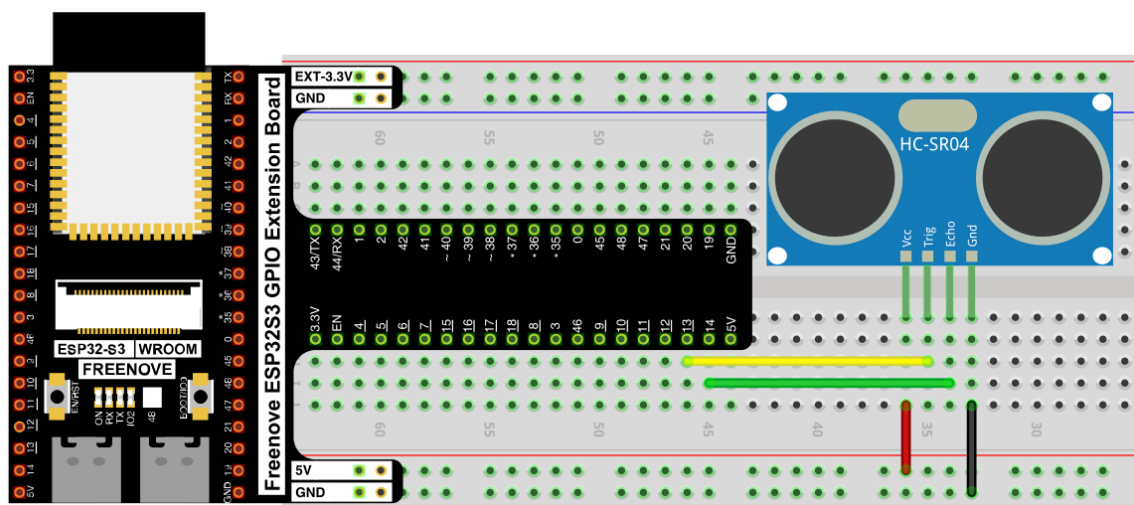


Any concerns? support@freenove.com

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “21.1_Ultrasonic_Ranging” and double click “Ultrasonic_Ranging.py”.

21.1_Ultrasonic_Ranging

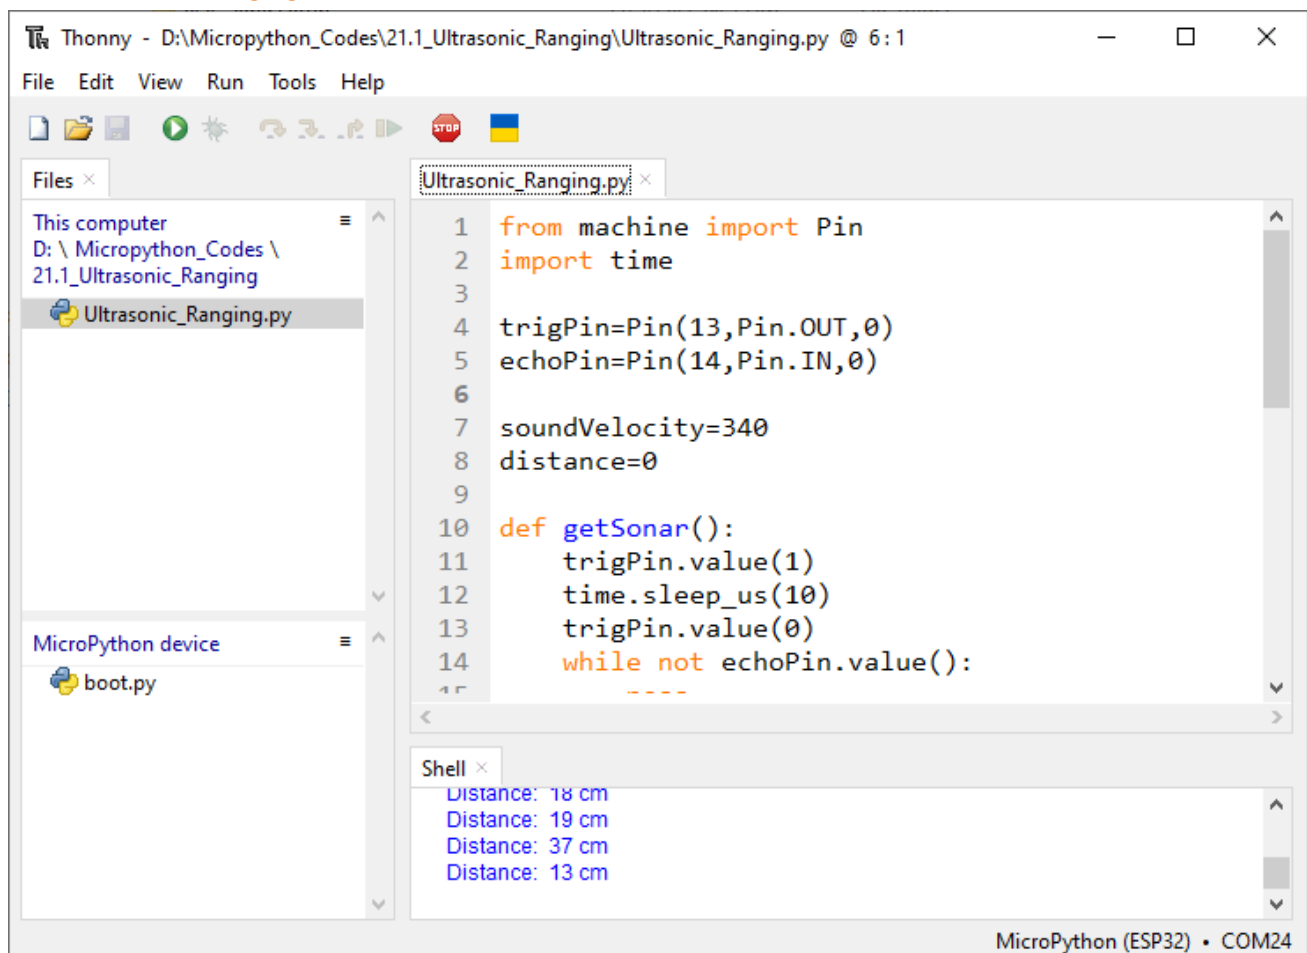

Click “Run current script”, you can use it to measure the distance between the ultrasonic module and the object. As shown in the following figure:



The following is the program code:

```

1  from machine import Pin
2  import time
3
4  trigPin=Pin(13,Pin.OUT,0)
5  echoPin=Pin(14,Pin.IN,0)
6
7  soundVelocity=340
8  distance=0
9
10 def getSonar():
11     trigPin.value(1)
12     time.sleep_us(10)
13     trigPin.value(0)
14     while not echoPin.value():
15         pass
16     pingStart=time.ticks_us()
17     while echoPin.value():
18         pass
19     pingStop=time.ticks_us()
20     pingTime=time.ticks_diff(pingStop,pingStart)
21     distance=pingTime*soundVelocity//2//10000
22     return int(distance)
23
24 time.sleep_ms(2000)
25 while True:
26     time.sleep_ms(500)
27     print('Distance: ',getSonar(),'cm')

```

Define the control pins of the ultrasonic ranging module.

```

4  trigPin=Pin(13,Pin.OUT,0)
5  echoPin=Pin(14,Pin.IN,0)

```

Set the speed of sound.

```

7  soundVelocity=340
8  distance=0

```

Subfunction getSonar() is used to start the Ultrasonic Module to begin measurements, and return the measured distance in centimeters. In this function, first let trigPin send 10us high level to start the Ultrasonic Module. Then use pulseIn() to read the Ultrasonic Module and return the duration time of high level. Finally, the measured distance according to the time is calculated.

```

10 def getSonar():
11     trigPin.value(1)
12     time.sleep_us(10)
13     trigPin.value(0)
14     while not echoPin.value():
15         pass

```

```
16 pingStart=time.ticks_us()  
17 while echoPin.value():  
18     pass  
19 pingStop=time.ticks_us()  
20 pingTime=time.ticks_diff(pingStop,pingStart)  
21 distance=pingTime*soundVelocity//2//10000  
22 return int(distance)
```

Delay for 2 seconds and wait for the ultrasonic module to stabilize. Print data obtained from ultrasonic module every 500 milliseconds

```
24 time.sleep_ms(2000)  
25 while True:  
26     time.sleep_ms(500)  
27     print('Distance: ',getSonar(),'cm')
```

Project 21.2 Ultrasonic Ranging


Component List and Circuit

Component List and Circuit are the same as the previous section.

Code

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “21.2_Ultrasonic_Ranging”. Select “hcsr04.py”, right click your mouse to select “Upload to /”, wait for “hcsr04.py” to be uploaded to ESP32-S3 and then double click “Ultrasonic_Ranging.py”.

21.2_Ultrasonic_Ranging

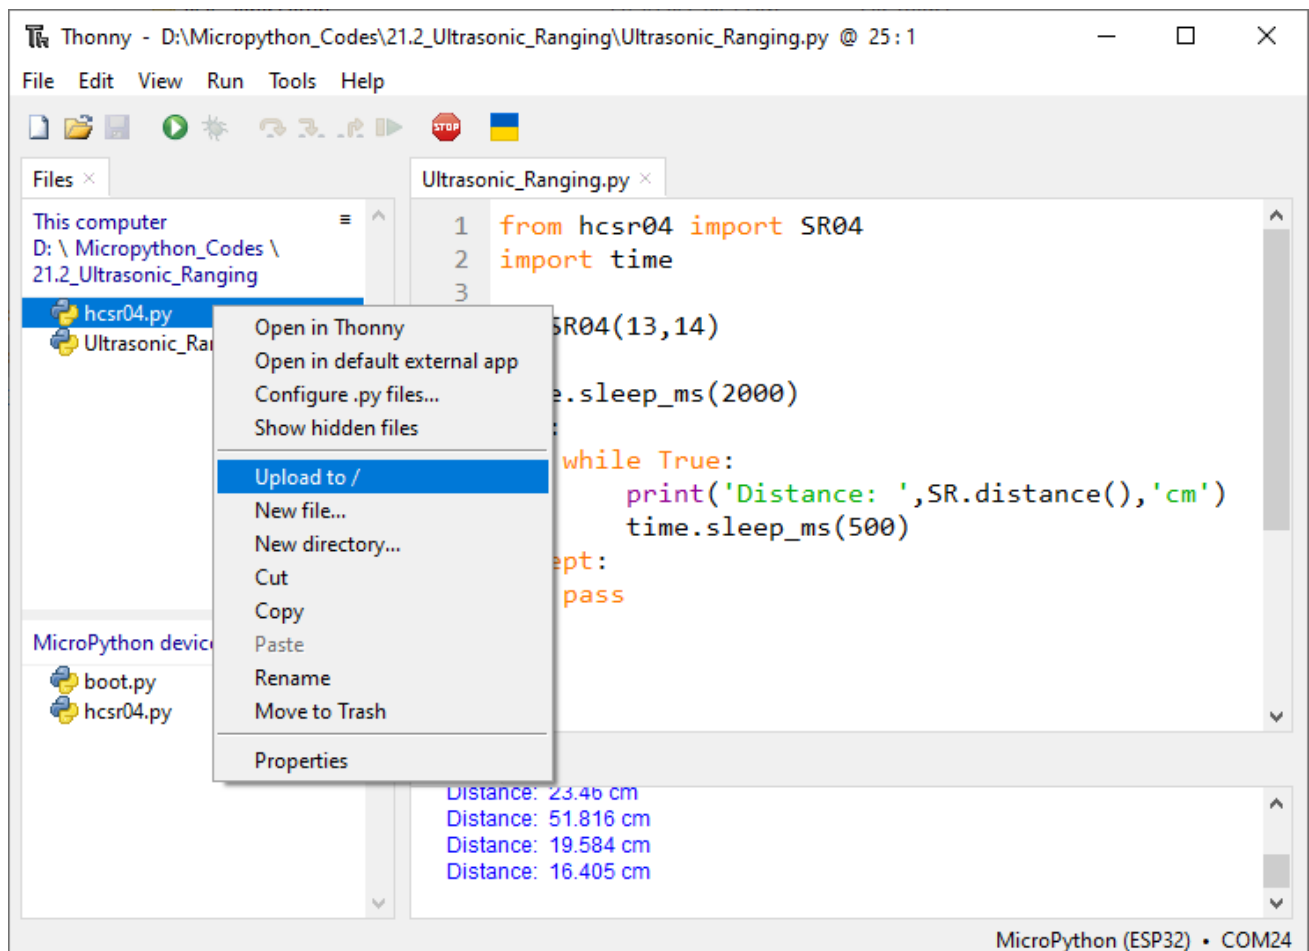

Click “Run current script”. Use the ultrasonic module to measure distance. As shown in the following figure:



```

Shell x
Distance: 6.64/ cm
Distance: 5.151 cm
Distance: 5.151 cm
Distance: 6.052 cm
Distance: 7.225 cm
Distance: 7.531 cm
Distance: 8.721 cm
Distance: 12.121 cm
Distance: 11.798 cm
Distance: 13.6 cm
Distance: 14.467 cm
Distance: 16.116 cm
Distance: 17.442 cm
Distance: 19.652 cm
Distance: 22.015 cm

```

The following is the program code:

```

1  from hcsr04 import SR04
2  import time
3
4  SR=SR04(13,14)
5
6  time.sleep_ms(2000)
7  try:
8      while True:
9          print('Distance: ',SR.distance(),'cm')
10         time.sleep_ms(500)
11 except:
12     pass

```

Import hcsr04 module.

```

1  from hcsr04 import SR04

```

Define an ultrasonic object and associate with the pins.

```

3  SR=SR04(13,14)

```

Obtain the distance data returned from the ultrasonic ranging module.

```

9  SR.distance()

```

Obtain the ultrasonic data every 500 milliseconds and print them out in “Shell”.

```

8      while True:
9          print('Distance: ',SR.distance(),'cm')
10         time.sleep_ms(500)

```

Reference

Class hcsr04

Before each use of object **SR04**, please add the statement “**from hcsr04 import SR04**” to the top of python file.

SR04(): Object of ultrasonic module. By default, trig pin is Pin(13) and echo pin is Pin(14).

distanceCM(): Obtain the distance from the ultrasonic to the measured object with the data type being int type, and the unit being cm.

distanceMM(): Obtain the distance from the ultrasonic to the measured object with the data type being int type, and the unit being mm.

distance(): Obtain the distance from the ultrasonic to the measured object with the data type being float type, and the unit being cm.





Chapter 22 Matrix Keypad

Earlier we learned about a single push button switch. In this chapter, we will learn about matrix keyboards, which integrates a number of push button switches as keys for the purposes of input.

Project 22.1 Matrix Keypad

In this project, we will attempt to get every key code on the matrix keypad to work.


Component List

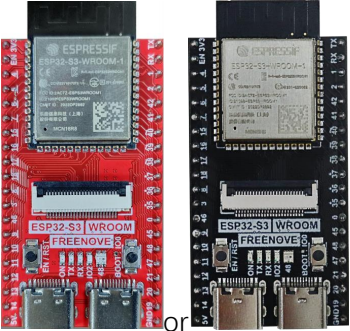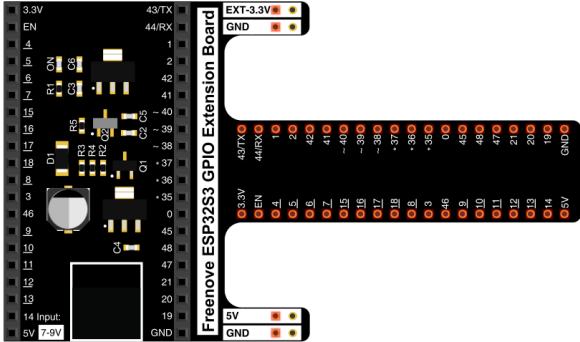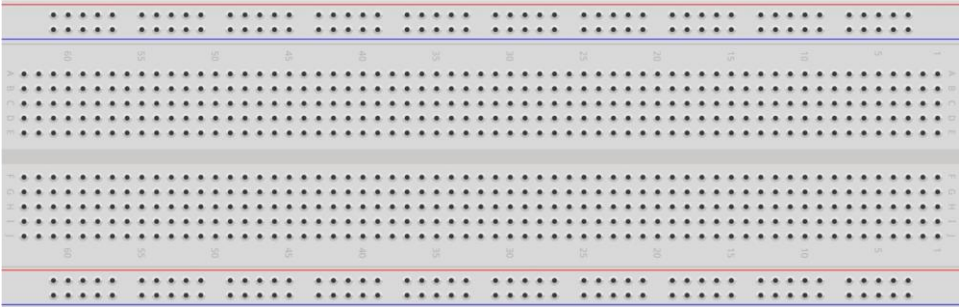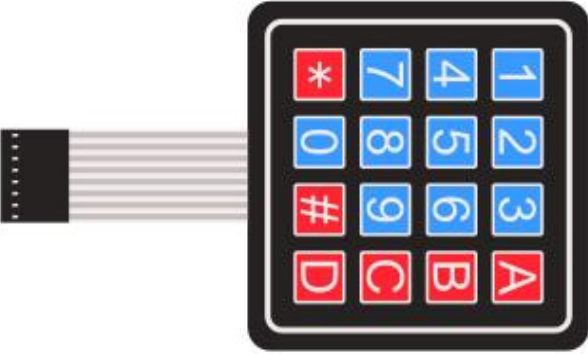ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper M/M x8 	4x4 Matrix Keypad x1 


Component knowledge

4x4 Matrix Keypad

A keypad matrix is a device that integrates a number of keys in one package. As is shown below, a 4x4 keypad matrix integrates 16 keys:

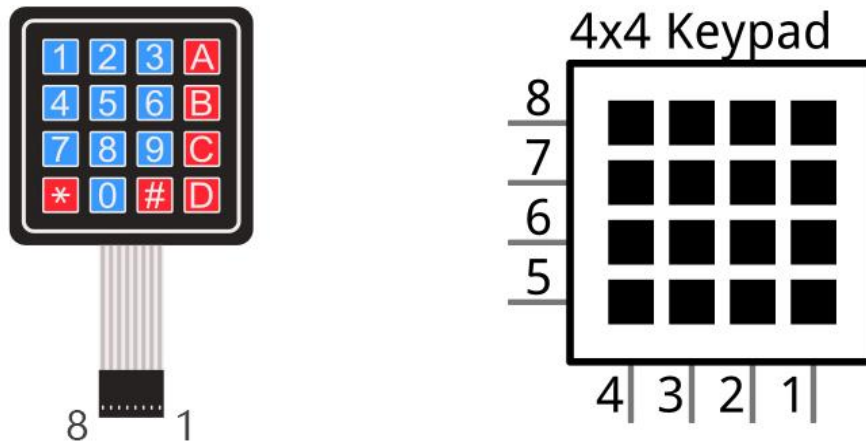


Similar to the integration of a LED matrix, the 4x4 keypad matrix has each row of keys connected with one pin and this is the same for the columns. Such efficient connections reduce the number of processor ports required. The internal circuit of the Keypad Matrix is shown below.

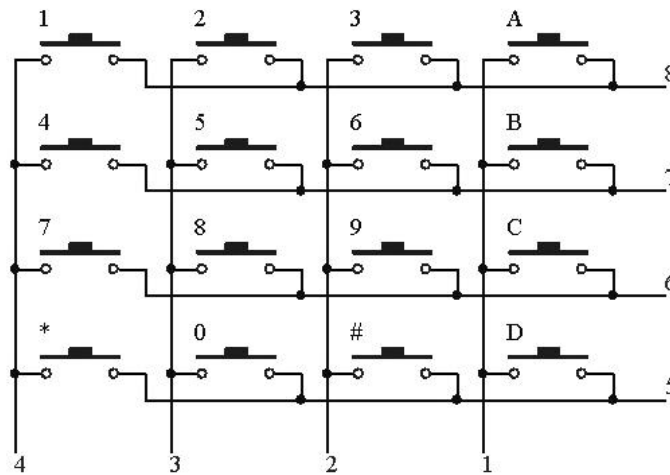


The usage is similar to the LED matrix, using a row or column scanning method to detect the state of each key's position by column and row. Take column scanning method as an example, send low level to the first 1 column (Pin1), detect level state of row 5, 6, 7, 8 to judge whether the key A, B, C, D are pressed. Then send low level to column 2, 3, 4 in turn to detect whether other keys are pressed. Therefore, you can get the state of all of the keys.

Circuit

Schematic diagram

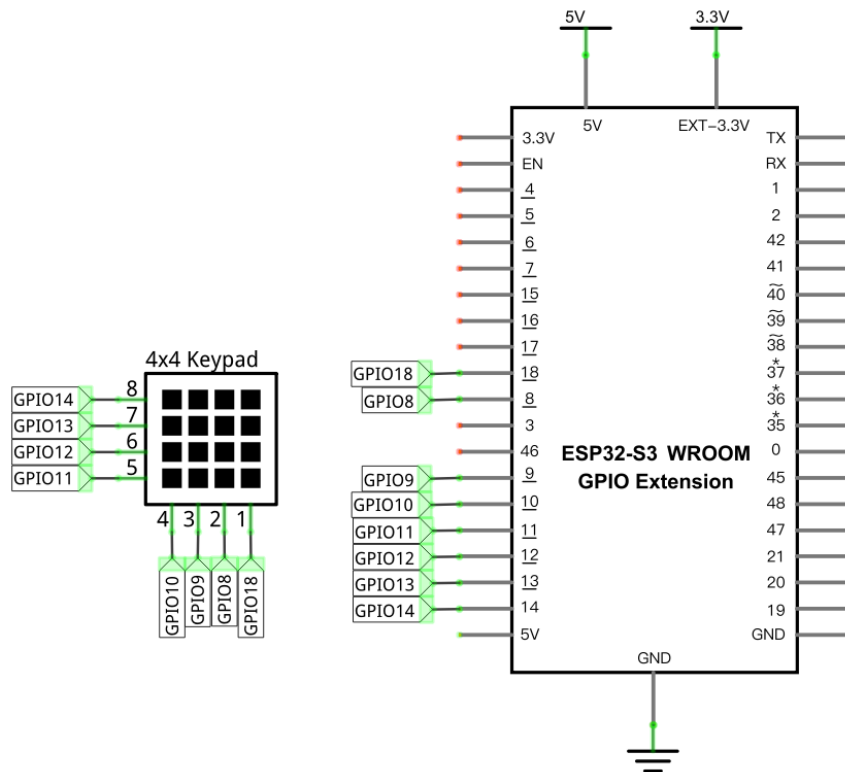

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

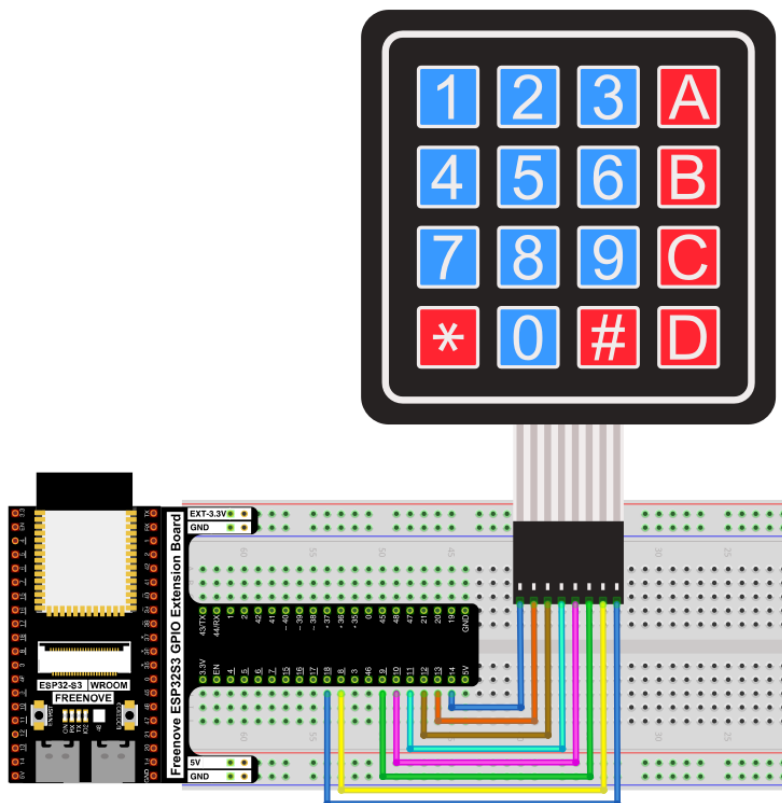

Any concerns? support@freenove.com


Code

This code is used to obtain all key codes of the 4x4 Matrix Keypad, when one of the keys is pressed, the key code will be printed out via serial port.


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “22.1_Matrix_Keypad”. Select “keypad.py”, right click your mouse to select “Upload to /”, wait for “keypad.py” to be uploaded to ESP32-S3 and then double click “Matrix_Keypad.py”.

22.1_Matrix_Keypad

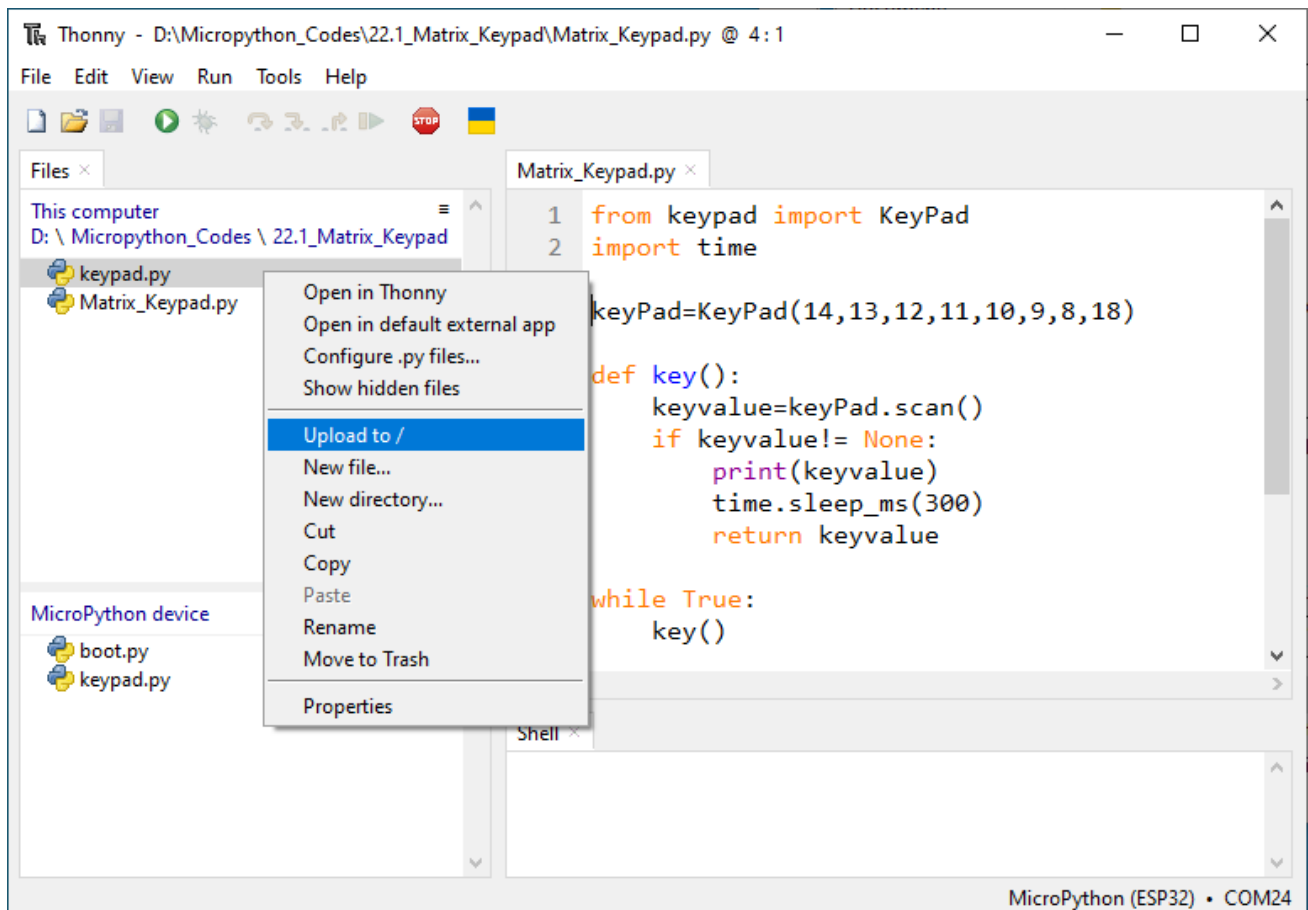

Click “Run current script”, push the key board and the key value will be printed in “Shell”. As shown in the illustration below:

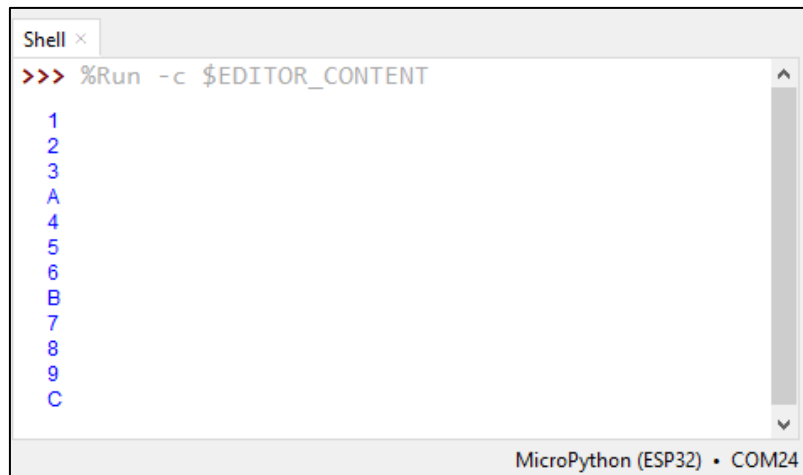

The following is the program code:

```

1  from keypad import KeyPad
2  import time
3
4  keyPad=KeyPad(14, 13, 12, 11, 10, 9, 8, 18)
5
6  def key():
7      keyvalue=keyPad.scan()
8      if keyvalue!= None:
9          print(keyvalue)
10         time.sleep_ms(300)
11         return keyvalue
12
13 while True:
14     key()

```

Import keypad module.

```

1  from keypad import KeyPad

```

Associate the keypad module to ESP32-S3 pins.

```

4  keyPad=KeyPad(14, 13, 12, 11, 10, 9, 8, 18)

```

Call function keypad.scan() of the keypad module. When the keypad module detects that the key is pressed, it returns the value of the pressed key; when no key is pressed, the return value is None.

```

7  keyPad.scan()

```

Call function keyPan.scan() to obtain the value of the pressed key. Once it is obtained, print it out.

```

6  def key():
7      keyvalue=keyPad.scan()
8      if keyvalue!= None:
9          print(keyvalue)
10         time.sleep_ms(300)
11         return keyvalue

```

Reference

Class keypad

Before each use of the object **KeyPad**, please make sure **keypad.py** has been uploaded to "/" of ESP32-S3 and then add the statement "**from keypad import KeyPad**" to the top of python file.






KeyPad(row1,row2,row3,row4,col1,col2,col3,col4): Intialize keypad module and associate its pins with ESP32-S3.

scan(): Non-blocking keypad scan function. If no key is pressed, it returns None; Otherwise, it returns the valued of the pressed key.

Project 22.2 Keypad Door


In this project, we use keypad as a keyboard to control the action of the servo motor.

Component List

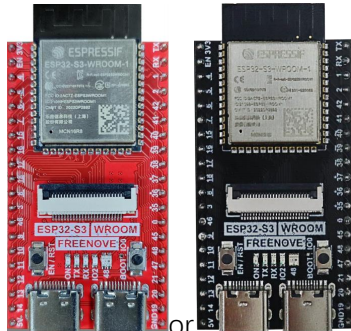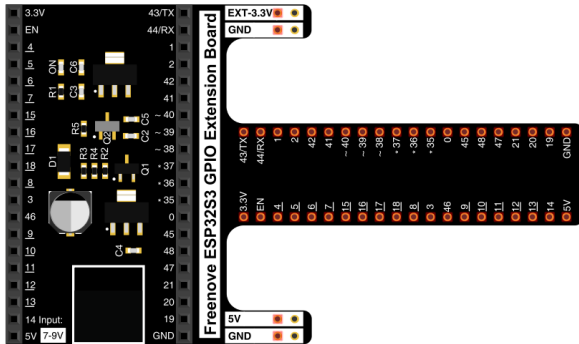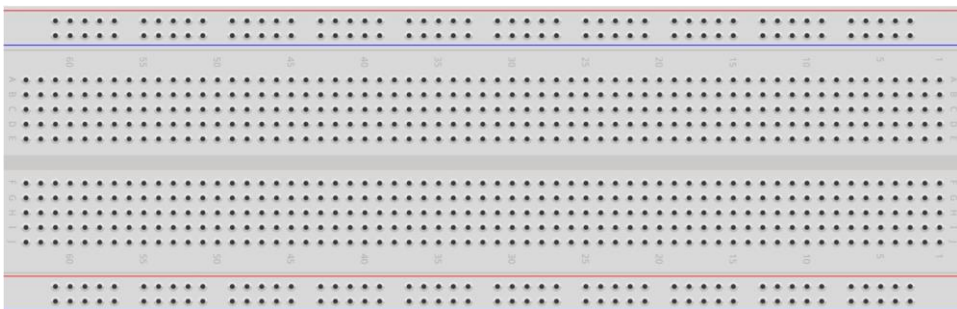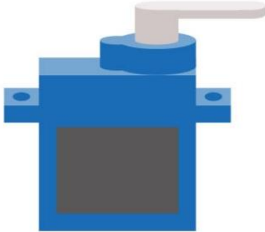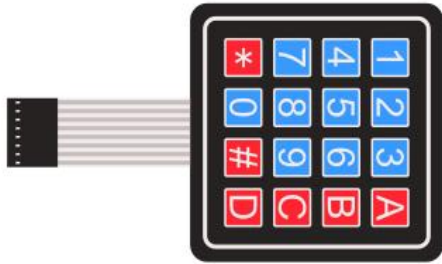
ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1	
			
or			
Breadboard x1			
			
Jumper M/M	Servo x1	4x4 Matrix Keypad x1	
			
NPN transistorx1 (S8050)	Active buzzer x1	Resistor 1kΩ x1	
			

Circuit

Schematic diagram

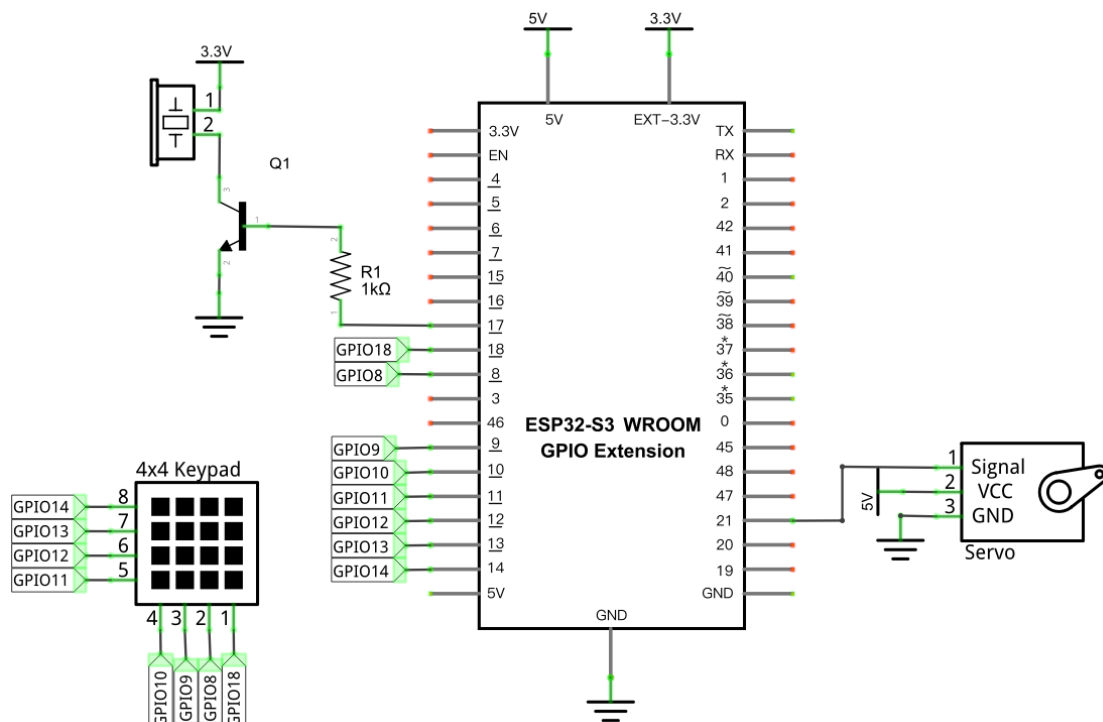

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

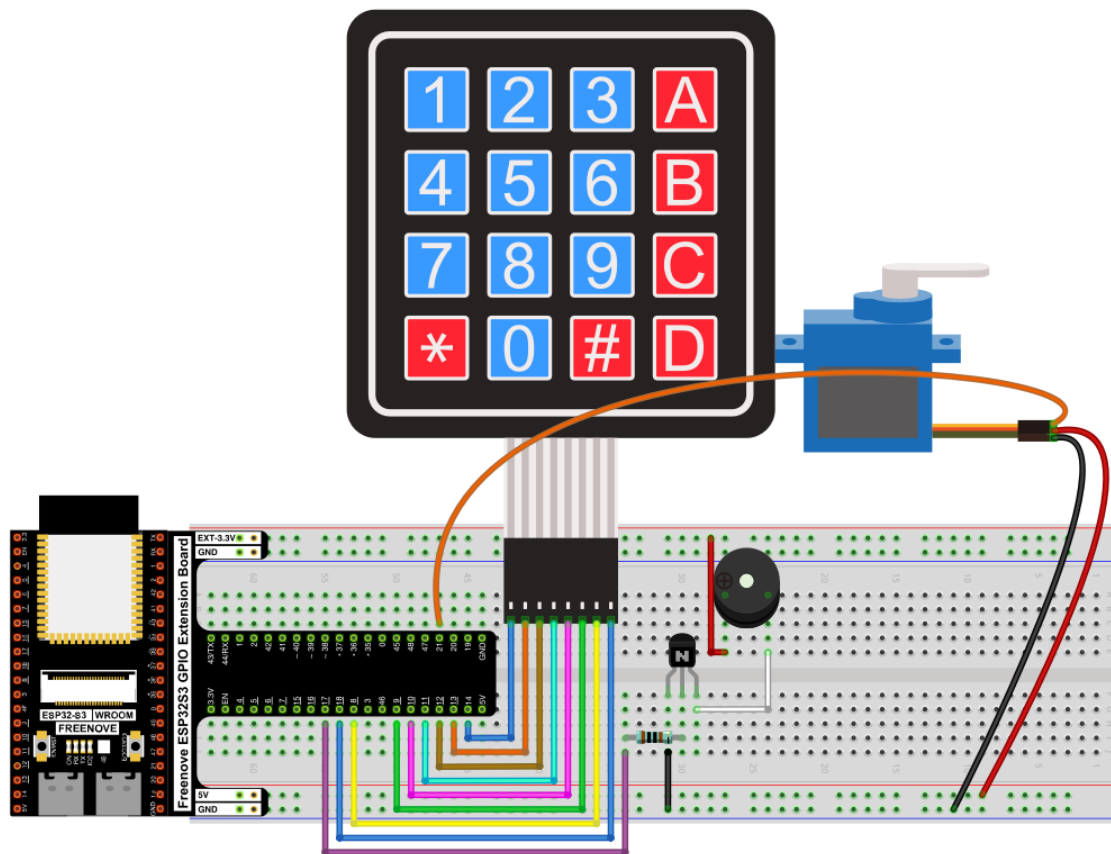


Any concerns? support@freenove.com

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “22.2_Keypad_Door”. Select “keypad.py” and “myservo.py”, right click your mouse to select “Upload to /”, wait for “keypad.py” and “myservo.py” to be uploaded to ESP32-S3 and then double click “Keypad_Door.py”.

22.2_Keypad_Door

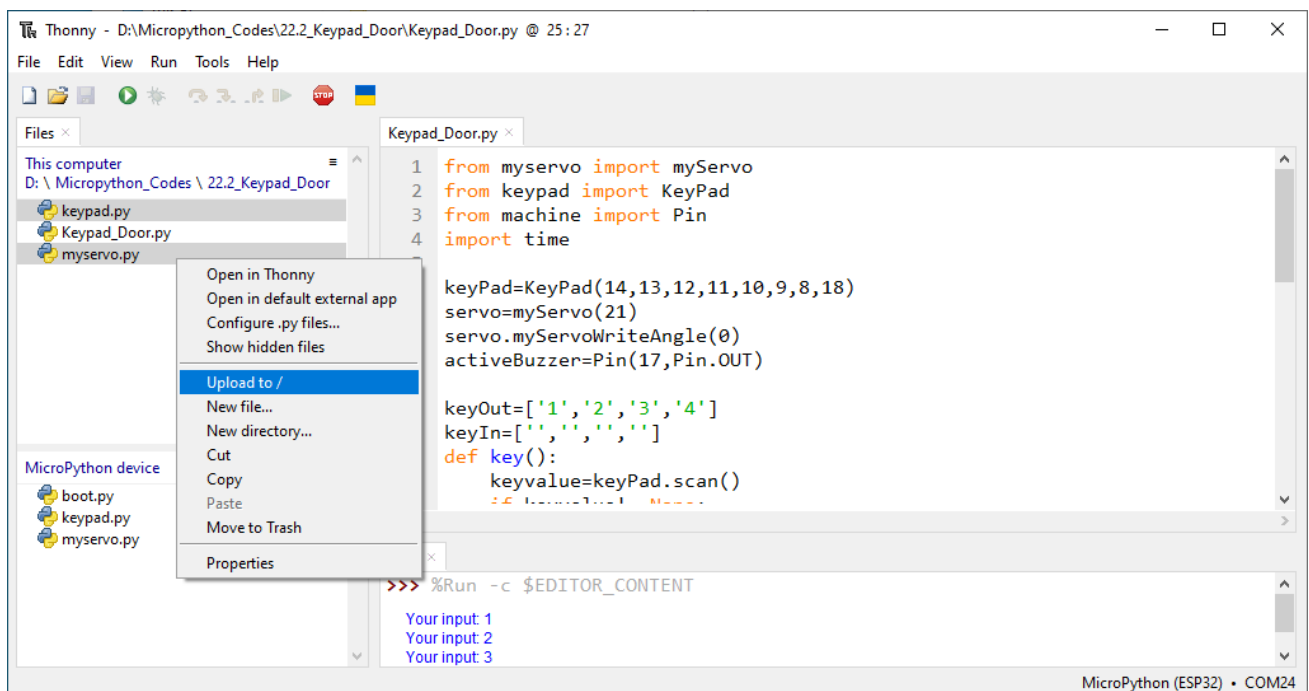

Click “Run current script”, press the keypad to input password with 4 characters. If the input is correct, the servo will move to a certain degree, and then return to the original position. If the input is wrong, an input error alarm will be generated.

The following is the program code:

```
1  from myservo import myServo
2  from keypad import KeyPad
3  from machine import Pin
4  import time
5
6  keypad=KeyPad(14, 13, 12, 11, 10, 9, 8, 18)
7  servo=myServo(21)
8  servo.myServoWriteAngle(0)
9  activeBuzzer=Pin(17, Pin.OUT)
10
11 keyOut = ['1', '2', '3', '4']
12 keyIn  = ['', '', '', '']
13 def key():
14     keyvalue=keyPad.scan()
15     if keyvalue!= None:
16         print('Your input:', keyvalue)
17         time.sleep_ms(200)
18         return keyvalue
19
20 keyInNum=0
21 while True:
22     keydata=key()
23     if keydata!=None:
24         activeBuzzer.value(1)
25         time.sleep_ms(100)
26         activeBuzzer.value(0)
27         keyIn[keyInNum]=keydata
28         keyInNum=keyInNum+1
29
30     if keyInNum==4:
31         if keyIn==keyOut:
32             print("passWord right!")
33             servo.myServoWriteAngle(90)
34             time.sleep_ms(1000)
35             servo.myServoWriteAngle(0)
36         else:
37             print("passWord error!")
38             activeBuzzer.value(1)
39             time.sleep_ms(1000)
40             activeBuzzer.value(0)
41     keyInNum=0
```

Define an array and set the password.

```
11 keyOut = ['1','2','3','4']
```

Each time a key is pressed, the buzzer will short beep once, and the key value of the key will be stored in the keyIn array.

```
22 keydata=key()
23 if keydata!=None:
24     activeBuzzer.value(1)
25     time.sleep_ms(100)
26     activeBuzzer.value(0)
27     keyIn[keyInNum]=keydata
28     keyInNum=keyInNum+1
```

When 4 keys are pressed, it will judge whether the password is correct. If it is correct, the servo will rotate 90 degrees, and then turn back after 1 second. If the password is wrong, the buzzer will long beep once and the keyInNum value will be cleared.

```
30 if keyInNum==4:
31     if keyIn==keyOut:
32         print("passWord right!")
33         servo.myServoWriteAngle(90)
34         time.sleep_ms(1000)
35         servo.myServoWriteAngle(0)
36     else:
37         print("passWord error!")
38         activeBuzzer.value(1)
39         time.sleep_ms(1000)
40         activeBuzzer.value(0)
41         keyInNum=0
```






Chapter 23 Infrared Remote

In this chapter, we'll learn how to use an infrared remote control, and control a LED.

Project 23.1 Infrared Remote Control

First, we need to understand how infrared remote control works, then get the command sent from infrared remote control.

Component List

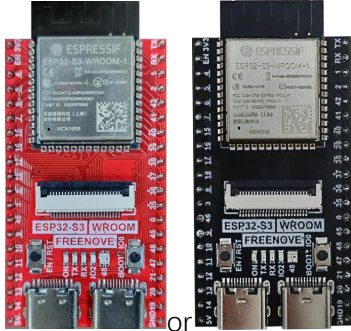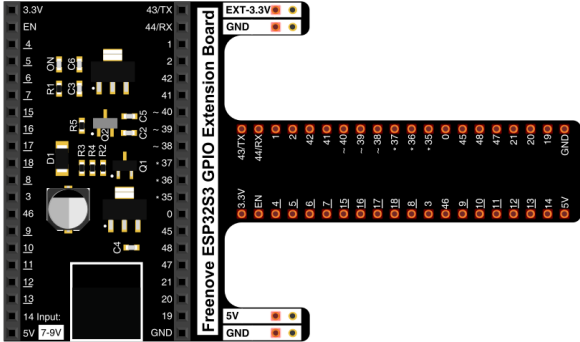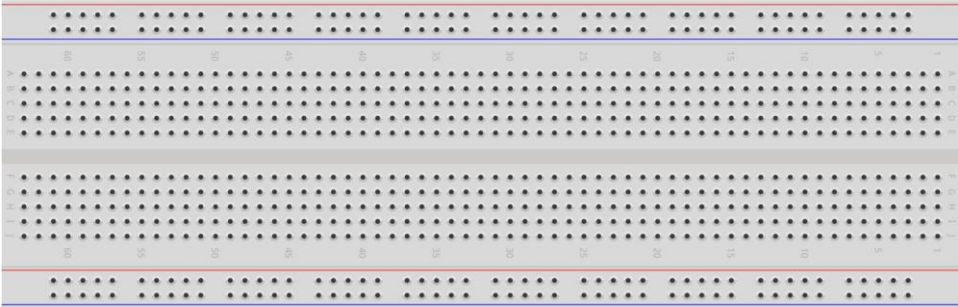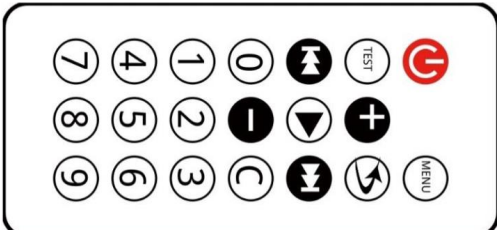ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper M/M x4 	Infrared Remote x1 (May need CR2025 battery x1, please check the holder) 
Infrared Remote x1 	Resistor 10kΩ x1 

Component knowledge


Infrared Remote

An infrared(IR) remote control is a device with a certain number of buttons. Pressing down different buttons will make the infrared emission tube, which is located in the front of the remote control, send infrared ray with different command. Infrared remote control technology is widely used in electronic products such as TV, air conditioning, etc. Thus making it possible for you to switch TV programs and adjust the temperature of the air conditioning when away from them. The remote control we use is shown below:



Infrared receiver

An infrared(IR) receiver is a component which can receive the infrared light, so we can use it to detect the signal emitted by the infrared remote control. DATA pin here outputs the received infrared signal.

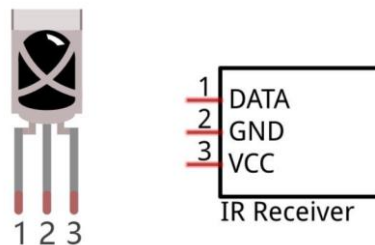


When you use the infrared remote control, the infrared remote control sends a key value to the receiving circuit according to the pressed keys. We can program the ESP32-S3 WROOM to do things like lighting, when a key value is received.

The following is the key value that the receiving circuit will receive when each key of the infrared remote control is pressed.


ICON	KEY Value	ICON	KEY Value
	FFA25D		FFB04F
	FFE21D		FF30CF
	FF22DD		FF18E7
	FF02FD		FF7A85
	FFC23D		FF10EF
	FFE01F		FF38C7
	FFA857		FF5AA5
	FF906F		FF42BD
	FF6897		FF4AB5
	FF9867		FF52AD

Circuit

Schematic diagram

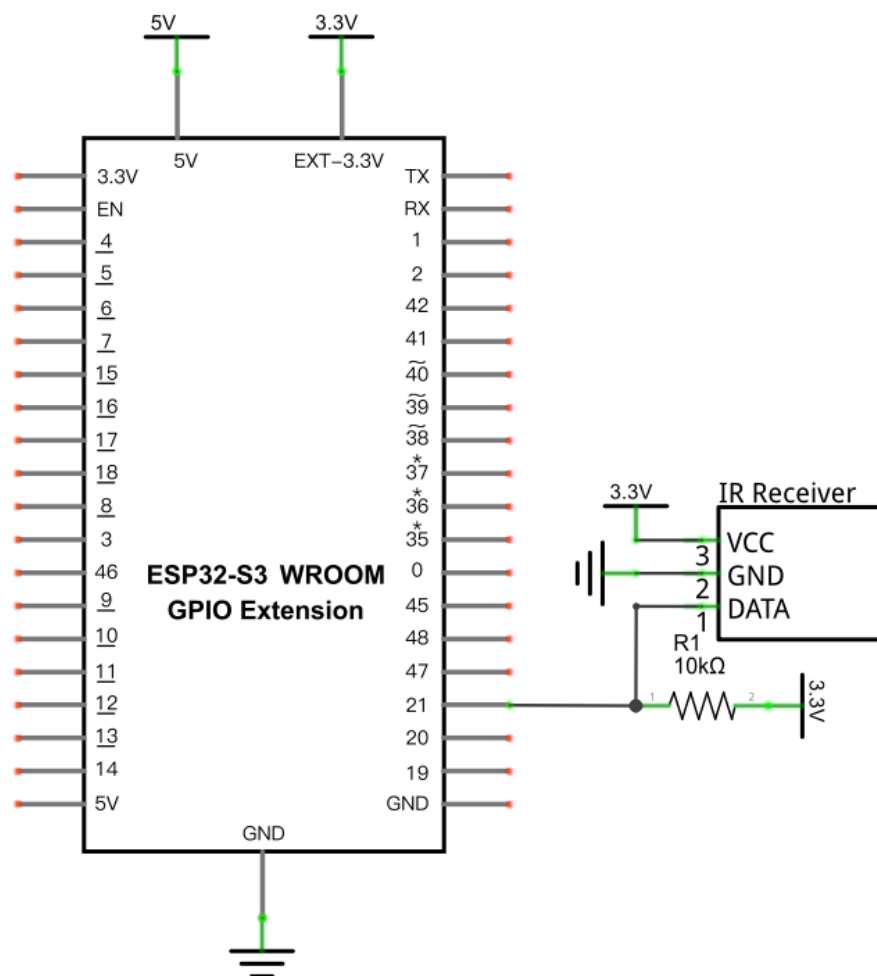

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

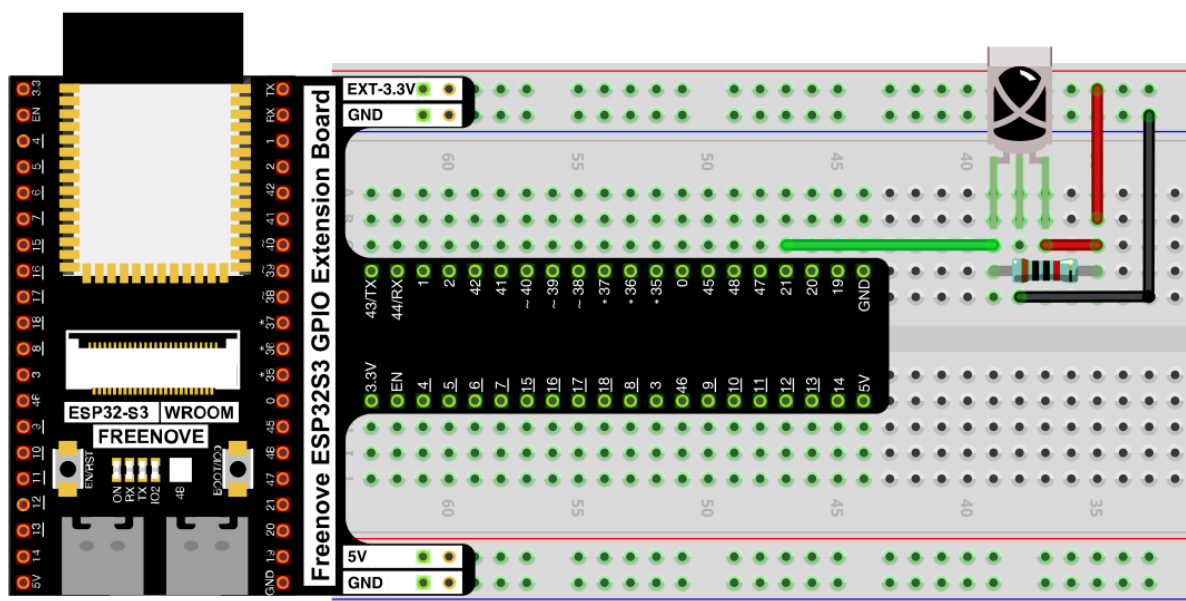


Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “23.1_Infrared_Remote”. Select “irrecvdata.py”, right click your mouse to select “Upload to /”, wait for “irrecvdata.py” to be uploaded to ESP32-S3 and then double click “Infrared_Remote.py”.

23.1_Infrared_Remote

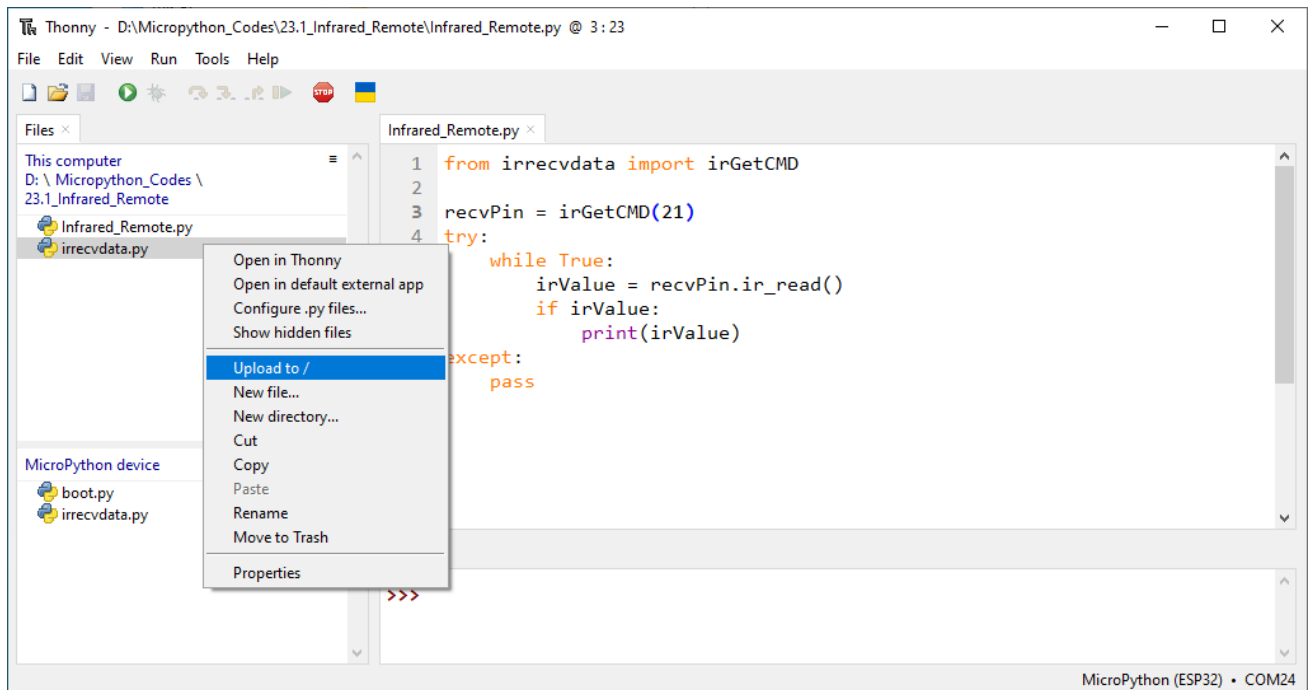

Click “Run current script”, press the key of the infrared remote and the key value will be printed in “Shell”. As shown in the illustration below:

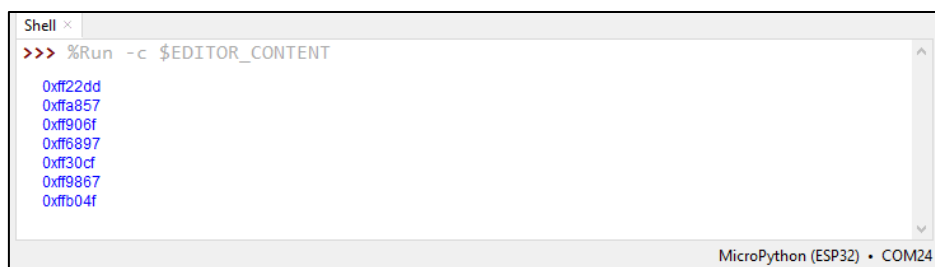

The following is the program code:

```
1 from irrecvdata import irGetCMD
2
3 recvPin = irGetCMD(21)
4 try:
5     while True:
6         irValue = recvPin.ir_read()
7         if irValue:
8             print(irValue)
9 except:
10    pass
```

Import the infrared decoder.

```
1 from irrecvdata import irGetCMD
```

Associate the infrared decoder with Pin(21).

```
6 recvPin = irGetCMD(21)
```

Call `ir_read()` to read the value of the pressed key and assign it to `IRValue`.

```
12 irValue = recvPin.ir_read()
```

When infrared key value is obtained, print it out in "Shell".

```
5 while True:
6     irValue = recvPin.ir_read()
7     if irValue:
8         print(irValue)
```

Reference

Class `irrecvdata`

Before each use of the object `irrecvdata`, please add the statement "`from irrecvdata import irGetCMD`" to the top of the python file.





irGetCMD(): Object of infrared encoder, which is associated with Pin(21) by default.

ir_read(): The function that reads the key value of infrared remote. When the value is read, it will be returned; when no value is obtained, character **None** will be returned.

Project 23.2 Control LED through Infrared Remote


In this project, we will control the brightness of LED lights through an infrared remote control.

Component List

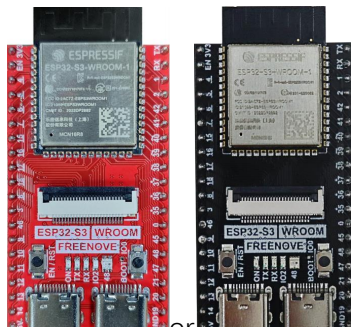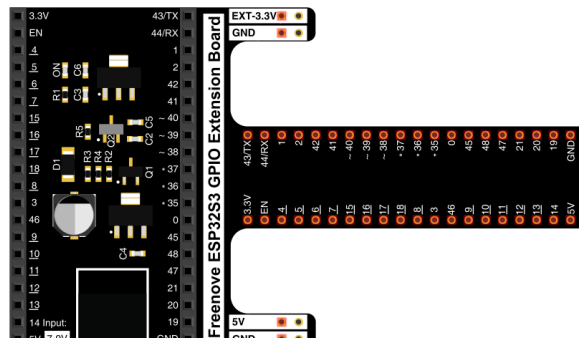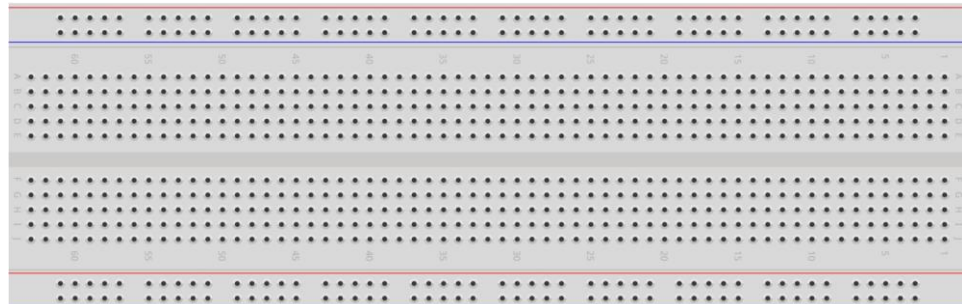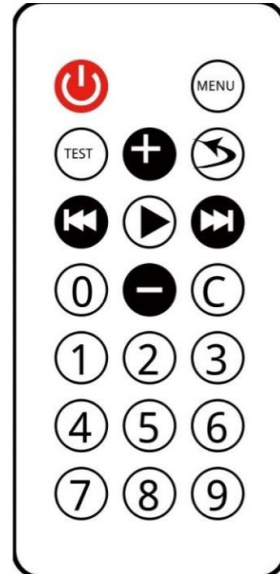
ESP32-S3(N16R8)/ESP32-S3(N8R8)		GPIO Extension Board x1	
			
Breadboard x1			
			
Jumper M/M x10		Infrared Remote x1 (May need CR2025 battery x1, please check the holder)	
			
LED x1	Resistor 1kΩ x2	Resistor 10k Ω x1	
			
Infrared receiver x1	NPN transistorx1 (S8050)	Active buzzer x1	
			

Circuit

Schematic diagram

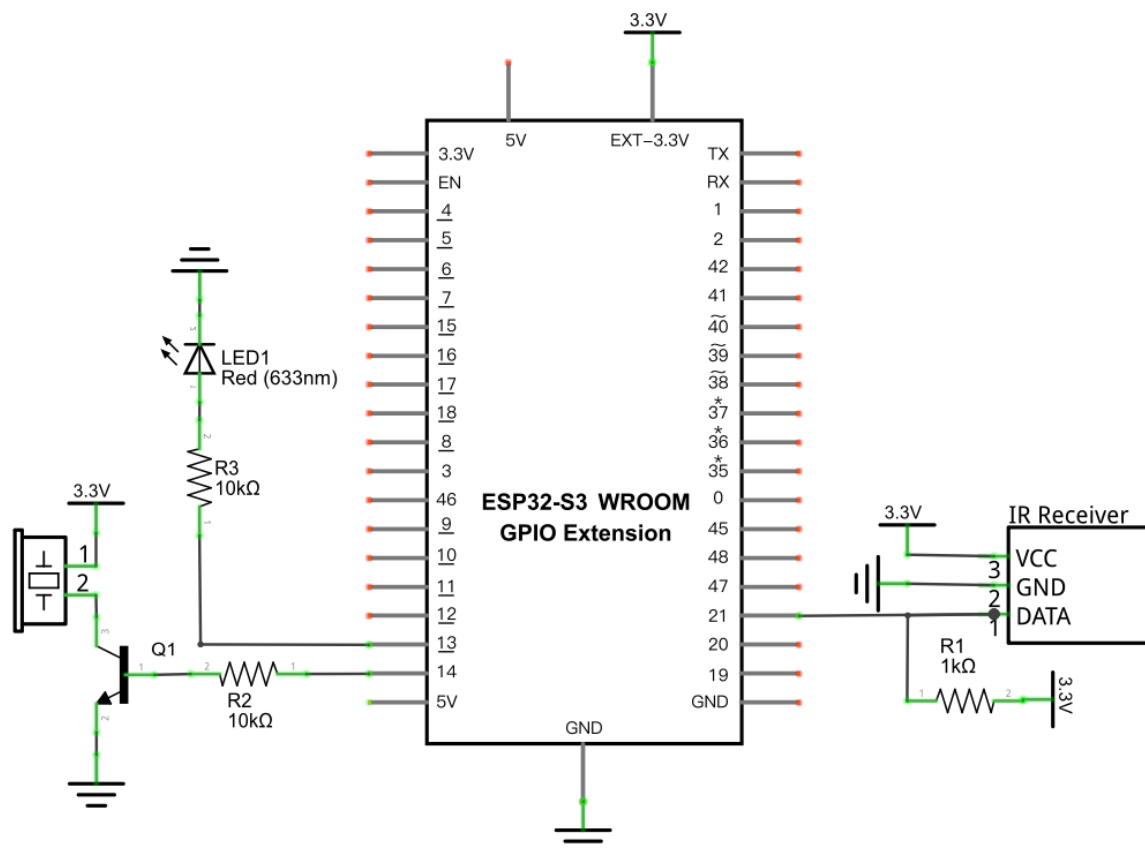

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

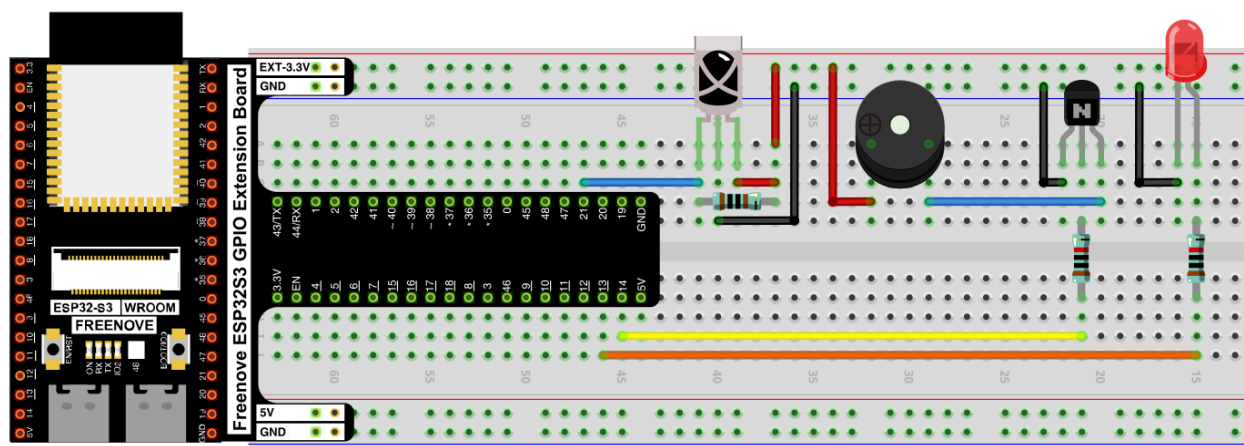


Code

The Code controls the brightness of the LED by determining the key value of the infrared received.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.


Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “23.2_Control_LED_through_Infrared_Remote”. Select “irrecvdata.py”, right click your mouse to select “Upload to /”, wait for “irrecvdata.py” to be uploaded to ESP32-S3 and then double click “Control_LED_through_Infrared_Remote.py”.

23.2_Control_LED_through_Infrared_Remote

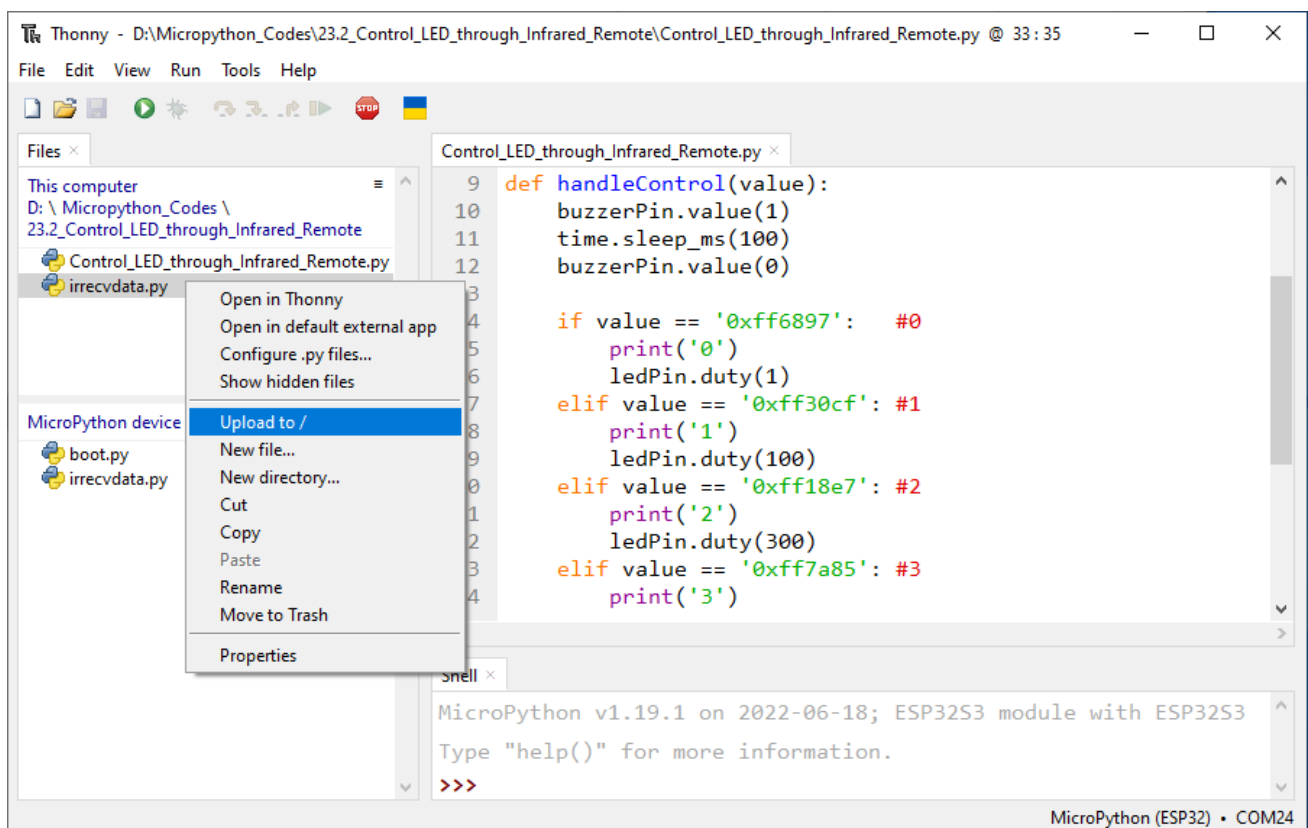

Click "Run current script". When pressing "0", "1", "2", "3" of the infrared remote control, the buzzer will sound once, and the brightness of the LED light will change correspondingly.

Rendering

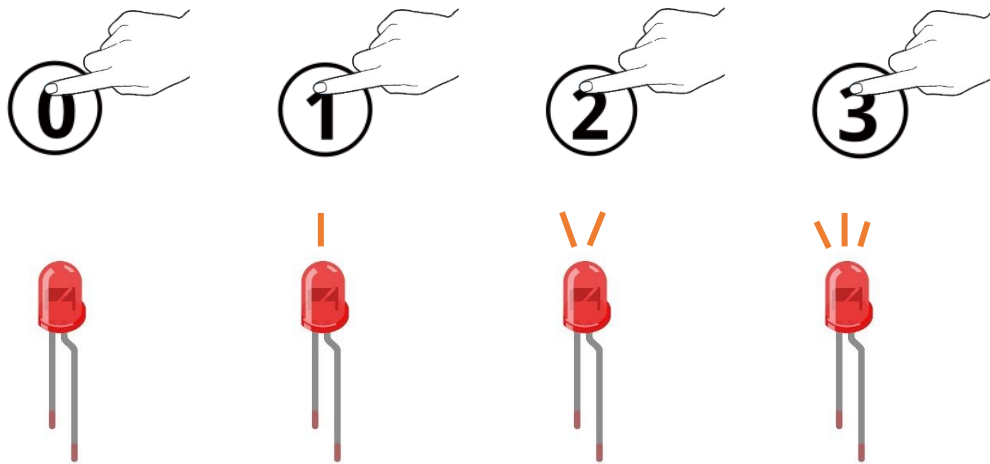

The following is the program code:

```

1  from machine import Pin,PWM
2  import time
3  from irrecvdata import irGetCMD
4
5  ledPin=PWM(Pin(13,Pin.OUT),10000)
6  buzzerPin=Pin(14,Pin.OUT)
7  recvpin = irGetCMD(21)
8
9  def handleControl(value):
10     buzzerPin.value(1)
11     time.sleep_ms(100)
12     buzzerPin.value(0)
13
14     if value == '0xff6897': #0
15         print('0')
16         ledPin.duty(1)
17     elif value == '0xff30cf': #1
18         print('1')
19         ledPin.duty(100)
20     elif value == '0xff18e7': #2
21         print('2')
22         ledPin.duty(300)
23     elif value == '0xff7a85': #3
24         print('3')
25         ledPin.duty(1000)
26     else:
27         return

```

```
28 try:
29     while True:
30         irValue = recvPin.ir_read()
31         if irValue:
32             print(irValue)
33             handleControl(irValue)
34 except:
35     ledPin.deinit()
```

The handleControl() function is used to execute events corresponding to infrared code values. Every time when the function is called, the buzzer sounds once and determines the brightness of the LED based on the infrared key value. If the key value is not "0", "1", "2", "3", the buzzer sounds once, but the brightness of LED will not change.

```
9 def handleControl(value):
10     buzzerPin.value(1)
11     time.sleep_ms(100)
12     buzzerPin.value(0)
13
14     if value == '0xff6897': #0
15         print('0')
16         ledPin.duty(1)
17     elif value == '0xff30cf': #1
18         print('1')
19         ledPin.duty(100)
20     elif value == '0xff18e7': #2
21         print('2')
22         ledPin.duty(300)
23     elif value == '0xff7a85': #3
24         print('3')
25         ledPin.duty(1000)
26     else:
27         return
```

Each time the key value of IR remote is received, function handleControl() will be called to process it.

```
28 try:
29     while True:
30         irValue = recvPin.ir_read()
31         if irValue:
32             print(irValue)
33             handleControl(irValue)
34 except:
35     ledPin.deinit()
```





Chapter 24 Hygrothermograph DHT11

In this chapter, we will learn about a commonly used sensor called a Hygrothermograph DHT11.

Project 24.1 Hygrothermograph


Hygrothermograph is an important tool in our lives to give us data on the temperature and humidity in our environment. In this project, we will use the ESP32-S3 to read temperature and humidity data of the DHT11 Module.

Component List

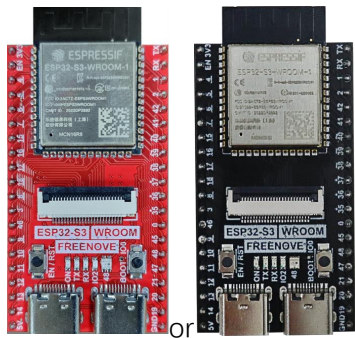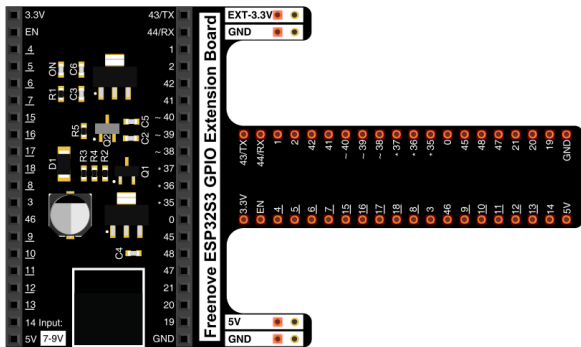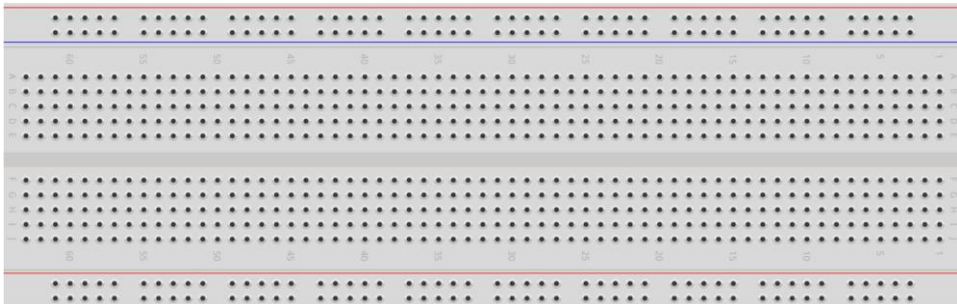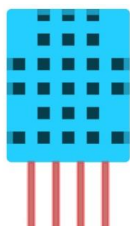ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 	
Breadboard x1 		
Jumper M/M x4 	DHT11 x1 	Resistor 10kΩ x1 

Component knowledge

The temperature & humidity sensor DHT11 is a compound temperature & humidity sensor, and the output digital signal has been calibrated by its manufacturer.

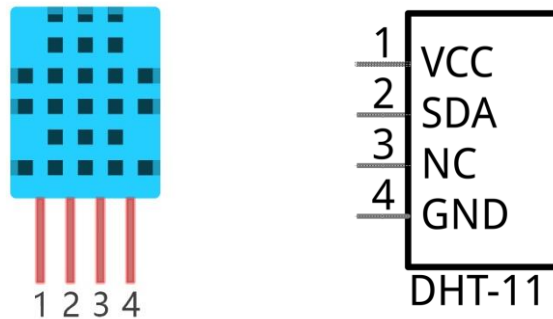

DHT11 uses customized single-line communication protocol, so we can use the library to read data more conveniently.


After being powered up, it will initialize in 1s. Its operating voltage is within the range of 3.3V-5.5V.

The SDA pin is a data pin, which is used to communicate with other devices.


The NC pin (Not Connected Pin) is a type of pin found on various integrated circuit packages. Those pins have no functional purpose to the outside circuit (but may have an unknown functionality during manufacture and test). Those pins should not be connected to any of the circuit connections.

Circuit

Schematic diagram

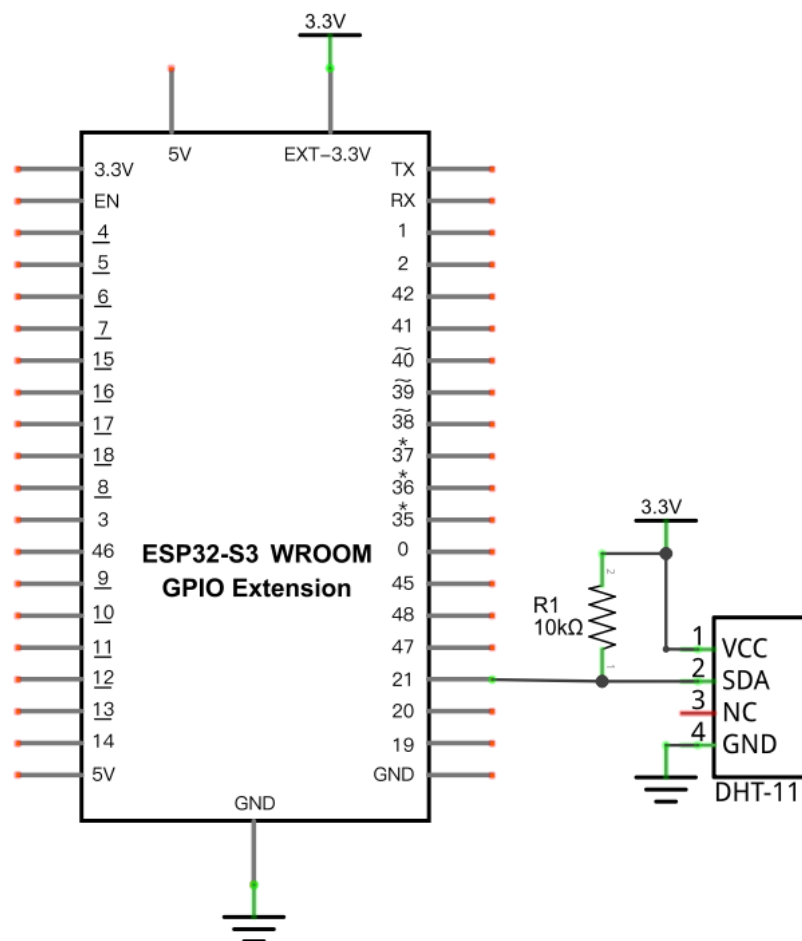

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

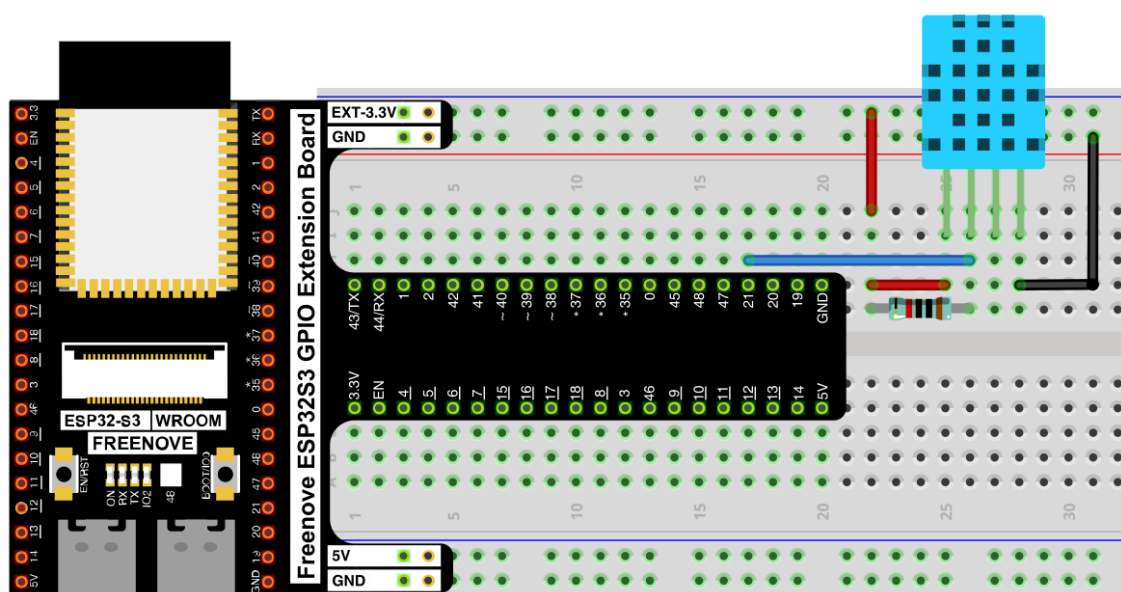


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “24.1_Hygrothermograph” and double click “Hygrothermograph.py”.

24.1_Hygrothermograph

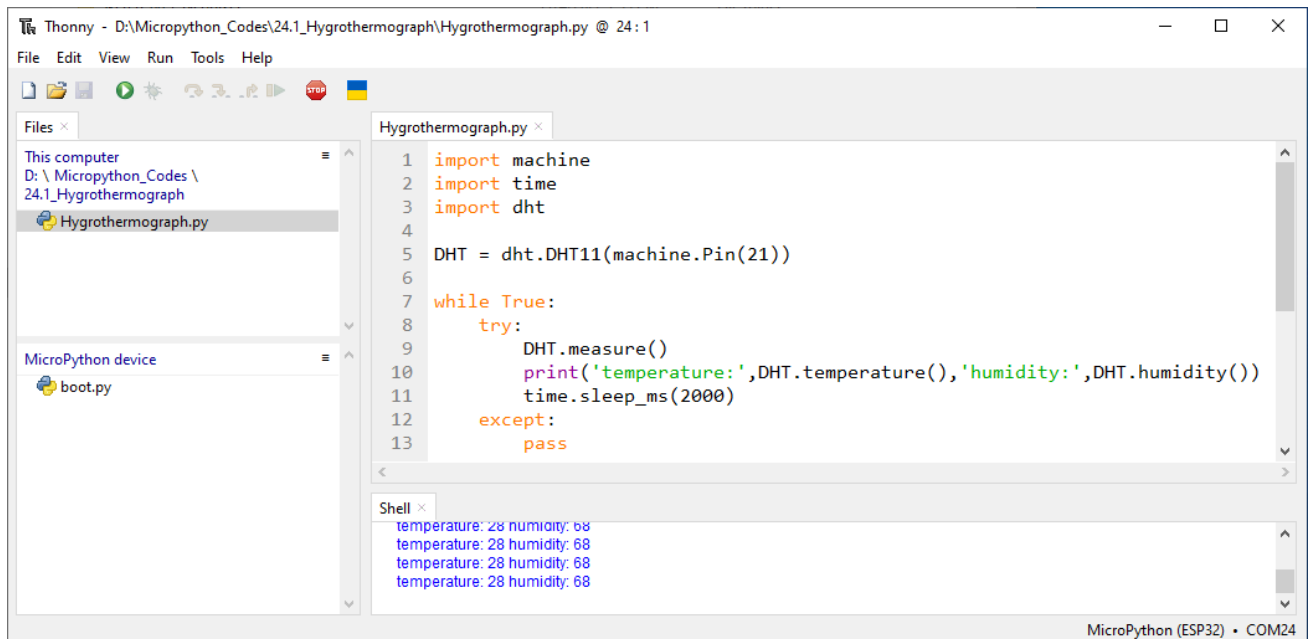

Make sure your circuit is correctly connected and you will see the following messages printed in “Shell”.

```
temperature: 28 humidity: 60
temperature: 28 humidity: 46
temperature: 28 humidity: 49
temperature: 28 humidity: 50
temperature: 28 humidity: 53
temperature: 28 humidity: 55
temperature: 28 humidity: 57
temperature: 28 humidity: 59
temperature: 28 humidity: 61
temperature: 28 humidity: 63
temperature: 28 humidity: 61
temperature: 28 humidity: 59
temperature: 28 humidity: 57
temperature: 28 humidity: 56
temperature: 28 humidity: 54
temperature: 28 humidity: 54
```

The following is the program code:

```

1  import machine
2  import time
3  import dht
4
5  DHT = dht.DHT11(machine.Pin(21))
6
7  while True:
8      try:
9          DHT.measure()
10         print('temperature:', DHT.temperature(), 'humidity:', DHT.humidity())
11         time.sleep_ms(2000)
12     except:
13         pass

```

Import machine, time and dht modules.

```

1  import machine
2  import time
3  import dht

```

Associate DHT11 with Pin(21).

```

5  DHT = dht.DHT11(machine.Pin(21))

```

Start DHT11 to measure data once.

```

9  DHT.measure()

```

Call the built-in function of DHT to obtain temperature and humidity data and print them in "Shell".

```

10 print('temperature:', DHT.temperature(), 'humidity:', DHT.humidity())

```

Obtain temperature and humidity data once per second and print them out.

```

7  while True:
8      try:
9          DHT.measure()
10         print('temperature:', DHT.temperature(), 'humidity:', DHT.humidity())
11         time.sleep_ms(2000)
12     except:
13         pass

```

Reference

Class dht

Before each use of object **dht**, please add the statement "**import dht**" to the top of python file.

DHT11(): Object of DHT11

DHT12(): Object of DHT12

DHT11.measure(): Start DHT11 to measure temperature and humidity data once.

DHT11.temperature(): Return temperature data obtained by DHT11.

DHT11.humidity(): Return humidity data obtained by DHT11.

DHT12.measure(): Start DHT12 to measure temperature and humidity data once






DHT12.temperature(): Return temperature data obtained by DHT12.

DHT12.humidity(): Return humidity data obtained by DHT12.

Project 24.2 Hygrothermograph


In this project, we use L2C-LCD1602 to display data collected by DHT11.

Component List

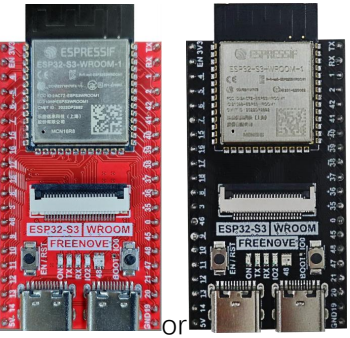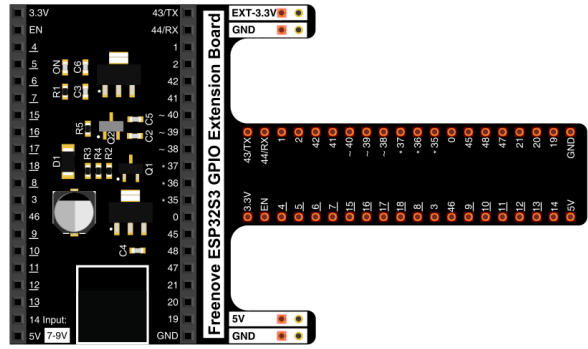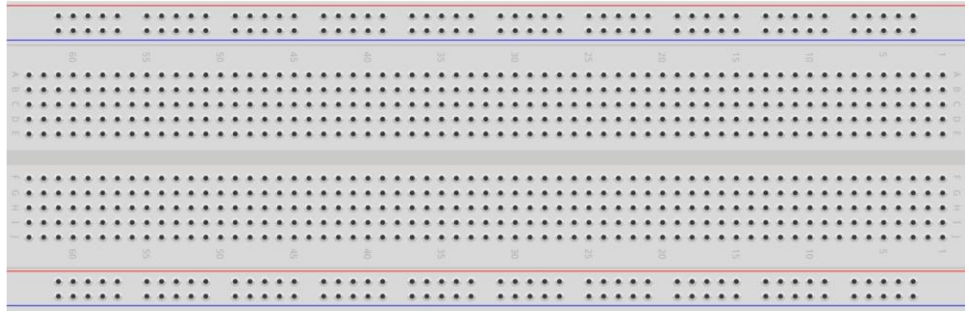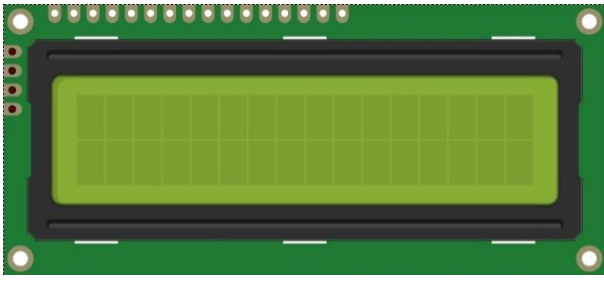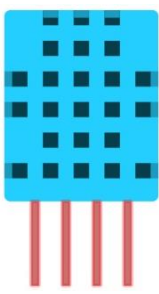
ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
LCD1602 Module x1 	Resistor 10kΩ x1 
Jumper F/M x4 Jumper M/M x4 	DHT11 x1 

Circuit

Schematic diagram

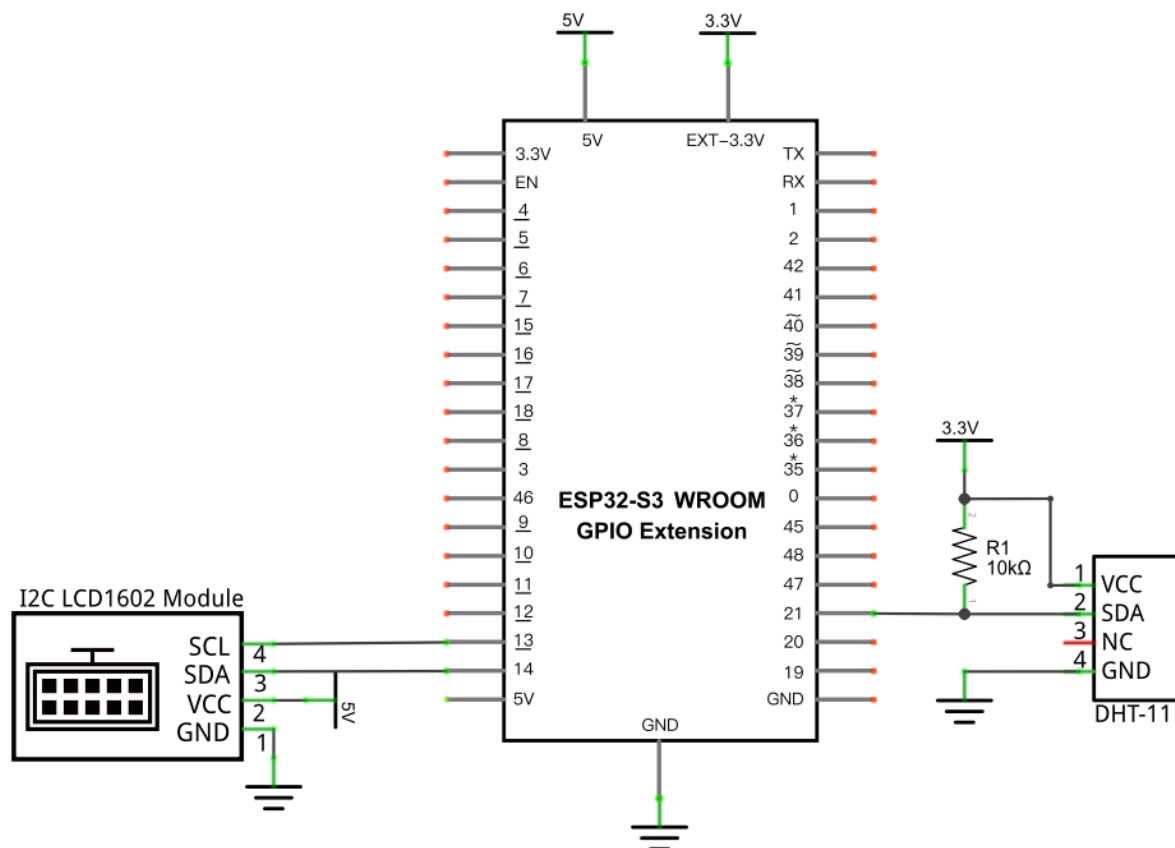


Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

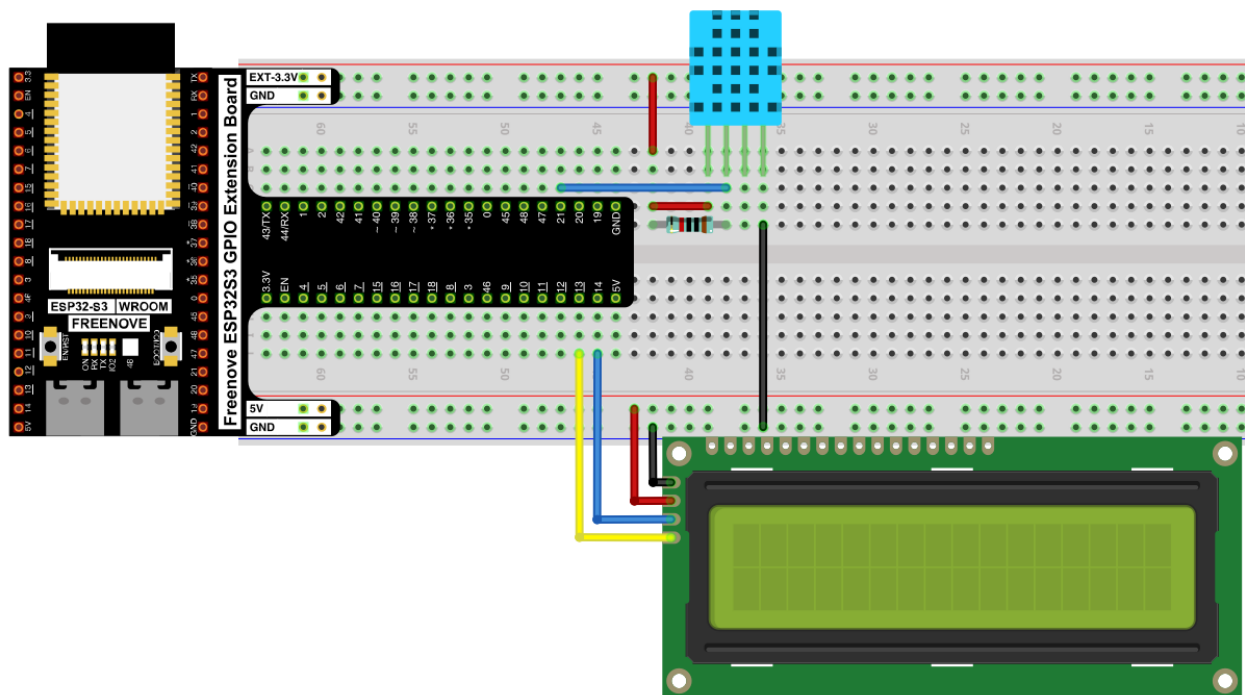


Code

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “24.2_Hygrothermograph”. Select “I2C_LCD.py” and “LCD_API.py”, right click your mouse to select “Upload to /”, wait for “I2C_LCD.py” and “LCD_API.py” to be uploaded to ESP32-S3 and then double click “Hygrothermograph.py”.

24.2_Hygrothermograph

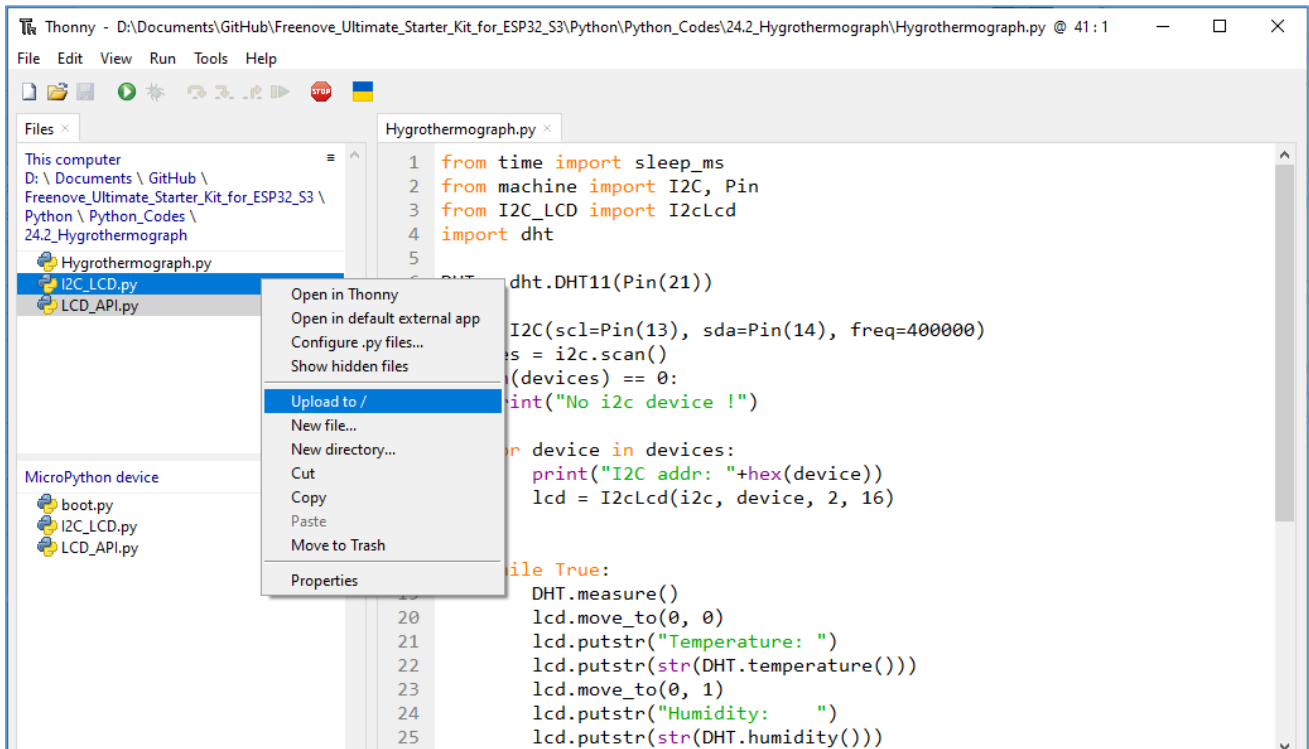

Click “Run current script”. The first row of LCD1602 is temperature value and the second row is humidity. Try to “pinch” the DHT11 (without touching the leads) with your index finger and thumb for a brief time, you should see that the displayed value on LCD1602 changes.

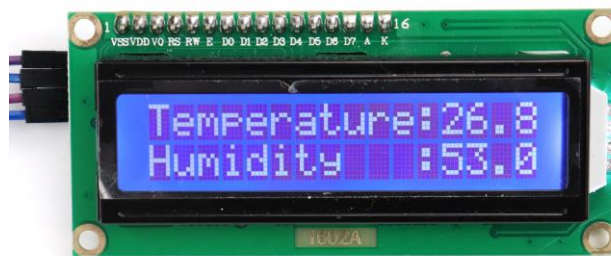

The following is the program code:

```

1  from time import sleep_ms
2  from machine import I2C, Pin
3  from I2C_LCD import I2cLcd
4  import dht
5
6  DHT = dht.DHT11(Pin(21))
7  i2c = I2C(scl=Pin(13), sda=Pin(14), freq=400000)
8  devices = i2c.scan()
9  if len(devices) == 0:
10     print("No i2c device !")
11 else:
12     for device in devices:
13         print("I2C addr: "+hex(device))
14         lcd = I2cLcd(i2c, device, 2, 16)
15
16 try:
17     while True:
18         DHT.measure()
19         lcd.move_to(0, 0)
20         lcd.putstr("Temperature: ")
21         lcd.putstr(str(DHT.temperature()))
22         lcd.move_to(0, 1)
23         lcd.putstr("Humidity: ")
24         lcd.putstr(str(DHT.humidity()))
25         sleep_ms(2000)
26 except:
27     pass

```

Import DHT11 and I2C LCD1602 modules.

```

1  from time import sleep_ms
2  from machine import I2C, Pin
3  from I2C_LCD import I2cLcd
4  import dht

```

Assign Pin(21) to DHT11, Pin(13) and Pin(14) to LCD1602.

```

6  DHT = dht.DHT11(Pin(21))
7  i2c = I2C(scl=Pin(13), sda=Pin(14), freq=400000)
8  devices = i2c.scan()
9  if len(devices) == 0:
10     print("No i2c device !")
11 else:
12     for device in devices:
13         print("I2C addr: "+hex(device))
14         lcd = I2cLcd(i2c, device, 2, 16)

```

Obtain data of Hygrothermograph every second and display them on LCD1602. The first line displays temperature and the second line displays humidity.

```
17 while True:
18     DHT.measure()
19     lcd.move_to(0, 0)
20     lcd.putstr("Temperature: ")
21     lcd.putstr(str(DHT.temperature()))
22     lcd.move_to(0, 1)
23     lcd.putstr("Humidity: ")
24     lcd.putstr(str(DHT.humidity()))
25     sleep_ms(2000)
```

Chapter 25 Infrared Motion Sensor

In this chapter, we will learn a widely used sensor, infrared motion sensor.





Project 25.1 Infrared Motion Detector with LED Indicator

In this project, we will make a motion detector, with the human body infrared pyroelectric sensors.

When someone is in close proximity to the motion detector, it will automatically light up and when there is no one close by, it will be out.


This infrared motion sensor can detect the infrared spectrum (heat signatures) emitted by living humans and animals.

Component List

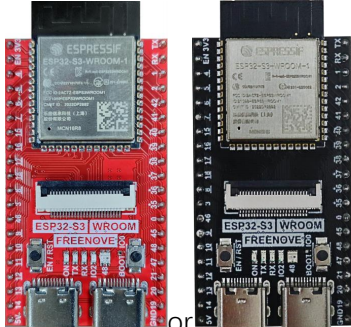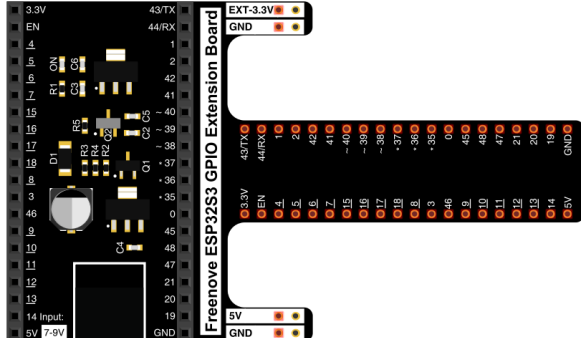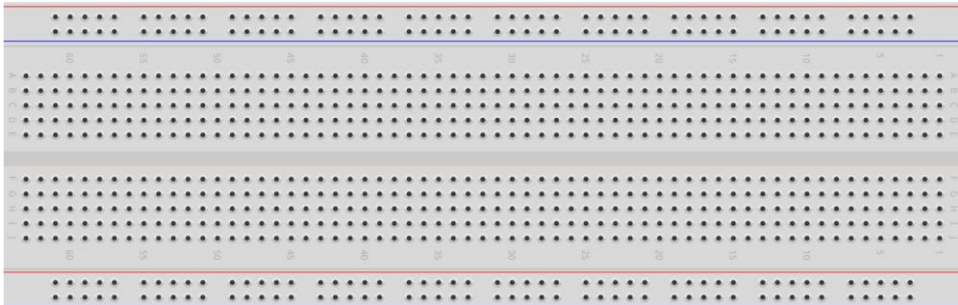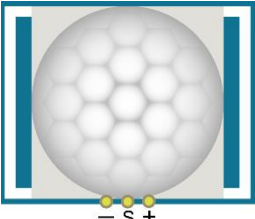ESP32-S3(N16R8)/ESP32-S3(N8R8) 		GPIO Extension Board x1 	
Breadboard x1 			
HC SR501 x1 	LED x1 	Resistor 220Ω x1 	Jumper F/M x3 Jumper M/M x2 

Component knowledge

The following is the diagram of the infrared Motion sensor (HC SR-501) :

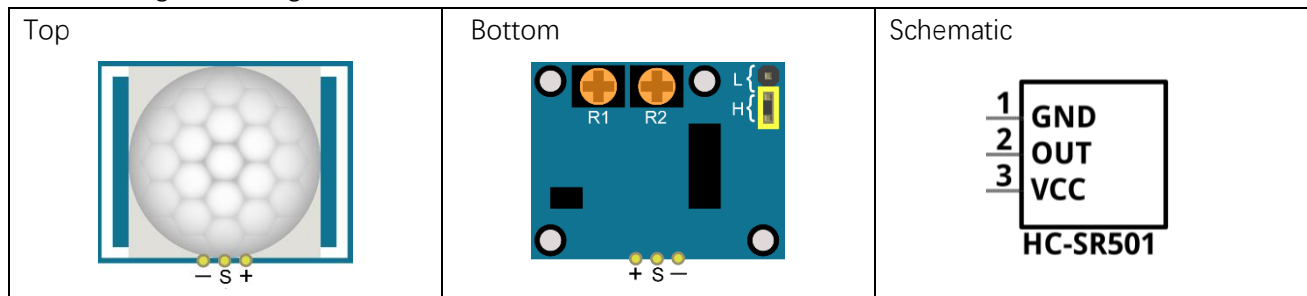

Description:

Working voltage: 5v-20v(DC) Static current: 65uA.

Automatic Trigger. When a living body enters into the active area of sensor, the module will output high level (3.3V). When the body leaves the sensor's active detection area, it will output high level lasting for time period T, then output low level(0V). Delay time T can be adjusted by the potentiometer R1.

According to the position of jumper cap, you can choose non-repeatable trigger mode or repeatable mode.

L: non-repeatable trigger mode. The module output high level after sensing a body, then when the delay time is over, the module will output low level. During high level time, the sensor no longer actively senses bodies.

H: repeatable trigger mode. The distinction from the L mode is that it can sense a body until that body leaves during the period of high level output. After this, it starts to time and output low level after delaying T time.

Induction block time: the induction will stay in block condition and does not induce external signal at lesser time intervals (less than delay time) after outputting high level or low level

Initialization time: the module needs about 1 minute to initialize after being powered ON. During this period, it will alternately output high or low level.

One characteristic of this sensor is when a body moves close to or moves away from the sensor's dome edge, the sensor will work at high sensitivity. When a body moves close to or moves away from the sensor's dome in a vertical direction, the sensor cannot detect well (please take note of this deficiency). Note: The sensing range (distance before a body is detected) is adjusted by the potentiometer.

We can regard this sensor as a simple inductive switch when in use.


Code

In this project, we will use an infrared motion sensor to trigger an LED, essentially using the infrared motion sensor as a motion switch. So the code of this project is similar to that of project “[Button & Led](#)”. The difference is when infrared motion sensor detects changes, it will output high level; when it detects nothing, it will output low level. When the sensor outputs high level, LED turns ON; Otherwise, LED turns OFF.

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.


Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “25.1_Infrared_Motion_Detector” and then double click “Infrared_Motion_Detector.py”.

25.1_Infrared_Motion_Detector

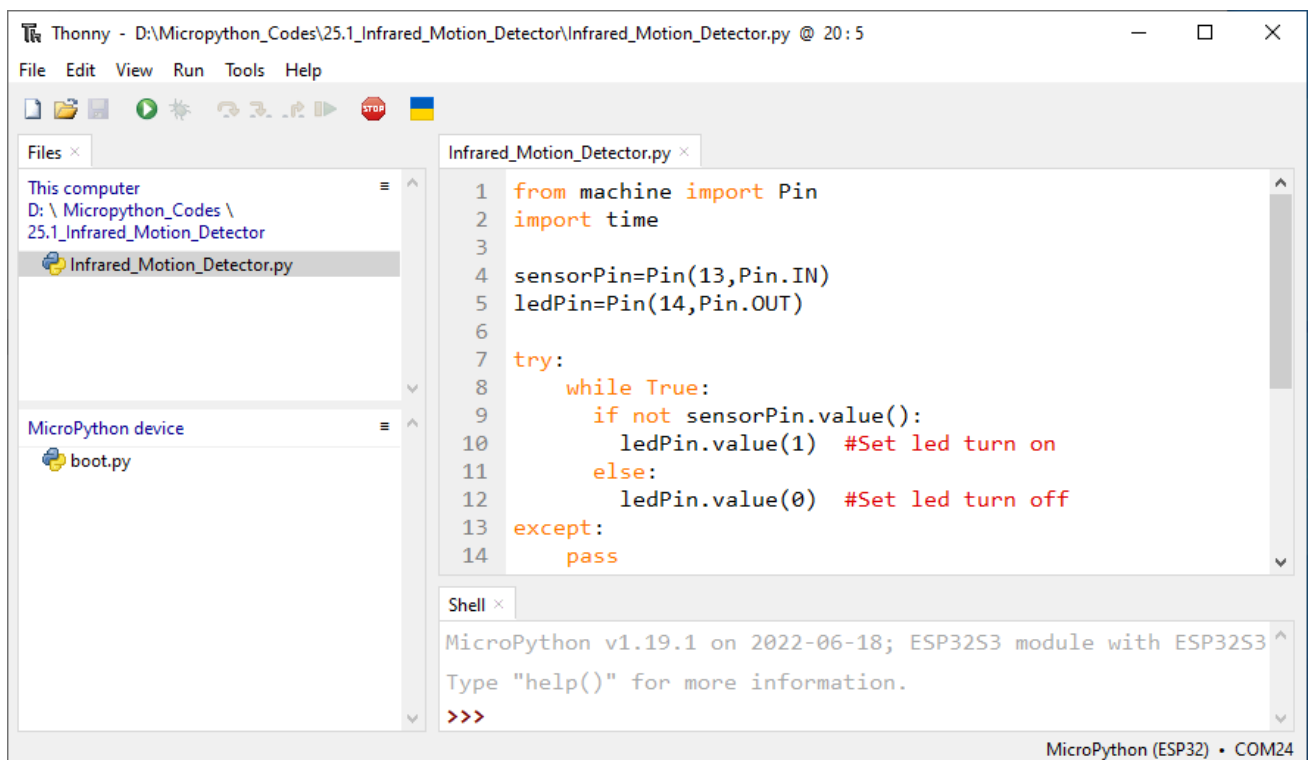


Click “Run current script”. Put the sensor on a stationary table and wait for about a minute. Then try to move away from or move closer to the Infrared Motion Sensor and observe whether the LED turns ON or OFF automatically.

You can rotate the potentiometer on the sensor to adjust the detection effect, or use different modes by changing the jumper.

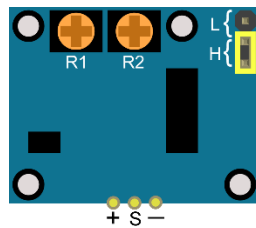

Apart from that, you can also use this sensor to control some other modules to implement different functions by reediting the code, such as the induction lamp, induction door.

Move to the Infrared Motion Sensor

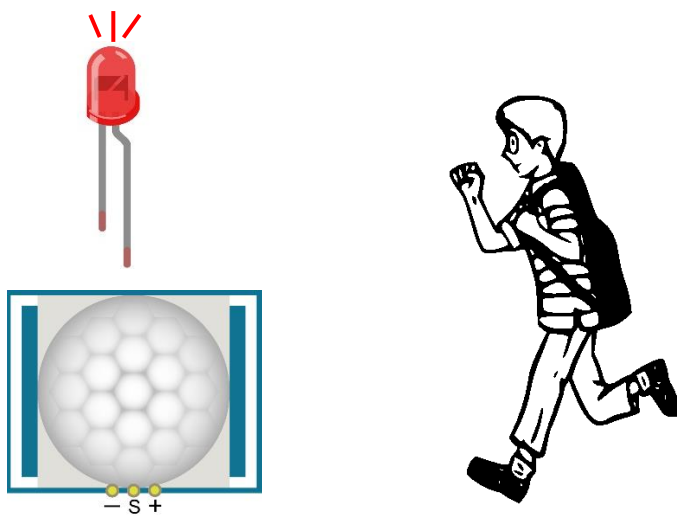

Move away from the Infrared Motion Sensor







Chapter 26 Attitude Sensor MPU6050

In this chapter, we will learn about a MPU6050 attitude sensor which integrates an accelerometer and gyroscope.

Project 26.1 Read a MPU6050 Sensor Module

In this project, we will read acceleration and gyroscope data of the MPU6050 sensor


Component List

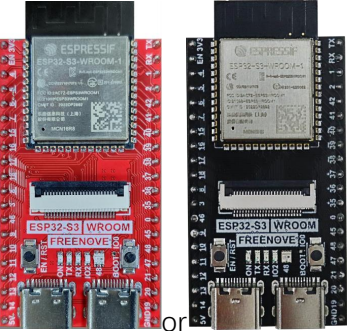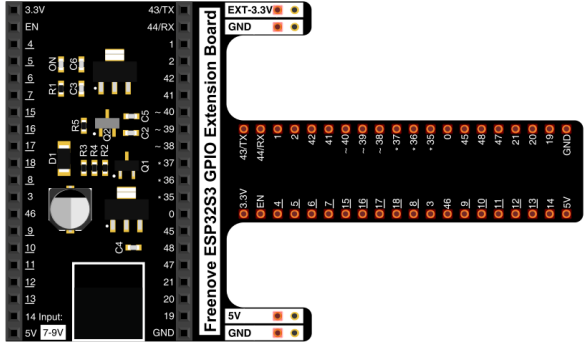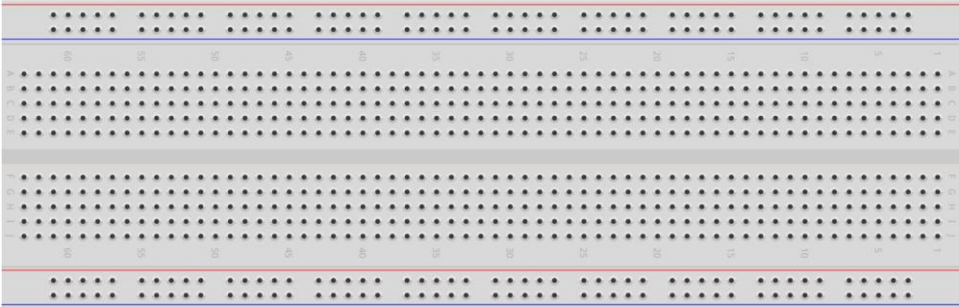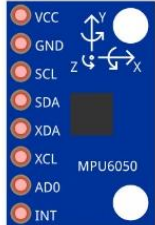ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 
Breadboard x1 	
Jumper F/M x4 	MPU6050 x1 

Component knowledge

MPU6050

MPU6050 sensor module is a complete 6-axis motion tracking device. It combines a 3-axis gyroscope, a 3-axis accelerometer and a DMP (Digital Motion Processor) all in a small package. The settings of the accelerometer and gyroscope of MPU6050 can be changed. A precision wide range digital temperature sensor is also integrated to compensate data readings for changes in temperature, and temperature values can also be read. The MPU6050 Module follows the I2C communication protocol and the default address is 0x68. MPU6050 is widely used to assist with balancing vehicles, robots and aircraft, mobile phones and other products which require stability to control stability and attitude or which need to sense same.

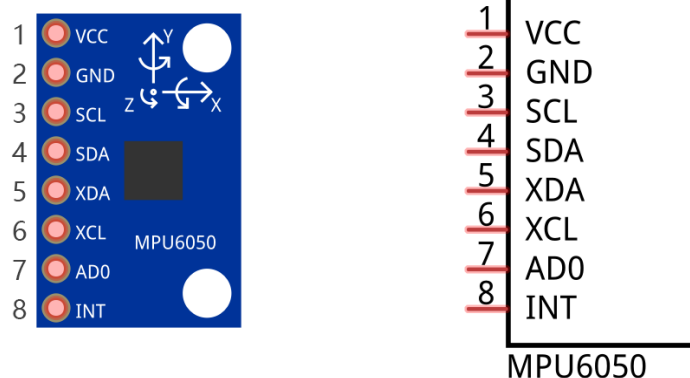

The port description of the MPU6050 module is as follows:


Pin name	Pin number	Description
VCC	1	Positive pole of power supply with voltage 5V
GND	2	Negative pole of power supply
SCL	3	I2C communication clock pin
SDA	4	I2C communication clock pin
XDA	5	I2C host data pin which can be connected to other devices.
XCL	6	I2C host clock pin which can be connected to other devices.
AD0	7	I2C address bit control pin. Low level: the device address is 0x68 High level: the device address is 0x69
INT	8	Output interrupt pin

For more detail, please refer to datasheet.


Circuit

Note that the power supply voltage for MPU6050 module is 5V in the circuit.

Schematic diagram

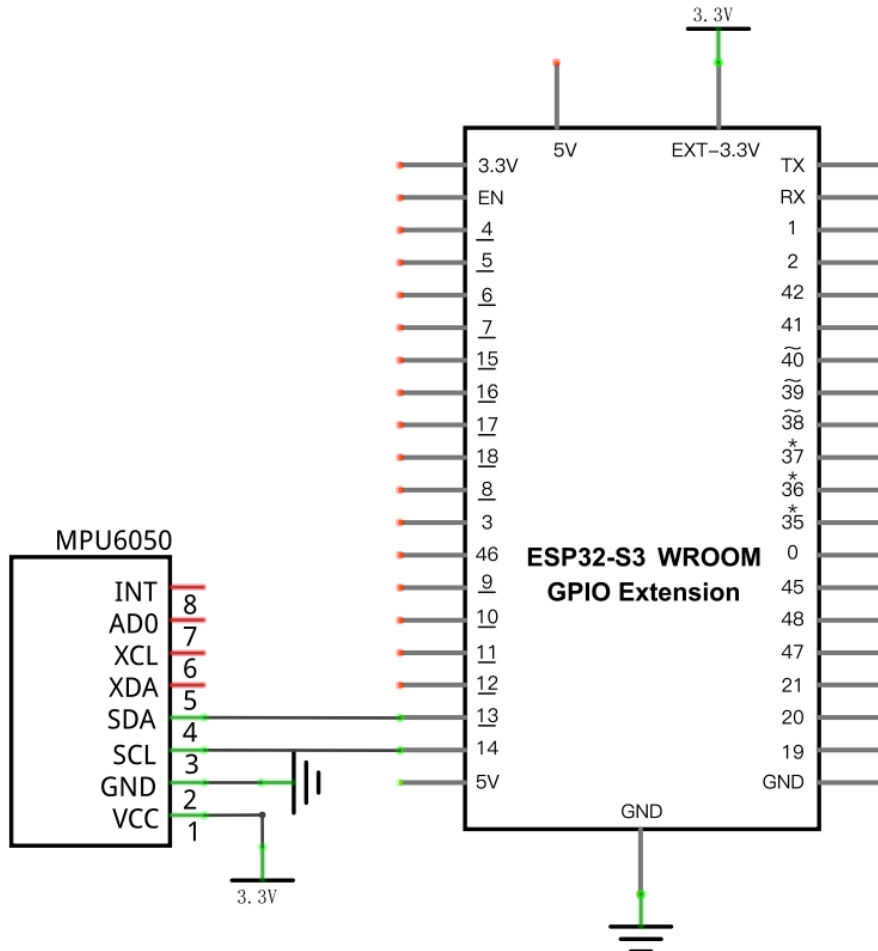

Hardware connection. If you need any support, please feel free to contact us via: support@freenove.com

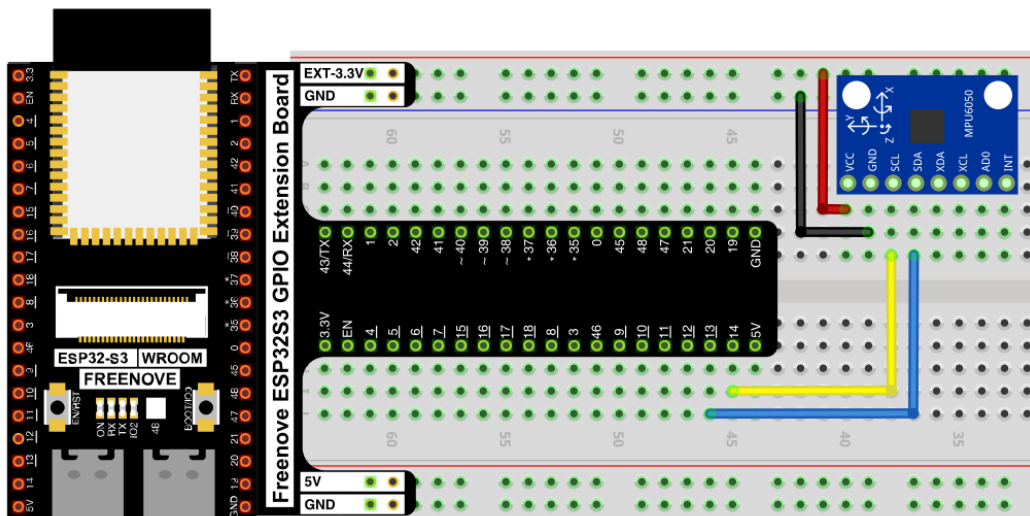


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “26.1_MPU6050”. Select “mpu6050.py”, right click your mouse to select “Upload to /”, wait for “mpu6050.py” to be uploaded to ESP32-S3 and then double click “Acceleration.py”.

26.1_MPU6050

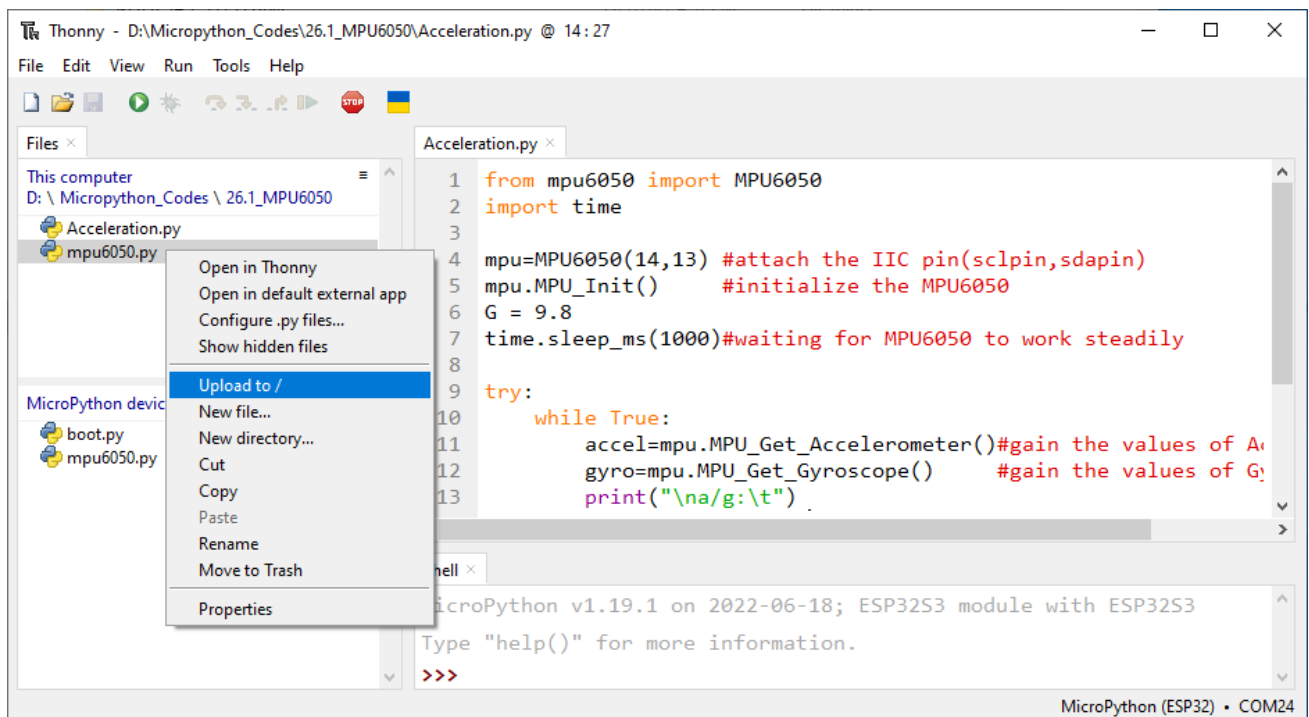

Click “Run current script”. When ESP32-S3 obtains acceleration data and gyroscope data of MPU605, it will print them in “Shell”.

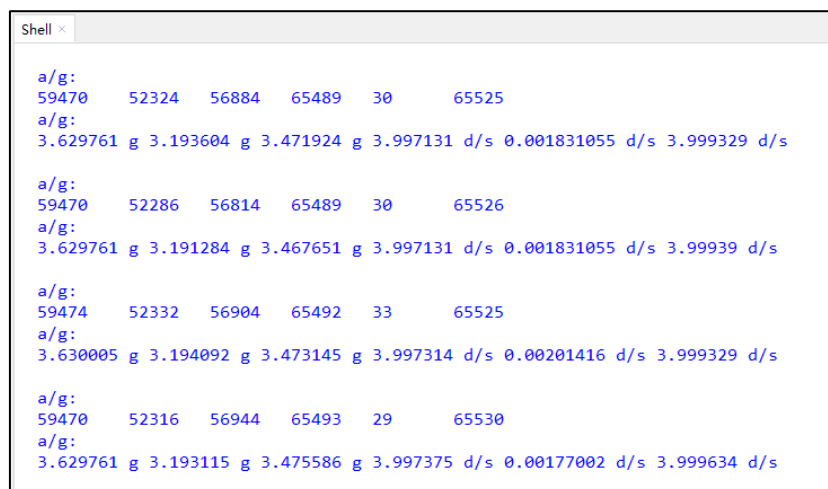

Note: The data transmission of MPU6050 is very sensitive. Therefore, when using it, please make sure the jumper wire is in good contact, otherwise the data may fail to be obtained.

The following is the program code:

```

1  from mpu6050 import MPU6050
2  import time
3
4  mpu=MPU6050(14,13) #attach the IIC pin(sclpin,sdapiin)
5  mpu.MPU_Init()     #initialize the MPU6050
6  G = 9.8
7  time.sleep_ms(1000)#waiting for MPU6050 to work steadily
8  try:
9      while True:
10         accel=mpu.MPU_Get_Accelerometer()#gain the values of Acceleration
11         gyro=mpu.MPU_Get_Gyroscope()     #gain the values of Gyroscope
12         print("\na/g:\t")
13         print(accel[0],"\t",accel[1],"\t",accel[2],"\t",
14               gyro[0],"\t",gyro[1],"\t",gyro[2])
15         print("a/g:\t")
16         print(accel[0]/16384,"g",accel[1]/16384,"g",accel[2]/16384,"g",
17               gyro[0]/16384,"d/s",gyro[1]/16384,"d/s",gyro[2]/16384,"d/s")
18         time.sleep_ms(1000)
19     except:
20         pass

```

Import MPU6050 and time modules.

```

1  from mpu6050 import MPU6050
2  import time

```

Set I2C pins and associate them with MPU6050 module, and then initialize MPU6050 and wait for the initialization to complete.

```

4  mpu=MPU6050(14,13) #attach the IIC pin(sclpin,sdapiin)
5  mpu.MPU_Init()     #initialize the MPU6050
6  G = 9.8
7  time.sleep_ms(1000)#waiting for MPU6050 to work steadily

```

Obtain the acceleration data of MPU6050 and store it in accel. Obtain the gyroscope data and store it in gyro.

```

10         accel=mpu.MPU_Get_Accelerometer()#gain the values of Acceleration
11         gyro=mpu.MPU_Get_Gyroscope()     #gain the values of Gyroscope

```

Update and collect the original data of the gyroscope every second and print the original data and processed acceleration and angular velocity data in "Shell".

```

10         accel=mpu.MPU_Get_Accelerometer()#gain the values of Acceleration
11         gyro=mpu.MPU_Get_Gyroscope()     #gain the values of Gyroscope
12         print("\na/g:\t")
13         print(accel[0],"\t",accel[1],"\t",accel[2],"\t",
14               gyro[0],"\t",gyro[1],"\t",gyro[2])
15         print("a/g:\t")
16         print(accel[0]/16384,"g",accel[1]/16384,"g",accel[2]/16384,"g",
17               gyro[0]/16384,"d/s",gyro[1]/16384,"d/s",gyro[2]/16384,"d/s")
18         time.sleep_ms(1000)

```

Reference

Class mpu6050

Before each use of **mpu6050**, please add the statement "**from mpu6050 import MPU6050**" to the top of the python file.

MPU6050(sclpin,sdapin): Create an object MPU6050 and associate I2C pin with it.

MPU_Init(): Intialize MPU6050 module.

MPU_Get_Accelerometer(): Obtain original data of MPU6050's acceleration



MPU_Get_Gyroscope(): Obtain original data of MPU6050's Gyroscope

Chapter 27 Bluetooth

This chapter mainly introduces how to make simple data transmission through Bluetooth of ESP32-S3 WROOM and mobile phones.

Project 27.1 Bluetooth Low Energy Data Passthrough

Component List

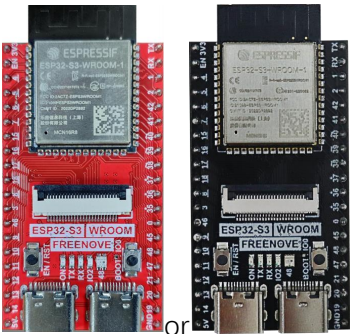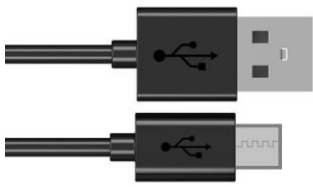ESP32-S3(N16R8)/ESP32-S3(N8R8) 	USB cable x1 
--	---

Component knowledge

ESP32S3's integrated Bluetooth function Bluetooth is a short-distance communication system, which can be divided into two types, namely Bluetooth Low Energy(BLE) and Classic Bluetooth. There are two modes for simple data transmission: master mode and slave mode.

Master mode

In this mode, works are done in the master device and it can connect with a slave device. And we can search and select slave devices nearby to connect with. When a device initiates connection request in master mode, it requires information of the other Bluetooth devices including their address and pairing passkey. After finishing pairing, it can connect with them directly.

Slave mode


The Bluetooth module in slave mode can only accept connection request from a host computer, but cannot initiate a connection request. After connecting with a host device, it can send data to or receive from the host device.

Bluetooth devices can make data interaction with each other, as one is in master mode and the other in slave mode. When they are making data interaction, the Bluetooth device in master mode searches and selects devices nearby to connect to. When establishing connection, they can exchange data. When mobile phones exchange data with ESP32S3, they are usually in master mode and ESP32-S3 in slave mode.



Circuit


Connect Freenove ESP32-S3 to the computer using the USB cable.

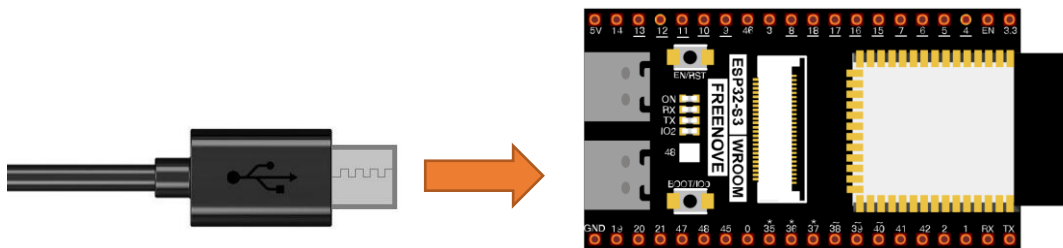

Lightblue

If you can't install Serial Bluetooth on your phone, try LightBlue. If you do not have this software installed on your phone, you can refer to this link:

<https://apps.apple.com/us/app/lightblue/id557428110/?platform=iphone>.

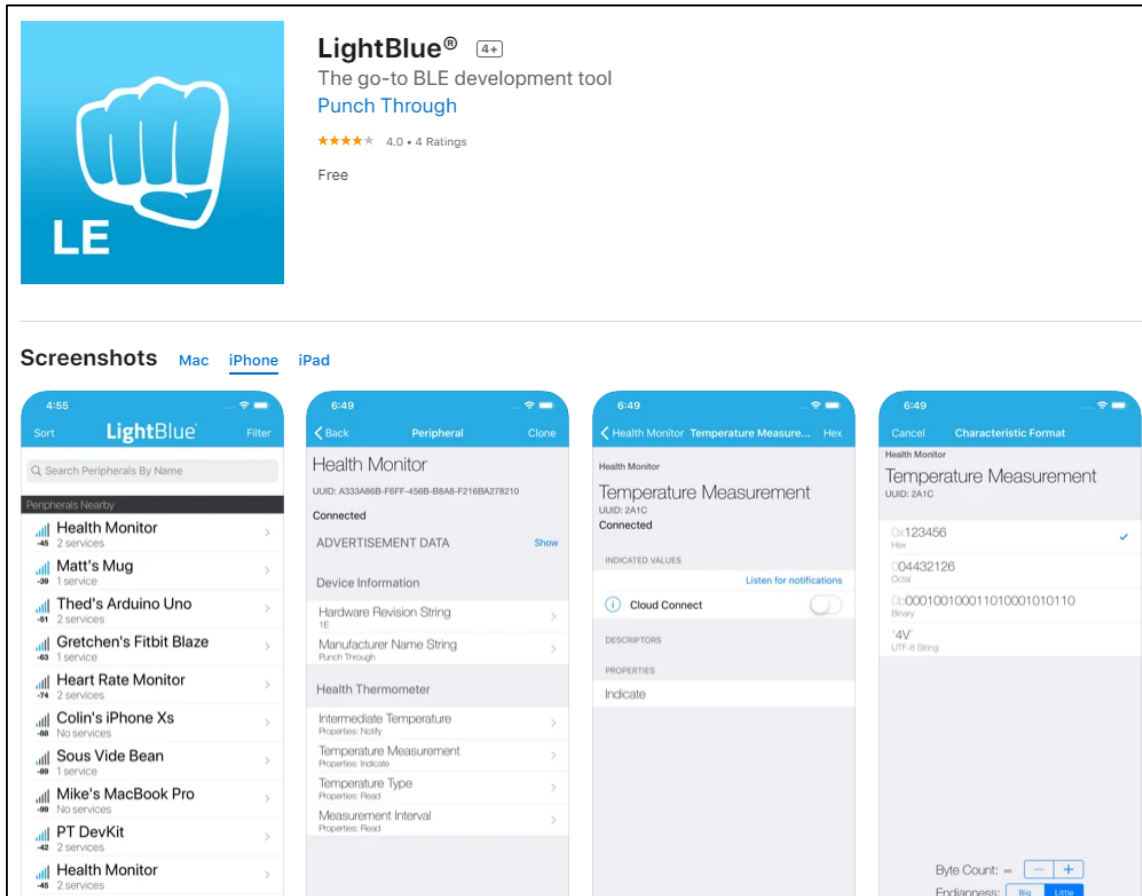


Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “27.1_BLE”. Select “ble_advertising.py”, right click your mouse to select “Upload to /”, wait for “ble_advertising.py” to be uploaded to ESP32-S3 and then double click “BLE.py”.



27.1_BLE

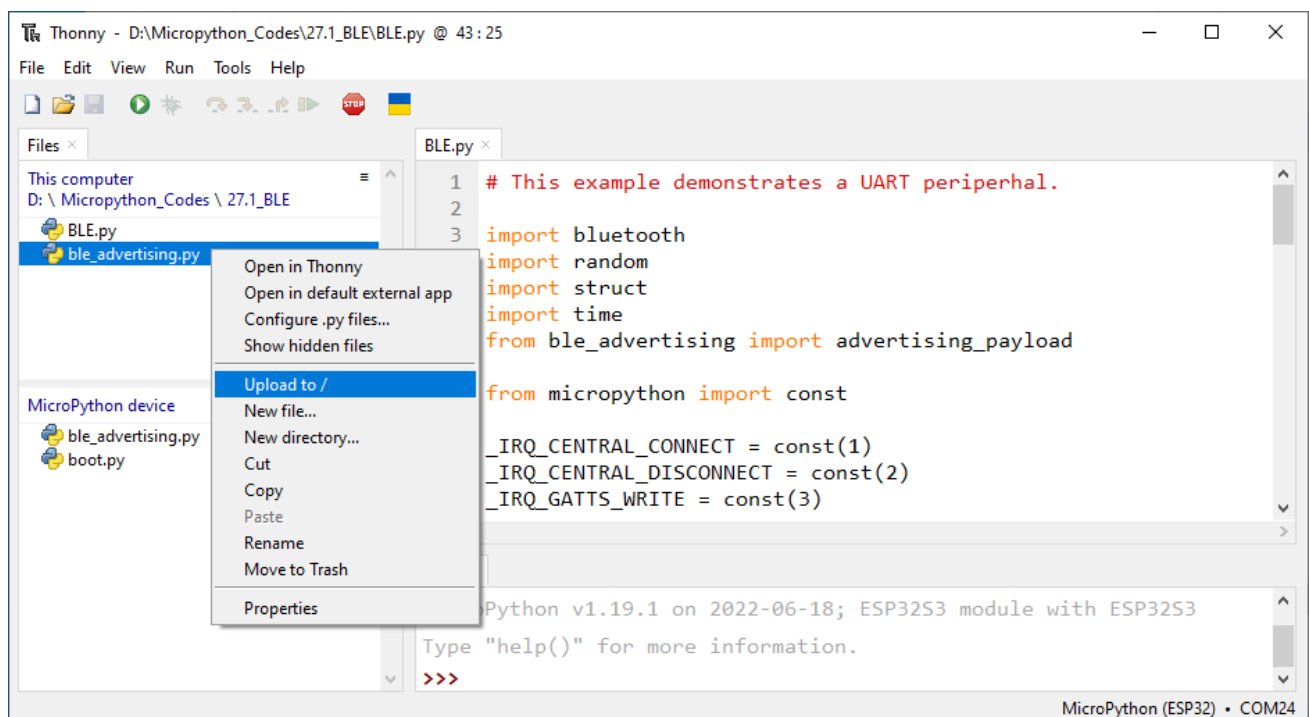


Click run for BLE.py.

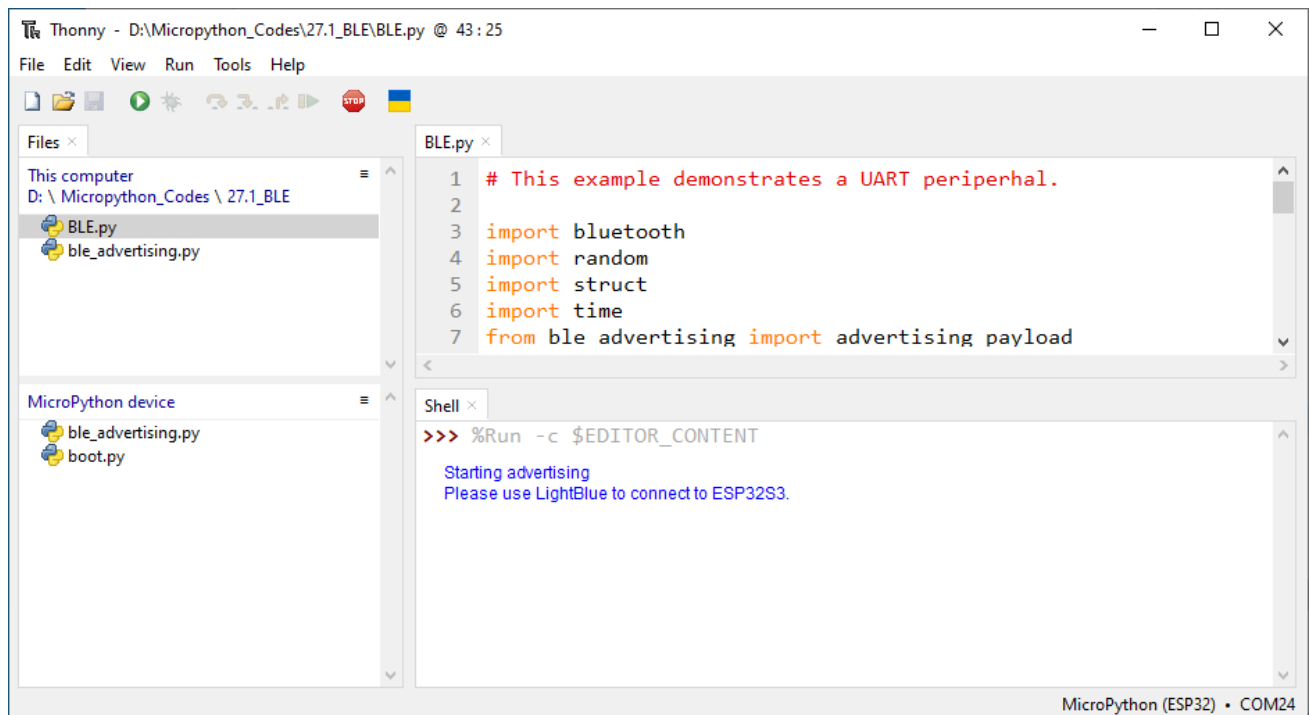


Turn ON Bluetooth on your phone, and open the Lightblue APP.

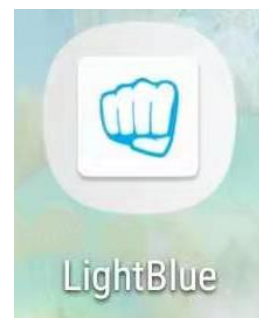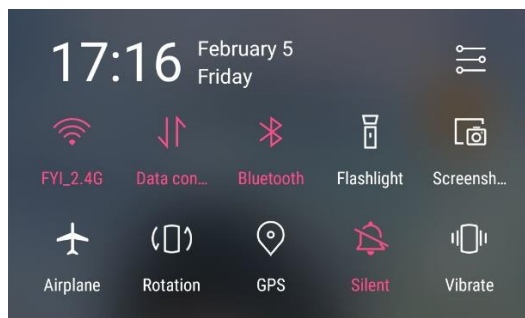


In the Scan page, swipe down to refresh the name of Bluetooth that the phone searches for. Click ESP32S3.

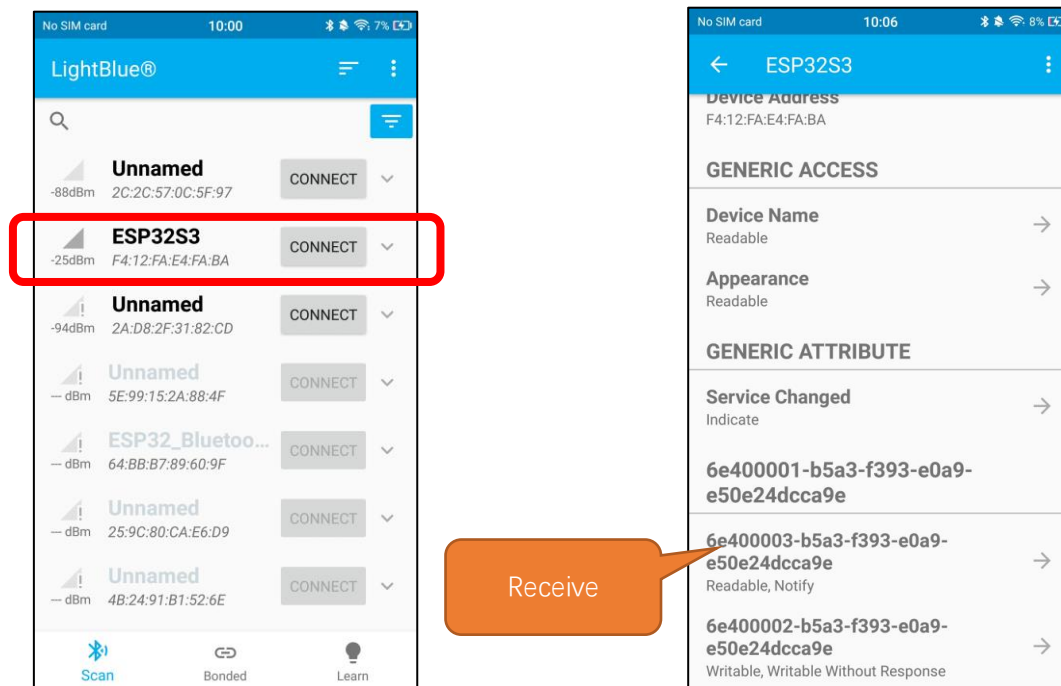


After Bluetooth is connect successfully, Shell will printer the information.

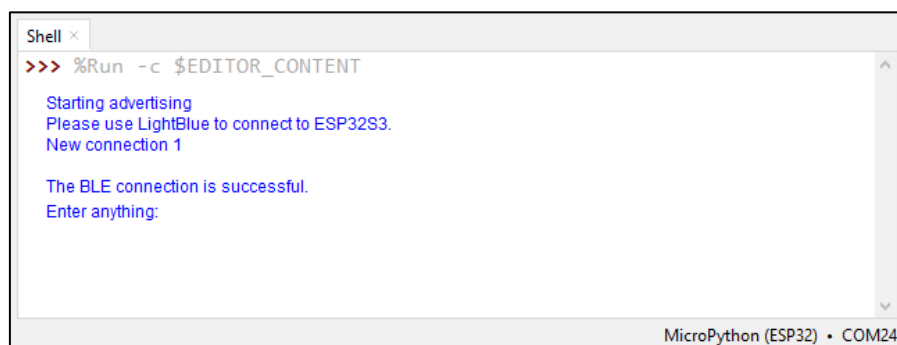


Click "Receive". Select the appropriate Data format in the box to the right of Data Format. For example, HEX for hexadecimal, utf-string for character, Binary for Binary, etc. Then click SUBSCRIBE.

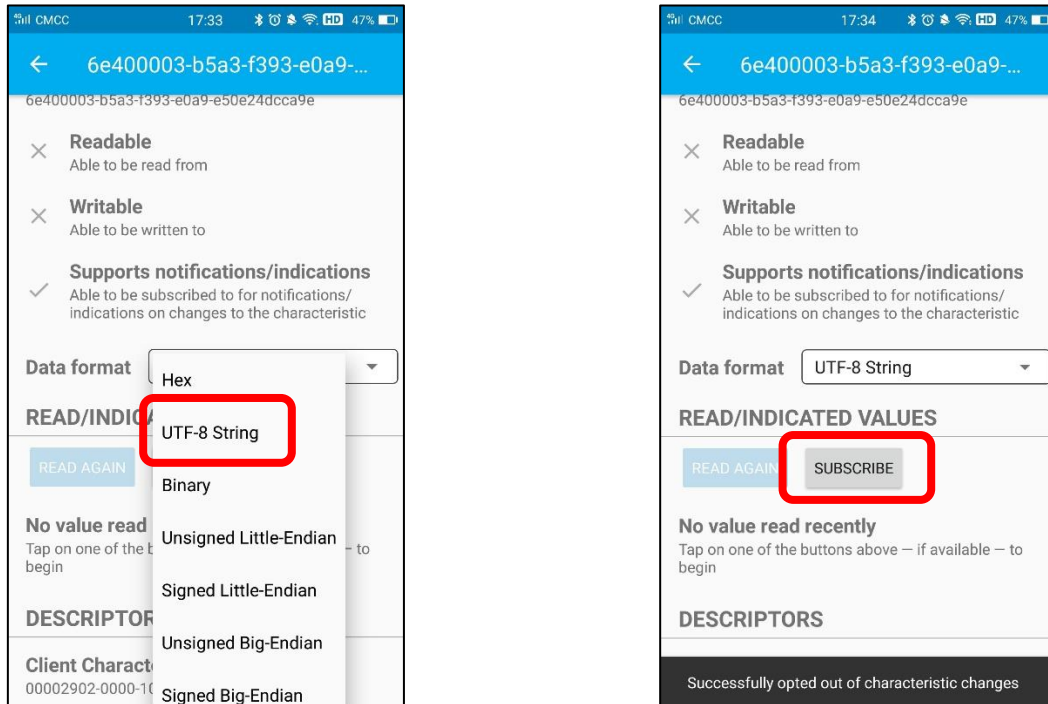


You can type "Hello" in Shell and press "Enter" to send.

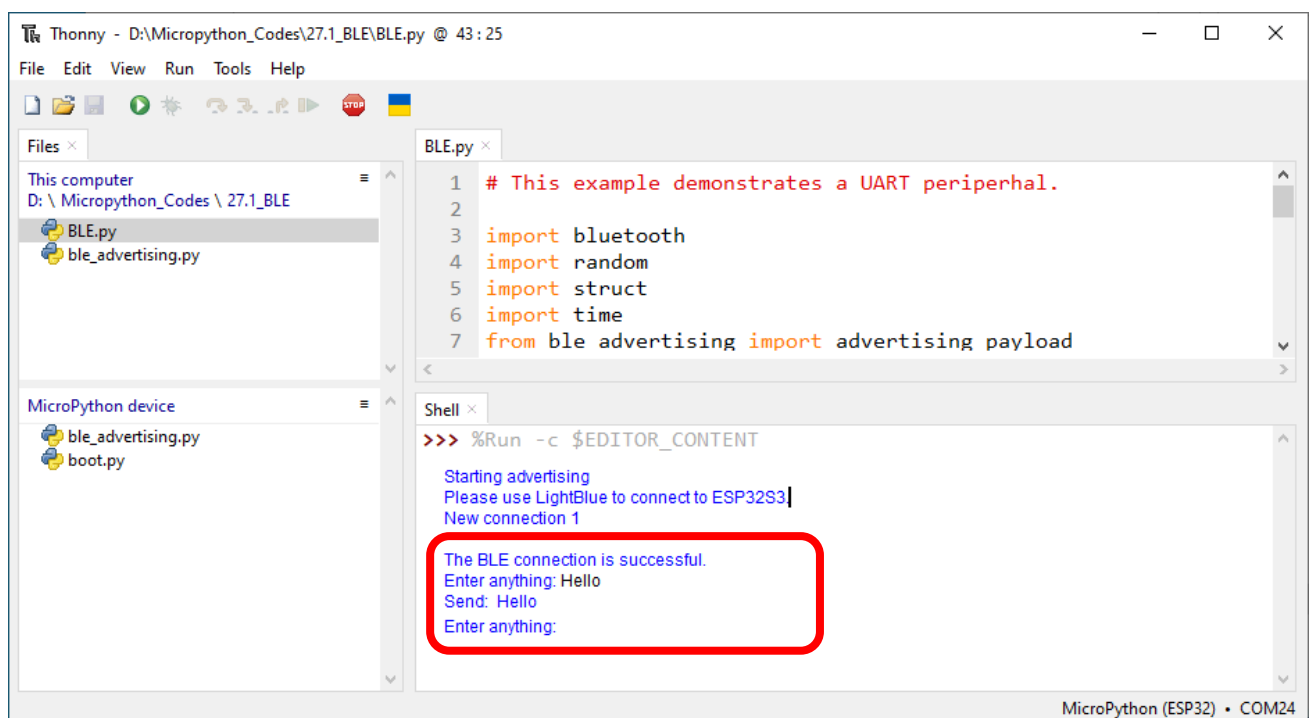


And then you can see the mobile Bluetooth has received the message.

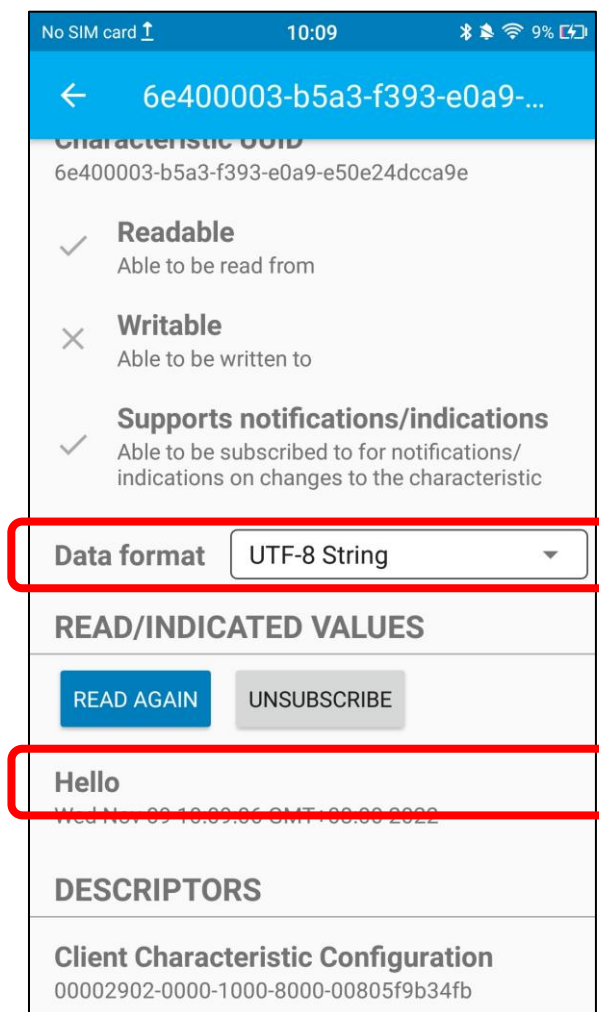

Similarly, you can select “Send” on your phone. Set Data format, and then enter anything in the sending box and click Write to send.

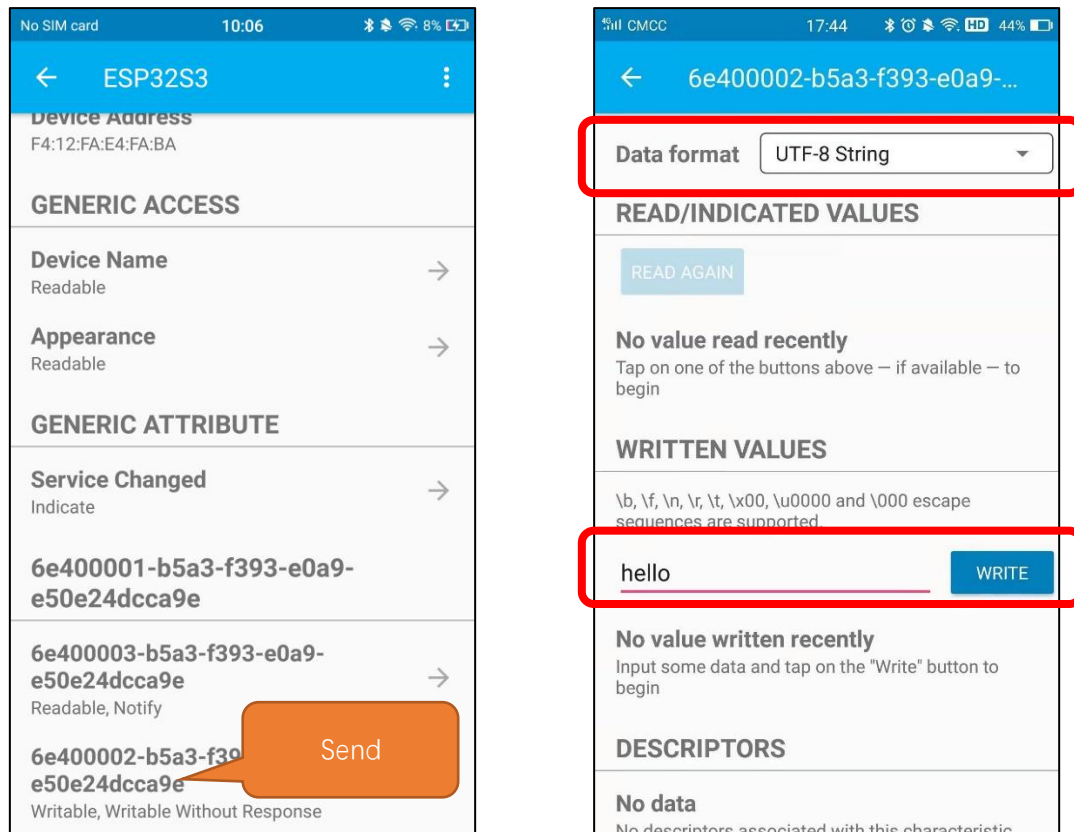

You can check the message from Bluetooth in “Shell”.

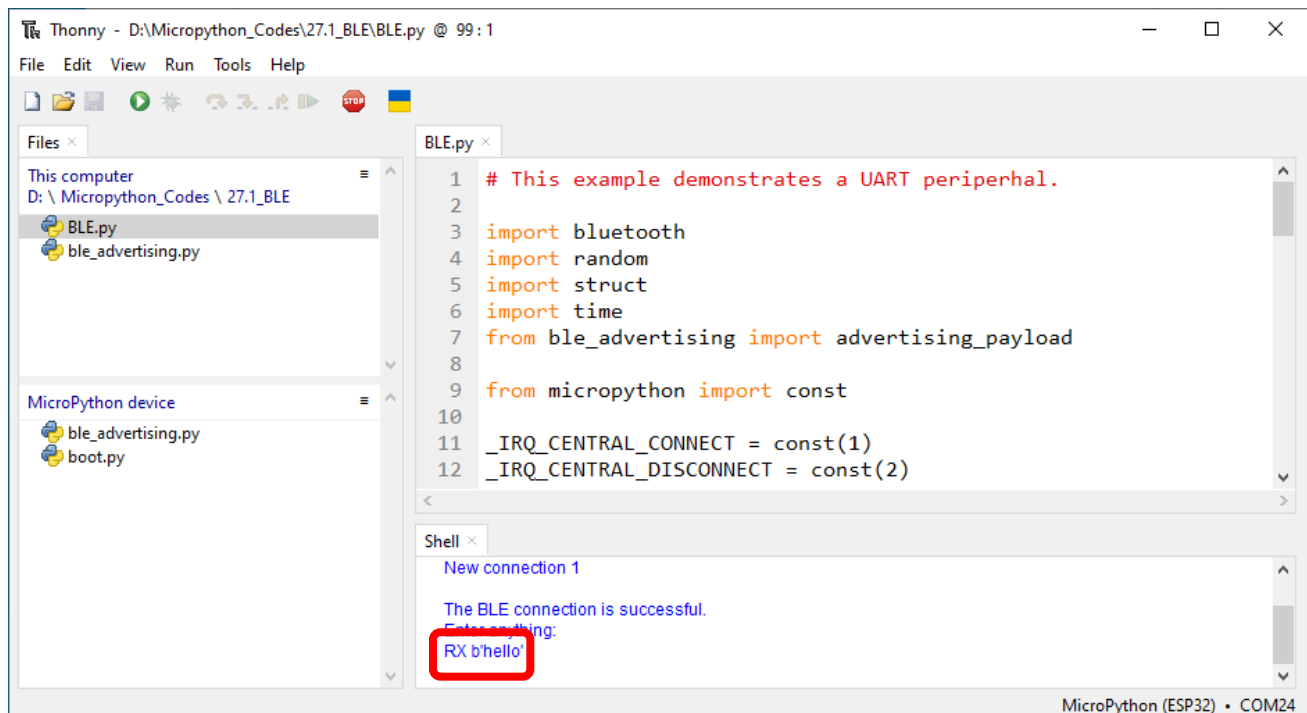

And now data can be transferred between your mobile phone and computer via ESP32S3.

The following is the program code:

```

1  import bluetooth
2  import random
3  import struct
4  import time
5  from ble_advertising import advertising_payload
6  from micropython import const
7
8  _IRQ_CENTRAL_CONNECT = const(1)
9  _IRQ_CENTRAL_DISCONNECT = const(2)
10 _IRQ_GATTS_WRITE = const(3)
11 _FLAG_READ = const(0x0002)
12 _FLAG_WRITE_NO_RESPONSE = const(0x0004)
13 _FLAG_WRITE = const(0x0008)
14 _FLAG_NOTIFY = const(0x0010)
15
16 _UART_UUID = bluetooth.UUID("6E400001-B5A3-F393-E0A9-E50E24DCCA9E")
17 _UART_TX = (
18     bluetooth.UUID("6E400003-B5A3-F393-E0A9-E50E24DCCA9E"),
19     _FLAG_READ | _FLAG_NOTIFY,
20 )
21 _UART_RX = (
22     bluetooth.UUID("6E400002-B5A3-F393-E0A9-E50E24DCCA9E"),
23     _FLAG_WRITE | _FLAG_WRITE_NO_RESPONSE,
24 )
25 _UART_SERVICE = (
26     _UART_UUID,
27     (_UART_TX, _UART_RX),
28 )
29 class BLESimplePeripheral:
30     def __init__(self, ble, name="ESP32S3"):
31         self._ble = ble
32         self._ble.active(True)
33         self._ble.irq(self._irq)
34         ((self._handle_tx, self._handle_rx),) =
35 self._ble.gatts_register_services((_UART_SERVICE,))
36         self._connections = set()
37         self._write_callback = None
38         self._payload = advertising_payload(name=name, services=[_UART_UUID])
39         self._advertise()
40     def _irq(self, event, data):
41         # Track connections so we can send notifications.
42         if event == _IRQ_CENTRAL_CONNECT:

```

```

43         conn_handle, _, _ = data
44         print("New connection", conn_handle)
45         print("\nThe BLE connection is successful.")
46         self._connections.add(conn_handle)
47     elif event == _IRQ_CENTRAL_DISCONNECT:
48         conn_handle, _, _ = data
49         print("Disconnected", conn_handle)
50         self._connections.remove(conn_handle)
51         # Start advertising again to allow a new connection.
52         self._advertise()
53     elif event == _IRQ_GATTS_WRITE:
54         conn_handle, value_handle = data
55         value = self._ble.gatts_read(value_handle)
56         if value_handle == self._handle_rx and self._write_callback:
57             self._write_callback(value)
58     def send(self, data):
59         for conn_handle in self._connections:
60             self._ble.gatts_notify(conn_handle, self._handle_tx, data)
61     def is_connected(self):
62         return len(self._connections) > 0
63     def _advertise(self, interval_us=500000):
64         print("Starting advertising")
65         self._ble.gap_advertise(interval_us, adv_data=self._payload)
66     def on_write(self, callback):
67         self._write_callback = callback
68     def demo():
69         ble = bluetooth.BLE()
70         p = BLESimplePeripheral(ble)
71         def on_rx(rx_data):
72             print("RX", rx_data)
73         p.on_write(on_rx)
74         print("Please use LightBlue to connect to ESP32S3.")
75         while True:
76             if p.is_connected():
77                 # Short burst of queued notifications.
78                 tx_data = input("Enter anything: ")
79                 print("Send: ", tx_data)
80                 p.send(tx_data)
81     if __name__ == "__main__":
82         demo()

```

Define the specified UUID number for BLE vendor.

```

18 _UART_UUID = bluetooth.UUID("6E400001-B5A3-F393-E0A9-E50E24DCCA9E")
19 _UART_TX = (
20     bluetooth.UUID("6E400003-B5A3-F393-E0A9-E50E24DCCA9E"),

```

```

21     _FLAG_READ | _FLAG_NOTIFY,
22 )
23 _UART_RX = (
24     bluetooth.UUID("6E400002-B5A3-F393-E0A9-E50E24DCCA9E"),
25     _FLAG_WRITE | _FLAG_WRITE_NO_RESPONSE,
26 )

```

Write an `_irq` function to manage BLE interrupt events.

```

42     def _irq(self, event, data):
43         # Track connections so we can send notifications.
44         if event == _IRQ_CENTRAL_CONNECT:
45             conn_handle, _, _ = data
46             print("New connection", conn_handle)
47             print("\nThe BLE connection is successful.")
48             self._connections.add(conn_handle)
49         elif event == _IRQ_CENTRAL_DISCONNECT:
50             conn_handle, _, _ = data
51             print("Disconnected", conn_handle)
52             self._connections.remove(conn_handle)
53             # Start advertising again to allow a new connection.
54             self._advertise()
55         elif event == _IRQ_GATTS_WRITE:
56             conn_handle, value_handle = data
57             value = self._ble.gatts_read(value_handle)
58             if value_handle == self._handle_rx and self._write_callback:
59                 self._write_callback(value)

```

Initialize the BLE function and name it.

```

33     def __init__(self, ble, name="ESP32S3"):

```

When the mobile phone send data to ESP32-S3 via BLE Bluetooth, it will print them out with serial port;
When the serial port of ESP32-S3 receive data, it will send them to mobile via BLE Bluetooth.

```





70     def demo():
71         ble = bluetooth.BLE()
72         p = BLESimplePeripheral(ble)
73         def on_rx(rx_data):
74             print("RX", rx_data)
75         p.on_write(on_rx)
76         print("Please use LightBlue to connect to ESP32S3.")
77         while True:
78             if p.is_connected():
79                 # Short burst of queued notifications.
80                 tx_data = input("Enter anything: ")
81                 print("Send: ", tx_data)
82                 p.send(tx_data)
83         lastMsg = now;
84     }

```

Project 27.2 Bluetooth Control LED

In this section, we will control the LED with Bluetooth.


Component List

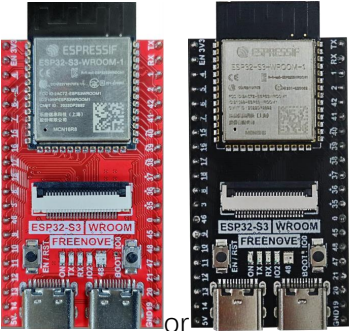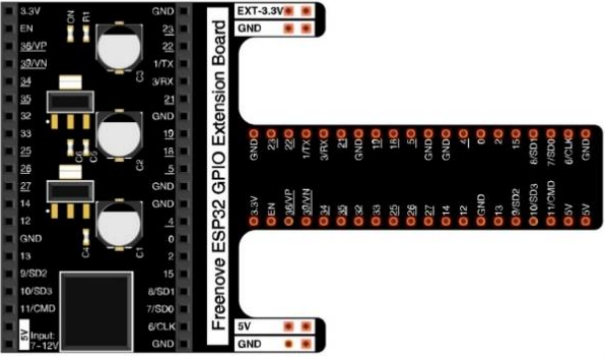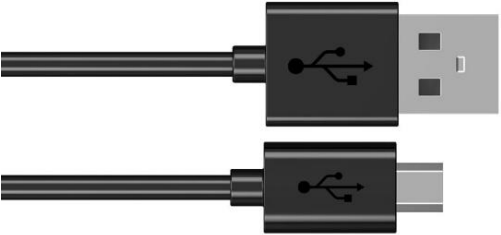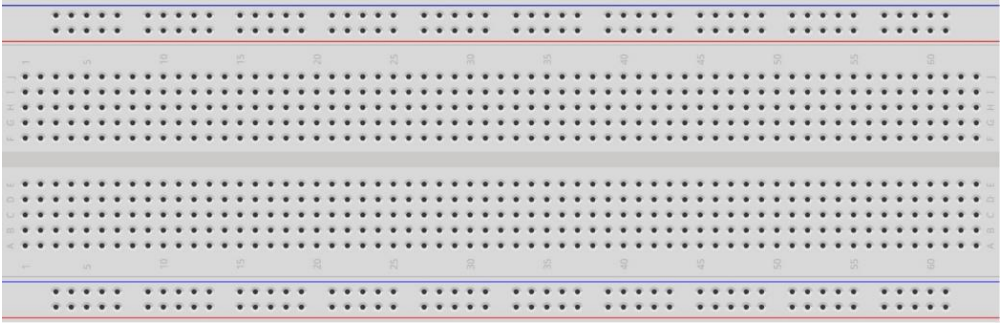ESP32-S3(N16R8)/ESP32-S3(N8R8) 	GPIO Extension Board x1 		
Micro USB Wire x1 	LED x1 	Resistor 220Ω x1 	Jumper M/M x2 
Breadboard x1 			


Circuit

Connect Freenove ESP32-S3 to the computer using a USB cable.

Schematic diagram

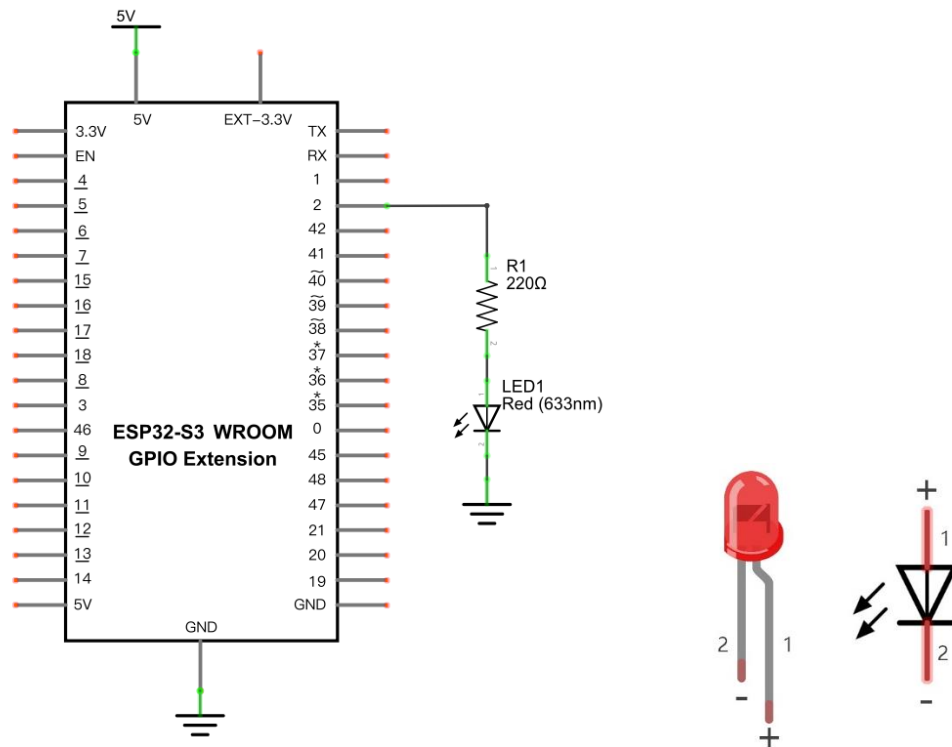

Hardware connection. **If you need any support, please contact us via: support@freenove.com**

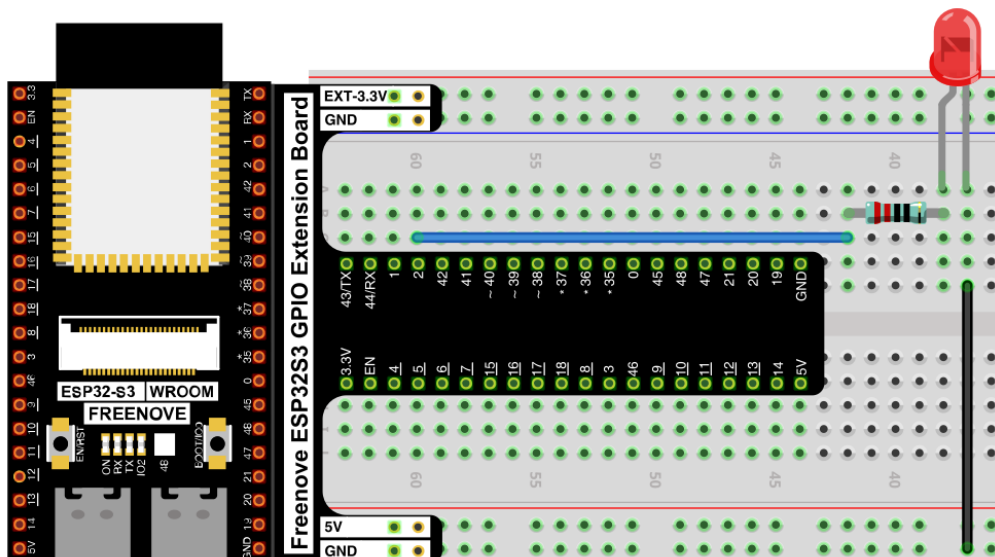


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.


Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “27.2_BLE_LED”. Select “ble_advertising.py”, right click your mouse to select “Upload to /”, wait for “ble_advertising.py” to be uploaded to ESP32-S3 and then double click “BLE_LED.py”.

27.2_BLE_LED

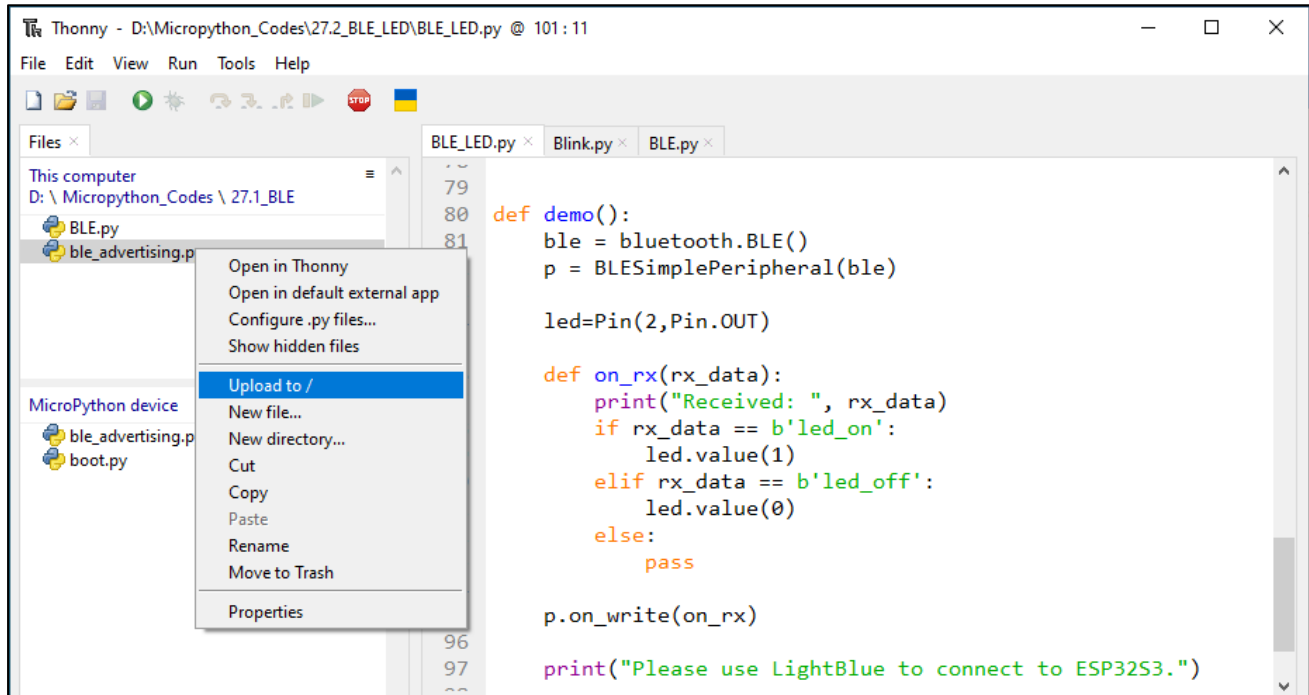


Compile and upload code to ESP32S3. The operation of the APP is the same as 27.1, you only need to change the sending content to "led_on" and "led_off" to operate LEDs on the ESP32S3.


Data sent from mobile APP:

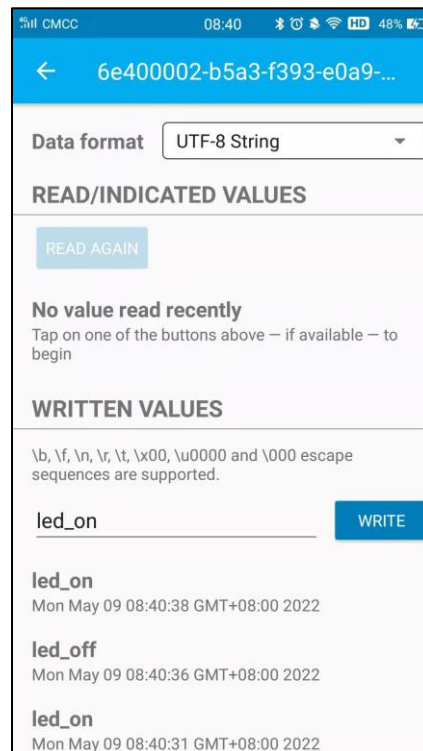

You can check the message sent by Bluetooth in "Shell".

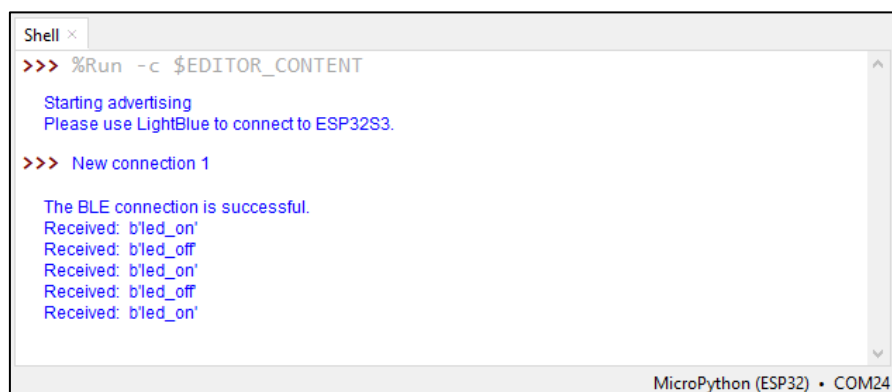

The phenomenon of LED

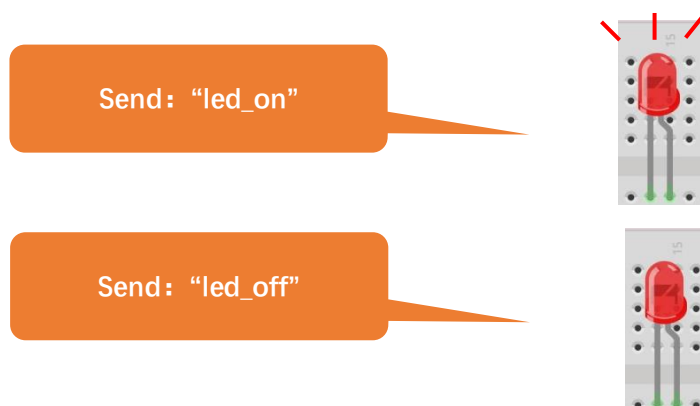

Attention: If the sending content isn't "led_on" or "led_off", then the state of LED will not change. If the LED is on, when receiving irrelevant content, it keeps on; Correspondingly, if the LED is off, when receiving irrelevant content, it keeps off.

The following is the program code:

```
1  import bluetooth
2  import random
3  import struct
4  import time
5  from ble_advertising import advertising_payload
6  from machine import Pin
7  from micropython import const
8
9  _IRQ_CENTRAL_CONNECT = const(1)
10 _IRQ_CENTRAL_DISCONNECT = const(2)
11 _IRQ_GATTS_WRITE = const(3)
12
13 _FLAG_READ = const(0x0002)
14 _FLAG_WRITE_NO_RESPONSE = const(0x0004)
15 _FLAG_WRITE = const(0x0008)
16 _FLAG_NOTIFY = const(0x0010)
17
18 _UART_UUID = bluetooth.UUID("6E400001-B5A3-F393-E0A9-E50E24DCCA9E")
19 _UART_TX = (
20     bluetooth.UUID("6E400003-B5A3-F393-E0A9-E50E24DCCA9E"),
21     _FLAG_READ | _FLAG_NOTIFY,
22 )
23 _UART_RX = (
24     bluetooth.UUID("6E400002-B5A3-F393-E0A9-E50E24DCCA9E"),
25     _FLAG_WRITE | _FLAG_WRITE_NO_RESPONSE,
26 )
27 _UART_SERVICE = (
28     _UART_UUID,
29     (_UART_TX, _UART_RX),
30 )
31 class BLESimplePeripheral:
32     def __init__(self, ble, name="ESP32S3"):
33         self._ble = ble
34         self._ble.active(True)
35         self._ble.irq(self._irq)
36         ((self._handle_tx, self._handle_rx),) =
37 self._ble.gatts_register_services((_UART_SERVICE,))
38         self._connections = set()
39         self._write_callback = None
40         self._payload = advertising_payload(name=name, services=[_UART_UUID])
41         self._advertise()
42     def _irq(self, event, data):
```

```

43     # Track connections so we can send notifications.
44     if event == _IRQ_CENTRAL_CONNECT:
45         conn_handle, _, _ = data
46         print("New connection", conn_handle)
47         print("\nThe BLE connection is successful.")
48         self._connections.add(conn_handle)
49     elif event == _IRQ_CENTRAL_DISCONNECT:
50         conn_handle, _, _ = data
51         print("Disconnected", conn_handle)
52         self._connections.remove(conn_handle)
53         # Start advertising again to allow a new connection.
54         self._advertise()
55     elif event == _IRQ_GATTS_WRITE:
56         conn_handle, value_handle = data
57         value = self._ble.gatts_read(value_handle)
58         if value_handle == self._handle_rx and self._write_callback:
59             self._write_callback(value)
60     def send(self, data):
61         for conn_handle in self._connections:
62             self._ble.gatts_notify(conn_handle, self._handle_tx, data)
63     def is_connected(self):
64         return len(self._connections) > 0
65     def _advertise(self, interval_us=500000):
66         print("Starting advertising")
67         self._ble.gap_advertise(interval_us, adv_data=self._payload)
68     def on_write(self, callback):
69         self._write_callback = callback
70     def demo():
71         ble = bluetooth.BLE()
72         p = BLESimplePeripheral(ble)
73         led=Pin(2,Pin.OUT)
74         def on_rx(rx_data):
75             print("Received: ", rx_data)
76             if rx_data == b'led_on':
77                 led.value(1)
78             elif rx_data == b'led_off':
79                 led.value(0)
80             else:
81                 pass
82         p.on_write(on_rx)
83         print("Please use LightBlue to connect to ESP32S3.")
84     if __name__ == "__main__":
85         demo()

```

Compare received message with "led_on" and "led_off" and take action accordingly.

```
76     if rx_data == b'led_on':  
77         led.value(1)  
78     elif rx_data == b'led_off':  
79         led.value(0)
```



Chapter 28 WiFi Working Modes

In this chapter, we'll focus on the WiFi infrastructure for ESP32-S3 WROOM.

ESP32-S3 WROOM has 3 different WiFi operating modes: station mode, AP mode and AP+station mode. All WiFi programming projects must be configured with WiFi operating mode before using WiFi, otherwise WiFi cannot be used.

Project 28.1 Station mode

Component List

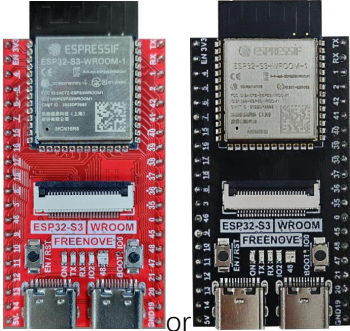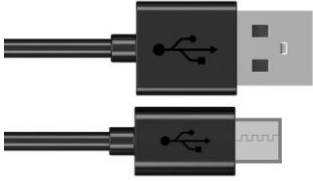ESP32-S3(N16R8)/ESP32-S3(N8R8) 	USB cable x1 
--	---

Component knowledge


Station mode

When ESP32-S3 selects Station mode, it acts as a WiFi client. It can connect to the router network and communicate with other devices on the router via WiFi connection. As shown below, the PC is connected to the router, and if ESP32-S3 wants to communicate with the PC, it needs to be connected to the router.



Circuit

Connect Freenove ESP32-S3 to the computer using the USB cable.

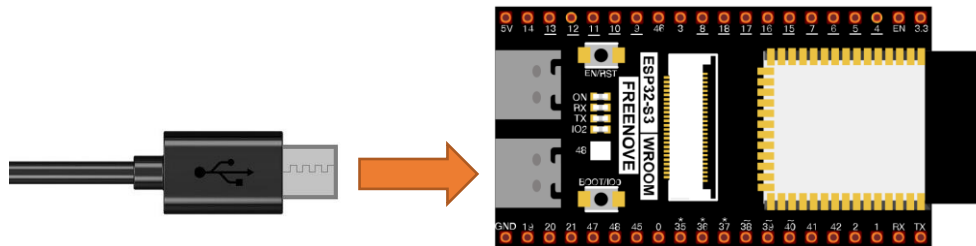


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.


Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “28.1_Station_mode” and double click “Station_mode.py”.

28.1_Station_mode

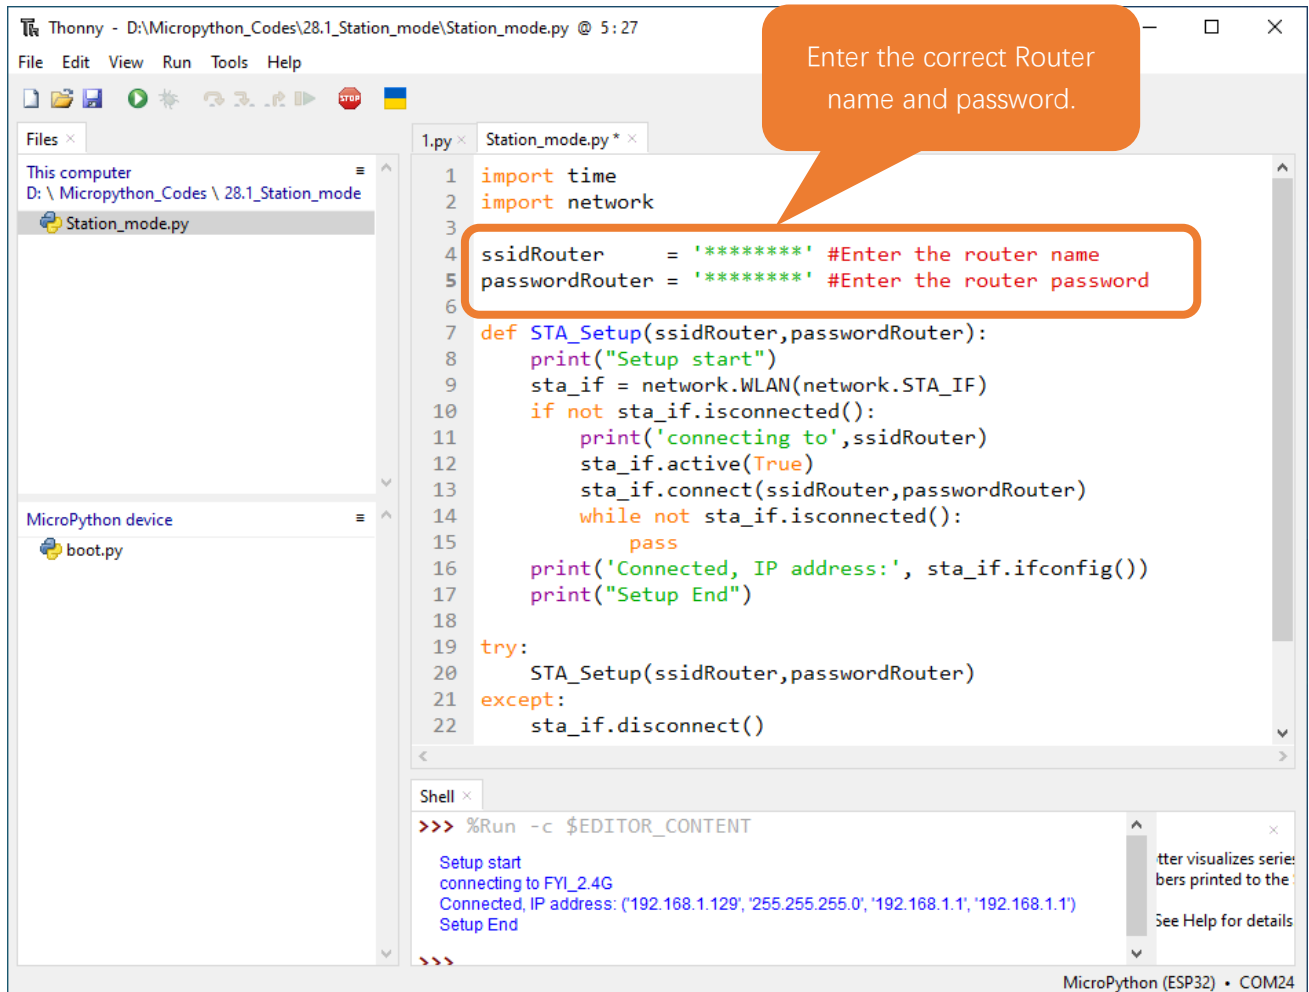

Because the names and passwords of routers in various places are different, before the Code runs, users need to enter the correct router's name and password in the box as shown in the illustration above.

After making sure the router name and password are entered correctly, compile and upload codes to ESP32S3, wait for ESP32-S3 to connect to your router and print the IP address assigned by the router to ESP32-S3 in "Shell".

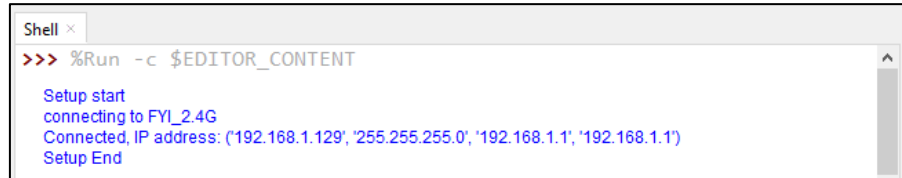

```

Shell x
>>> %Run -c $EDITOR_CONTENT

Setup start
connecting to FYI_2.4G
Connected, IP address: ('192.168.1.129', '255.255.255.0', '192.168.1.1', '192.168.1.1')
Setup End

```

The following is the program code:

```

1  import time
2  import network
3
4  ssidRouter    = '*****' #Enter the router name
5  passwordRouter = '*****' #Enter the router password
6
7  def STA_Setup(ssidRouter, passwordRouter):
8      print("Setup start")
9      sta_if = network.WLAN(network.STA_IF)
10     if not sta_if.isconnected():
11         print('connecting to', ssidRouter)
12         sta_if.active(True)
13         sta_if.connect(ssidRouter, passwordRouter)
14         while not sta_if.isconnected():
15             pass
16         print('Connected, IP address:', sta_if.ifconfig())
17         print("Setup End")
18
19     try:
20         STA_Setup(ssidRouter, passwordRouter)
21     except:
22         sta_if.disconnect()

```

Import network module.

```

2  import network

```

Enter correct router name and password.

```

3  const char *ssid_Router    = "*****"; //Enter the router name
4  const char *password_Router = "*****"; //Enter the router password

```

Set ESP32-S3 in Station mode.

```

9      sta_if = network.WLAN(network.STA_IF)

```

Activate ESP32-S3's Station mode, initiate a connection request to the router and enter the password to connect.

```

12         sta_if.active(True)
13         sta_if.connect(ssidRouter, passwordRouter)

```

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Wait for ESP32-S3 to connect to router until they connect to each other successfully.

```
14         while not sta_if.isconnected():
15             pass
```

Print the IP address assigned to ESP32-S3 in "Shell".

```
16     print('Connected, IP address:', sta_if.ifconfig())
```

Reference

Class network

Before each use of **network**, please add the statement "**import network**" to the top of the python file.

WLAN(interface_id): Set to WiFi mode.

network.STA_IF: Client, connecting to other WiFi access points.

network.AP_IF: Access points, allowing other WiFi clients to connect.

active(is_active): With parameters, it is to check whether to activate the network interface; Without parameters, it is to query the current state of the network interface.

scan(ssid, bssid, channel, RSSI, authmode, hidden): Scan for wireless networks available nearby (only scan on STA interface), return a tuple list of information about the WiFi access point.

bssid: The hardware address of the access point, returned in binary form as a byte object. You can use `ubinascii.hexlify()` to convert it to ASCII format.

authmode: Access type

AUTH_OPEN = 0

AUTH_WEP = 1

AUTH_WPA_PSK = 2

AUTH_WPA2_PSK = 3

AUTH_WPA_WPA2_PSK = 4

AUTH_MAX = 6

Hidden: Whether to scan for hidden access points

False: Only scanning for visible access points

True: Scanning for all access points including the hidden ones.

isconnected(): Check whether ESP32-S3 is connected to AP in Station mode. In STA mode, it returns True if it is connected to a WiFi access point and has a valid IP address; Otherwise it returns False.

connect(ssid, password): Connecting to wireless network.

ssid: WiFi name

password: WiFi password

disconnect(): Disconnect from the currently connected wireless network.

Project 28.2 AP mode


Component List & Circuit

Component List & Circuit are the same as in Project 28.1.

Component knowledge


AP mode

When ESP32-S3 selects AP mode, it creates a hotspot network that is separate from the Internet and waits for other WiFi devices to connect. As shown in the figure below, ESP32-S3 is used as a hotspot. If a mobile phone or PC wants to communicate with ESP32S3, it must be connected to the hotspot of ESP32S3. Only after a connection is established with ESP32-S3 can they communicate.

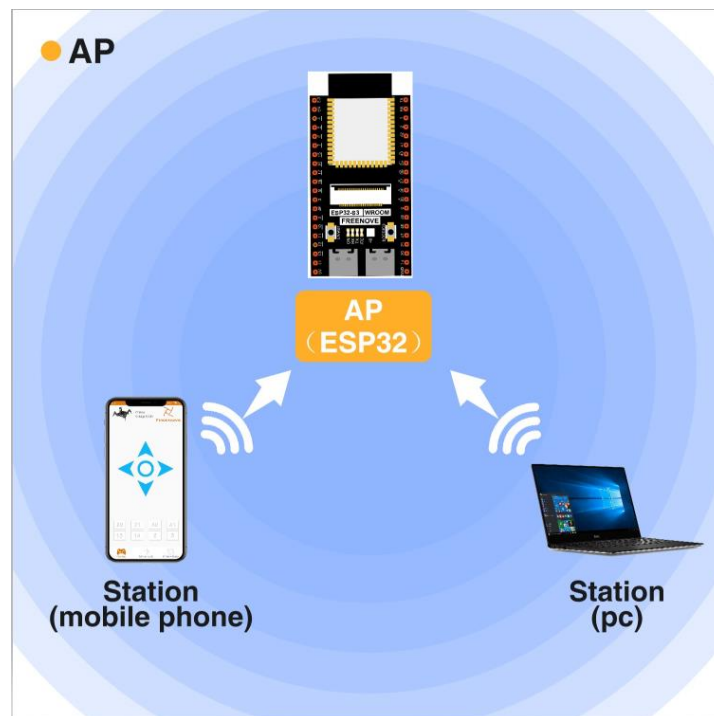

Circuit

Connect Freenove ESP32-S3 to the computer using the USB cable.

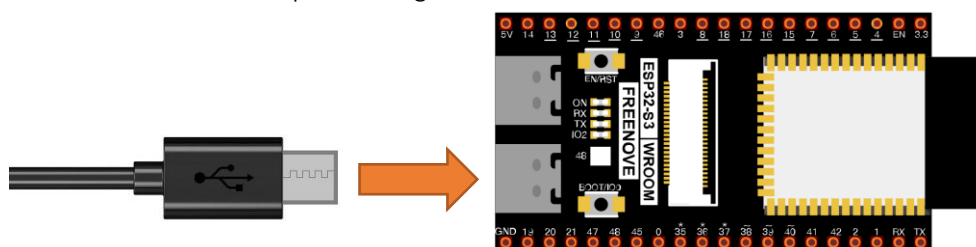

Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)

Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “28.2_AP_mode”. and double click “AP_mode.py”.

28.2_AP_mode

The screenshot shows the Thonny IDE interface. The left pane displays the file explorer with the path D:\Micropython_Codes\28.2_AP_mode. The main editor shows the AP_mode.py script. An orange callout bubble points to the ssidAP and passwordAP variables, stating: "Set a name and a password for ESP32S3 AP." The script defines a function AP_Setup that configures the soft-AP with a local IP, gateway, subnet, and DNS. The output window shows the successful execution of the script.

```

1 import network
2
3 ssidAP = 'WiFi_Name' #Enter the router name
4 passwordAP = '12345678' #Enter the router password
5
6 local_IP = '192.168.1.10'
7 gateway = '192.168.1.1'
8 subnet = '255.255.255.0'
9 dns = '8.8.8.8'
10
11 ap_if = network.WLAN(network.AP_IF)
12
13 def AP_Setup(ssidAP,passwordAP):
14     ap_if.ifconfig([local_IP,gateway,subnet,dns])
15     print("Setting soft-AP ... ")
16     ap_if.config(essid=ssidAP,authmode=network.AUTH_WPA_WPA2_PSK)
17     ap_if.active(True)
18     print('Success, IP address:', ap_if.ifconfig())
19     print("Setup End\n")
20
21 try:
22     AP_Setup(ssidAP,passwordAP)

```

```

>>> %Run -c $EDITOR_CONTENT
Setting soft-AP ...
Success, IP address: ('192.168.1.10', '192.168.1.1', '255.255.255.0', '8.8.8.8')
Setup End
>>>

```

Before the Code runs, you can make any changes to the AP name and password for ESP32-S3 in the box as shown in the illustration above. Of course, you can leave it alone by default.

Click “Run current script”, open the AP function of ESP32-S3 and print the access point information.


The screenshot shows the Thonny Shell window. It displays the output of the script execution, which is the same as the output shown in the main editor window.

```

>>> %Run -c $EDITOR_CONTENT
Setting soft-AP ...
Success, IP address: ('192.168.1.10', '192.168.1.1', '255.255.255.0', '8.8.8.8')
Setup End
>>>

```

Turn on the WiFi scanning function of your phone, and you can see the ssid_AP on ESP32S3, which is called "WiFi_Name" in this Code. You can enter the password "12345678" to connect it or change its AP name and password by modifying Code.

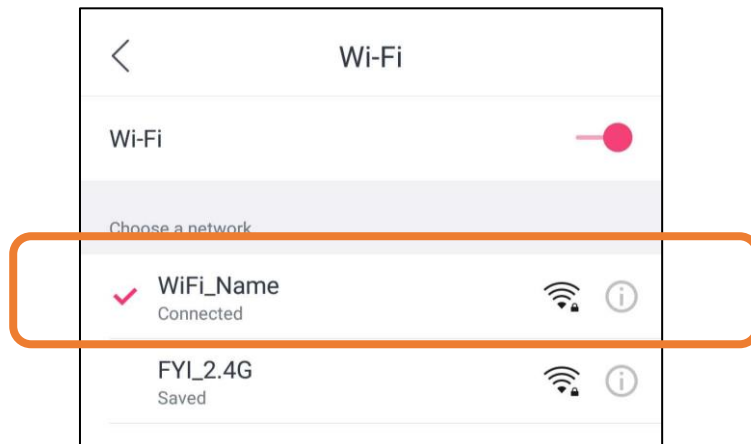

The following is the program code:

```

1  import network
2
3  ssidAP      = 'WiFi_Name' #Enter the router name
4  passwordAP  = '12345678' #Enter the router password
5
6  local_IP    = '192.168.1.10'
7  gateway     = '192.168.1.1'
8  subnet      = '255.255.255.0'
9  dns         = '8.8.8.8'
10
11 ap_if = network.WLAN(network.AP_IF)
12
13 def AP_Setup(ssidAP, passwordAP):
14     ap_if.ifconfig([local_IP, gateway, subnet, dns])
15     print("Setting soft-AP ... ")
16     ap_if.config(essid=ssidAP, authmode=network.AUTH_WPA_WPA2_PSK, password=passwordAP)
17     ap_if.active(True)
18     print('Success, IP address:', ap_if.ifconfig())
19     print("Setup End\n")
20
21 try:
22     AP_Setup(ssidAP, passwordAP)
23 except:
24     ap_if.disconnect()

```

Import network module.

```

1  import network

```

Enter correct AP name and password.

```
3 ssidAP = 'WiFi_Name' #Enter the router name
4 passwordAP = '12345678' #Enter the router password
```

Set ESP32-S3 in AP mode.

```
11 ap_if = network.WLAN(network.AP_IF)
```

Configure IP address, gateway and subnet mask for ESP32S3.

```
14 ap_if.ifconfig([local_IP, gateway, subnet, dns])
```

Turn on an AP in ESP32S3, whose name is set by ssid_AP and password is set by password_AP.

```
16 ap_if.config(essid=ssidAP, authmode=network.AUTH_WPA_WPA2_PSK, password=passwordAP)
17 ap_if.active(True)
```

If the program is running abnormally, the AP disconnection function will be called.

```
14 ap_if.disconnect()
```

Reference

Class network

Before each use of **network**, please add the statement “**import network**” to the top of the python file.

WLAN(interface_id): Set to WiFi mode.

network.STA_IF: Client, connecting to other WiFi access points

network.AP_IF: Access points, allowing other WiFi clients to connect

active(is_active): With parameters, it is to check whether to activate the network interface; Without parameters, it is to query the current state of the network interface

isconnected(): In AP mode, it returns True if it is connected to the station; otherwise it returns False.

connect(ssid, password): Connecting to wireless network

ssid: WiFiname

password: WiFipassword

config(essid, channel): To obtain the MAC address of the access point or to set the WiFi channel and the name of the WiFi access point.

ssid: WiFi account name

channel: WiFichannel

ifconfig([(ip, subnet, gateway, dns)]): Without parameters, it returns a 4-tuple (ip, subnet_mask, gateway, DNS_server); With parameters, it configures static IP.

ip: IPaddress

subnet_mask: subnet mask

gateway: gateway



DNS_server: DNSserver

disconnect(): Disconnect from the currently connected wireless network

status(): Return the current status of the wireless connection

Project 28.3 AP+Station mode

Component List

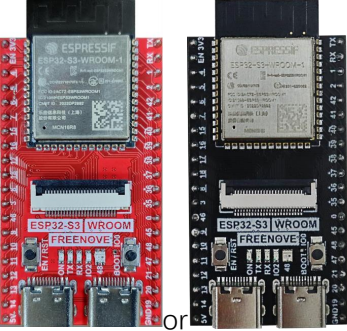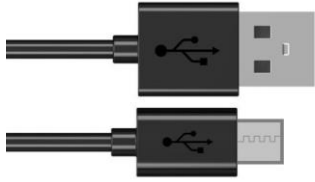ESP32-S3(N16R8)/ESP32-S3(N8R8) 	USB cable x1 
---	--


Component knowledge

AP+Station mode

In addition to AP mode and station mode, ESP32-S3 can also use AP mode and station mode at the same time. This mode contains the functions of the previous two modes. Turn on ESP32S3's station mode, connect it to the router network, and it can communicate with the Internet via the router. At the same time, turn on its AP mode to create a hotspot network. Other WiFi devices can choose to connect to the router network or the hotspot network to communicate with ESP32S3.

Circuit

Connect Freenove ESP32-S3 to the computer using the USB cable.

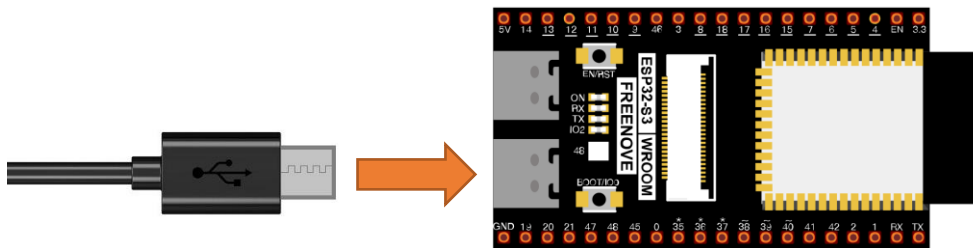


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “28.3_AP+STA_mode” and double click “AP+STA_mode.py”.

28.3_AP+STA_mode

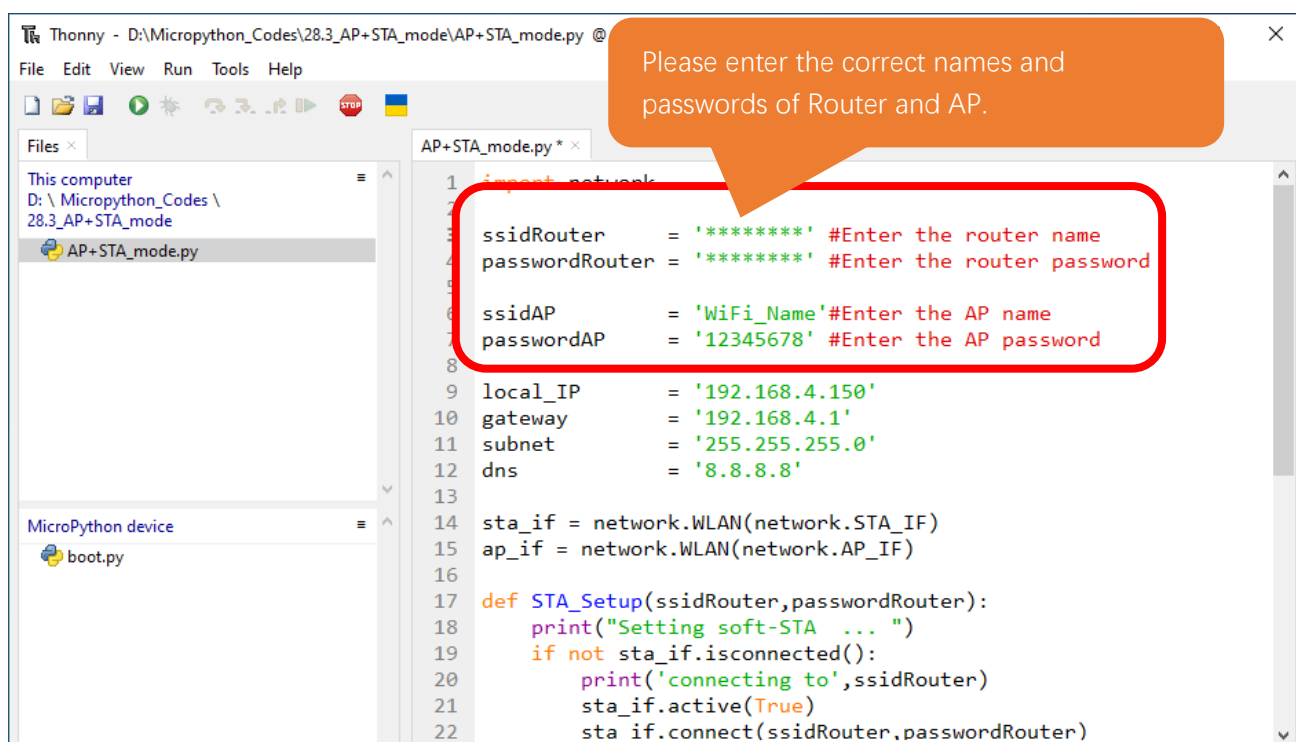

It is analogous to project 28.1 and project 28.2. Before running the Code, you need to modify ssidRouter, passwordRouter, ssidAP and passwordAP shown in the box of the illustration above.

After making sure that the code is modified correctly, click “Run current script” and the “Shell” will display as follows:

```

Shell x
>>> %Run -c $EDITOR_CONTENT


Setting soft-AP ...
Success, IP address: ('192.168.4.150', '192.168.4.1', '255.255.255.0', '8.8.8.8')
Setup End

Setting soft-STA ...
connecting to FYI_2.4G
Connected, IP address: ('192.168.1.129', '255.255.255.0', '192.168.1.1', '192.168.1.1')
Setup End

>>>
MicroPython (ESP32) • COM24

```

Turn on the WiFi scanning function of your phone, and you can see the ssidAP on ESP32-S3.

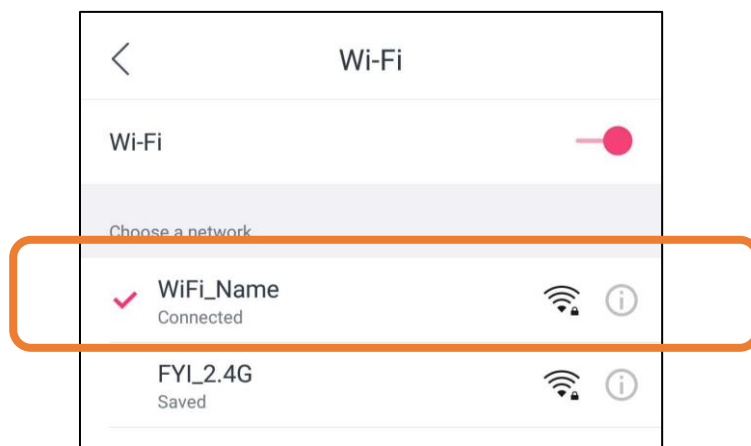

The following is the program code:

```

1  import network
2
3  ssidRouter    = '*****' #Enter the router name
4  passwordRouter = '*****' #Enter the router password
5
6  ssidAP        = 'WiFi_Name' #Enter the AP name
7  passwordAP    = '12345678' #Enter the AP password
8
9  local_IP      = '192.168.4.150'
10 gateway       = '192.168.4.1'
11 subnet        = '255.255.255.0'
12 dns           = '8.8.8.8'
13
14 sta_if = network.WLAN(network.STA_IF)
15 ap_if  = network.WLAN(network.AP_IF)
16
17 def STA_Setup(ssidRouter, passwordRouter):
18     print("Setting soft-STA ... ")

```

```
19     if not sta_if.isconnected():
20         print('connecting to',ssidRouter)
21         sta_if.active(True)
22         sta_if.connect(ssidRouter,passwordRouter)
23         while not sta_if.isconnected():
24             pass
25     print('Connected, IP address:', sta_if.ifconfig())
26     print("Setup End")
27
28 def AP_Setup(ssidAP,passwordAP):
29     ap_if.ifconfig([local_IP,gateway,subnet,dns])
30     print("Setting soft-AP ... ")
31     ap_if.config(essid=ssidAP,authmode=network.AUTH_WPA_WPA2_PSK, password=passwordAP)
32     ap_if.active(True)
33     print('Success, IP address:', ap_if.ifconfig())
34     print("Setup End\n")
35
36 try:
37     AP_Setup(ssidAP,passwordAP)
38     STA_Setup(ssidRouter,passwordRouter)
39 except:
40     sta_if.disconnect()
41     ap_if.iddisconnect()
```




Chapter 29 TCP/IP

In this chapter, we will introduce how ESP32-S3 implements network communications based on TCP/IP protocol. There are two roles in TCP/IP communication, namely Server and Client, which will be implemented respectively with two projects in this chapter.

Project 29.1 As Client

In this section, ESP32-S3 is used as Client to connect Server on the same LAN and communicate with it.

Component List

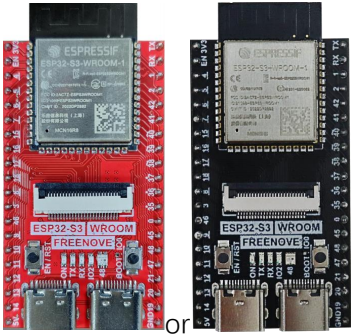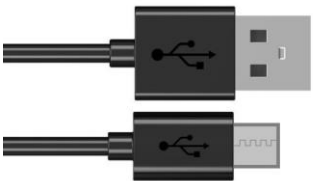ESP32-S3(N16R8)/ESP32-S3(N8R8)  or	USB cable x1 
--	---


Component knowledge

TCP connection


Before transmitting data, TCP needs to establish a logical connection between the sending end and the receiving end. It provides reliable and error-free data transmission between the two computers. In the TCP connection, the client and the server must be clarified. The client sends a connection request to the server, and each time such a request is proposed, a "three-times handshake" is required.

Three-times handshake: In the TCP protocol, during the preparation phase of sending data, the client and the server interact three times to ensure the reliability of the connection, which is called "three-times handshake". The first handshake, the client sends a connection request to the server and waits for the server to confirm. The second handshake, the server sends a response back to the client informing that it has received the connection request.

The third handshake, the client sends a confirmation message to the server again to confirm the connection.

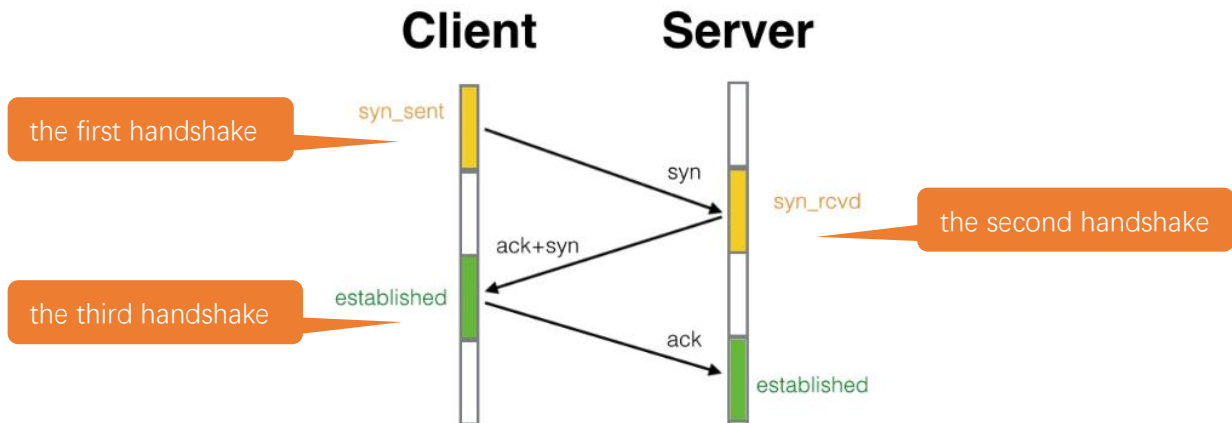

TCP is a connection-oriented, low-level transmission control protocol. After TCP establishes a connection, the client and server can send and receive messages to each other, and the connection will always exist as long as the client or server does not initiate disconnection. Each time one party sends a message, the other party will reply with an ack signal.

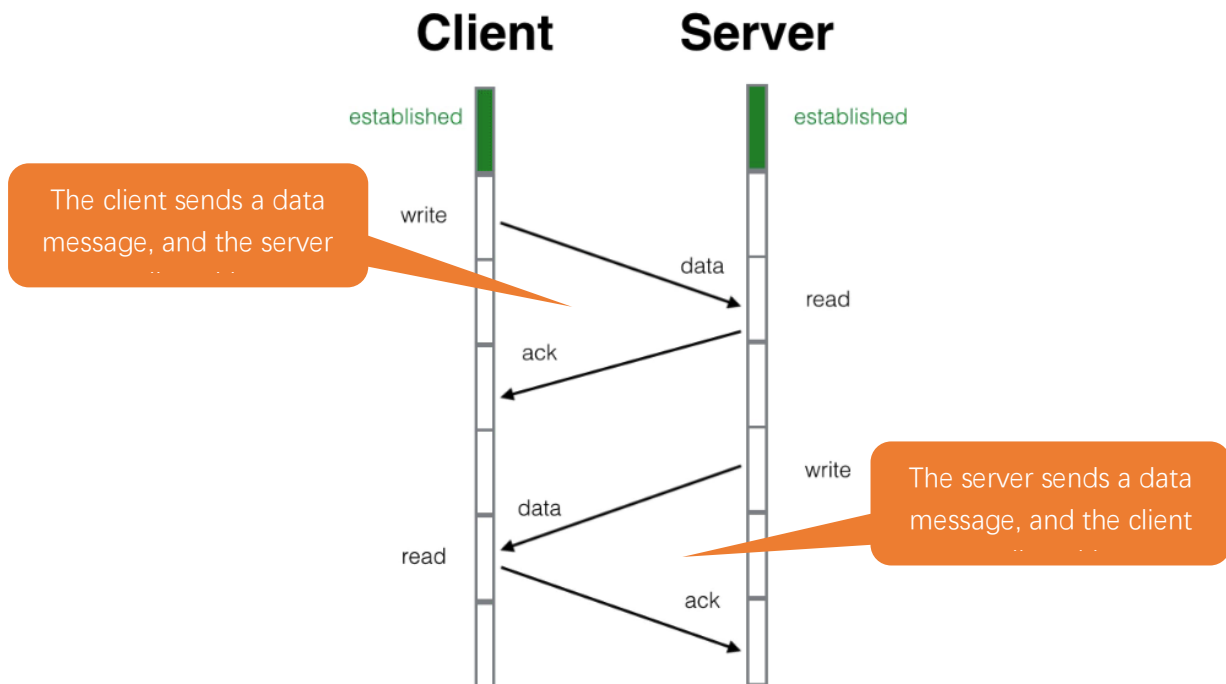

Install Processing

In this tutorial, we use Processing to build a simple TCP/IP communication platform.

If you've not installed Processing, you can download it by clicking <https://processing.org/download/>. You can choose an appropriate version to download according to your PC system.



Processing p5.js Processing.py Processing for Android Processing for Pi Processing Foundation

Processing

Cover Download Donate Exhibition Reference Libraries Tools Environment Tutorials Examples Books Overview People

Download Processing. Processing is available for Linux, Mac OS X, and Windows. Select your choice to download the software below.

3.5.4 (17 January 2020)

Windows 64-bit **Linux** 64-bit **Mac OS X**

Windows 32-bit

» Github » Report Bugs » Wiki » Supported Platforms


Read about the [changes in 3.0](#). The [list of revisions](#) covers the differences between releases in detail.

Unzip the downloaded file to your computer. Click "processing.exe" as the figure below to run this software.

core	2020/1/17 12:16
java	2020/1/17 12:17
lib	2020/1/17 12:16
modes	2020/1/17 12:16
tools	2020/1/17 12:16
processing.exe	2020/1/17 12:16
processing-java.exe	2020/1/17 12:16
revisions.txt	2020/1/17 12:16

Use Server mode for communication


Install ControlP5.

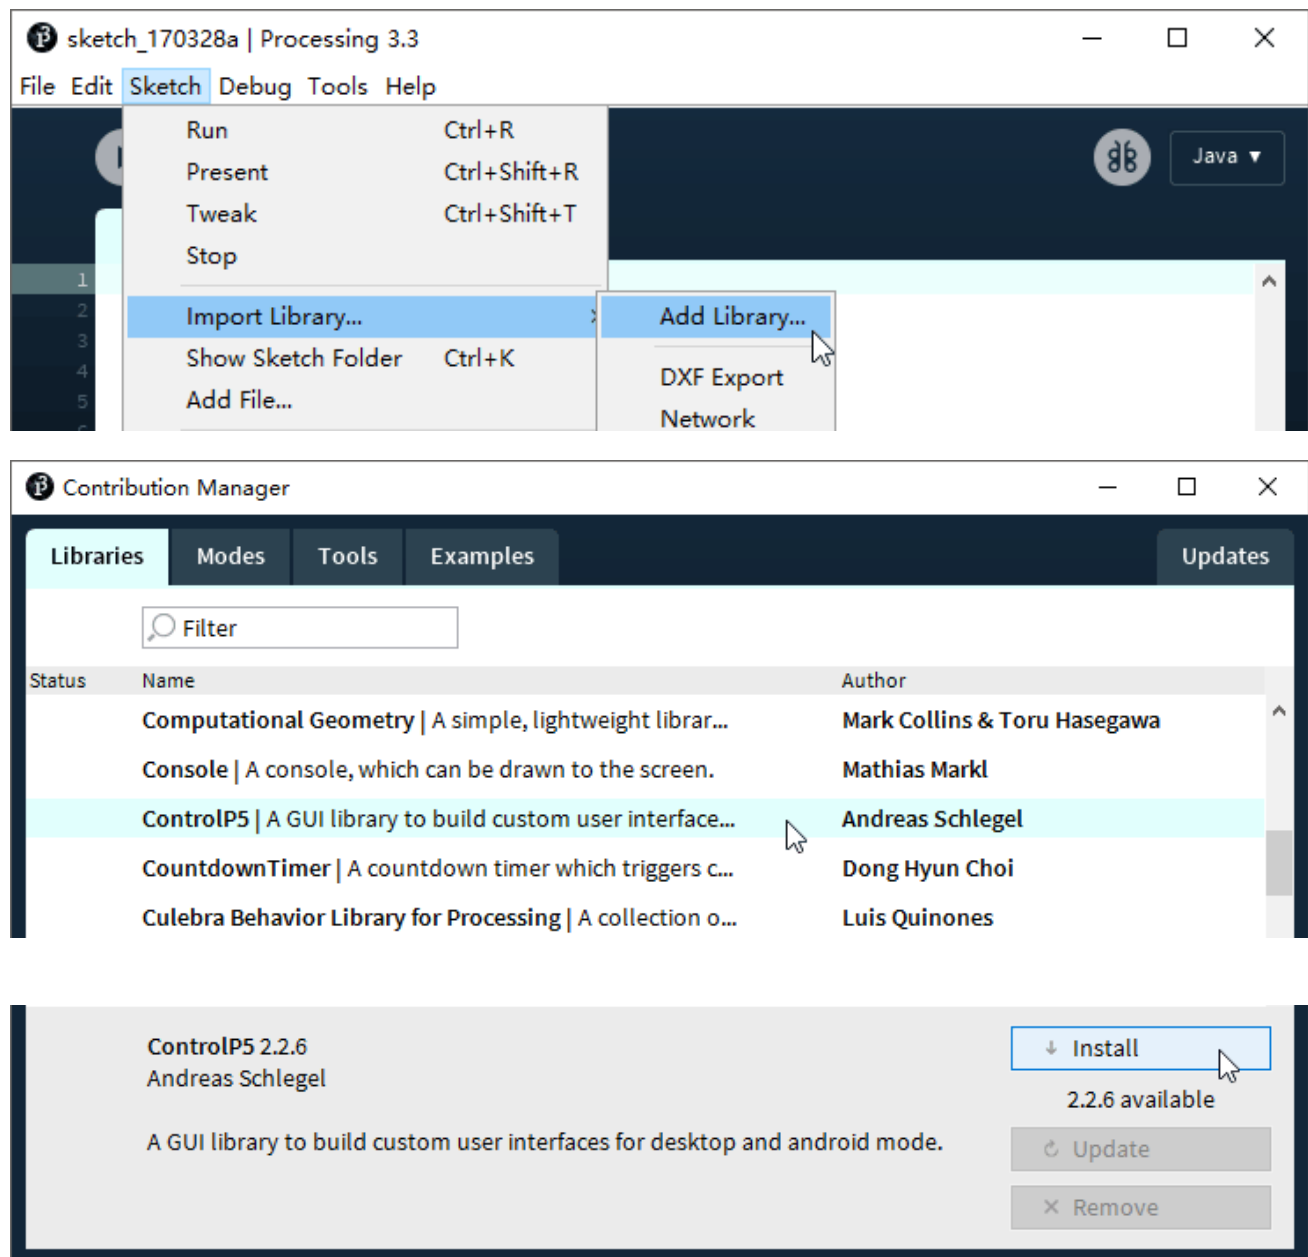

Open the “Freenove_Ultimate_Starter_Kit_for_ESP32_S3\Sketches\Sketches\Sketch_28.1_WiFiClient\sketchWiFi\sketchWiFi.pde”, and click “Run”.




The new pop-up interface is as follows. If ESP32-S3 is used as client, select TCP SERVER mode for sketchWiFi.

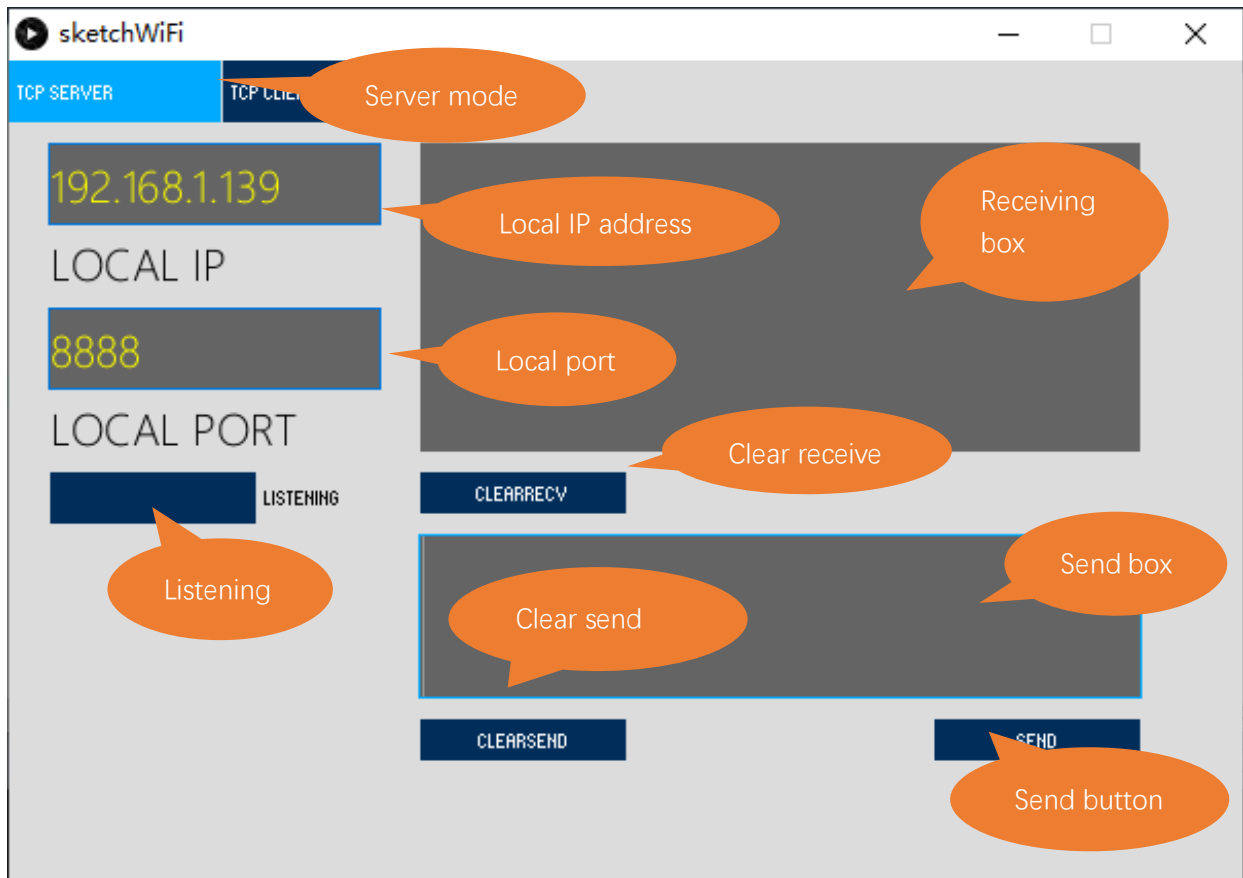

When sketchWiFi selects TCP SERVER mode, ESP32-S3 Sketch needs to be changed according to sketchWiFi's displaying of LOCAL IP or LOCAL PORT.

If ESP32-S3 serves as server, select TCP CLIENT mode for sketchWiFi.

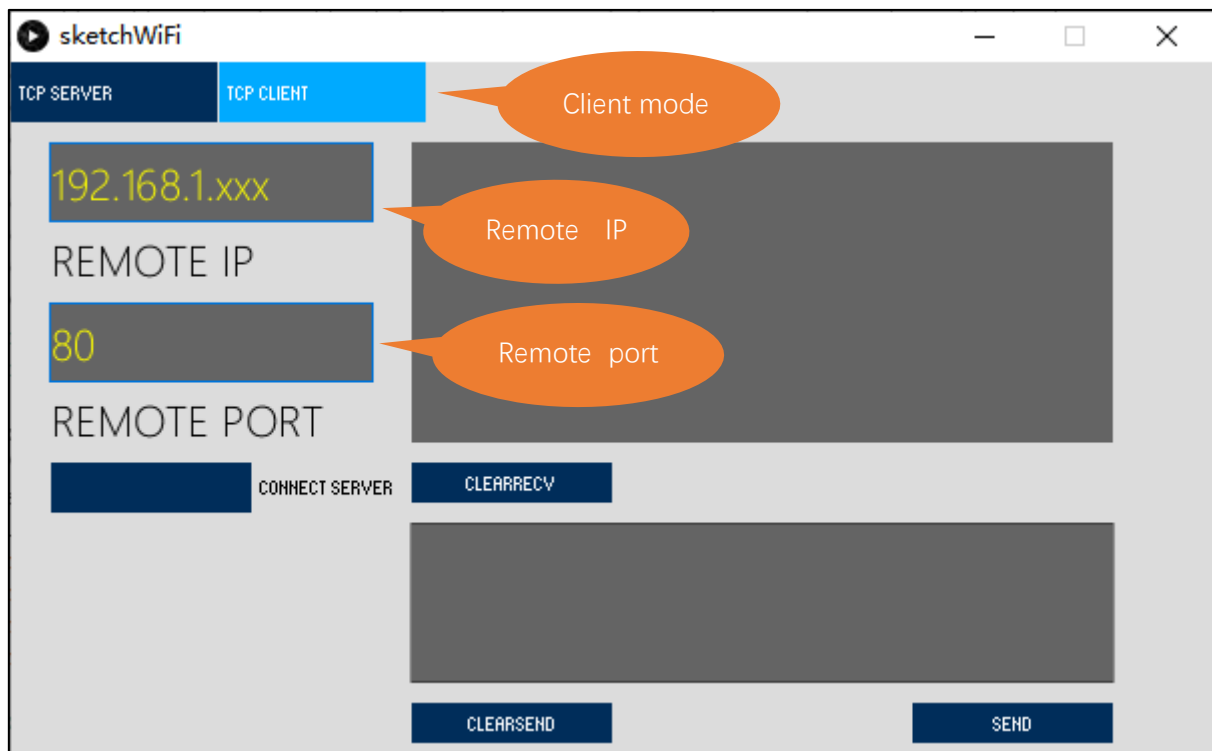

When sketchWiFi selects TCP CLIENT mode, the LOCAL IP and LOCAL PORT of sketchWiFi need to be changed according to the IP address and port number printed by the serial monitor.

Mode selection: select **Server mode/Client mode**.

IP address: In server mode, this option does not need to be filled in, and the computer will automatically obtain the IP address.

In client mode, fill in the remote IP address to be connected.

Port number: In server mode, fill in a port number for client devices to make an access connection.

In client mode, fill in port number given by the Server devices to make an access connection.

Start button: In server mode, push the button, then the computer will serve as server and open a port number for client to make access connection. During this period, the computer will keep monitoring.

In client mode, before pushing the button, please make sure the server is on, remote IP address and remote port number is correct; push the button, and the computer will make access connection to the remote port number of the remote IP as a client.


clear receive: clear out the content in the receiving text box

clear send: clear out the content in the sending text box

Sending button: push the sending button, the computer will send the content in the text box to others.


Circuit

Connect Freenove ESP32-S3 to the computer using the USB cable.

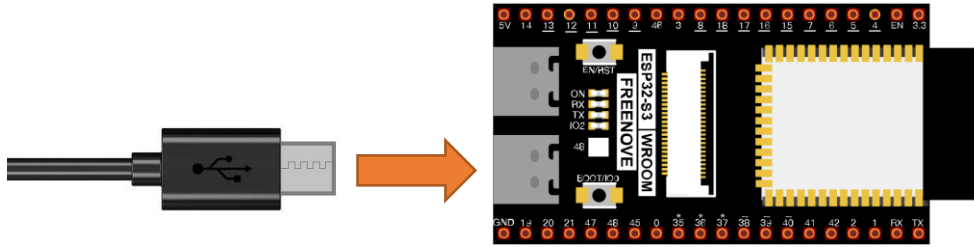


Code

Before running the Code, please open “sketchWiFi.pde.” first, and click “Run”.

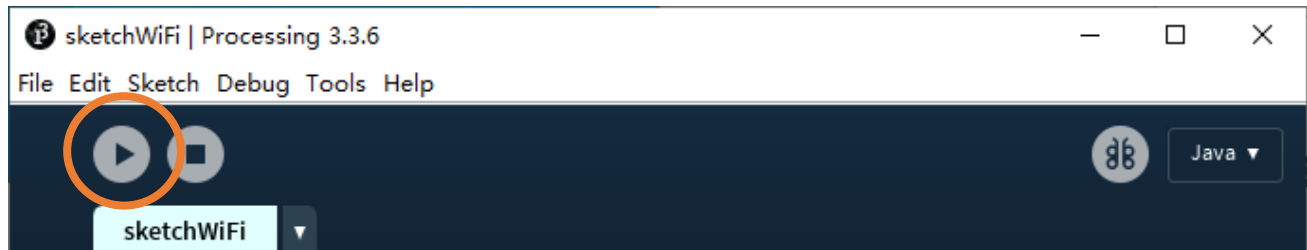

The newly pop up window will use the computer's IP address by default and open a data monitor port. Click “Listening”.

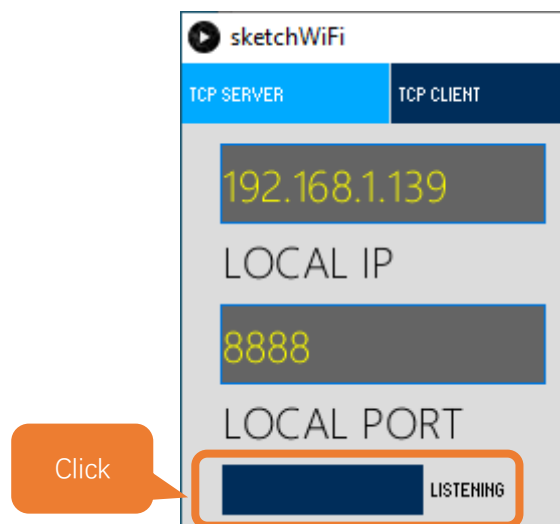


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “29.1_TCP_as_Client” and double click “TCP_as_Client.py”.

Before clicking “Run current script”, please modify the name and password of your router and fill in the “host” and “port” according to the IP information shown in the box below:

29.1_TCP_as_Client

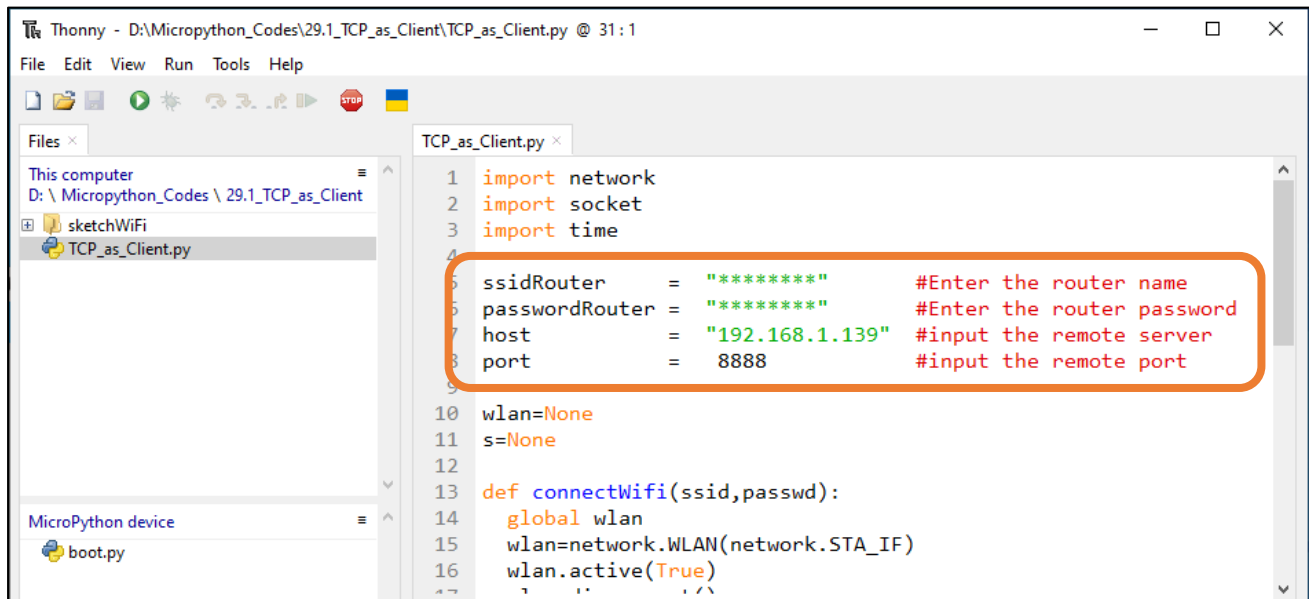

Click “Run current script” and in “Shell”, you can see ESP32-S3 automatically connects to sketchWiFi.




If you don't click "Listening" for sketchWiFi, ESP32-S3 will fail to connect and will print information as follows:

```

Shell x
TCP connected to: 192.168.1.142 : 8888
Close socket
>>> %Run -c $EDITOR_CONTENT
TCP close, please reset!
>>>

```

ESP32-S3 connects with TCP SERVER, and TCP SERVER receives messages from ESP32S3, as shown in the figure below. You can enter any content in TCP SERVER, click SEND, and ESP32-S3 will receive this message

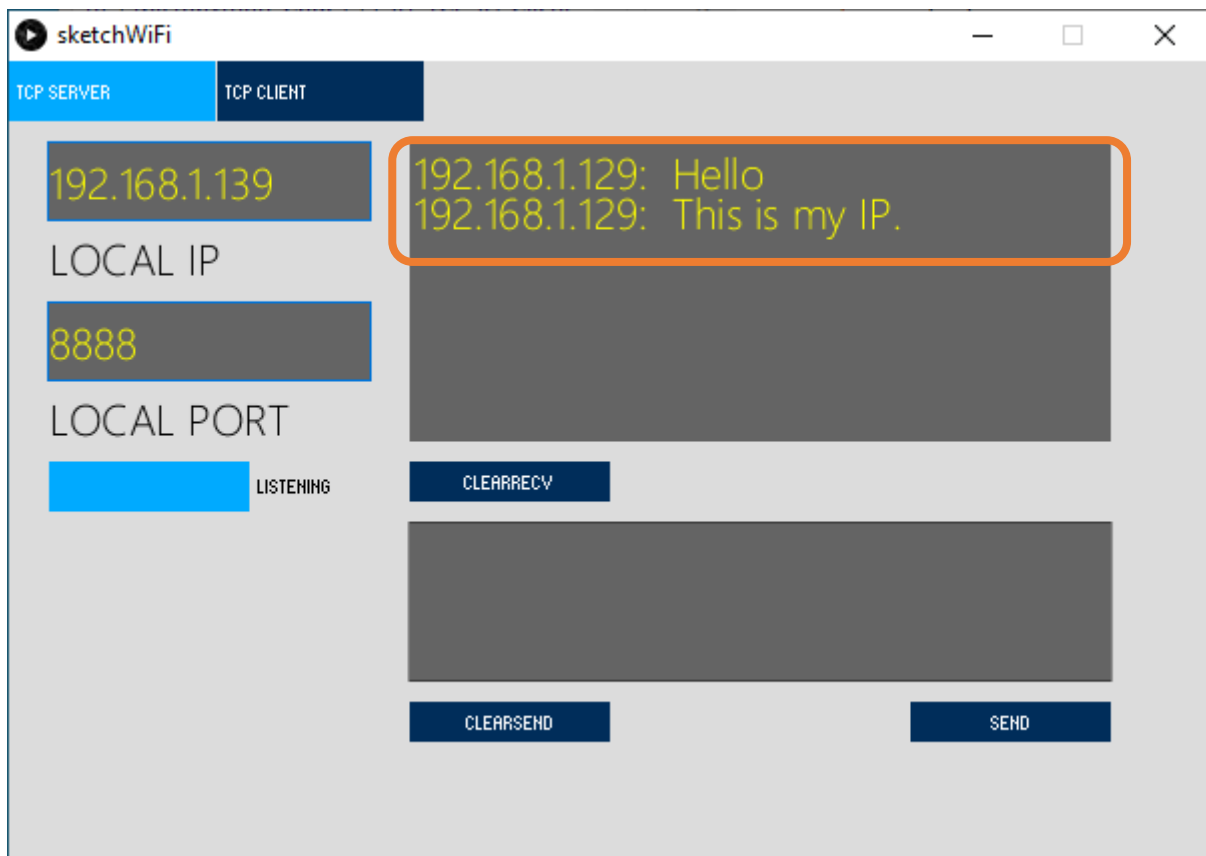

The following is the program code:

```

1  import network
2  import socket
3  import time
4
5  ssidRouter    = "*****"    #Enter the router name
6  passwordRouter = "*****"    #Enter the router password
7  host          = "*****"    #input the remote server
8  port          = 8888        #input the remote port
9
10 wlan=None
11 s=None
12

```

```

13 def connectWifi(ssid,passwd):
14     global wlan
15     wlan= network.WLAN(network.STA_IF)
16     wlan.active(True)
17     wlan.disconnect()
18     wlan.connect(ssid,passwd)
19     while(wlan.ifconfig()[0]=='0.0.0.0'):
20         time.sleep(1)
21     return True
22 try:
23     connectWifi(ssidRouter,passwordRouter)
24     s = socket.socket()
25     s.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
26     s.connect((host,port))
27     print("TCP Connected to:", host, ":", port)
28     s.send('Hello')
29     s.send('This is my IP.')
30     while True:
31         data = s.recv(1024)
32         if(len(data) == 0):
33             print("Close socket")
34             s.close()
35             break
36         print(data)
37         ret=s.send(data)
38 except:
39     print("TCP close, please reset!")
40     if (s):
41         s.close()
42     wlan.disconnect()
43     wlan.active(False)

```

Import network、socket、time modules.

```

1 import network
2 import socket
3 import time

```

Enter the actual router name, password, remote server IP address, and port number.

```

5 ssidRouter      = "*****"      #Enter the router name
6 passwordRouter  = "*****"      #Enter the router password
7 host            = "*****"      #input the remote server
8 port            = 8888           #input the remote port

```

Connect specified Router until it is successful.

```
13 def connectWifi(ssid, passwd):
14     global wlan
15     wlan= network.WLAN(network.STA_IF)
16     wlan.active(True)
17     wlan.disconnect()
18     wlan.connect(ssid, passwd)
19     while(wlan.ifconfig()[0]!='0.0.0.0'):
20         time.sleep(1)
21     return True
```

Connect router and then connect it to remote server.

```
23 connectWifi(ssidRouter, passwordRouter)
24 s = socket.socket()
25 s.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
26 s.connect((host, port))
27 print("TCP Connected to:", host, ":", port)
```

Send messages to the remote server, receive the messages from it and print them out, and then send the messages back to the server.

```
28 s.send('Hello')
29 s.send('This is my IP.')
30 while True:
31     data = s.recv(1024)
32     if(len(data) == 0):
33         print("Close socket")
34         s.close()
35         break
36     print(data)
37     ret=s.send(data)
```

If an exception occurs in the program, for example, the remote server is shut down, execute the following program, turn off the socket function, and disconnect the WiFi.

```
39 print("TCP close, please reset!")
40 if (s):
41     s.close()
42 wlan.disconnect()
43 wlan.active(False)
```

Reference

Class socket

Before each use of **socket**, please add the statement “**import socket**” to the top of the python file.

socket([af, type, proto]): Create a socket.

af: address

socket.AF_INET: IPv4

socket.AF_INET6: IPv6

type: type

socket.SOCK_STREAM : TCP stream

socket.SOCK_DGRAM : UDP datagram

socket.SOCK_RAW : Original socket

socket.SO_REUSEADDR : socket reusable

proto: protocol number

socket.IPPROTO_TCP: TCPmode

socket.IPPROTO_UDP: UDPmode

socket.setsockopt(level, optname, value): Set the socket according to the options.

Level: Level of socket option

socket.SOL_SOCKET: Level of socket option. By default, it is 4095.

optname: Options of socket

socket.SO_REUSEADDR: Allowing a socket interface to be tied to an address that is already in use.

value: The value can be an integer or a bytes-like object representing a buffer.

socket.connect(address): To connect to server.

Address: Tuple or list of the server's address and port number

send(bytes): Send data and return the bytes sent.

recv(bufsize): Receive data and return a bytes object representing the data received.



close(): Close socket.

To learn more please visit: <http://docs.micropython.org/en/latest/>

Project 29.2 As Server


In this section, ESP32-S3 is used as a server to wait for the connection and communication of client on the same LAN.

Component List

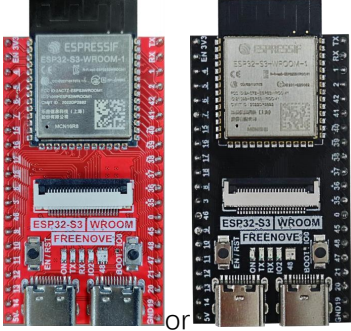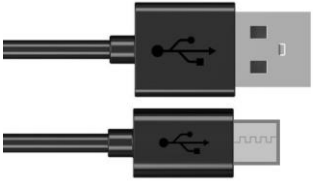ESP32-S3(N16R8)/ESP32-S3(N8R8)  or	USB cable x1 
---	--

Circuit

Connect Freenove ESP32-S3 to the computer using a USB cable.

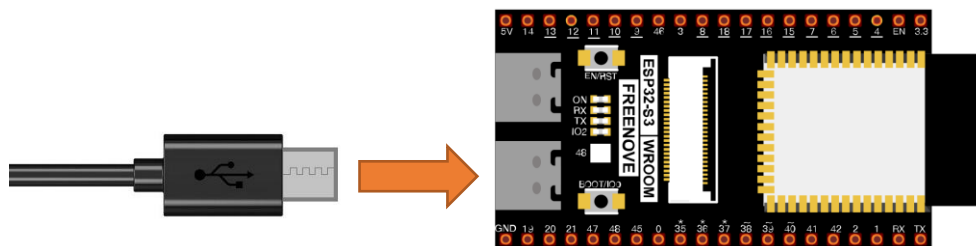


Code

Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Open “Thonny”, click “This computer” → “D:” → “Micropython_Codes” → “29.2_TCP_as_Server” and double click “TCP_as_Server.py”.

Before clicking “Run current script”, please modify the name and password of your router shown in the box below.

29.2_TCP_as_Server

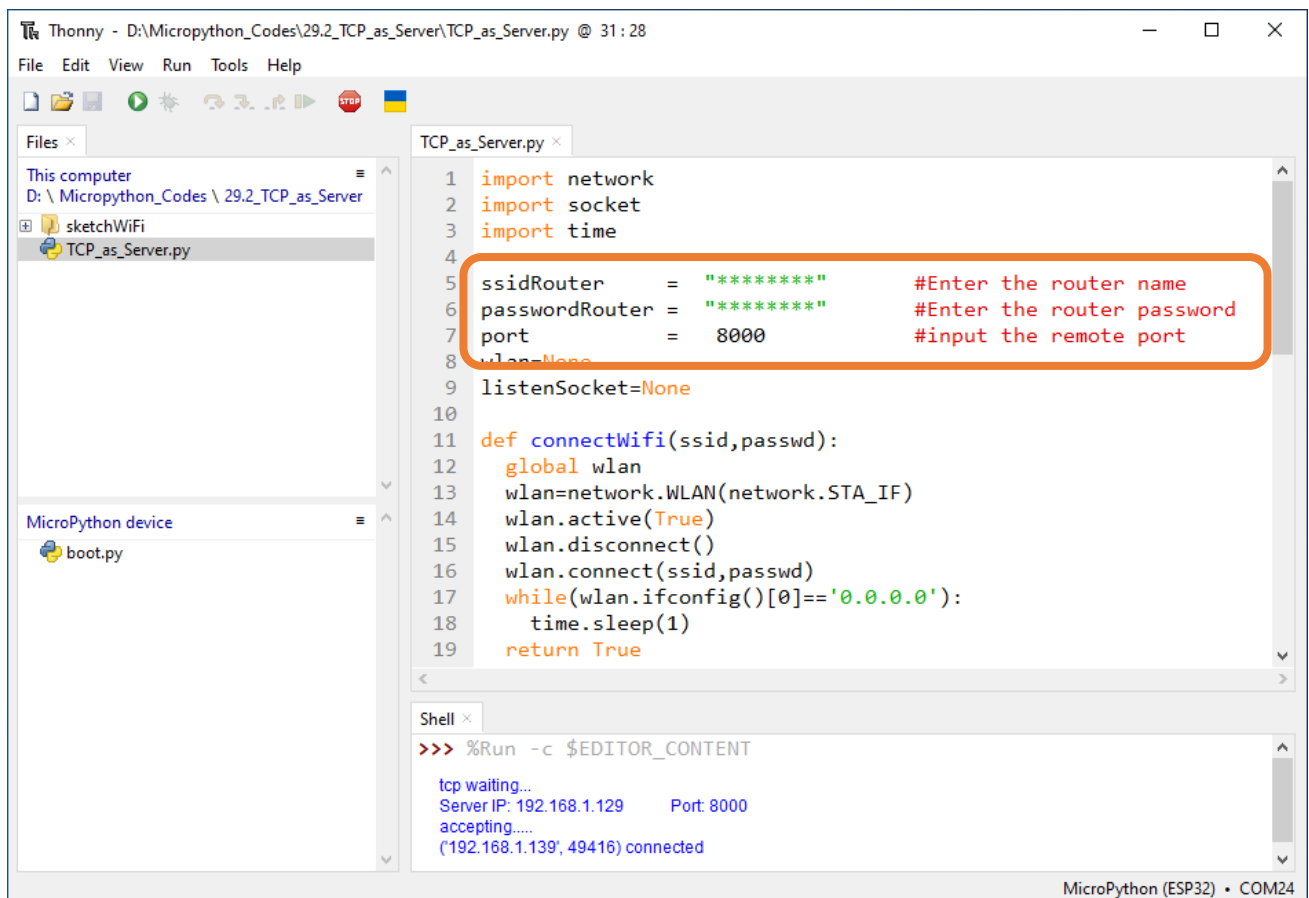

The screenshot shows the Thonny IDE with the file `D:\Micropython_Codes\29.2_TCP_as_Server\TCP_as_Server.py` open. The script contains the following code:

```

1 import network
2 import socket
3 import time
4
5 ssidRouter = "*****" #Enter the router name
6 passwordRouter = "*****" #Enter the router password
7 port = 8000 #input the remote port
8 wlan=None
9 listenSocket=None
10
11 def connectWifi(ssid,passwd):
12     global wlan
13     wlan=network.WLAN(network.STA_IF)
14     wlan.active(True)
15     wlan.disconnect()
16     wlan.connect(ssid,password)
17     while(wlan.ifconfig()[0]!='0.0.0.0'):
18         time.sleep(1)
19     return True

```

The Shell window shows the execution output:

```

>>> %Run -c $EDITOR_CONTENT

tcp waiting...
Server IP: 192.168.1.129    Port: 8000
accepting.....
('192.168.1.139', 49416) connected

```

After making sure that the router's name and password are correct, click “Run current script” and in “Shell”, you can see a server opened by the ESP32-S3 waiting to connecting to other network devices.



The Shell window shows the following output:

```

>>> %Run -c $EDITOR_CONTENT

tcp waiting...
Server IP: 192.168.1.129    Port: 8000
accepting.....

```


An orange callout box points to the IP address and port, stating: “IP address and port”.

Processing:


Open the

"Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Codes/MicroPython_Codes/29.2_TCP_as_Server/sketchWiFi/sketchWiFi.pde".

Based on the message printed in "Shell", enter the correct IP address and port when processing, and click to establish a connection with ESP32-S3 to communicate.

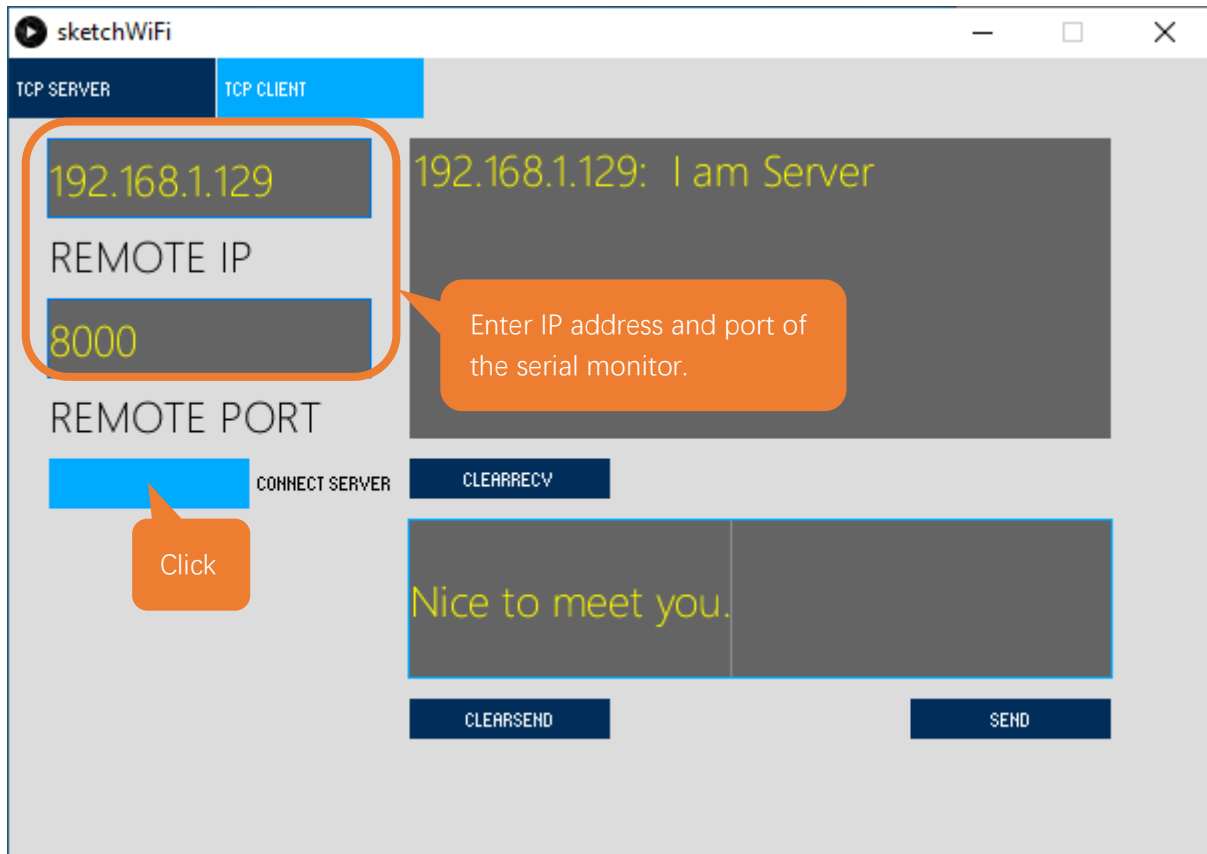

You can enter any information in the "Send Box" of sketchWiFi. Click "Send" and ESP32-S3 will print the received messages to "Shell" and send them back to sketchWiFi.

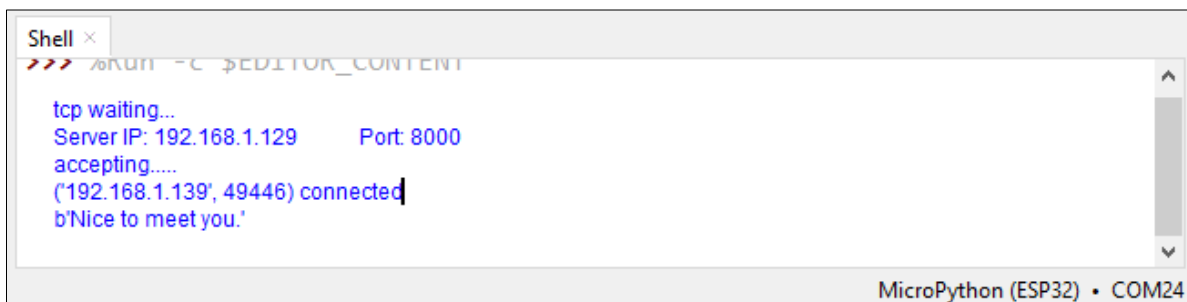

The following is the program code:

```

1  import network
2  import socket
3  import time
4
5  ssidRouter    = "*****"      #Enter the router name
6  passwordRouter = "*****"     #Enter the router password
7  port          = 8000          #input the remote port
8  wlan          = None
9  listenSocket  = None
10
11 def connectWifi(ssid,passwd):
12     global wlan
13     wlan=network.WLAN(network.STA_IF)
14     wlan.active(True)
15     wlan.disconnect()
16     wlan.connect(ssid,passwd)
17     while(wlan.ifconfig()[0]!='0.0.0.0'):
18         time.sleep(1)
19     return True
20
21 try:
22     connectWifi(ssidRouter,passwordRouter)
23     ip=wlan.ifconfig()[0]
24     listenSocket = socket.socket()
25     listenSocket.bind((ip,port))
26     listenSocket.listen(1)
27     listenSocket.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
28     print('tcp waiting...')
29     while True:
30         print("Server IP:", ip, "\tPort:", port)
31         print("accepting....")
32         conn,addr = listenSocket.accept()
33         print(addr,"connected")
34         break
35     conn.send(' I am Server')
36     while True:
37         data = conn.recv(1024)
38         if(len(data) == 0):
39             print("close socket")
40             listenSocket.close()
41             wlan.disconnect()
42             wlan.active(False)
43             break

```



```

44     else:
45         print(data)
46         ret = conn.send(data)
47     except:
48         print("Close TCP-Server, please reset.")
49         if(listenSocket):
50             listenSocket.close()
51         wlan.disconnect()
52         wlan.active(False)

```

Call function connectWifi() to connect to router and obtain the dynamic IP that it assigns to ESP32-S3.

```

22     connectWifi(ssidRouter, passwordRouter)
23     ip=wlan.ifconfig()[0]

```

Open the socket server, bind the server to the dynamic IP, and open a data monitoring port.

```

24     listenSocket = socket.socket()
25     listenSocket.bind((ip, port))
26     listenSocket.listen(1)
27     listenSocket.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)

```

Print the server's IP address and port, monitor the port and wait for the connection of other network devices.

```

29     while True:
30         print("Server IP:", ip, "\tPort:", port)
31         print("accepting....")
32         conn, addr = listenSocket.accept()
33         print(addr, "connected")
34         break

```

Each time receiving data, print them in "Shell" and send them back to the client.

```

36     while True:
37         data = conn.recv(1024)
38         if(len(data) == 0):
39             print("close socket")
40             listenSocket.close()
41             wlan.disconnect()
42             wlan.active(False)
43             break
44         else:
45             print(data)
46             ret = conn.send(data)

```

If the client is disconnected, close the server and disconnect WiFi.

```

47     except:
48         print("Close TCP-Server, please reset.")
49         if(listenSocket):
50             listenSocket.close()
51         wlan.disconnect()
52         wlan.active(False)

```



Chapter 30 Camera Web Server

In this section, we'll use ESP32's video function as an example to study.

Project 30.1 Camera Web Server


Connect ESP32 using USB and check its IP address through serial monitor. Use web page to access IP address to obtain video and image data.

Component List

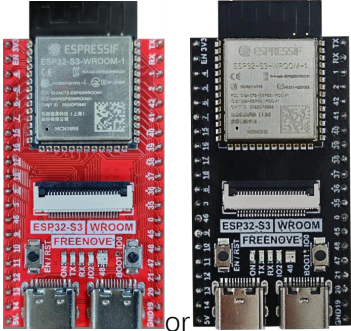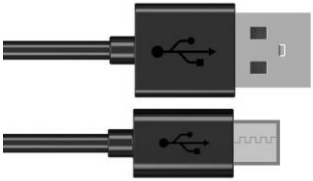ESP32-S3(N16R8)/ESP32-S3(N8R8) 	USB cable x1 
--	---

Circuit

Connect Freenove ESP32-S3 to the computer using the USB cable.

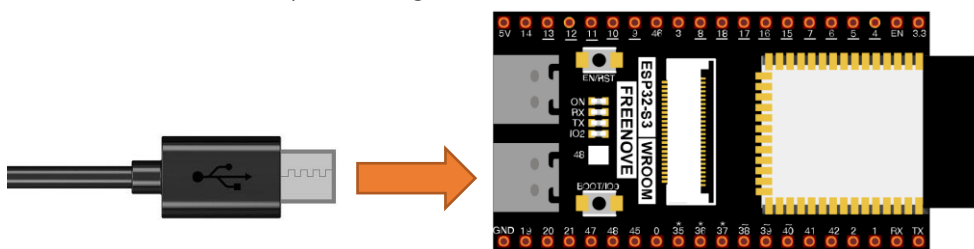

Code


Move the program folder “**Freenove_Ultimate_Starter_Kit_for_ESP32_S3/Python/Python_Codes**” to disk(D) in advance with the path of “**D:/Micropython_Codes**”.

Since Micropython does not provide firmware including camera module, in this chapter, we will use the camera based on the firmware in lemariva's Github project, micropython-camera-driver.


Project link: <https://github.com/lemariva/micropython-camera-driver>

Any concerns? ✉ support@freenove.com

Before starting the project, we need to re-upload the firmware with the camera module via steps below. Open Thonny, click “run” and select “Select interpreter...”

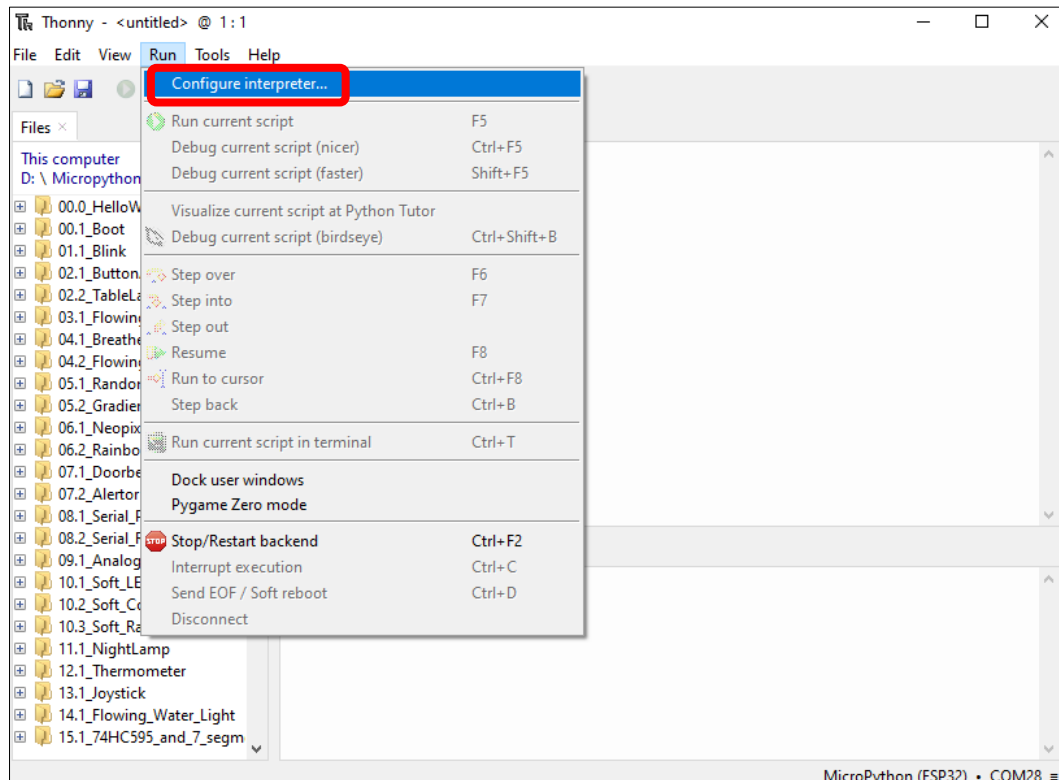


Select “Micropython (ESP32)”, select “USB Single Serial @ COM28”, and then click the long button under “Firmware”.

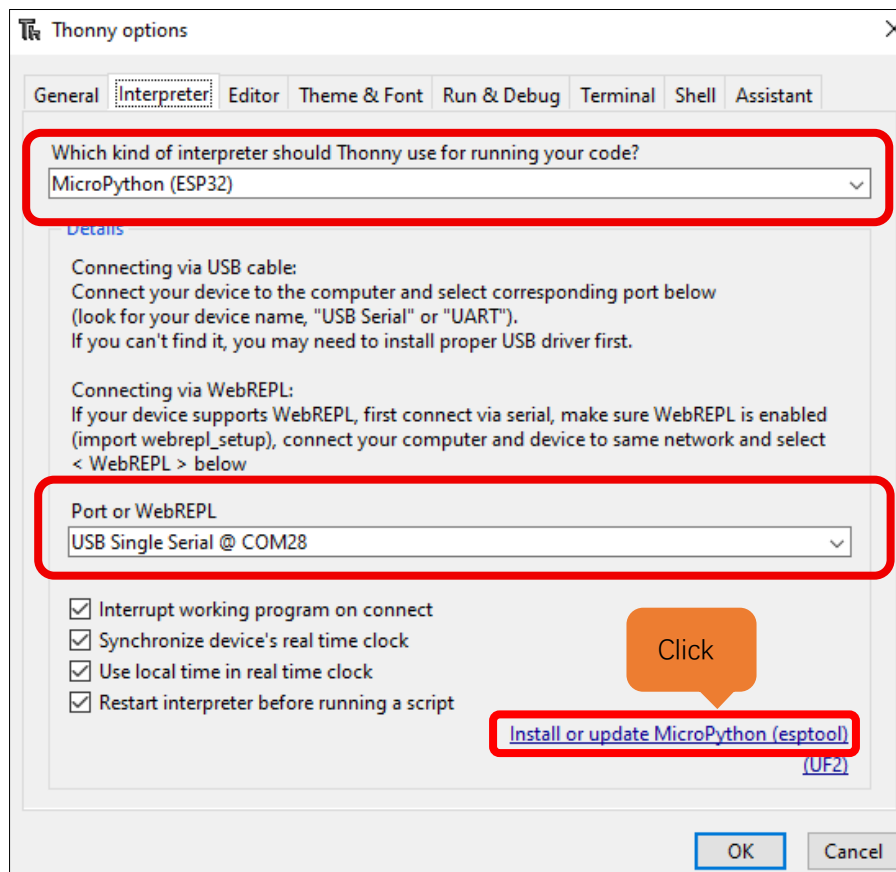


Any concerns? [✉ support@freenove.com](mailto:support@freenove.com)


Click “Select local MicroPython image …”.

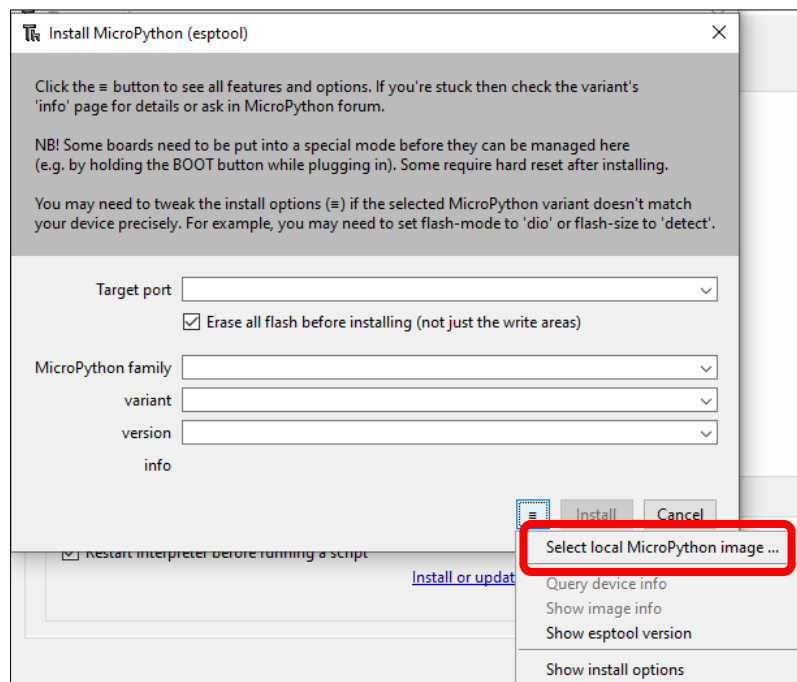

Choose “esp32s3_camera_1.27.bin”

 


Select “USB Single Serial @ COM31”

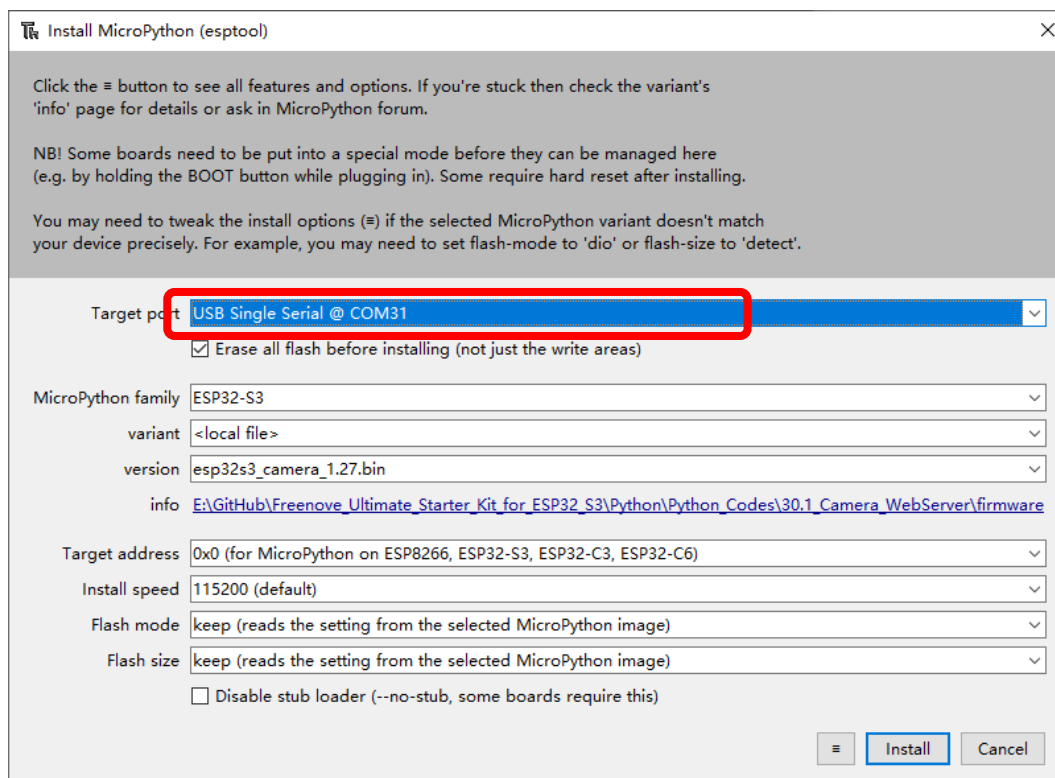

Click “Install”, Wait for completion.

Open "Thonny", click "This computer" → "D:" → "Micropython_Codes" → "30.1_Camera_WebServer". Then double click "**picoweb_video.py**".

30.1_Camera_WebServer

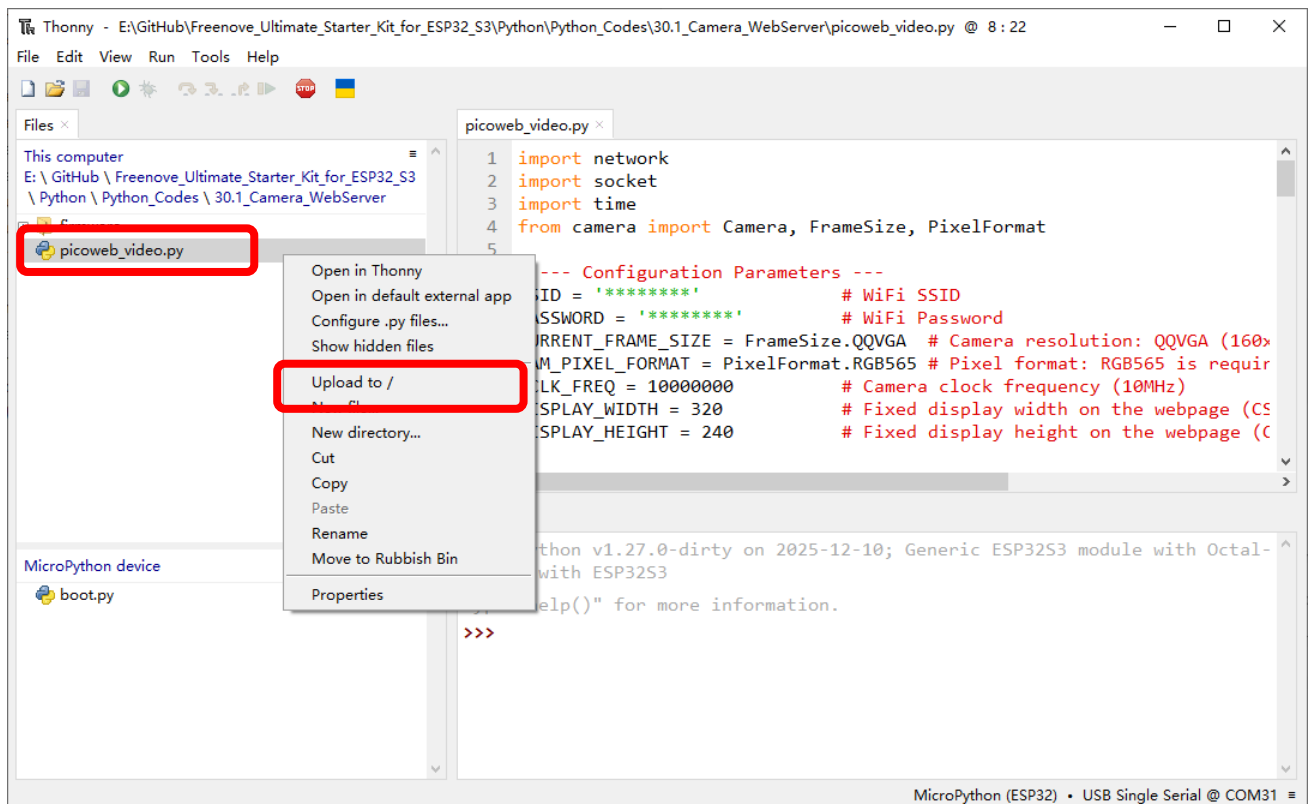

Before running the program, please modify your router's name and password in the box shown in the illustration above to make sure that your code can compile and work successfully.

Click "run" to run the code "picoweb_video.py", then you can see the following content in the shell area.


```
>>> %Run -c $EDITOR_CONTENT

MPY: soft reboot
network config: '192.168.1.108', '255.255.255.0', '192.168.1.1', '192.168.1.1')
* Running on http://0.0.0.0:80/
```

If your ESP32S3 has been in the process of connecting to router, but the information above has not been printed out, please re-check whether the router name and password have been entered correctly and press the reset key on ESP32S3 to wait for a successful connection prompt.

Open a web browser, enter the IP address printed by the serial monitor in the address bar, and access it.

Taking the Google browser as an example, here's what the browser prints out after successful access to ESP32S3's IP.

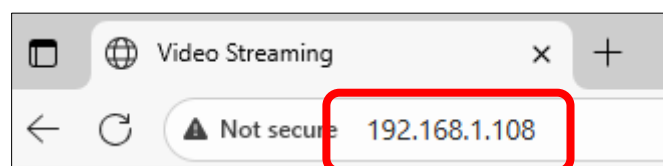

The effect is shown in the image below.



Please note:

If the shell area prompts an error when you click to run the code, please press the rst button on the ESP32S3, wait for the system reset to complete, and then re-run the code.

The following is the program code.

```

1  # The firmware for this chapter is provided by: https://github.com/cnadler86/micropython-
   camera-API.
2  # Thanks to cnadler86 for the open source contribution.
3
4  import network
5  import socket
6  import time
7  from camera import Camera, FrameSize, PixelFormat
8
9  # --- Configuration Parameters ---
10 SSID = '*****'          # WiFi SSID
11 PASSWORD = '*****'      # WiFi Password
12 CURRENT_FRAME_SIZE = FrameSize.QQVGA # Camera resolution: QQVGA(160x120), QVGA(320x240), etc.
13 CAM_PIXEL_FORMAT = PixelFormat.RGB565 # Pixel format: RGB565
14 XCLK_FREQ = 10000000      # Camera clock frequency (10MHz)
15 DISPLAY_WIDTH = 320       # Fixed display width on the webpage (CSS pixels)
16 DISPLAY_HEIGHT = 240     # Fixed display height on the webpage (CSS pixels)
17
18 def get_resolution_dimensions(frame_size):
19     """
20     Returns the actual width and height in pixels based on the FrameSize enum.

```

```
21     """
22     if frame_size == FrameSize.QQVGA:
23         return 160, 120
24     elif frame_size == FrameSize.QVGA:
25         return 320, 240
26     elif frame_size == FrameSize.VGA:
27         return 640, 480
28     else:
29         # Default fallback to QQVGA
30         return 160, 120
31
32 def connect_wifi(ssid, password):
33     """
34     Connects to the specified WiFi network and returns the local IP address.
35     Blocks execution until connected.
36     """
37     station = network.WLAN(network.STA_IF)
38     station.active(True)
39     station.connect(ssid, password)
40     while not station.isconnected():
41         time.sleep(1)
42     return station.ifconfig()[0]
43
44 def init_camera(frame_size, pixel_format, xclk_freq):
45     """
46     Initializes the camera hardware with the specified settings.
47     """
48     cam = Camera(frame_size=frame_size, pixel_format=pixel_format, xclk_freq=xclk_freq,
49 init=False)
50     cam.init()
51     return cam
52
53 def generate_html(cam_width, cam_height):
54     """
55     Generates the HTML page with embedded JavaScript.
56     Injects the actual camera resolution into the JS variables.
57     The CSS forces the canvas to display at DISPLAY_WIDTH x DISPLAY_HEIGHT,
58     while the JS handles the actual pixel data decoding.
59     """
60     return f"""<!DOCTYPE html>
61 <html>
62 <head>
63     <title>ESP32 Camera Stream</title>
64     <style>
```

```

64     body {{
65         display: flex;
66         justify-content: center;
67         align-items: center;
68         height: 100vh;
69         margin: 0;
70         background-color: #f0f0f0;
71     }}
72     .video-container {{
73         text-align: center;
74     }}
75     canvas {{
76         /* Force display size to 320x240 regardless of actual resolution */
77         width: {DISPLAY_WIDTH}px;
78         height: {DISPLAY_HEIGHT}px;
79         border: 1px solid #ccc;
80         background-color: #000;
81         image-rendering: auto; /* Smooth scaling */
82     }}
83 </style>
84 </head>
85 <body>
86     <div class="video-container">
87         <h1>Stream (Actual: {cam_width}x{cam_height}, Display:
88 {DISPLAY_WIDTH}x{DISPLAY_HEIGHT})</h1>
89         <canvas id="videoCanvas"></canvas>
90         <div id="status">Connecting...</div>
91     </div>
92     <script>
93         const canvas = document.getElementById('videoCanvas');
94         const ctx = canvas.getContext('2d');
95         const statusDiv = document.getElementById('status');
96
97         // Actual resolution injected from Python
98         const ACTUAL_WIDTH = {cam_width};
99         const ACTUAL_HEIGHT = {cam_height};
100         const EXPECTED_DATA_LENGTH = ACTUAL_WIDTH * ACTUAL_HEIGHT * 2; // 2 bytes per pixel in
101         RGB565
102
103         function fetchImage() {{
104             fetch('/frame')
105                 .then(response => response.arrayBuffer())
106                 .then(data => {{
107                     if (!data || data.byteLength === 0) {{

```



```
106         setTimeout(fetchImage, 100);
107         return;
108     }}
109
110     const uint8Array = new Uint8Array(data);
111     let w = ACTUAL_WIDTH;
112     let h = ACTUAL_HEIGHT;
113
114     // Auto-detect resolution if data length doesn't match expected
115     if (uint8Array.length !== EXPECTED_DATA_LENGTH) {{
116         if (uint8Array.length === 160 * 120 * 2) {{ w = 160; h = 120; }}
117         else if (uint8Array.length === 320 * 240 * 2) {{ w = 320; h = 240; }}
118         else if (uint8Array.length === 640 * 480 * 2) {{ w = 640; h = 480; }}
119         else {{
120             setTimeout(fetchImage, 1000);
121             return;
122         }}
123     }}
124
125     // Swap bytes for RGB565 (Little Endian to Big Endian conversion)
126     const swappedArray = new Uint8Array(uint8Array.length);
127     for (let i = 0; i < uint8Array.length; i += 2) {{
128         swappedArray[i] = uint8Array[i+1];
129         swappedArray[i+1] = uint8Array[i];
130     }}
131
132     // Convert RGB565 to RGBA8888 for Canvas rendering
133     const rgb565Array = new Uint16Array(swappedArray.buffer);
134     const rgbaArray = new Uint8ClampedArray(w * h * 4);
135
136     for (let i = 0; i < rgb565Array.length; i++) {{
137         const color = rgb565Array[i];
138         // Extract 5-bit R, 6-bit G, 5-bit B and scale to 8-bit
139         const r = ((color >> 11) & 0x1F) << 3;
140         const g = ((color >> 5) & 0x3F) << 2;
141         const b = (color & 0x1F) << 3;
142
143         const idx = i * 4;
144         rgbaArray[idx] = r;
145         rgbaArray[idx + 1] = g;
146         rgbaArray[idx + 2] = b;
147         rgbaArray[idx + 3] = 255; // Alpha channel
148     }}
149
```

```

150         // Set internal canvas resolution to match actual image data
151         canvas.width = w;
152         canvas.height = h;
153         const imageData = new ImageData(rgbaArray, w, h);
154         ctx.putImageData(imageData, 0, 0);
155         statusDiv.textContent = `Streaming (${w}x${h})`;
156
157         // Request next frame immediately
158         setTimeout(fetchImage, 0);
159     )))
160     .catch(error => {{
161         setTimeout(fetchImage, 1000);
162     }});
163 }}
164 fetchImage();
165 </script>
166 </body>
167 </html>
168 """
169
170 def handle_frame_request(client, cam):
171     """
172     Captures a raw RGB565 frame from the camera and sends it to the client.
173     """
174     frame = cam.capture()
175     if frame:
176         headers = b'HTTP/1.1 200 OK\r\nContent-Type: application/octet-stream\r\nCache-
Control: no-cache\r\n\r\n'
177         client.send(headers)
178         client.send(frame)
179     else:
180         client.send(b'HTTP/1.1 500 Internal Server Error\r\n\r\n')
181
182 def handle_html_request(client, html_content):
183     """
184     Sends the main HTML page to the client.
185     """
186     response = 'HTTP/1.1 200 OK\r\nContent-Type: text/html\r\n\r\n' + html_content
187     client.send(response.encode())
188
189 def handle_client(client, cam, html_content):
190     """
191     Handles an incoming HTTP request from a client.
192     Routes to either frame streaming or HTML page serving.

```

```
193     """
194     try:
195         request = client.recv(1024).decode()
196         if 'GET /frame' in request:
197             handle_frame_request(client, cam)
198         elif 'GET /' in request or 'GET /stream' in request:
199             handle_html_request(client, html_content)
200         else:
201             client.close()
202     except OSError as e:
203         print(e)
204     finally:
205         client.close()
206
207 def main():
208     """
209     Main entry point: Initializes WiFi, Camera, and starts the Web Server.
210     """
211     # Get dimensions for HTML injection
212     cam_width, cam_height = get_resolution_dimensions(CURRENT_FRAME_SIZE)
213
214     # Connect to WiFi
215     ip_address = connect_wifi(SSID, PASSWORD)
216     print(f'Connected! IP: {ip_address}')
217
218     # Initialize Camera
219     cam = init_camera(CURRENT_FRAME_SIZE, CAM_PIXEL_FORMAT, XCLK_FREQ)
220     print('Camera initialized.')
221
222     # Generate HTML content once
223     html_content = generate_html(cam_width, cam_height)
224
225     # Start TCP Server
226     addr = socket.getaddrinfo('0.0.0.0', 80)[0][-1]
227     s = socket.socket()
228     s.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
229     s.bind(addr)
230     s.listen(1)
231     print(f'Server on: {addr}')
232
233     # Main loop: Accept connections and handle clients
234     while True:
235         try:
236             client, addr = s.accept()
```

```

237         handle_client(client, cam, html_content)
238     except Exception as e:
239         print(e)
240
241 if __name__ == '__main__':
242     main()

```

Import network、socket、time、camera modules.

```

4     import network
5     import socket
6     import time
7     from camera import Camera, FrameSize, PixelFormat

```

Before running the code, please modify the WiFi name and password in the code to ensure that the ESP32S3 can connect to the network.

```

10    SSID = '*****'           # WiFi SSID
11    PASSWORD = '*****'      # WiFi Password

```

Obtain the resolution size of the camera configuration.

```

18    def get_resolution_dimensions(frame_size):
19        """
20        Returns the actual width and height in pixels based on the FrameSize enum.
21        """
22        if frame_size == FrameSize.QQVGA:
23            return 160, 120
24        elif frame_size == FrameSize.QVGA:
25            return 320, 240
26        elif frame_size == FrameSize.VGA:
27            return 640, 480
28        else:
29            # Default fallback to QQVGA
30            return 160, 120

```

WiFi connection function. Input the WiFi name and password at the function interface. After ESP32S3 successfully configures WiFi, it returns the IP address of ESP32S3.

```

32    def connect_wifi(ssid, password):
33        """
34        Connects to the specified WiFi network and returns the local IP address.
35        Blocks execution until connected.
36        """
37        station = network.WLAN(network.STA_IF)
38        station.active(True)
39        station.connect(ssid, password)
40        while not station.isconnected():
41            time.sleep(1)
42        return station.ifconfig()[0]

```

Camera initialization function. At the function interface, the resolution, format and operating frequency of the camera can be configured. By calling this function, the camera configuration result will be returned.

```

44 def init_camera(frame_size, pixel_format, xclk_freq):
45     """
46     Initializes the camera hardware with the specified settings.
47     """
48     cam = Camera(frame_size=frame_size, pixel_format=pixel_format, xclk_freq=xclk_freq,
49                 init=False)
50     cam.init()
51     return cam

```

Webpage generation function, which generates the code for the webpage based on the resolution of the camera.

```

52 def generate_html(cam_width, cam_height):
53     .....

```

Create a server socket port with the port number 80 and continuously monitor whether any client devices initiate a connection.

```

225 # Start TCP Server
226 addr = socket.getaddrinfo('0.0.0.0', 80)[0][-1]
227 s = socket.socket()
228 s.setsockopt(socket.SOL_SOCKET, socket.SO_REUSEADDR, 1)
229 s.bind(addr)
230 s.listen(1)
231 print(f'Server on: {addr}')

```

If any client connects to the ESP32S3, the ESP32S3 will send the captured images from the camera to the client.

```

233 # Main loop: Accept connections and handle clients
234 while True:
235     try:
236         client, addr = s.accept()
237         handle_client(client, cam, html_content)
238     except Exception as e:
239         print(e)

```

Please note that due to the relatively low efficiency of micropython, it is recommended to use a low-resolution configuration. Otherwise, the video transmission may fail or be very slow.

Chapter 31 Soldering Circuit Board


Project 31.1 Soldering a Buzzer

We have tried to use a buzzer in a previous chapter, and now we will solder a circuit that when the button is pressed, the buzzer sounds.

This circuit does not need programming and can work when it is powered on. And when the button is not pressed, there is no power consumption.

You can install it on your bike, bedroom door or any other places where it is needed.


Component List

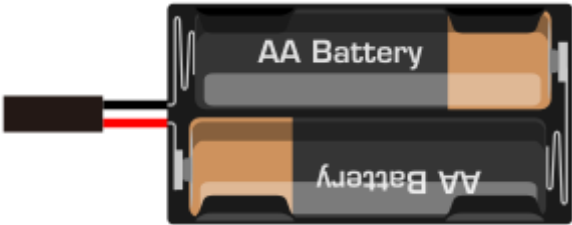Pin header x2 	LED x1 	Resistor 220Ω x1 	Active buzzer x1 	Push button x1 
AA Battery Holder x1 				

Circuit


We will solder the following circuit on the main board.

Schematic diagram

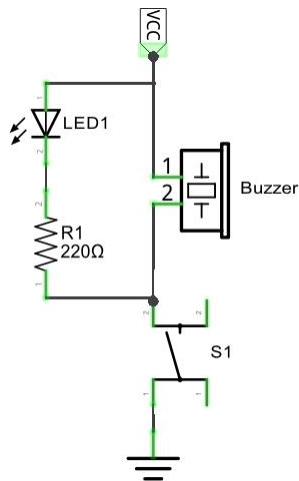


Hardware connection.

If you need any support, please feel free to contact us via: support@freenove.com

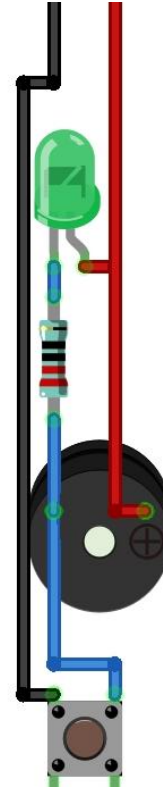


Soldering the Circuit

Insert the components on the main board and solder the circuit on its back.

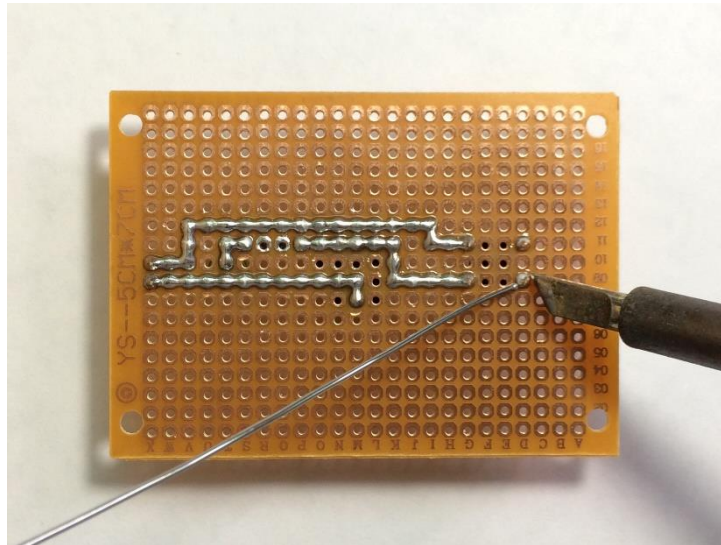


rendering after soldering:

Front

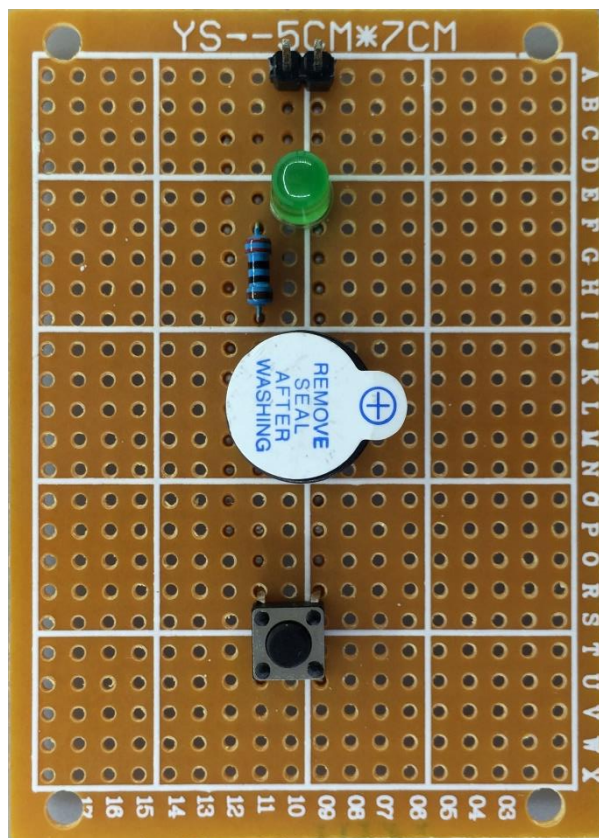


Back

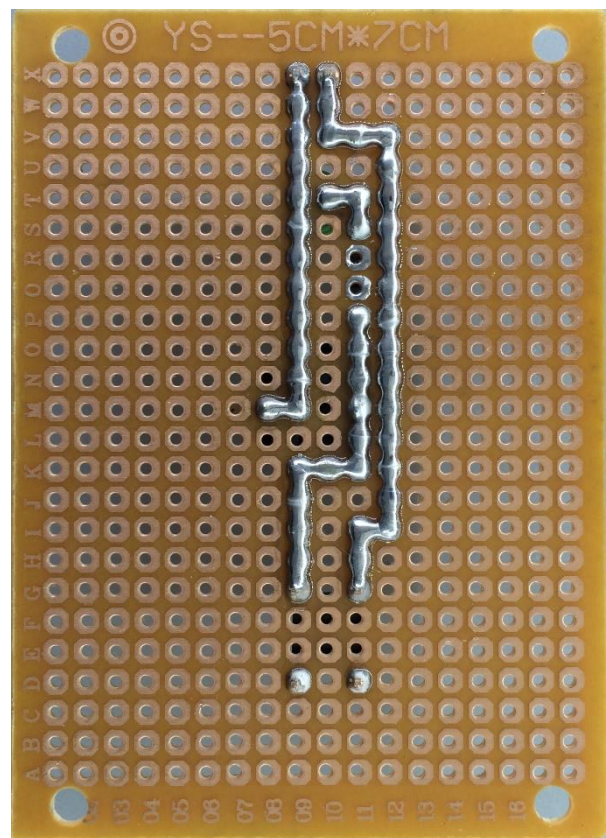

Testing circuit

Connect the circuit board to power supply (3~5V). You can use ESP32-S3 board or battery box as the power supply.


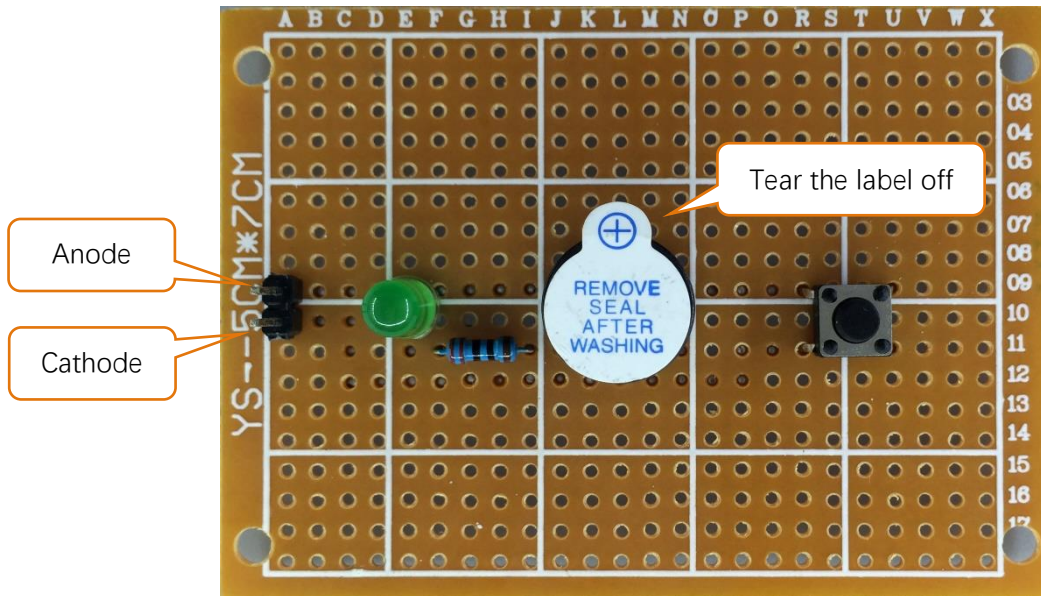


Press the push button after connecting the power, and then the buzzer will make a sound.

Project 31.2 Soldering a Flowing Water Light


From previous chapter, we have learned to make a flowing water light with LED. Now, we will solder a circuit board, and use the improved code to make a more interesting flowing water light.

 Component List

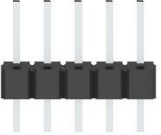Pin header x5	Resistor 220Ω x8	LED x1	74HC595 x1
			


Circuit

Solder the following circuit on the main board.

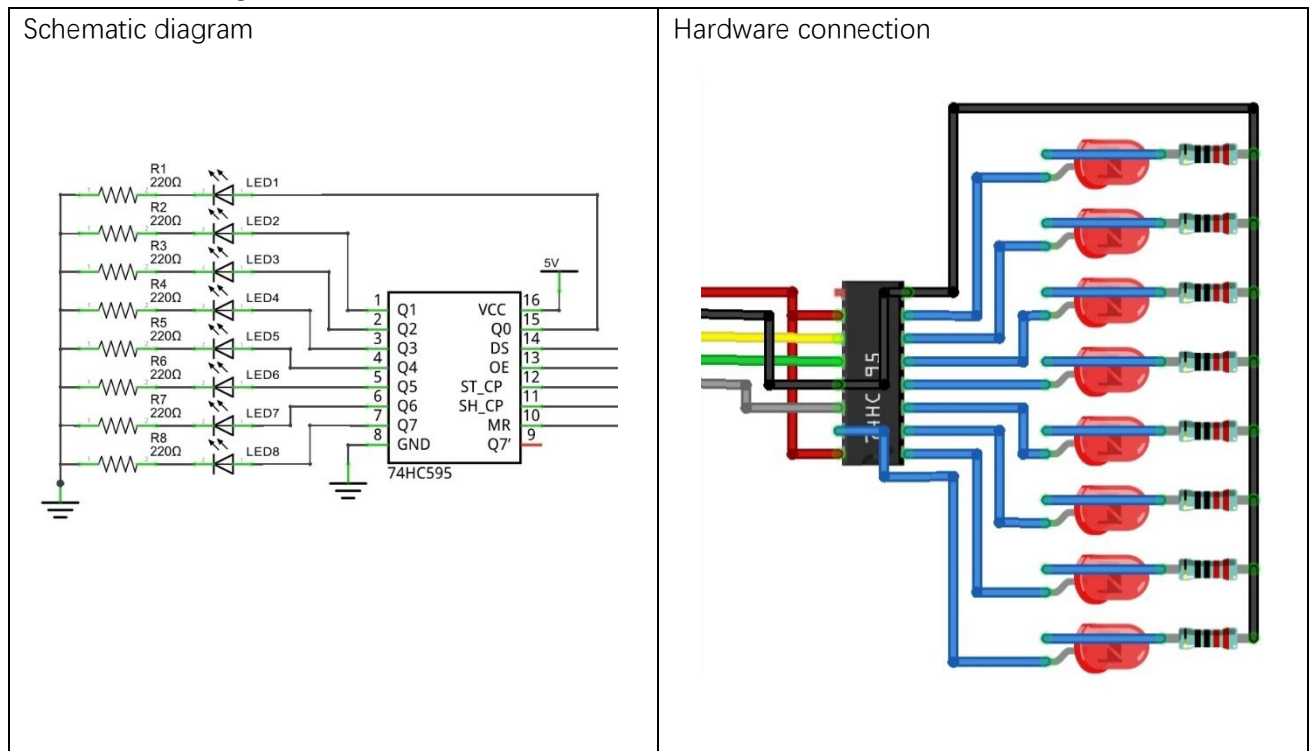


Soldering the Circuit

Insert the components on the main board and solder the circuit on its back.

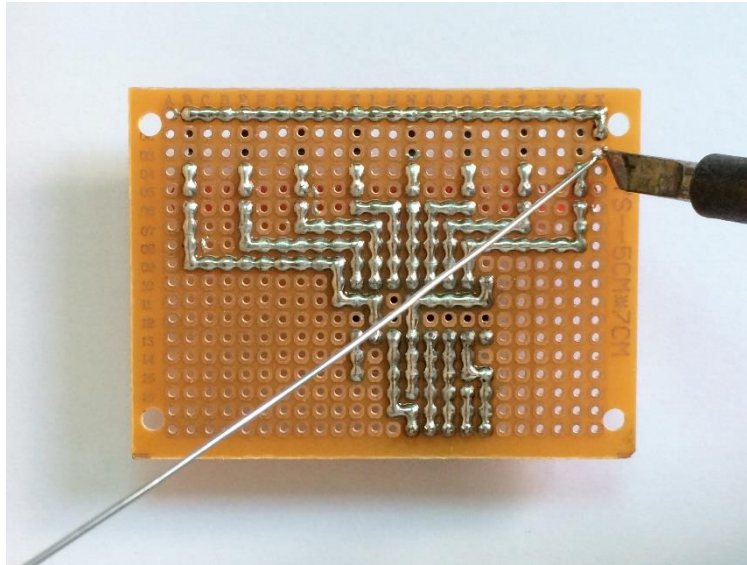


Rendering after soldering:

Front

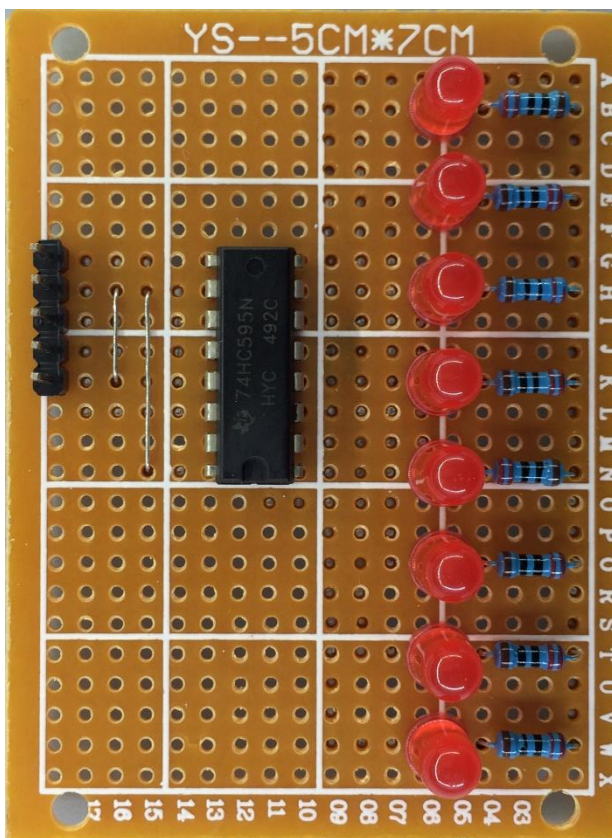


Back

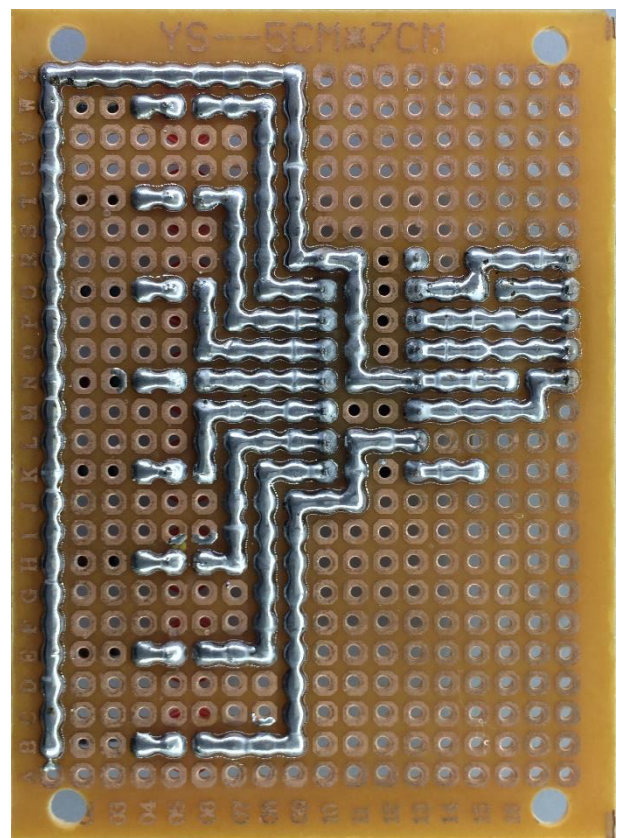

Connecting the Circuit

Connect the board to ESP32-S3 with jumper wire in the following way.

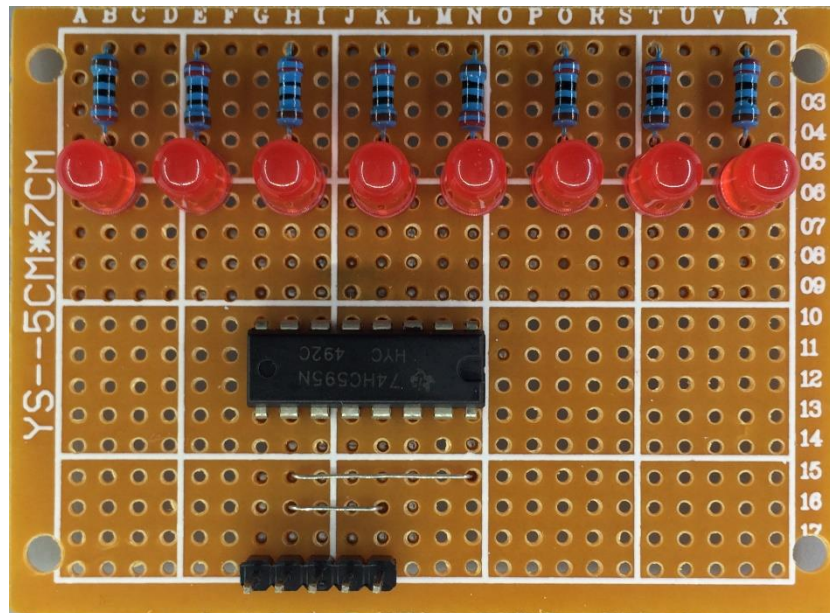

DS — GPIO14
ST_CP — GPIO12
SH_CP — GPIO13
GND — GND
VCC — 3.3V/5V

Code

The following is the program code:

```
1  import time
2  from my74HC595 import Chip74HC595
3
4  chip = Chip74HC595(12, 13, 14)
5  # ESP32-S3-12: 74HC595-DS(14)
6  # ESP32-S3-13: 74HC595-STCP(12)
7  # ESP32-S3-14: 74HC595-SHCP(11)
8
9  while True:
10     x=0x01
11     for count in range(8):
12         chip.shiftOut(1, x) #High bit is sent first
13         x=x<<1
```

```
14         time.sleep_ms(300)
15     x=0x01
16     for count in range(8):
17         chip.shiftOut(0, x) #Low bit is sent first
18         x=x<<1
19     time.sleep_ms(300)
```

What's next?

Thanks for your reading. This tutorial is all over here. If you find any mistakes, omissions or you have other ideas and questions about contents of this tutorial or the kit and etc., please feel free to contact us:

support@freenove.com

We will check and correct it as soon as possible.

If you want learn more about ESP32S3, you view our ultimate tutorial:

https://github.com/Freenove/Freenove_Ultimate_Starter_Kit_for_ESP32_S3/archive/master.zip

If you want to learn more about Arduino, Raspberry Pi, smart cars, robots and other interesting products in science and technology, please continue to focus on our website. We will continue to launch cost-effective, innovative and exciting products.

<http://www.freenove.com/>

End of the Tutorial

Thank you again for choosing Freenove products.